


STYLING 519

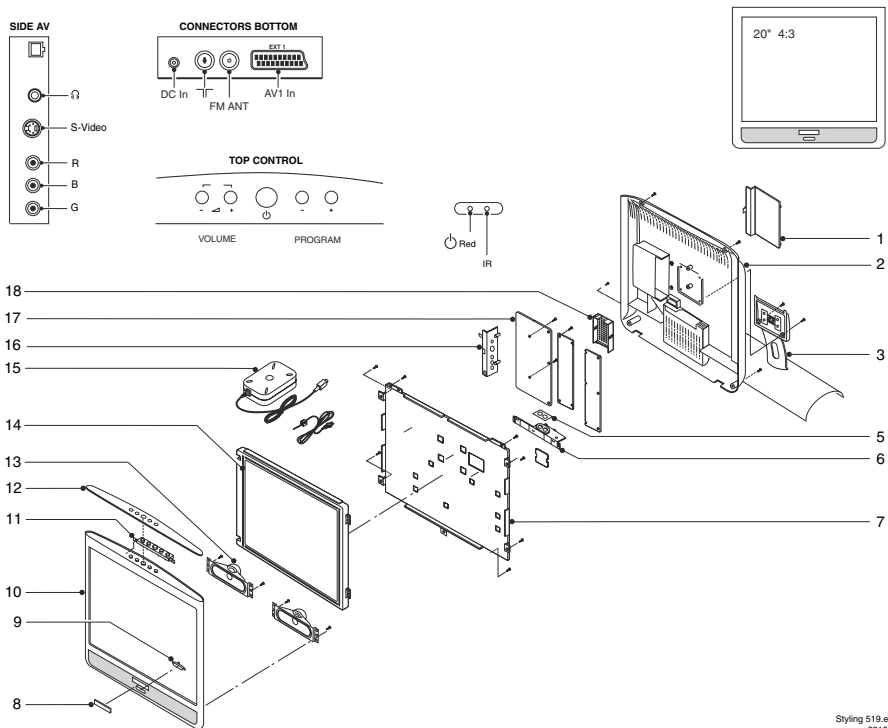

Styling 519.eps
291004

1a*	3139 177 71241	Top control 14"	2422 070 98151	Mains cord EUR Mains cord UK
1c*	3139 188 81571	Top control 15"	2420 070 98147	
1b*	3139 188 81551	Top control 20"		
2a*	3139 121 28051	Vesa plate 14"	*a	14PF7846/12/58
2c*	3139 177 85360	Vesa plate 20"	*b	15PF7846/12/58
			*c	20PF7846/12/58
2b*	3139 121 28051	Vesa plate 15"		
3	Not applicable			
4	Not applicable			
5ab*	3139 257 60571	Rear cover 14"/15"		
5c*	3111 257 60491	Rear cover 20"		
6a*	3111 257 60561	Front Cabinet 14"		
6c*	3111 257 60482	Front Cabinet 20"		
6b*	3111 257 61231	Front Cabinet 15"		
7a*	9322 207 49682	TFT 14" LCD T140VN01		
7c*	9322 215 40682	TFT 20" LCD LC201V02-A3K9		
7b*	9322 207 48682	TFT 15" LCD LC150X02-A4		
8ab*	2422 264 00512	Loudspeaker 4Ω 5W		
8c*	2422 264 00444	Loudspeaker 8Ω 10W		
9	3139 177 82781	Connector plate		
10a*	3139 128 77082	Metal stand 14"		
10c*	3139 128 77062	Metal stand 20"		
10b*	3139 128 77451	Metal stand 15"		
11	Not applicable			
ab*	3139 120 01771	Word mark 14"/15"		
c*	3139 120 01601	Word mark 20"		
a*	3139 124 46161	LCD lens 14"		
bc*	3139 177 72821	LCD lens 15/20"		
	3139 238 08141	Remote control RC19335019/01		