

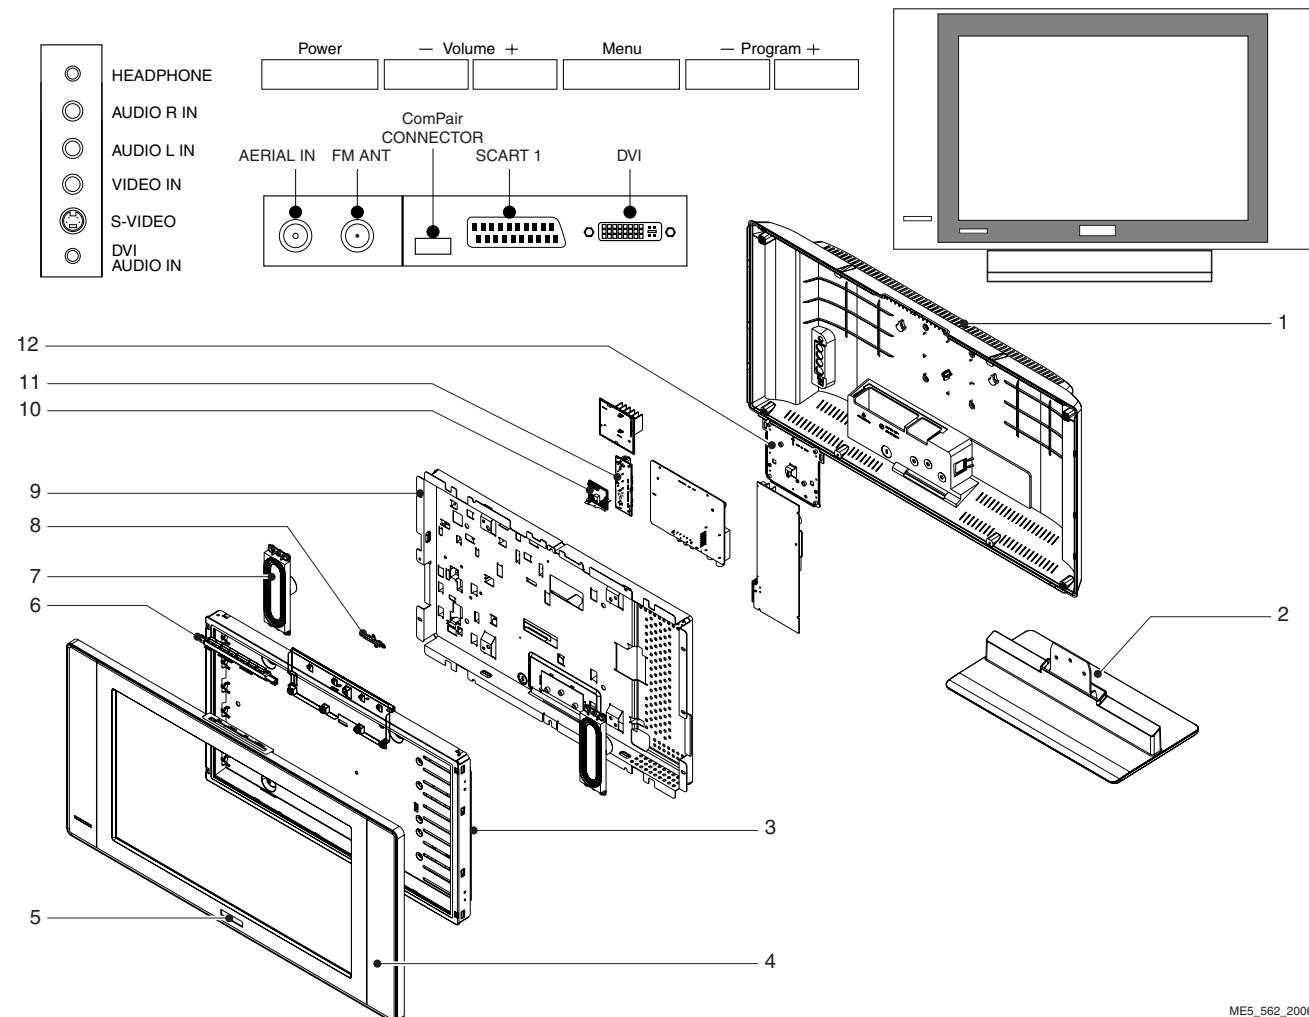
Service

Service

Service

32HF7544D/27	32PF5411/10
32PF3320/10	32PF5420/10
32PF4311S/10	32PF5520D/79
32PF5320/10	32PF5521D/10
32PF5320/28	32PF5521D/12
32PF5320/79	32PF7320/79
32PF5320/93	32PF7320/98
32PF5320/98	
32PF5321/10	
32PF5321/12	

Styling Sheet

ME5_562_2006_17_A_WFeps
210606

Mechanical Parts List

ME5 MFD LCD 32			
Pos. Number	Item number	12NC	Description
1	0902	3141 047 86981	Rear cover 32"
1	0933	3143 027 64142	Rear cover 32"
1	0933	3111 257 61661	Rear cover 32"
1	0933	3143 027 64041	Rear cover 32"
1	0941	3121 237 55882	Rear cover 32"
1	0941	3121 237 57591	Rear cover 32"
2	0212	3139 128 77721	Metal stand
2	0212	3139 128 77501	Metal stand
3	1099	9322 230 03682	LCD panel LC320W01-SL06
3	1099	9322 226 16682	LCD panel LC315T3LZ33 (SRPJ)
3	1099	9322 227 30682	LCD panel QD32HL02-REV01
3	1099	9322 231 89682	LCD panel T315XW01V9 (AUO)
4	0901	3141 047 93632	Front cabinet 32"
4	0901	3141 047 94251	Front cabinet 32"
4	0901	3141 047 95221	Front cabinet 32"
4	0931	3111 257 61831	Front cabinet 32"
4	0931	3111 257 61871	Front cabinet 32"
4	0931	3143 027 64961	Front cabinet 32"
4	0931	3143 027 64372	Front cabinet 32"
4	0931	3143 027 64033	Front cabinet 32"
4	0931	3143 027 66421	Front cabinet 32"
4	0931	3111 257 61821	Front cabinet 33
4	0940	3121 237 55874	Front cabinet 32"
4	0940	3121 237 56421	Front cabinet 32"
5	0050	3139 120 01911	Wordmark
5	0050	3139 120 01831	Wordmark
5	0050	3139 120 01821	Wordmark
6	1114	3139 268 03791	Keyboard control assy
6	0052	3139 177 88002	Keyboard control knobs
7	5213	2422 264 00537	Loudspeaker 4R 15W
8	0041	3139 124 62171	Lens
11	1116	3139 188 89021	Side AV
0188	3139 124 62521	Bracket for digital module	
8192	4822 320 11091	Coaxial cable with radiation absorption	
0188	3139 124 67271	Cover bracket for Digital	
0383	3139 124 67911	Enseo cover ITV	
1H53	3139 124 64031	System bracket	
8500	3139 131 06221	Flex cable for digital module	
8P06	3139 131 06971	LVDS cable	
8P06	3139 131 05471	LVDS cable	
8188	2422 070 98257	Mains cord - China	
8189	2422 070 98248	Mains cord AUS/NZ	
8188	2422 070 98151	Mains cord EU	
8187	9965 000 07586	Mains cord UK	
8187	2422 070 98208	Mains cord UL	
8600	3139 131 05451	Phono cable for digital tuner	
1188	3122 137 23171	PSU	
1910	3139 238 13171	Remote control RC1553814/01	
1910	3139 238 11832	Remote control RC1683701	
1910	3139 238 10241	Remote control RC1683702	
1910	3139 238 10301	Remote control RC4343	
1910	3139 238 12971	Remote control RC4347	
7298	3139 123 22551	Speaker form	
0259	2522 200 00024	Stand screw	
0259	3139 128 78021	Stand screw	