


Service Service Service

32HF7544A/27
32HF7544D/27
32HF7844T/27
32PF3320/10
32PF3321/10
32PF3321/12
32PF4311S/10
32PF5320/10
32PF5320/28

32PF5320/79
32PF5320/93
32PF5320/98
32PF5321/10
32PF5321/12
32PF5331/10
32PF5331/12
32PF5411/10
32PF5420/10

32PF5520D/79
32PF5521D/10
32PF5521D/12
32PF5531D/10
32PF5531D/12
32PF7320/79
32PF7320/98

Styling Sheet

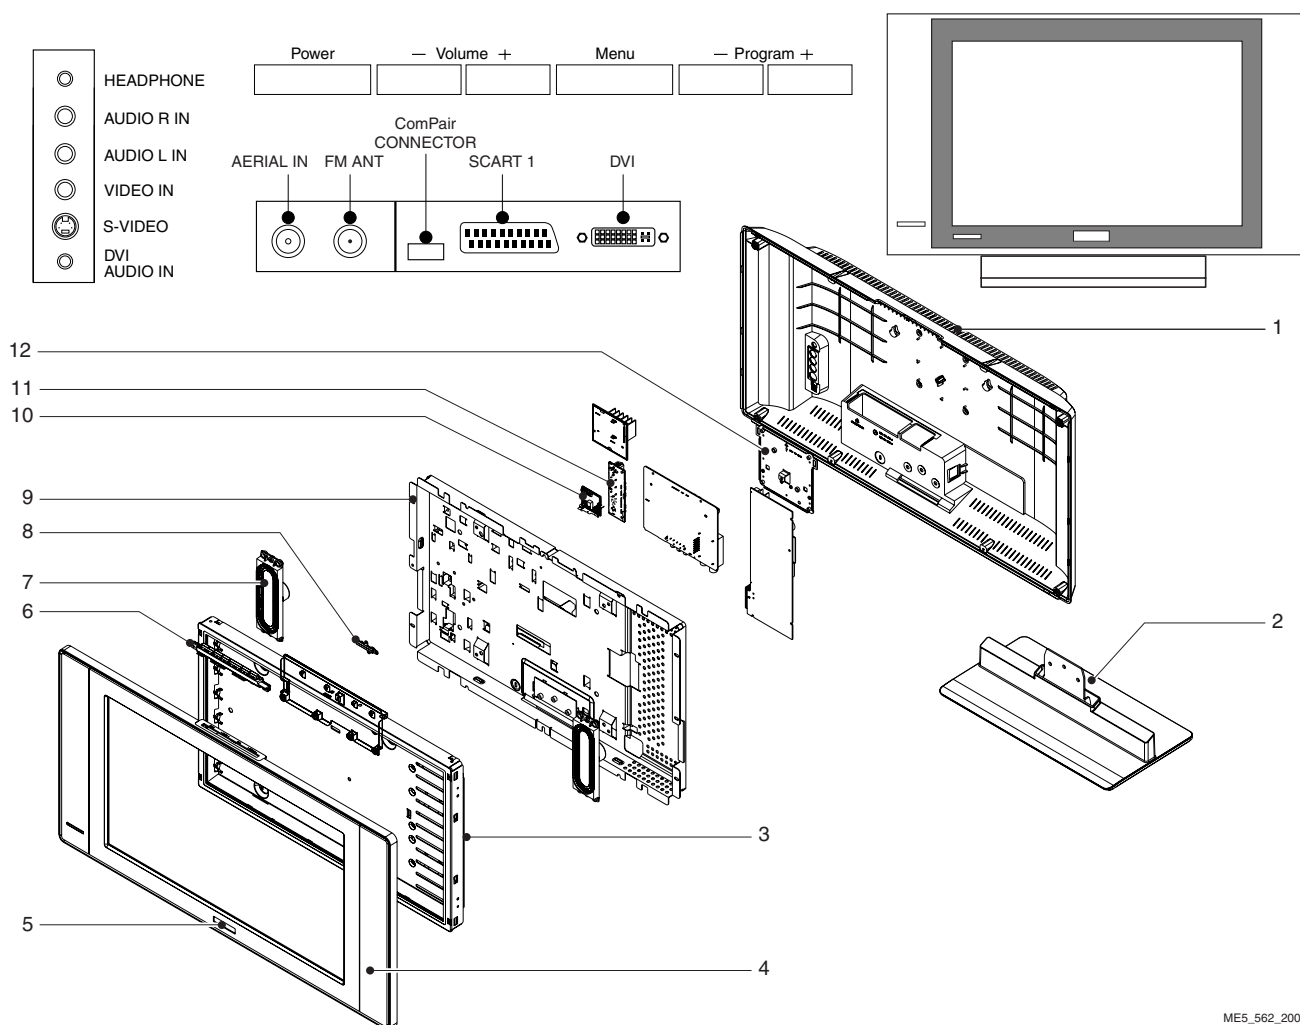

ME5_562_2006_17_A_WF.eps
210606

28 February 2007

ME5_562_MFD_LCD_32_2006_41_H_CH.fm

©Copyright 2006 Philips Consumer Electronics B.V. Eindhoven, The Netherlands.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Safety regulations require that the set is restored to its original condition and that parts which are identical with those specified are used.



PHILIPS

Mechanical Parts List

ME5 MFD LCD 32				32HF7544A/27	32HF7544D/27	32HF7844T/27	32PF3320/10	32PF3321/10 LPL	32PF3321/12 LPL	32PF4311S/10	32PF5320/10	32PF5320/28	32PF5320/79	32PF5320/93	32PF5320/98	32PF5321/10 AIO	32PF5321/10 LPL	32PF5321/10 SRP	32PF5321/12 AIO	32PF5321/12 LPL	32PF5321/12 SRP	32PF5331/10 AIO	32PF5331/10 CCFL	32PF5331/10 LPL
Pos. Number	Item number	12NC	Description																					
1	0902	3141 047 86981	Rear cover 32"									x	x	x										
1	0933	3143 027 64142	Rear cover 32"																					
1	0933	3111 257 61661	Rear cover 32"			x				x														
1	0933	3143 027 64041	Rear cover 32"							x						x	x	x	x	x	x			
1	0933	3143 027 65181	Rear cover 32"																			x	x	x
1	0933	3143 027 65691	Rear cover 32"																					
1	0941	3121 237 55882	Rear cover 32"								x													
1	0941	3121 237 57591	Rear cover 32"		x	x																		
1	0941	3121 237 57599	Rear cover 32"	x																				
1	X371	3127 107 50501	Rear cover 32"				x	x																
2	0210	3139 178 15631	Metal stand																			x	x	x
2	0212	3139 128 77721	Metal stand			x																		
2	0212	3139 128 77501	Metal stand	x	x	x				x	x	x	x	x	x	x	x	x	x	x	x			
2	0216	3139 178 17861	Metal stand				x	x																
3	1099	9322 230 03682	LCD panel LC320W01-SL06	x	x	x	x	x	x	x	x	x	x	x	x		x							x
3	1099	9322 226 16682	LCD panel LQ315T3LZ33 (SRPJ)															x						
3	1099	9322 227 30682	LCD panel QD32HL02-REV01			x				x														
3	1099	9322 231 89682	LCD panel T315XW01V9 (AUO)													x								
3	1099	9322 245 41682	LCD panel T315XW02V5 (AUOP-CCFL)															x						x
3	1099	9322 245 43682	LCD panel V320B1-L05 (CMOP)																					
4	0901	3141 047 93632	Front cabinet 32"										x											
4	0901	3141 047 94251	Front cabinet 32"											x										
4	0901	3141 047 95221	Front cabinet 32"									x												
4	0931	3111 257 61831	Front cabinet 32"			x																		
4	0931	3111 257 61871	Front cabinet 32"																					
4	0931	3143 027 64961	Front cabinet 32"																					
4	0931	3143 027 64372	Front cabinet 32"																					
4	0931	3143 027 64033	Front cabinet 32"													x	x	x	x	x	x			
4	0931	3143 027 66231	Front cabinet 32"																			x	x	x
4	0931	3143 027 66271	Front cabinet 32"																					
4	0931	3143 027 66421	Front cabinet 32"						x															
4	0931	3143 027 66431	Front cabinet 32"																					
4	0931	3111 257 61821	Front cabinet 33							x														
4	0940	3121 237 55874	Front cabinet 32"									x												
4	0940	3121 237 56421	Front cabinet 32"	x	x	x																		
4	X370	3127 107 60722	Front cabinet 32"				x	xx																
5	0050	3139 120 01911	Wordmark			x																		
5	0050	3139 120 01831	Wordmark	x	x	x	x	x	x							x	x	x	x	x	x	x	x	x
5	0050	3139 120 01821	Workmark							x			x	x	x									
6	1114	3139 268 03791	Keyboard control assy	x	x	x	x	x	x							x	x	x	x	x	x	x	x	x
6	0052	3139 177 88002	Keyboard control knobs			x				x	x	x	x	x										
6	0053	3139 124 62452	Keyboard control knobs			x																		
7	5213	2422 264 00537	Loudspeaker 4R 15W		x	x	x		x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
7	5213	2422 264 00588	Loudspeaker 4R 15W	x				x	x															
8	0041	3139 124 62171	Lens	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
11	1116	3139 188 89021	Side AV				x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	0188	3139 124 62521	Bracket for digital module																					
	8192	4822 320 11091	Coaxial cable with radiation absorption							x														
	0188	3139 124 67271	Cover bracket for Digital																					
	0383	3139 124 67911	Enseo cover ITV		x																			
	1H53	3139 124 64031	System bracket		x	x																		
	1183	3139 267 18262	Module side I/O	x	x	x																		
	1181	3139 267 18551	System interface Assy	x																				
	8500	3139 131 06221	Flex cable for digital module																					
	8P06	3139 131 06971	LVDS cable			x																		
	8P06	3139 131 05471	LVDS cable	x	x	x				x	x		x	x	x	x	x	x	x	x	x	x	x	x
	8P06	3139 131 06001	LVDS cable				x	x																
	8188	2422 070 98257	Mains cord - China						x				x											
	8189	2422 070 98248	Mains cord AUS/NZ									x												
	8188	4622 001 56774	Mains cord EU				x	x																
	8188	2422 070 98151	Mains cord EU			x				x			x	x	x	x	x	x	x	x	x	x	x	x
	8187	9965 000 07586	Mains cord UK				x				x			x	x	x	x					x	x	x
	8187	2422 070 98208	Mains cord UL	x	x	x																		
	8187	4822 321 10886	Mains cord EU				x																	
	8600	3139 131 05451	Phono cable for digital tuner																					
	1188	3122 137 23171	PSU	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	1910	3139 238 13171	Remote control RC1553814/01																					
	1910	3139 238 11832	Remote control RC1683701				x	x	x	x		x	x	x	x	x	x	x	x	x	x	x	x	x
	1910	3139 238 10241	Remote control RC1683702									x												
	1910	3139 238 10301	Remote control RC4343																					
	1910	3139 238 12971	Remote control RC4347																					
	7298	3139 123 22551	Speaker form													x	x	x	x	x	x			
	0259	2522 200 00024	Stand screw	x	x	x			x							x	x	x	x	x	x	x	x	x
	0259	3139 128 78021	Stand screw								x	x	x	x	x									
	0259	3139 128 78311	Stand screw				x	x																

ME5 MFD LCD 32				32PF5331/12 AUO	32PF5331/12 CCFL	32PF5331/12 LPL	32PF5411/10	32PF5420/10	32PF5520D/79	32PF5521D/10	32PF5521D/12	32PF5531D/10 AUO	32PF5531D/10 CMC	32PF5531D/10 LPL	32PF5531D/12 AUO	32PF5531D/12 CMC	32PF5531D/12 LPL	32PF7320/79	32PF7320/98
Pos. Number	Item number	12NC	Description																
1	0902	3141 047 86981	Rear cover 32"															x	x
1	0933	3143 027 64142	Rear cover 32"							x	x								
1	0933	3111 257 61661	Rear cover 32"				x												
1	0933	3143 027 64041	Rear cover 32"				x												
1	0933	3143 027 65181	Rear cover 32"	x	x	x													
1	0933	3143 027 65691	Rear cover 32"									x	x	x	x	x	x		
1	0941	3121 237 55882	Rear cover 32"																
1	0941	3121 237 57591	Rear cover 32"																
1	0941	3121 237 57599	Rear cover 32"																
1	X371	3127 107 50501	Rear cover 32"																
2	0210	3139 178 15631	Metal stand	x	x	x						x	x	x	x	x	x		
2	0212	3139 128 77721	Metal stand																
2	0212	3139 128 77501	Metal stand				x	x	x	x	x							x	x
2	0216	3139 178 17861	Metal stand																
3	1099	9322 230 03682	LCD panel LC320W01-SL06			x	x	x	x	x			x			x	x	x	
3	1099	9322 226 16682	LCD panel LQ315T3LZ33 (SRPJ)					x											
3	1099	9322 227 30682	LCD panel QD32HL02-REV01																
3	1099	9322 231 89682	LCD panel T315XW01V9 (AUO)	x								x			x				
3	1099	9322 245 41682	LCD panel T315XW02V5 (AUOP-CCFL)		x														
3	1099	9322 245 43682	LCD panel V320B1-L05 (CMOP)									x			x				
4	0901	3141 047 93632	Front cabinet 32"																
4	0901	3141 047 94251	Front cabinet 32"																
4	0901	3141 047 95221	Front cabinet 32"															x	
4	0931	3111 257 61831	Front cabinet 32"																
4	0931	3111 257 61871	Front cabinet 32"				x												
4	0931	3143 027 64961	Front cabinet 32"				x												
4	0931	3143 027 64372	Front cabinet 32"						x	x									
4	0931	3143 027 64033	Front cabinet 32"																
4	0931	3143 027 66231	Front cabinet 32"	x	x	x													
4	0931	3143 027 66271	Front cabinet 32"									x		x	x	x			
4	0931	3143 027 66421	Front cabinet 32"																
4	0931	3143 027 66431	Front cabinet 32"									x			x				
4	0931	3111 257 61821	Front cabinet 33																
4	0940	3121 237 55874	Front cabinet 32"																
4	0940	3121 237 56421	Front cabinet 32"																
4	X370	3127 107 60722	Front cabinet 32"																
5	0050	3139 120 01911	Wordmark				x												
5	0050	3139 120 01831	Wordmark	x	x	x			x	x	x	x	x	x	x	x	x	x	x
5	0050	3139 120 01821	Workmark				x												
6	1114	3139 268 03791	Keyboard control assy	x	x	x	x					x	x	x	x	x	x		
6	0052	3139 177 88002	Keyboard control knobs				x	x	x									x	x
6	0053	3139 124 62452	Keyboard control knobs																
7	5213	2422 264 00537	Loudspeaker 4R 15W	x	x	x	x	x		x	x	x	x	x	x	x	x	x	x
7	5213	2422 264 00588	Loudspeaker 4R 15W																
8	0041	3139 124 62171	Lens	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
11	1116	3139 188 89021	Side AV	x	x	x	x	x				x	x	x	x	x	x	x	x
	0188	3139 124 62521	Bracket for digital module					x				x	x	x	x	x	x		
	8192	4822 320 11091	Coaxial cable with radiation absorption				x												
	0188	3139 124 67271	Cover bracket for Digital							x	x								
	0383	3139 124 67911	Enseo cover ITV																
	1H53	3139 124 64031	System bracket																
	1183	3139 267 18262	Module side I/O																
	1181	3139 267 18551	System interface Assy																
	8500	3139 131 06221	Flex cable for digital module					x	x	x									
	8P06	3139 131 06971	LVDS cable																
	8P06	3139 131 05471	LVDS cable	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	8P06	3139 131 06001	LVDS cable																
	8188	2422 070 98257	Mains cord - China																
	8189	2422 070 98248	Mains cord AUS/NZ					x										x	
	8188	4622 001 56774	Mains cord EU																
	8188	2422 070 98151	Mains cord EU	x	x	x	x	x		x	x	x	x	x	x	x	x		x
	8187	9965 000 07586	Mains cord UK				x	x		x	x	x	x	x					x
	8187	2422 070 98208	Mains cord UL																
	8187	4822 321 10886	Mains cord EU																
	8600	3139 131 05451	Phono cable for digital tuner					x	x	x									
	1188	3122 137 23171	PSU	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
	1910	3139 238 13171	Remote control RC1553814/01				x												
	1910	3139 238 11832	Remote control RC1683701	x	x	x		x										x	x
	1910	3139 238 10241	Remote control RC1683702																
	1910	3139 238 10301	Remote control RC4343					x											
	1910	3139 238 12971	Remote control RC4347							x	x	x	x	x	x	x	x		
	7298	3139 123 22551	Speaker form				x			x	x								
	0259	2522 200 00024	Stand screw	x	x	x	x					x	x	x	x	x	x		
	0259	3139 128 78021	Stand screw					x	x	x	x							x	x
	0259	3139 128 78311	Stand screw																

