

5.3 Panel Code

Press the following key sequence on a standard RC transmitter: ‘062598’ directly followed by MENU and ‘xxx’, where ‘xxx’ is a 3 digit decimal value of the panel type: see column ‘Display Code’ in below tab. After resetting the Display Code, restart the set immediately.

CTN_ALT BOM#	Panel Type	Display Code	Setting Set Option Code
43PUS6412/12	TPT430U3-EQYSHM.G S1T	005	100
49PUS6412/12	TPT490U2-EQYSHM.G SC1T	006	101
49PUS6412/12	TPT490U2-EQYSHM.G SC1AC	022	121
49PUS6412/12	TPT490F2-FN02.S S703B	027	153
49PUS6412/12	TPT490F2-FN02.S S703C	027	153
49PUS6482/12	TPT490U2-EQYSHM.G SC1S	009	110
49PUS6482/12	TPT490F2-FN02.S SC01B	028	162
49PUS7002/62	TPT490U2-EQYSHM.G SC1S	009	126
49PUS7002/62	TPT490F2-FN02.S SC01B	028	166
49PUS7502/12	TPT490U2-EQLSJ.A.G SC4E	011	112
55PUS6412/12	TPT550U2-EQYSHM.G S1AB	007	102
55PUS6412/12	TPT550U2-EQYSKM.G S5E	017	123
55PUS6412/12	TPT550U2-EQYSKM.G S5L	025	147
55PUS6412/12	TPT550U2-EQYSKM.G S5S	025	147
55PUS6412/12	TPT550U2-D072.L S01N	026	148
55PUS6412/12	TPT550U2-D072.L S01W	026	148
55PUS6412/12	TPT550U2-EQYSHM.G S1AB	007	119
55PUS6412/12	TPT550U2-EQYSKM.G S5E	017	124
55PUS6412/12	TPT550U2-EQYSKM.G S5L	025	149
55PUS6412/12	TPT550U2-EQYSKM.G S5S	025	149
55PUS6412/12	TPT550U2-D072.L S01N	026	150
55PUS6412/12	TPT550U2-D072.L S01W	026	150
55PUS6482/12	TPT550U2-EQYSHM.G S1AA	010	111
55PUS7002/62	TPT550U2-EQYSHM.G S1AA	010	127
55PUS7502/12	TPT550U2-EQLSKA.G S5A	012	113
55PUS8602/12	TPT550F1-FJ11.S SS03A	020	115
55POS9002/12	LC550AQD-GJAB KR LGD	016	117
65PUS6412/12	TPT650UA-QVN06.U S300A	008	103
65PUS6412/12	TPT650UA-QVN06.U S300H	008	103
65PUS6412/12	TPT650U2-FN04.S SG01C	019	131
65PUS6412/12	TPT650U2-FN04.S SG01G	019	131
65PUS6412/12	TPT650UA-QVN06.U S300A	008	120
65PUS6412/12	TPT650UA-QVN06.U S300H	008	120
65PUS6412/12	TPT650U2-FN04.S SG01C	019	132
65PUS7502/12	TPT650UA-EQLSKM.G S5A	013	114
65PUS8102/12	TPT650US-FF02.S SG01B	021	133
65PUS8602/12	TPT650US-FF02.S SG01C	015	116