


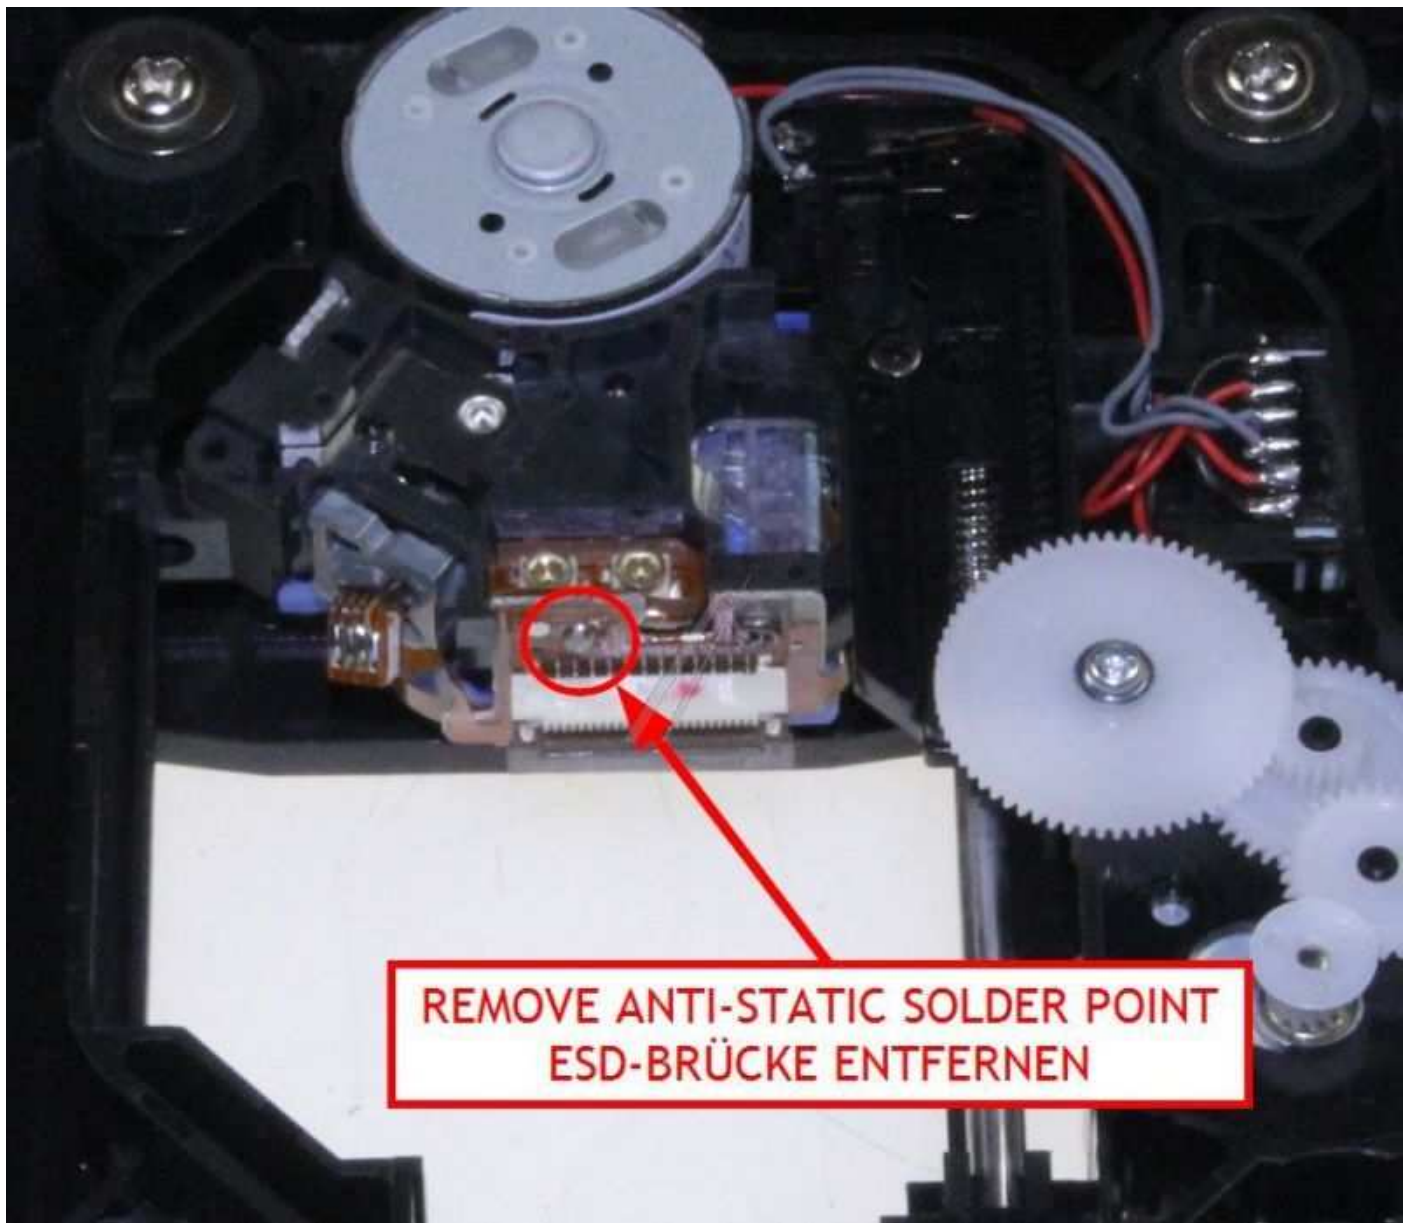

REMOVE ANTI-STATIC SOLDER POINT
ESD-BRÜCKE ENTFERNEN