

CCD-TR315E/TR415E/TR425E/TR515E/TR516E/TR713E CCD-TRV16E/TRV26E/TRV27E/TRV27EP/TRV36E/TRV46E

SECTION 6 REPAIR PARTS LIST

6-1. EXPLODED VIEWS

NOTE:


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

• Abbreviation

East European model is abbreviated as EE.
North European model is abbreviated as NE.
Russian model is abbreviated as RU.
Hong Kong model is abbreviated as HK.
Australian model is abbreviated as AUS.
Chinese model is abbreviated as CN.
Tourist model is abbreviated as JE.


The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

6-1-1. REMOTE COMMANDER AND CASSETTE LID ASSEMBLY

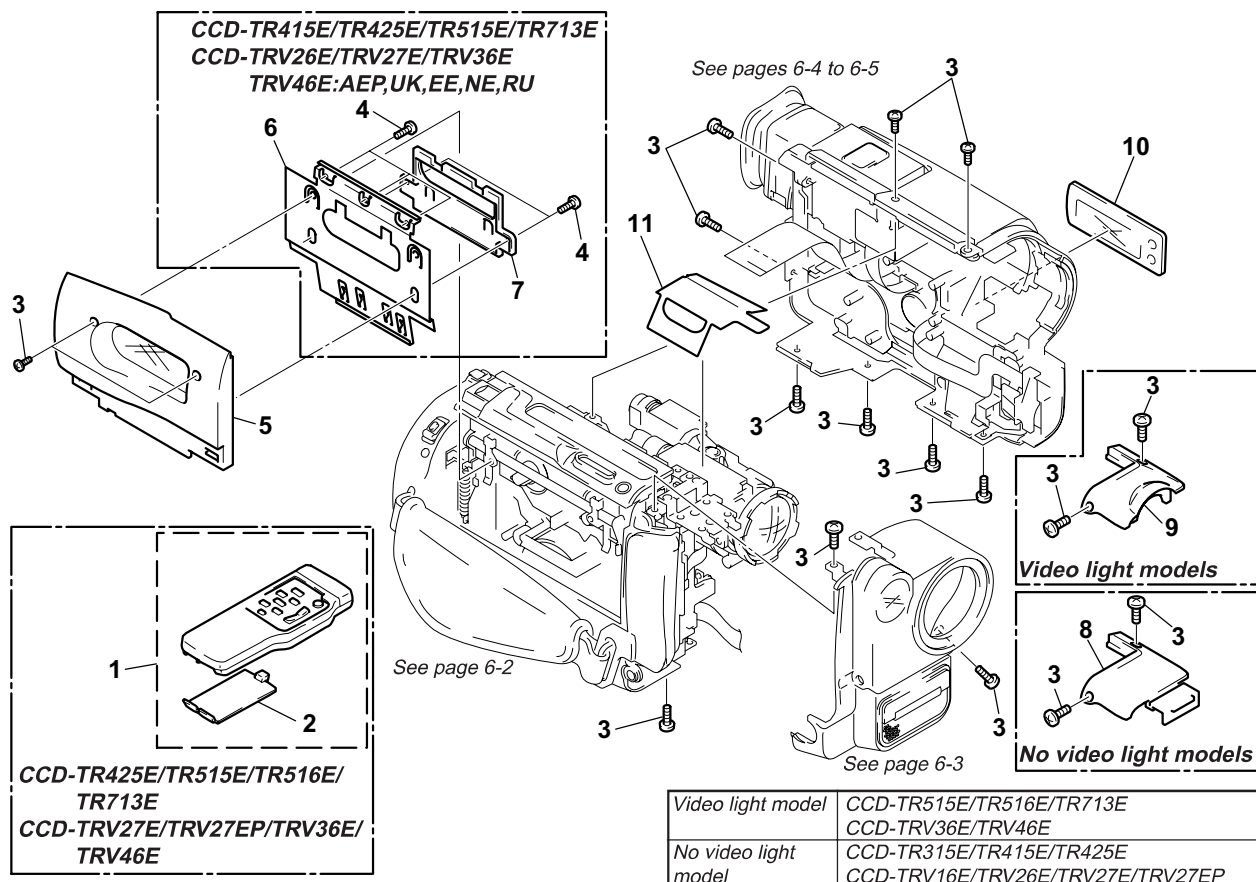

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	1-467-574-21	REMOTE COMMANDER (RMT-708) (TR425E/TR515E/TR516E/TR713E/TRV27E/ TRV27EP/TRV36E/TRV46E)		7	3-987-677-01	COVER (C), FERRITE (TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/ TRV36E/TRV46E:AEP,UK,EE,NE,RU)	
2	3-958-131-01	LID, BATTERY CASE (for RMT-708) (TR425E/TR515E/TR516E/TR713E/TRV27E/ TRV27EP/TRV36E/TRV46E)		8	3-987-645-01	CABINET (N) (No video light models)	
3	3-962-826-01	SCREW (2 x 4)		9	3-987-652-01	CABINET (LT) (TR516E)	
4	3-713-791-01	SCREW (M1.7 x 4), TAPPING, P2 (TR515E/TR713E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)		9	3-987-652-02	CABINET (LT) (TR515E/TR713E/TRV36E/TRV46E)	
4	3-713-791-51	SCREW (M1.7 x 3.5), TAPPING, P2 (TR415E/TR425E/TRV26E/TRV27E)		10	3-053-274-11	WINDOW (900), LCD (TR713E)	
5	X-3948-222-1	LID ASSY, CASSETTE (TR516E/TRV46E:E, HK, AUS, CN, JE)		10	3-053-274-31	WINDOW (900), LCD (TR515E)	
5	X-3948-223-1	LID ASSY, CASSETTE (TR315E/TRV16E/TRV27EP)		10	3-053-274-51	WINDOW (900), LCD (TR516E)	
5	X-3949-177-1	LID (IM) ASSY, CASSETTE (TR515E/TR713E/TRV36E/TRV46E:AEP,UK,EE,NE,RU)		10	3-053-275-11	WINDOW (910), LCD (TRV46E)	
5	X-3949-529-1	LID (IM) ASSY, CASSETTE (TR415E/TR425E/TRV26E/TRV27E)		10	3-053-275-31	WINDOW (910), LCD (TRV36E)	
6	3-987-678-11	PLATE, CASSETTE SHIELD (TR415E/TR425E/TR515E/TR713E/TRV26E/TRV27E/ TRV36E/TRV46E:AEP,UK,EE,NE,RU)		10	3-053-275-91	WINDOW (910), LCD (TRV26E)	
				10	3-054-607-11	WINDOW (900), LCD (TR415E)	
				10	3-054-607-21	WINDOW (900), LCD (TR315E)	
				10	3-054-607-31	WINDOW (900), LCD (TR425E)	
				10	3-054-642-01	WINDOW (910), LCD (TRV16E)	
				10	3-054-642-11	WINDOW (910), LCD (TRV27E/TRV27EP)	
				11	3-053-276-01	SHEET (M), LENS INSULATING	


6-1-2. CABINET (L) AND BATTERY PANEL ASSEMBLY

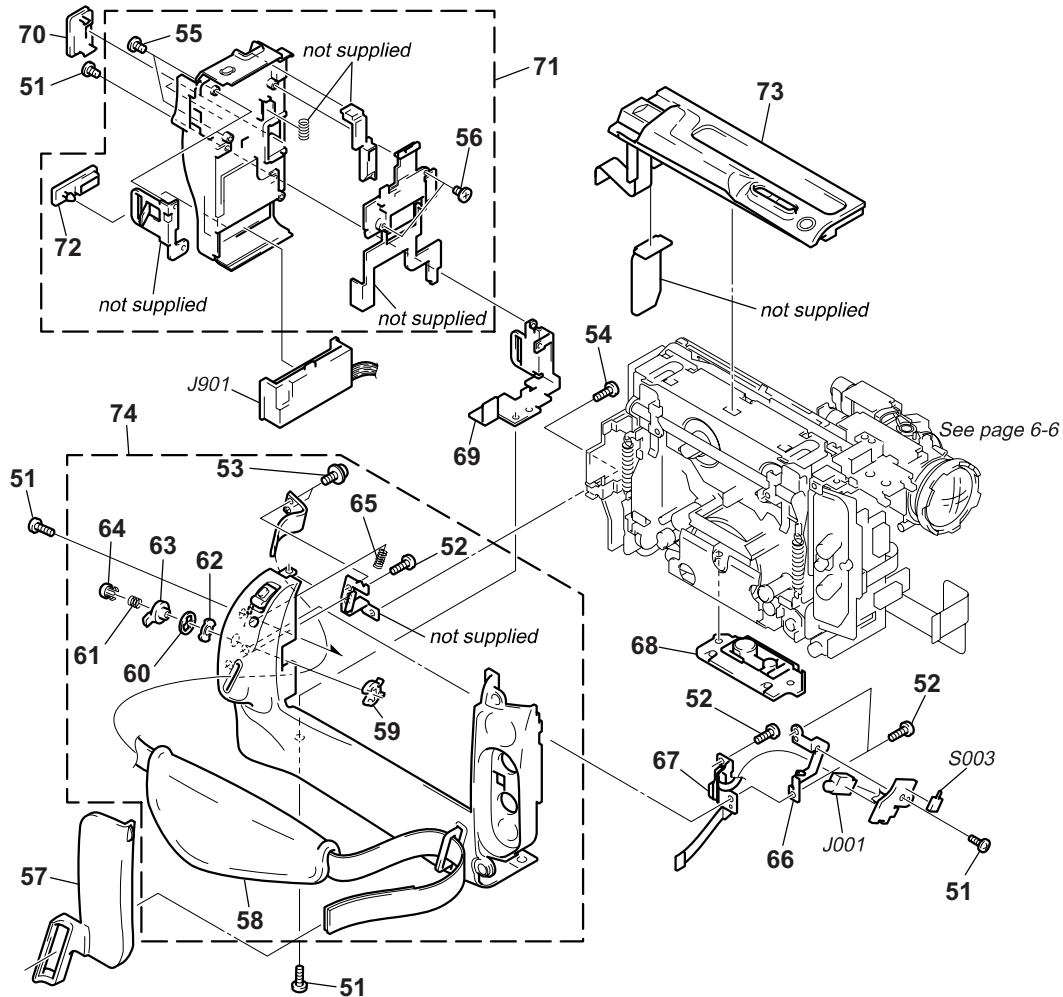

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-962-826-01	SCREW (2 x 4)		69	3-987-679-01	SHEET METAL (LOWER), STRAP	
52	3-948-339-61	TAPPING		70	3-975-752-01	LID (BT), CPC	
53	3-679-362-11	SCREW		71	X-3948-171-1	PANEL ASSY, BATTERY	
54	3-713-786-21	SCREW (M2 x 3)		72	3-987-656-01	LID, JACK	
55	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2		73	1-418-215-21	SWITCH BLOCK, CONTROL (FK-8500) (TR415E/TR425E/TR515E/TRV26E/TRV27E/TRV27EP/TRV36E)	
56	3-713-791-51	SCREW (M1.7 x 3.5), TAPPING, P2		73	1-418-215-61	SWITCH BLOCK, CONTROL (FK-8500) (TR713E/TRV46E:AEP,UK,EE,NE,RU)	
57	3-975-522-11	COVER, JACK		73	1-475-617-11	SWITCH BLOCK, CONTROL (FK-8500) (TR315E/TR516E/TRV16E)	
58	3-052-815-01	BELT (ES), GRIP		73	1-475-617-21	SWITCH BLOCK, CONTROL (FK-8500) (TRV46E:E,HK,AUS,CN,JE)	
59	3-949-192-01	HOLDER, STAND-BY KNOB		74	X-3948-207-1	CABINET (L) ASSY (TRV series)	
60	3-970-854-01	SPRING, STAND-BY		74	X-3948-208-1	CABINET (L) ASSY (TR series)	
61	3-979-642-01	SPRING, COMPRESSION		J001	1-565-276-31	JACK, ULTRA SMALL 1P (LANC)	
62	3-975-966-01	SHEET METAL (2), SS		J901	1-694-384-11	TERMINAL BOARD, BATTERY	
63	3-969-081-01	KNOB, STAND-BY					
64	3-960-566-01	BUTTON, S/S		S003	1-572-688-11	SWITCH, PUSH (EJECT)	
65	3-302-492-00	SPRING, COMPRESSION					
* 66	3-975-532-01	HOLDER, EL					
67	1-475-619-11	SWITCH BLOCK, CONTROL (SS-8500)					
68	3-987-717-01	SCREW, TRIPOD					

6-1-3. FRONT PANEL BLOCK ASSEMBLY


Video light model	CCD-TR515E/TR516E/TR713E CCD-TRV36E/TRV46E
No video light model	CCD-TR315E/TR415E/TR425E CCD-TRV16E/TRV26E/TRV27E/TRV27EP

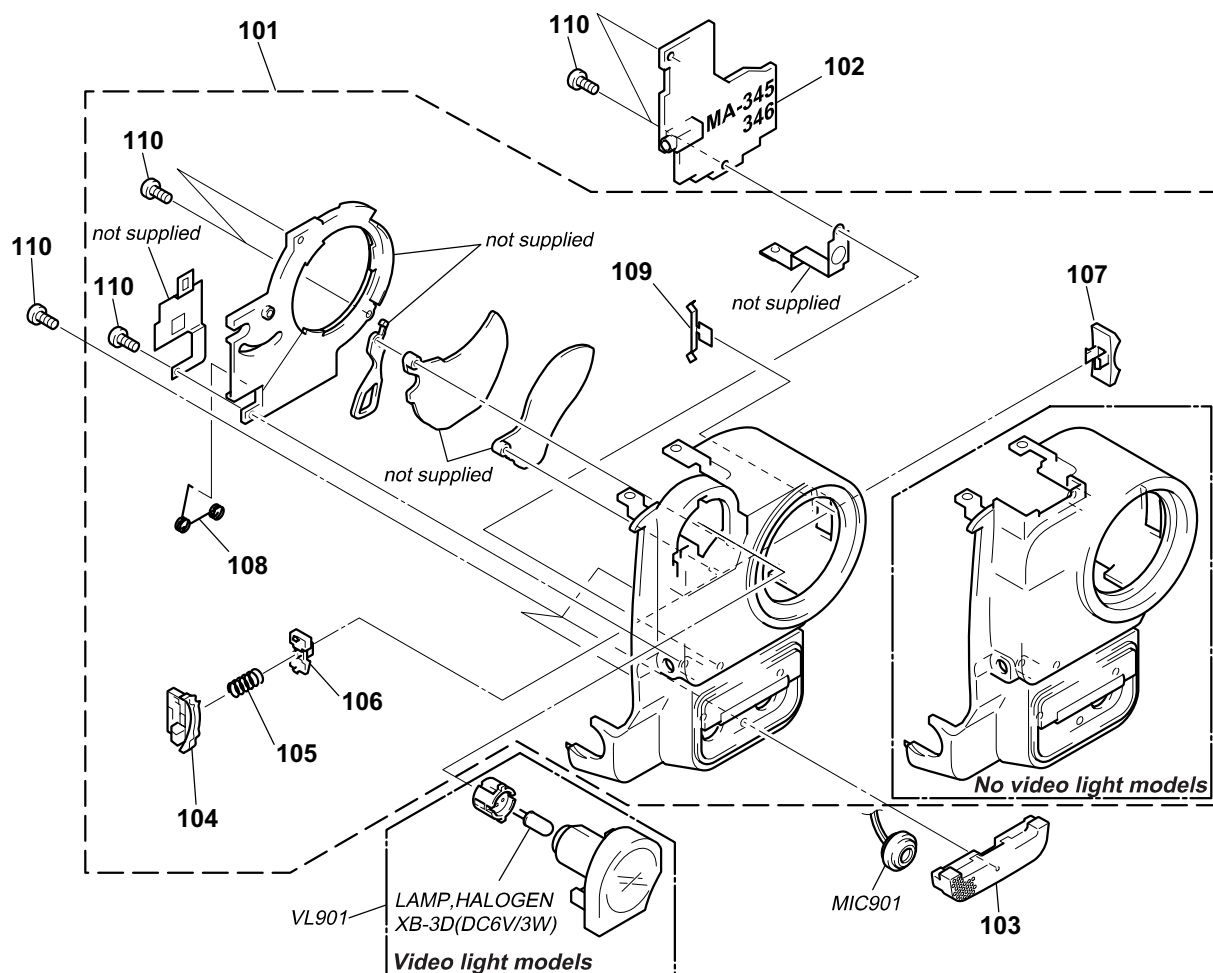

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	X-3949-168-1	PANEL ASSY, FRONT (TR515E/TR516E)		102	A-7073-873-A	MA-346 (VZL) BOARD, COMPLETE (TRV16E/TRV26E)	
101	X-3949-169-1	PANEL ASSY, FRONT (TR713E)		102	A-7073-888-A	MA-345 (ZO) BOARD, COMPLETE (TR425E)	
101	X-3949-453-1	PANEL ASSY (V), FRONT (TRV46E)		102	A-7073-889-A	MA-346 (V) BOARD, COMPLETE (TRV27E/TRV27EP)	
101	X-3949-454-1	PANEL ASSY (V), FRONT (TRV36E)		* 103	X-3948-493-1	GRILLE ASSY (G), MICROPHONE	
101	X-3949-503-1	PANEL ASSY, FRONT (TR315E/TR415E)		104	3-987-632-01	HOLDER, P KNOB	
101	X-3949-513-1	PANEL ASSY, FRONT (TR425E)		105	3-973-619-01	SPRING, COMPRESSION	
101	X-3949-514-1	PANEL ASSY (V), FRONT (TRV16E/TRV26E)		106	3-987-633-01	BUTTON, LOCK	
101	X-3949-515-1	PANEL ASSY (V), FRONT (TRV27E/TRV27EP)		107	3-987-631-01	KNOB, P	
102	A-7073-782-A	MA-345 (B) BOARD, COMPLETE (TR515E/TR516E)		108	3-987-882-01	SPRING, TORSION	
102	A-7073-794-A	MA-345 (IB) BOARD, COMPLETE (TR713E)		109	3-987-642-01	SPRING, CLICK	
102	A-7073-812-A	MA-346 (VIB) BOARD, COMPLETE (TRV46E)		110	3-948-339-61	TAPPING	
102	A-7073-820-A	MA-345 (SL) BOARD, COMPLETE (TR315E/TR415E)		MIC901	1-542-312-11	MICROPHONE	
102	A-7073-823-A	MA-346 (VZB) BOARD, COMPLETE (TRV36E)		$\triangle$ VL901	1-517-760-11	LIGHT, VIDEO (for Video light models)	

6-1-4. CABINET (R) BLOCK ASSEMBLY (TR series)

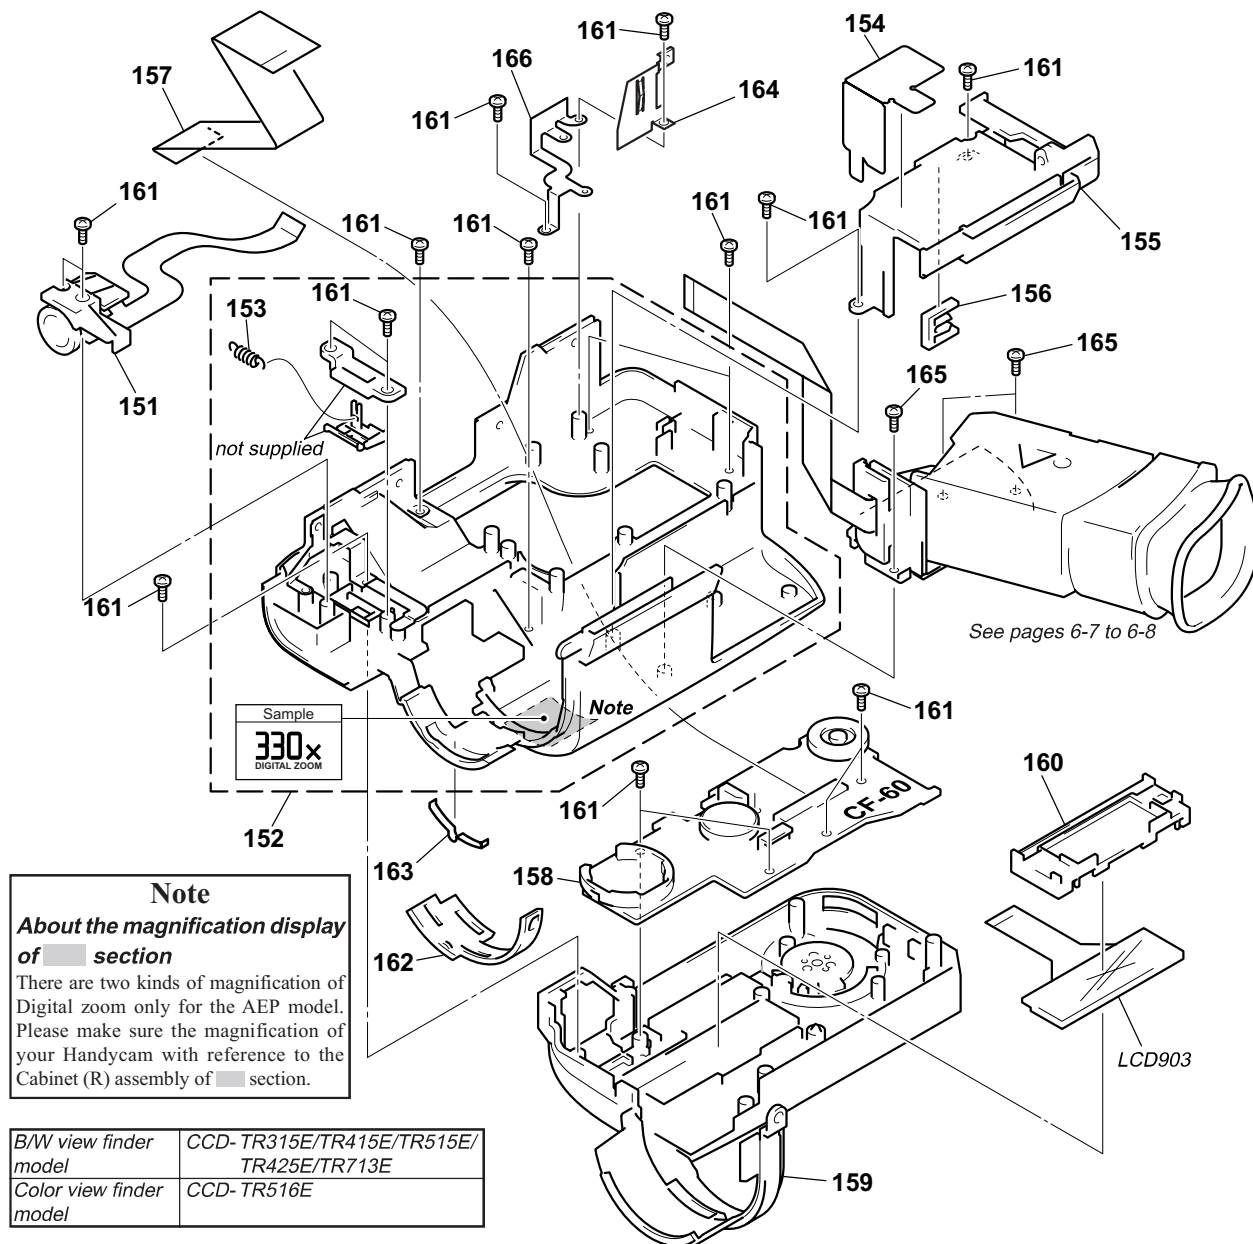

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	1-475-620-11	SWITCH BLOCK, CONTROL (MF-8500)		156	3-987-783-01	LOCK, TILT	
152	X-3949-170-1	CABINET (R) ASSY (Digital zoom : 72x) (TR515E:AEP,UK/TR713E:AEP,UK)		157	1-790-334-11	CABLE, FLEXIBLE FLAT (FFC-257F)	
152	X-3949-179-1	CABINET (R) ASSY (Digital zoom : 330x) (TR515E:AEP,EE,NE,RU/TR516E/TR713E:AEP,EE,NE,RU)		158	A-7073-783-A	CF-60 (CN) BOARD, COMPLETE (TR516E)	
152	X-3949-501-1	CABINET (R) ASSY (TR315E)		158	A-7073-795-A	CF-60 (P) BOARD, COMPLETE (TR415E/TR425E/TR515E/TR713E)	
152	X-3949-516-1	CABINET (R) ASSY (Digital zoom : 36x) (TR415E:AEP,UK)		158	A-7073-821-A	CF-60 (N) BOARD, COMPLETE (TR315E)	
152	X-3949-517-1	CABINET (R) ASSY (Digital zoom : 72x) (TR425E:AEP,UK)		159	X-3949-172-1	COVER ASSY, TR (TR515E/TR516E/TR713E)	
152	X-3949-518-1	CABINET (R) ASSY (Digital zoom : 220x) (TR415E:AEP,EE,NE,RU)		159	X-3949-500-1	COVER ASSY, TR (TR315E/TR415E/TR425E)	
152	X-3949-519-1	CABINET (R) ASSY (Digital zoom : 330x) (TR425E:AEP,EE,NE,RU)		160	3-053-195-01	HOLDER, LCD	
153	3-989-121-01	SPRING, TENSION		161	3-948-339-61	TAPPING	
* 154	3-987-842-01	SHEET, VF FLEXIBLE RETAINER (for B/W View finder models)		162	3-987-744-01	KNOB, IR	
				163	3-987-739-01	SPRING, LINK PLATE	
				164	9-987-742-01	PLATE (878), GROUND	
				165	3-948-339-01	SCREW, TAPPING	
				* 166	3-053-202-01	SHEET METAL, ELECTROSTATIC	
				LCD903	A-7093-473-A	INDICATION LCD BLOCK ASSY	
155	X-3948-603-1	BASE ASSY, VF					


6-1-5. CABINET (R) BLOCK ASSEMBLY (TRV series)

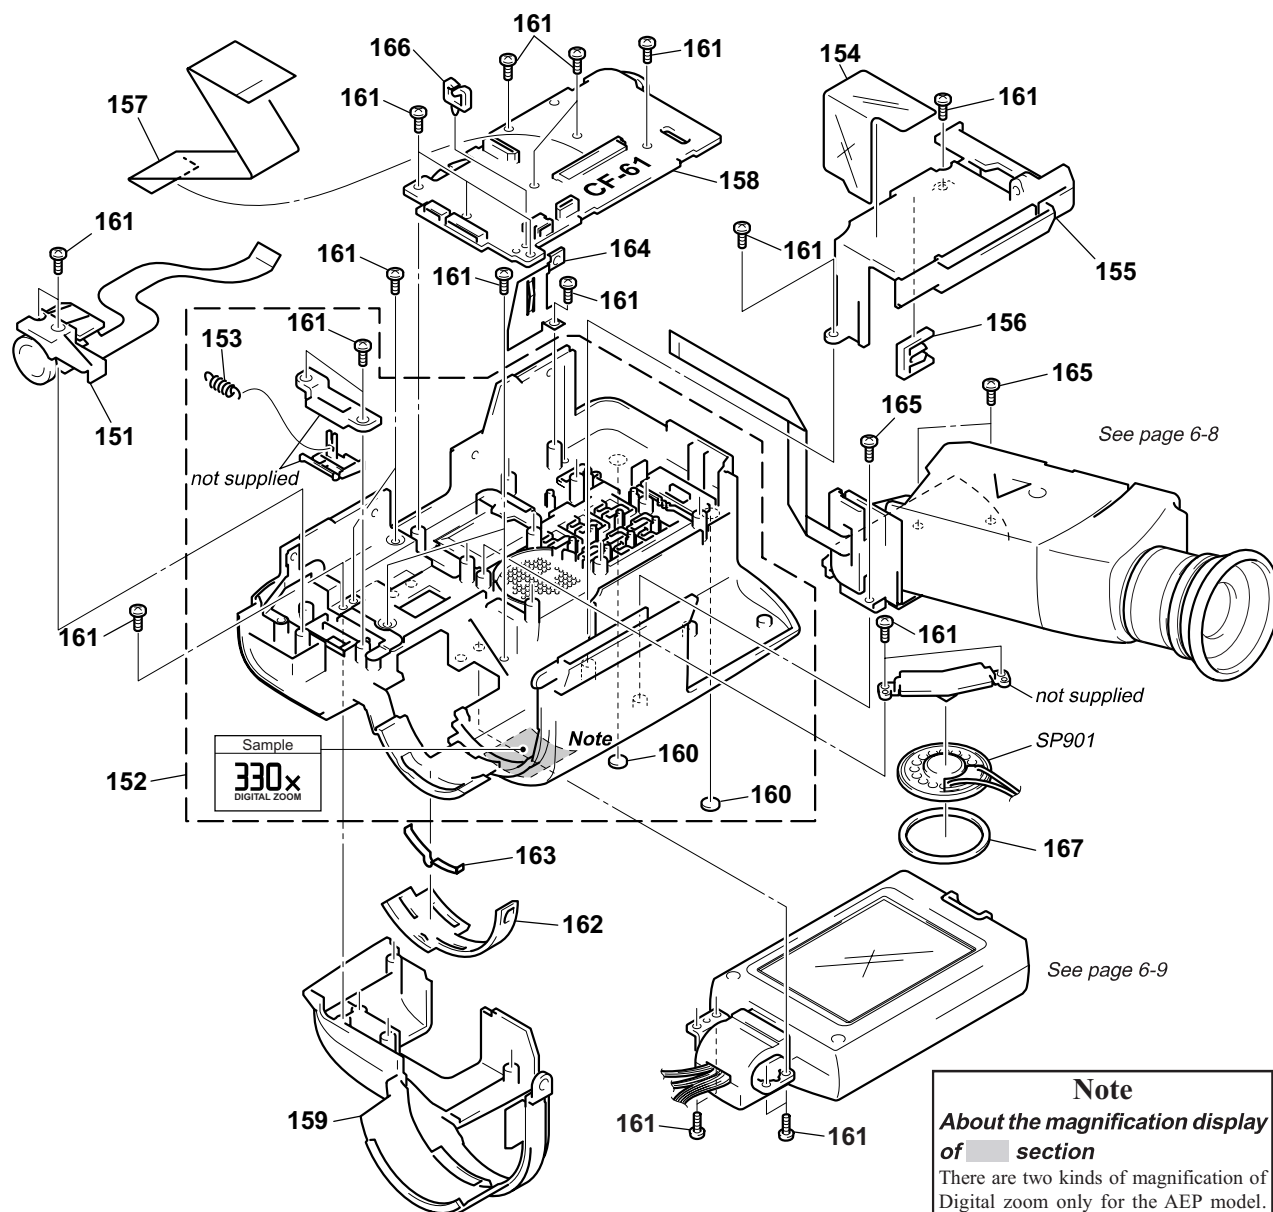

Note
About the magnification display of section
There are two kinds of magnification of Digital zoom only for the AEP model. Please make sure the magnification of your Handycam with reference to the Cabinet (R) assembly of section.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	1-475-620-11	SWITCH BLOCK, CONTROL (MF-8500)		156	3-987-783-01	LOCK, TILT	
152	X-3949-171-1	CABINET (R) ASSY (Digital zoom : 72x) (TRV36E:AEP,UK/TRV46E:AEP,UK)		157	1-790-334-11	CABLE, FLEXIBLE FLAT (FFC-257F)	
152	X-3949-280-1	CABINET (R) ASSY (Digital zoom : 330x) (TRV36E:AEP,EE,NE,RU/TRV46E:AEP,E,EE,NE,RU,HK,AUS,CN,JE)		158	A-7073-811-A	CF-61 BOARD, COMPLETE	
152	X-3949-520-1	CABINET (R) ASSY (Digital zoom : 36x) (TRV26E:AEP,UK)		159	X-3949-173-1	COVER ASSY, IR (TRV46E)	
152	X-3949-521-1	CABINET (R) ASSY (Digital zoom : 72x) (TRV27E:AEP,UK)		159	X-3949-349-1	COVER ASSY, IR (TRV36E)	
152	X-3949-522-1	CABINET (R) ASSY (TRV16E)		159	X-3949-530-1	COVER ASSY, IR (TRV16E/TRV26E/TRV27E/TRV27EP)	
152	X-3949-523-1	CABINET (R) ASSY (Digital zoom : 220x) (TRV26E:AEP,EE,NE,RU)		160	3-959-978-02	CUSHION, PANEL	
152	X-3949-524-1	CABINET (R) ASSY (Digital zoom : 330x) (TRV27E:AEP,EE,NE,RU/TRV27EP)		161	3-948-339-61	TAPPING	
153	3-989-121-01	SPRING, TENSION		162	3-987-744-01	KNOB, IR	
* 154	3-987-842-01	SHEET, VF FLEXIBLE RETAINER		163	3-987-739-01	SPRING, LINK PLATE	
155	X-3948-603-1	BASE ASSY, VF		164	9-987-742-01	PLATE (878), GROUND	
				165	3-948-339-01	SCREW, TAPPING	
				* 166	3-053-798-01	CLAMP, HARNESS	
				167	3-965-367-01	SPACER, SP	
				SP901	1-504-753-41	SPEAKER (2.8 CM)	


Video light model	CCD-TR515E/TR516E/TR713E CCD-TRV36E/TRV46E
No video light model	CCD-TR315E/TR415E/TR425E CCD-TRV16E/TRV26E/TRV27E/TRV27EP

 

6-6

6-1-7. COLOR EVF BLOCK ASSEMBLY (Color View Finder model CCD-TR516E)


Note : As for the model which carries a B/W view finder, refer to page 6-8.

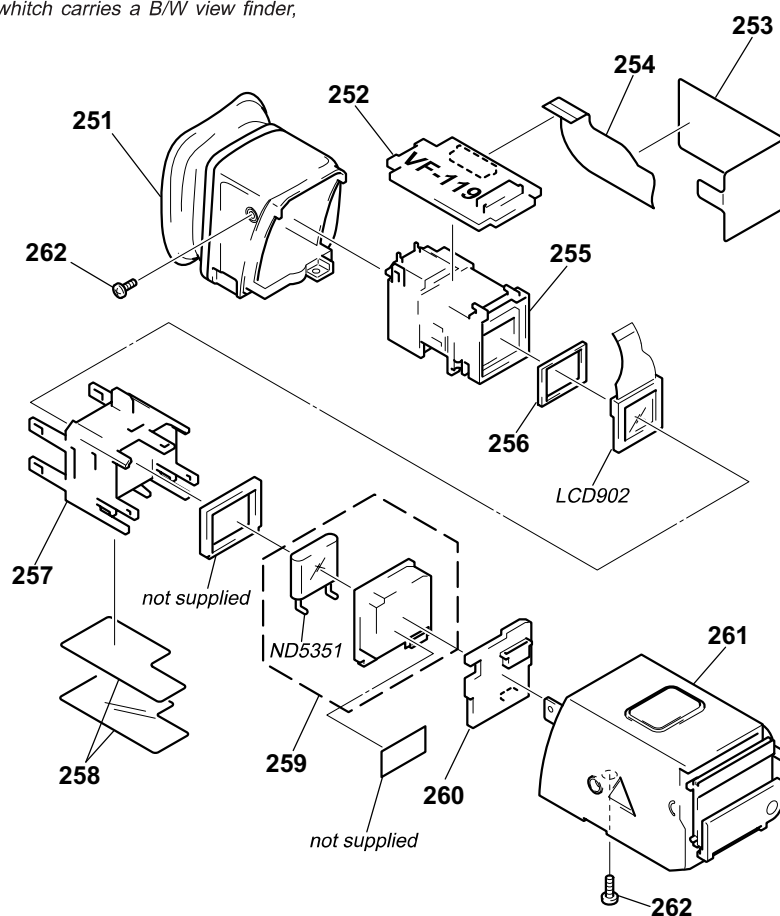

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	X-3948-237-1	CABINET (REAR) (SC) (N) ASSY, EVF		258	3-050-905-01	SHEET, VF LIGHT INTERCEPTION	
252	A-7073-437-A	VF-119 BOARD, COMPLETE		259	A-7073-439-A	LB-54 BOARD, COMPLETE	
253	3-053-224-01	SHEET, FLEXIBLE RETAINER		260	A-7073-438-A	VF-120 BOARD, COMPLETE	
254	1-672-455-11	FP-57 FLEXIBLE BOARD					
255	X-3948-229-1	LENS ASSY (860), VF		261	X-3949-175-1	CABINET (FRONT) ASSY, EVF	
* 256	3-960-302-11	CUSHION (1), LCD		262	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2	
257	X-3949-174-1	HOLDER ASSY, BL		LCD902	8-753-023-37	LCX024AK-4/5 COMPLE	
				⚠ ND5351	1-517-325-21	LAMP, FLUORESCENT (0.55 INCH)	

6-1-8. B/W EVF BLOCK ASSEMBLY
(B/W View Finder models CCD-TR315E/TR415E/TR425E/TR515E/TR713E & TRV series)


Note : As for the model which carries a color view finder, refer to page 6-7.

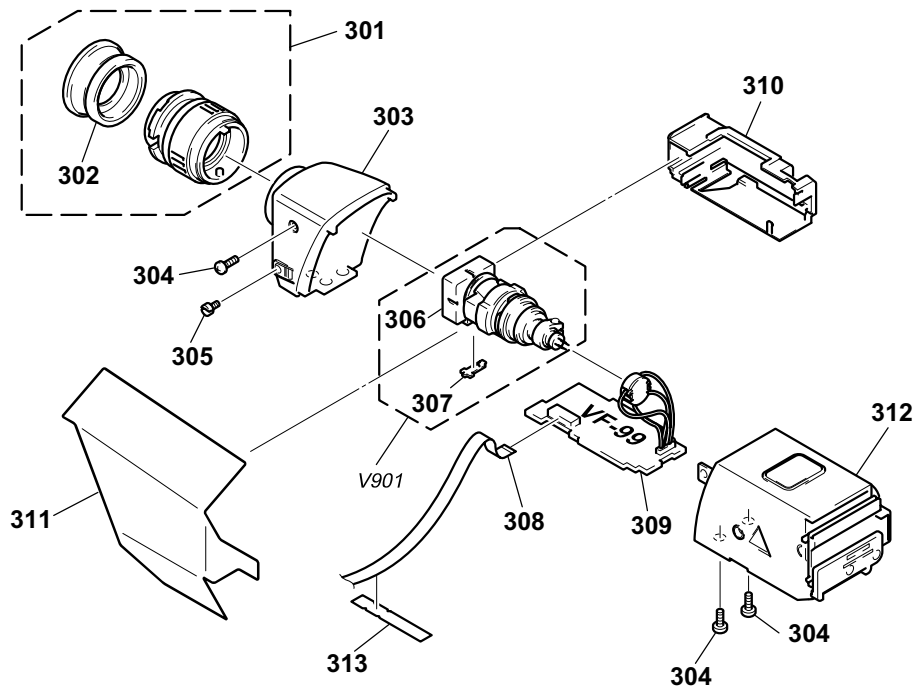

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
 Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	X-3949-273-1	FINDER ASSY		310	X-3948-279-1	HOLDER (878) ASSY, CRT	
302	3-963-391-01	EYE CUP		* 311	3-989-914-01	SHEET, VF (B/W) ELECTROSTATIC	
303	X-3948-278-1	CABINET (REAR) (878) B ASSY		312	X-3948-364-1	CABINET (FRONT) (845) B ASSY	
304	3-968-729-61	SCREW (M2 x 3), LOCK ACE, P2			(TR315E/TR415E/TR425E/TRV16E/TRV26E/TRV27E/TRV27EP)		
305	3-975-898-01	SCREW (T), F LOCK		312	X-3949-176-1	CABINET (FRONT) ASSY, EVF	
					(TR515E/TR713E/TRV36E/TRV46E)		
306	3-977-292-01	MASK, CRT		* 313	3-987-843-01	SHEET, VF FLEXIBLE LOCK	
307	3-725-130-01	COVER, HINGE VOLTAGE		$\triangle$ V901	1-452-673-61	CRT ASSY (M01KXX90WB)	
308	1-783-241-11	CABLE, FLEXIBLE FLAT (FFC-235)					
309	A-7066-774-A	VF-99 (HP) BOARD, COMPLETE					


6-1-9. LCD BLOCK ASSEMBLY (TRV series)

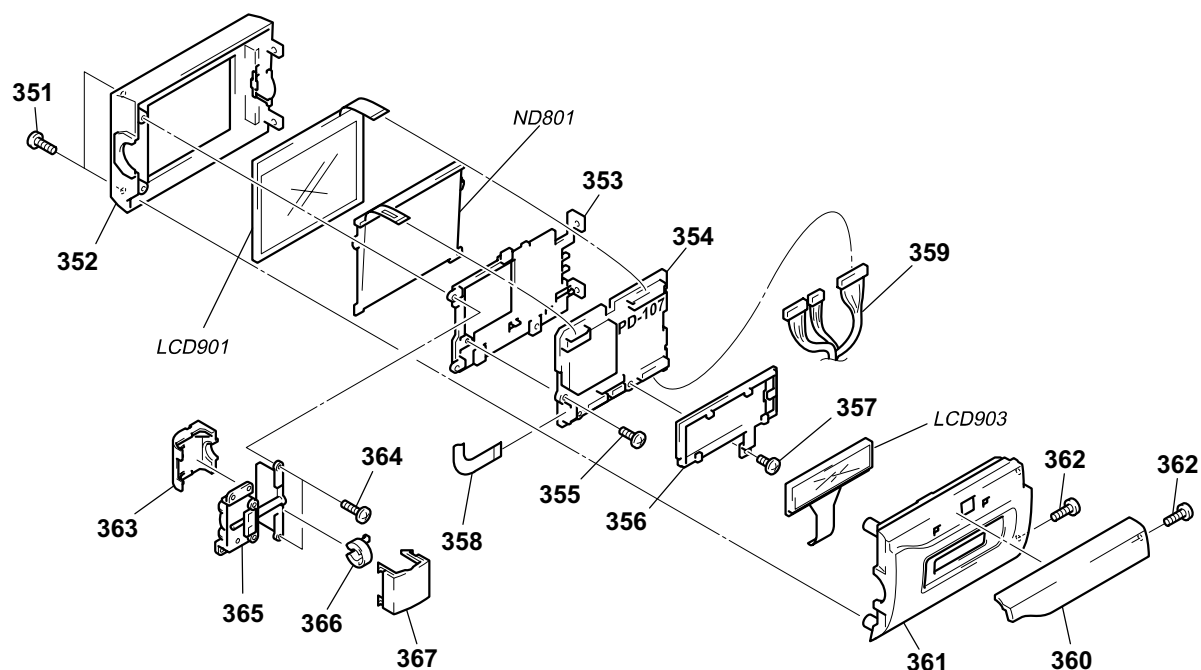

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
351	3-948-339-11	SCREW, TAPPING		362	3-962-826-01	SCREW (2 x 4)	
352	X-3948-162-1	CABINET (M) (870) ASSY, P		363	3-987-625-01	COVER (M), HINGE	
353	3-053-206-01	FRAME (S), PANEL		364	3-948-339-01	SCREW, TAPPING	
354	A-7073-804-A	PD-107 (C6P) BOARD, COMPLETE		365	X-3948-169-7	HINGE ASSY	
355	3-713-786-21	SCREW (M2 x 3)		366	3-987-623-01	CLAMP, HARNESS	
356	3-987-584-11	HOLDER (870), LCD		367	3-503-204-01	COVER (C), HINGE (TRV36E/TRV46E)	
357	4-981-286-01	SCREW (M1.7 x 2) (IB LOCK)		367	3-503-204-21	COVER (C), HINGE (TRV16E/TRV26E/TRV27E/TRV27EP)	
358	1-668-963-21	FP-642 FLEXIBLE BOARD		LCD901	1-803-356-21	MODULE, CRYSTAL INDICATION	
359	1-959-271-11	HARNESS (DP-108)		LCD903	A-7093-473-A	INDICATION LCD BLOCK ASSY	
360	3-053-205-01	CABINET (U), P		$\triangle$ ND801	1-517-752-11	TUBE, FLUORESCENT, COLD CATHODE	
361	3-053-203-01	CABINET (C), P (TRV36E/TRV46E)					
361	3-053-203-21	CABINET (C), P (TRV16E/TRV26E/TRV27E/TRV27EP)					


6-1-10. ZOOM LENS BLOCK ASSEMBLY

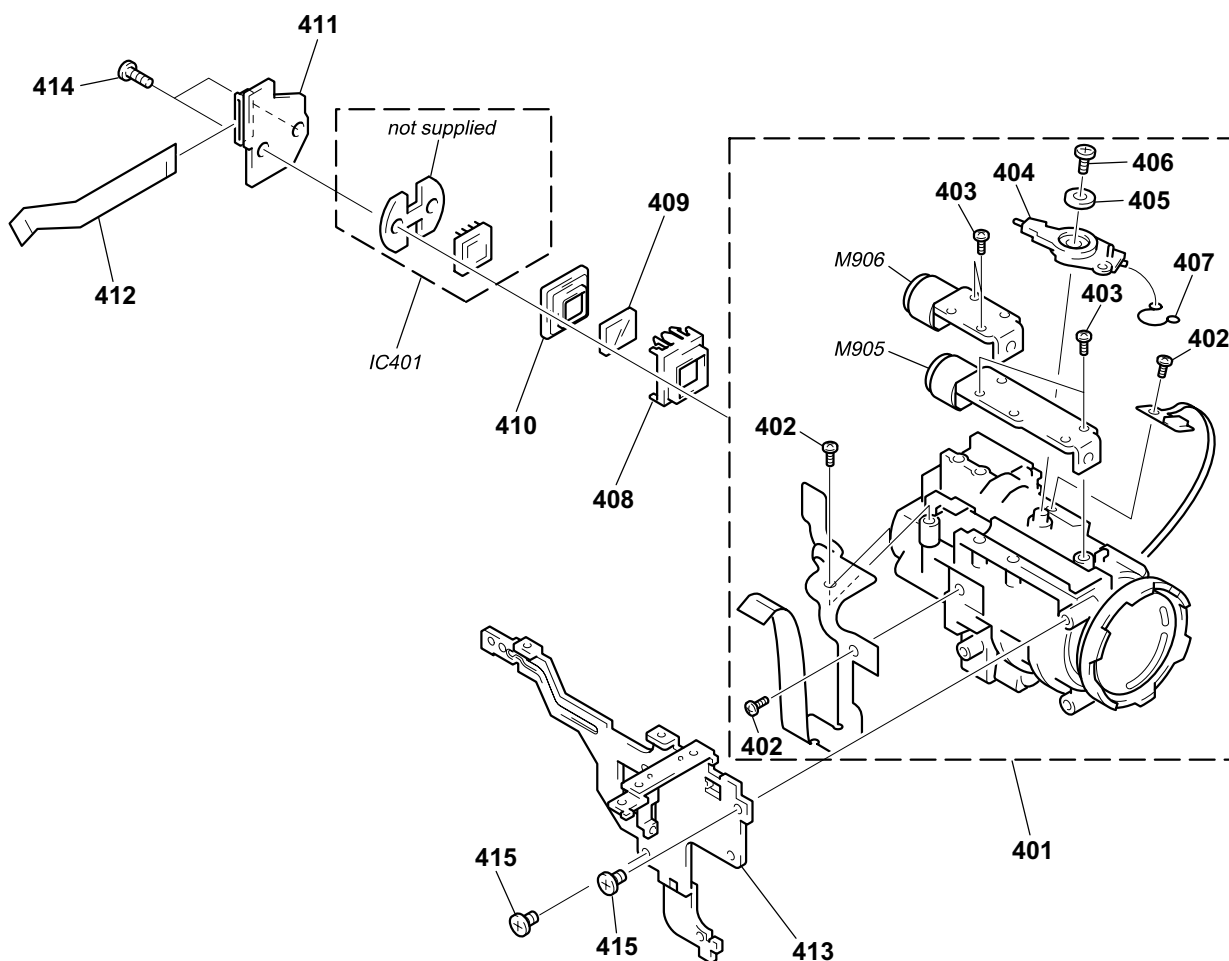

Be sure to read "Note on the CCD Imager replacement" on page 4-9 when changing the CCD imager.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
401	8-848-722-01	DEVICE, LENS LSV-600A (SOC)		411	A-7073-786-A	CD-210 (NT) BOARD, COMPLETE (TR series)	
402	3-713-791-51	SCREW (M1.7 x 3.5), TAPPING, P2		411	A-7073-807-A	CD-211 (NT) BOARD, COMPLETE (TRV series)	
403	3-713-791-41	SCREW (M1.7 x 5), TAPPING PS		412	1-668-959-11	FP-623 FLEXIBLE BOARD	
404	3-979-029-01	LEVER, IR		413	3-987-712-01	FRAME, LENS	
405	2-327-405-01	WASHER		414	3-318-203-11	SCREW (B1.7 x 6), TAPPING	
406	2-623-756-21	SCREW (B1.7 x 5), P		415	3-948-339-61	TAPPING	
407	3-979-037-11	SPRING, RETURN		IC401	A-7030-961-A	CCD BLOCK ASSY (207 SERVICE)	
408	3-978-981-11	ADAPTOR (FK), CCD FITTING				(Except TR713E/TRV46E)	
409	1-758-133-21	FILTER BLOCK, OPTICAL		IC401	A-7030-962-A	CCD BLOCK ASSY (243 SERVICE)	
410	3-953-817-01	RUBBER (F), SEAL				(TR713E/TRV46E)	
				M905	1-763-047-11	MOTOR, FOCUS STEPPING	
				M906	1-763-046-11	MOTOR, ZOOM STEPPING	

6-1-9. CASSETTE COMPARTMENT ASSEMBLY

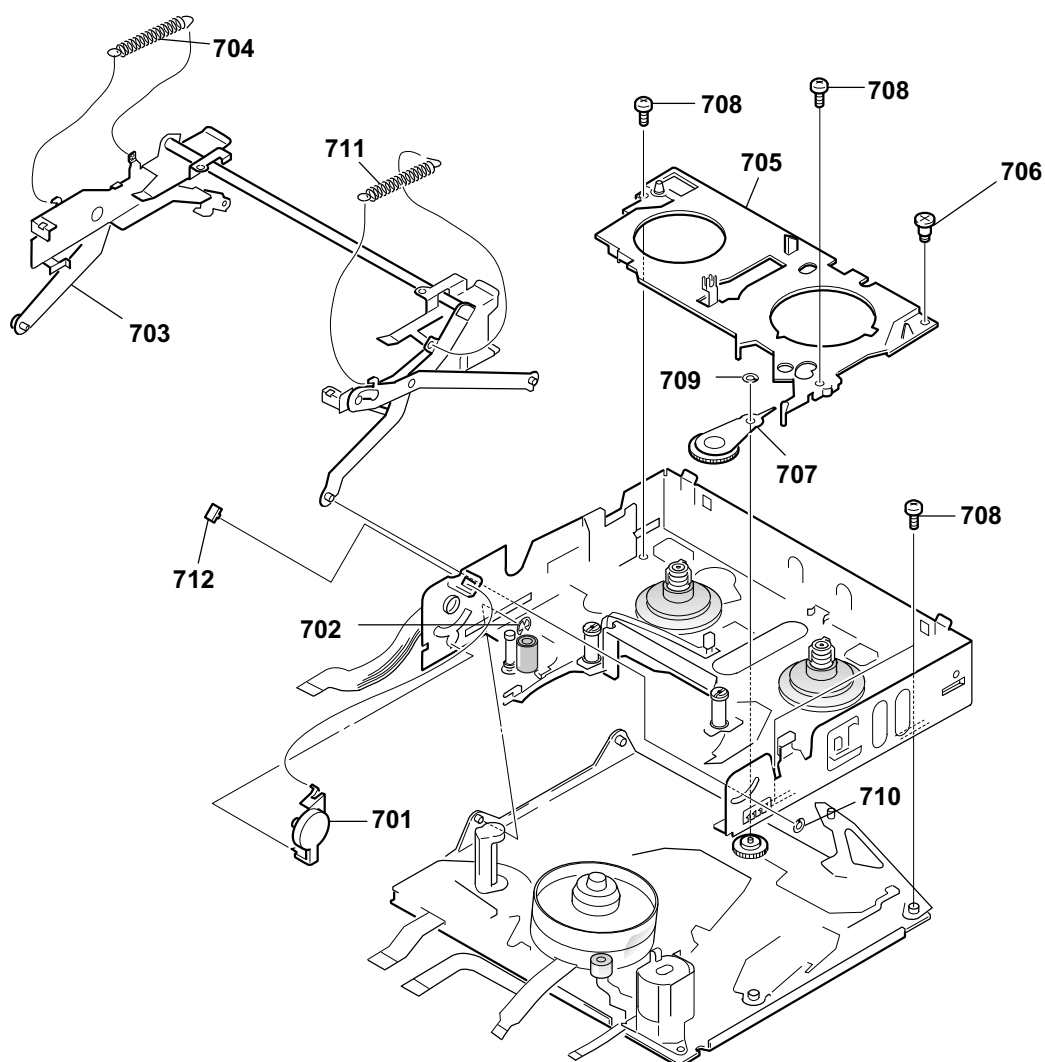


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
701	A-7040-421-A	DAMPER ASSY		707	X-3945-399-1	GEAR ASSY, GOOSENECK	
702	7-624-102-04	STOP RING 1.5, TYPE -E		708	3-947-503-01	SCREW (M1.4 x 2.5)	
703	X-3945-400-X	CASSETTE COMPARTMENT ASSY		709	3-331-007-21	WASHER	
704	3-965-587-03	SPRING, TENSION		710	3-727-176-01	WASHER, STOPPER	
705	3-965-584-08	RETAINER, GOOSENECK		711	3-973-268-01	SPRING, TENSION	
706	3-976-055-01	SCREW (M1.4 x 1)		712	3-971-076-01	FASTENER, D	

6-1-10. LS CHASSIS ASSEMBLY

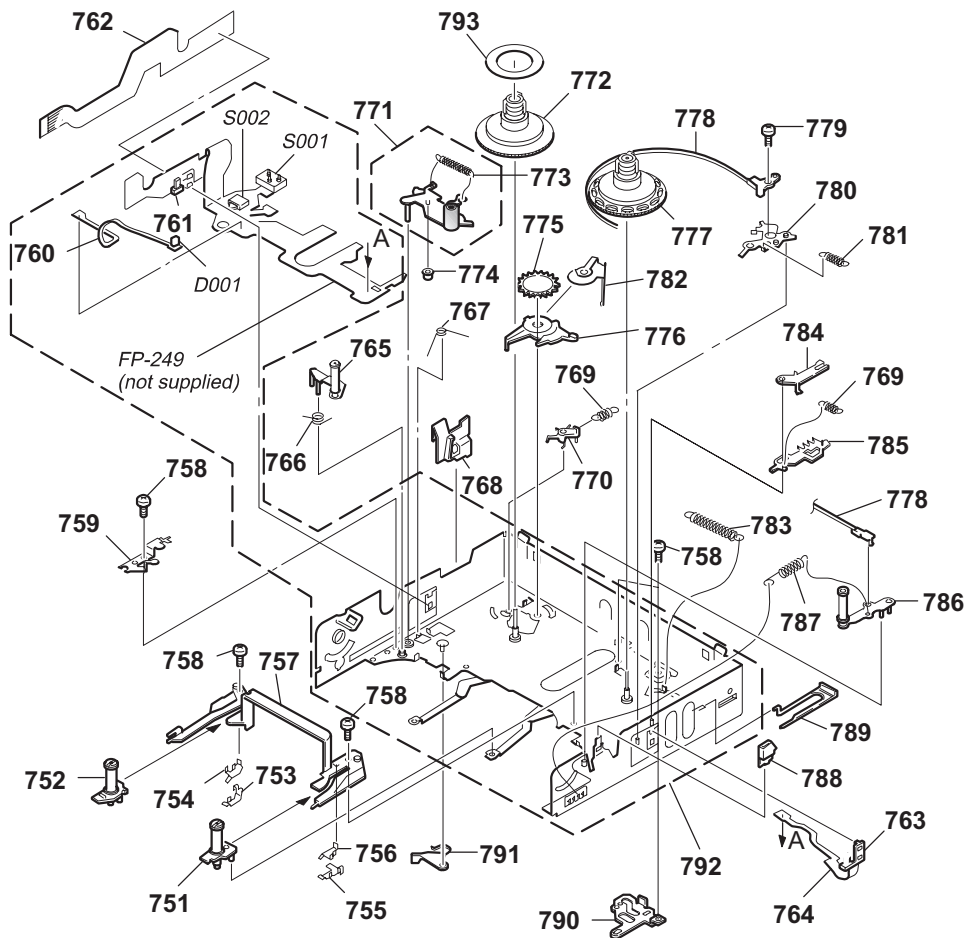

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
751	A-7040-419-A	BASE (S) BLOCK ASSY, GUIDE		775	3-965-563-01	GEAR, T SOFT	
752	A-7040-418-B	BASE (T) BLOCK ASSY, GUIDE		776	3-965-565-01	CLAW, T SOFT	
753	3-965-559-01	STOPPER (T)		777	X-3945-397-1	DECK ASSY, REEL, S	
754	3-965-557-01	STOPPER (T), GB		778	X-3945-396-1	BAND ASSY, TENSION REGULATOR	
755	3-965-558-01	STOPPER (S)		779	3-945-756-01	SCREW (M1.4X3)	
756	3-965-556-01	STOPPER (S), GB		780	3-965-583-01	ARM, RVS	
757	3-965-553-01	RAIL, GUIDE		781	3-965-580-01	SPRING, TENSION	
758	3-947-503-01	SCREW (M1.4X2.5)		782	3-966-384-01	SPRING, T SOFT	
759	3-965-573-01	RETAINER, TG4		783	3-965-578-01	SPRING, TENSION COIL	
760	1-658-213-11	FP-355 FLEXIBLE BOARD		784	3-965-560-01	RATCHET, S	
761	3-965-552-01	HOLDER (T), SENSOR		785	3-965-561-01	PLATE, RELEASE, S RATCHET	
762	1-657-786-13	FP-221 FLEXIBLE BOARD		786	X-3945-395-1	ARM ASSY, TG1	
763	3-965-551-01	HOLDER (S), SENSOR		787	3-965-576-01	SPRING (TG1), TENSION	
764	1-658-214-11	FP-356 FLEXIBLE BOARD		788	3-965-567-01	LID OPEN	
765	A-7040-417-A	ARM BLOCK ASSY, TG4		789	3-965-566-01	COVER, LS GUIDE	
766	3-965-574-01	SPRING, TORSION		* 790	3-965-577-01	PLATE, CAM, LS	
767	3-965-575-01	SPRING (PINCH), TORSION		791	3-965-569-01	ARM, EJ	
768	3-965-568-01	GUIDE, LOCK		792	A-7040-427-A	CHASSIS (S1) ASSY, LS	
769	3-965-562-01	SPRING (RATCHET), TENSION		* 793	3-972-838-01	SPACER, REEL	
770	3-965-581-03	RATCHET, T		D001	8-719-988-42	DIODE GL453	
771	X-3945-394-1	ARM ASSY, PINCH		S001	1-692-614-11	SWITCH, PUSH (3 KEY) (Hi8 MP, ME/MP, REC PROOF)	
772	X-3945-398-2	DECK ASSY, REEL, T		S002	1-572-688-11	SWITCH, PUSH (1 KEY)(C.C. LOCK)	
773	3-965-648-01	SPRING (PINCH), TENSION					
774	3-965-579-01	ROLLER, PINCH PRESS					

6-1-11. MECHANISM CHASSIS ASSEMBLY

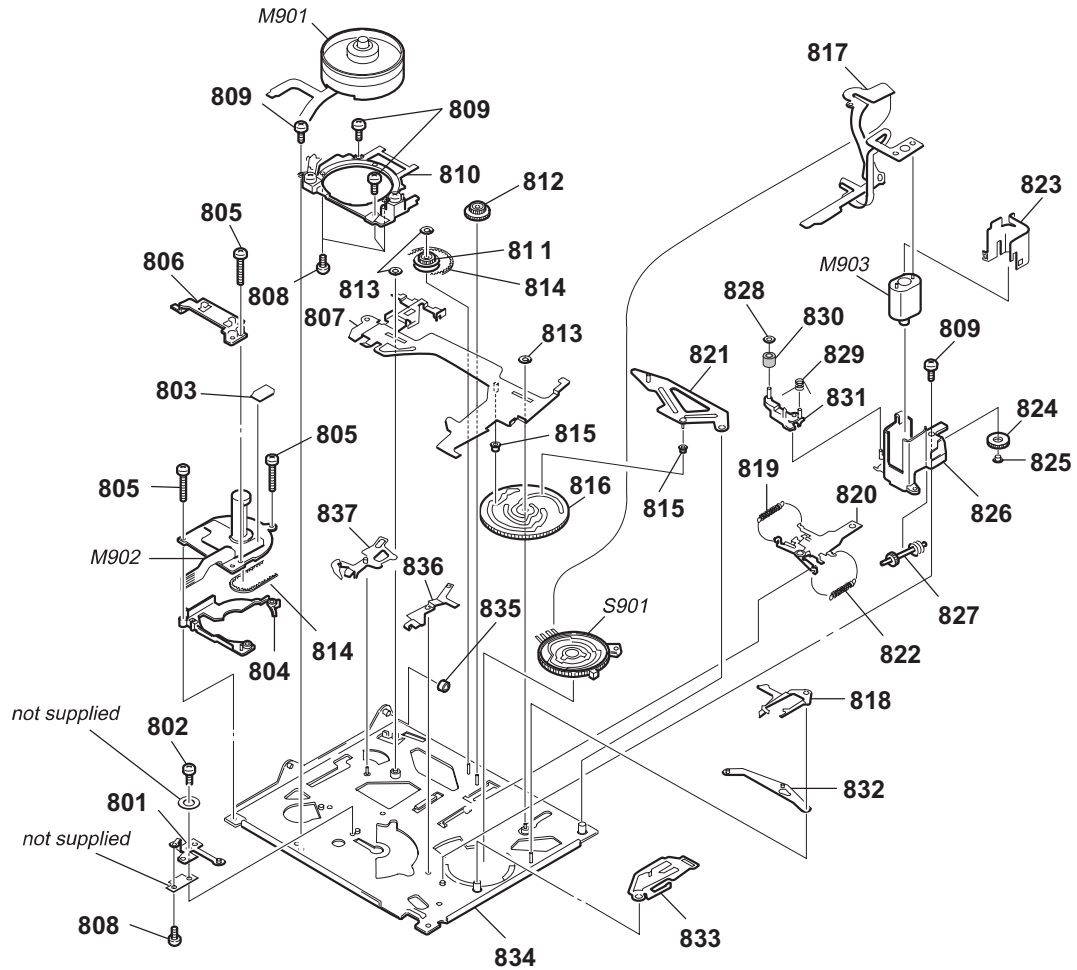

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
801	X-3947-343-1	GROUND (IM) ASSY, SHAFT		822	3-965-535-01	SPRING (LIMITTER ARM S), COIL	
802	3-965-550-02	SCREW (M1.7X1.6)		823	3-965-542-01	SHIELD, MOTOR	
803	1-657-785-11	FP-248 FLEXIBLE BOARD (DEW SENSOR)		824	3-965-539-01	GEAR (A)	
804	3-965-545-01	SPACER, CAPSTAN		825	3-965-538-01	SLEEVE, MOTOR HOLDER	
805	3-965-549-01	SCREW (M1.4 X 6.5)					
806	3-966-349-01	HOLDER, FLEXIBLE		826	3-965-540-01	HOLDER, MOTOR	
807	3-971-644-01	SLIDER (2), M		827	3-965-541-01	SHAFT, WORM	
808	3-971-939-01	SCREW (M1.4)		828	3-321-393-01	WASHER, STOPPER	
809	3-947-503-01	SCREW (M1.4X2.5)		829	3-965-724-01	SPRING, TORSION	
810	A-7040-416-A	BASE BLOCK ASSY, DRUM		830	A-7040-423-A	ROLLER BLOCK ASSY, HC	
811	3-965-527-01	GEAR, CHANGE		831	X-3945-407-1	ARM ASSY, HC ROLLER	
812	3-965-544-01	GEAR, RELAY		832	3-965-531-01	ARM, GL	
813	3-331-007-21	WASHER		833	3-965-530-01	PLATE (2), REGULATOR, TENSION	
814	3-965-546-01	BELT, TIMING		834	X-3947-915-2	CHASSIS ASSY, MECHANICAL	
815	3-965-533-01	ROLLER, LS		835	3-965-526-02	ROLLER, LS GUIDE	
816	3-965-528-01	GEAR, CAM		836	3-965-547-01	ARM, HC DRIVING	
817	1-657-784-11	FP-220 FLEXIBLE BOARD		837	3-965-534-01	PLATE, PRESS, PINCH	
818	3-965-529-01	PLATE, REGULATOR (LIMITTER ARM T), COIL		M901	A-7048-875-A	DRUM ASSY (DGH-0E2A-R)	
819	3-965-536-01	SPRING (LIMITTER ARM T), COIL		M902	8-835-531-32	CAPSTAN ASSY	
820	X-3945-388-1	SLIDER ASSY, GL					
821	3-965-532-01	ARM, LS		M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
				S901	1-762-436-15	SWITCH, ROTARY (ENCODER)	