

SECTION 6 REPAIR PARTS LIST

6-1. EXPLODED VIEWS

NOTE:


- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Abbreviation
Canadian model is abbreviated as CND.
East European model is abbreviated as EE.
Hong Kong model is abbreviated as HK.
Australian model is abbreviated as AUS.
Tourist model is abbreviated as JE.
Chinese model is abbreviated as CH.
North European model is abbreviated as NE.
Russian model is abbreviated as RU.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-1-1. CABINET (L) BLOCK ASSEMBLY (EXCEPT TRV64E)

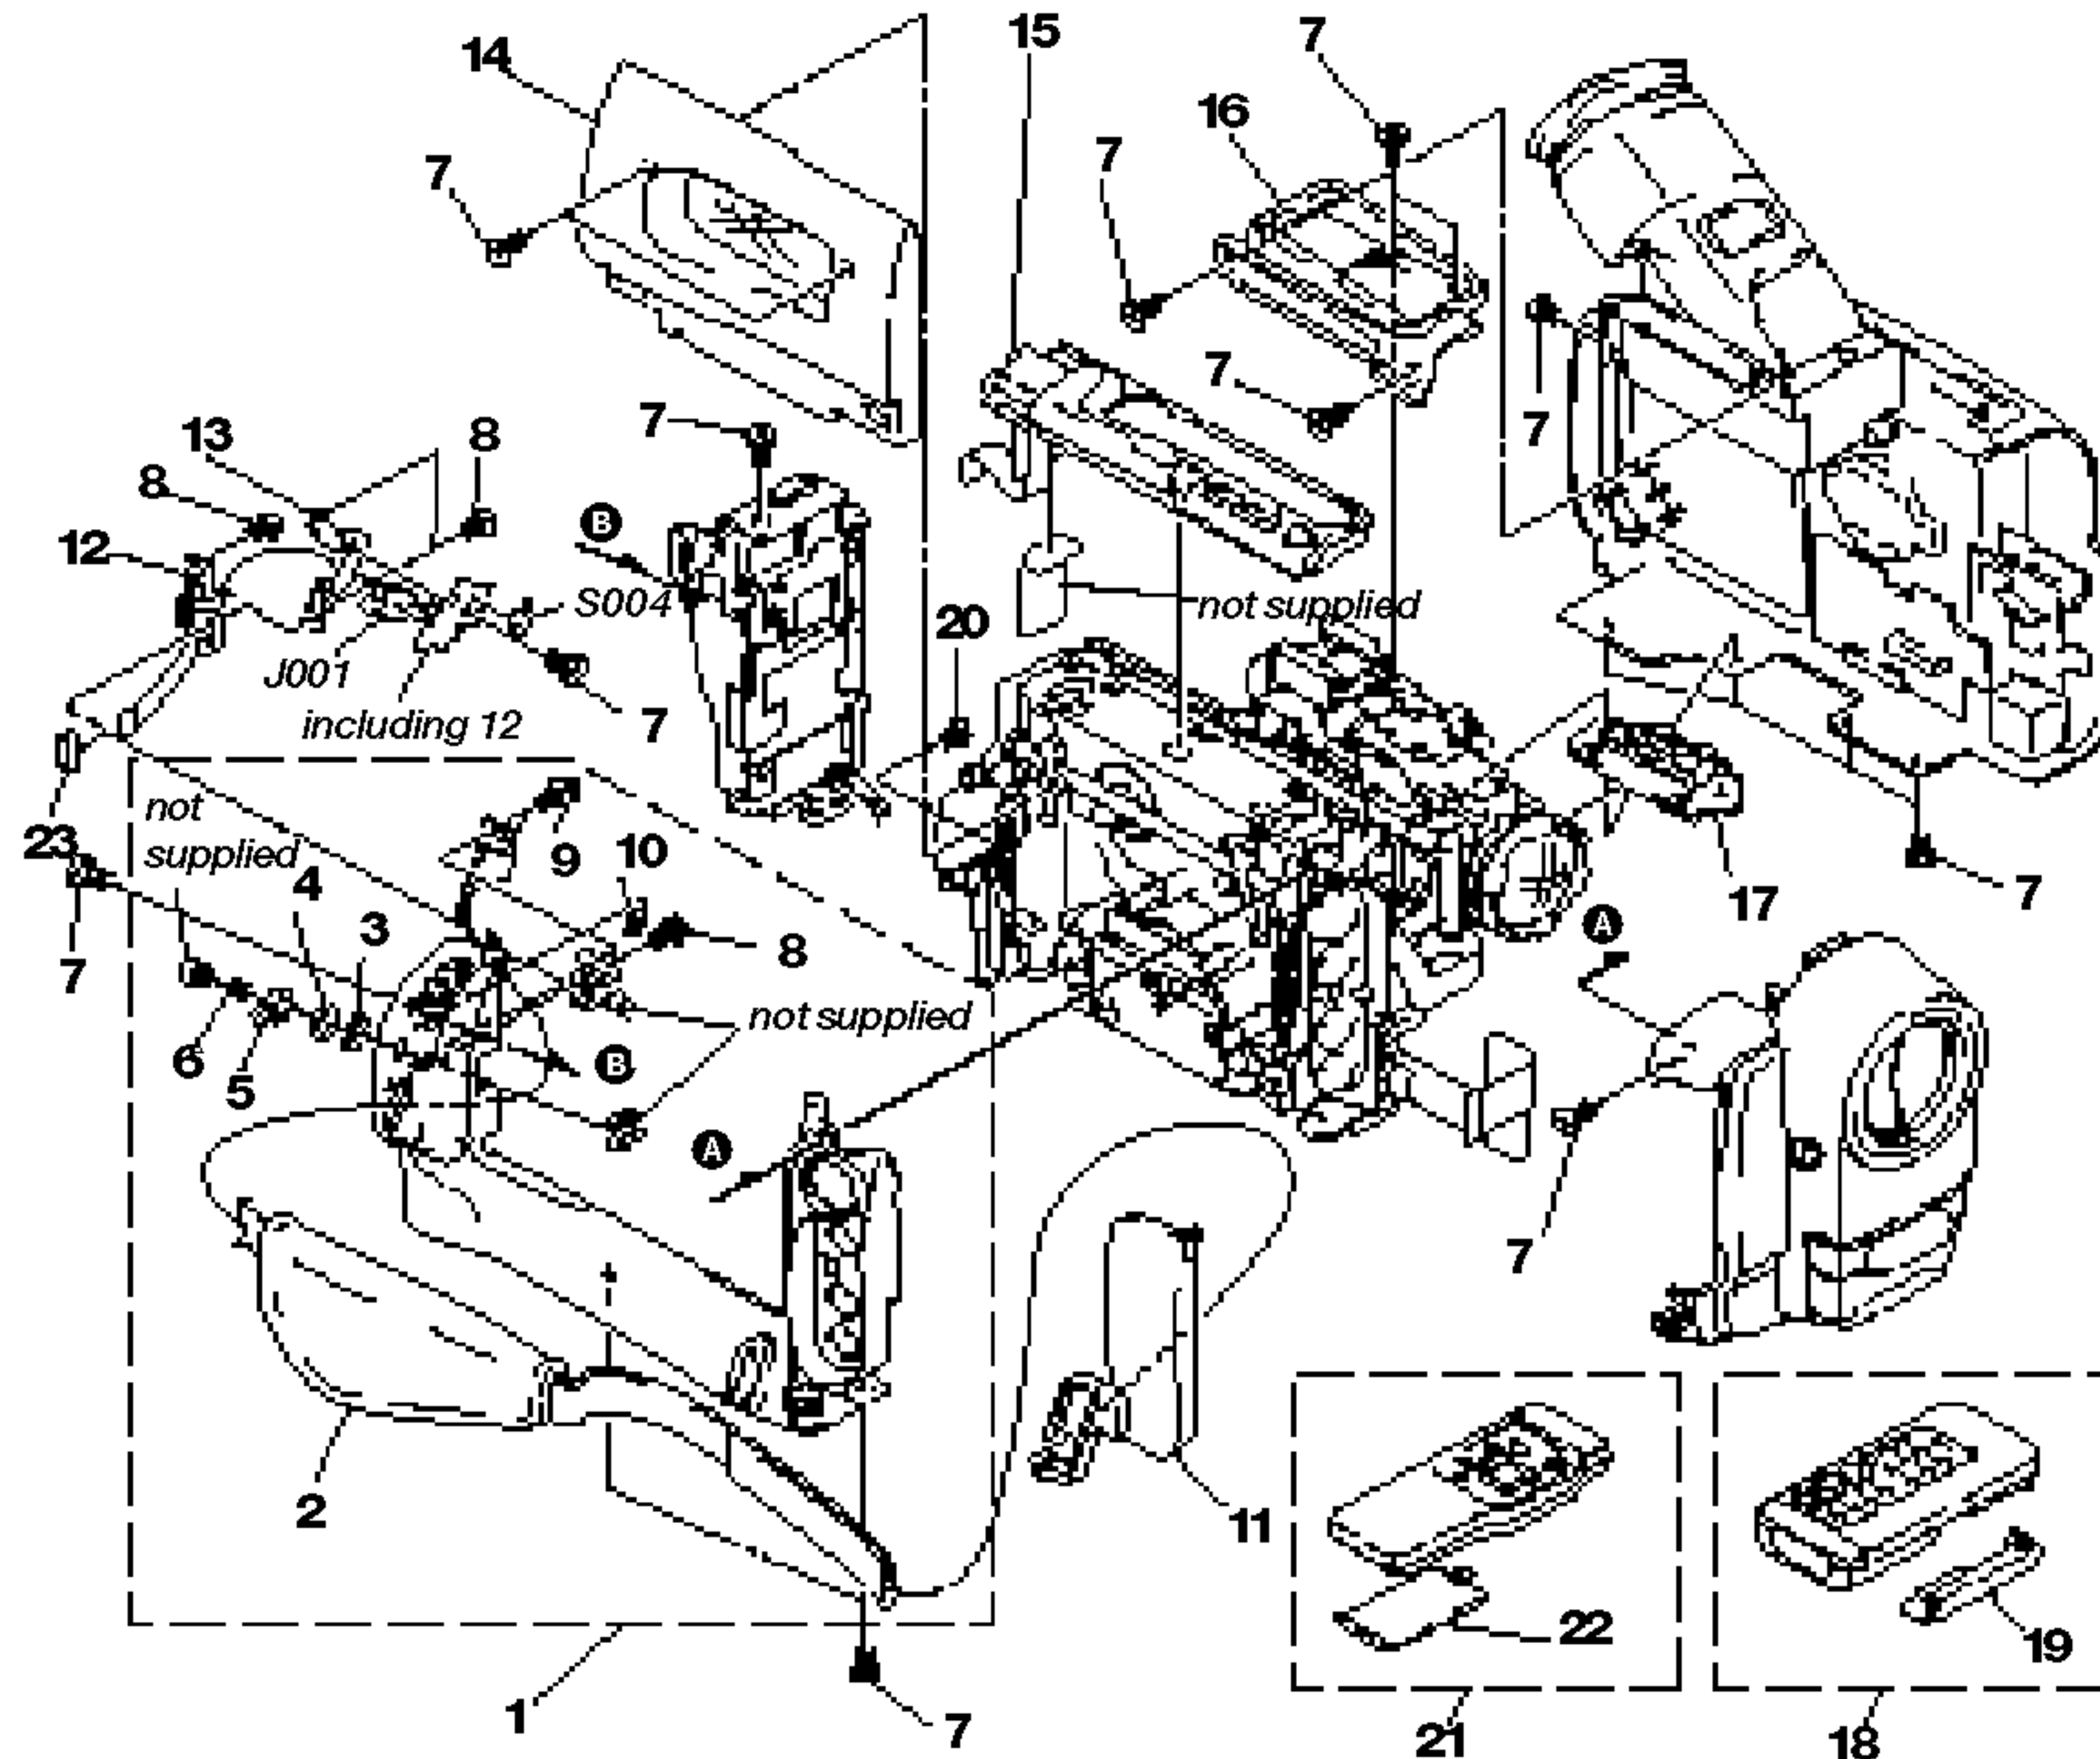

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	X-3947-247-1	CABINET (L) ASSY (TRV62/TRV72/TRV82)		14	X-3947-249-1	LID ASSY(NORMAL), CASSETTE (TRV54E/TRV56E)	
1	X-3947-291-1	CABINET (L) ASSY (TRV94E:AEP,UK)		15	1-475-099-31	SWITCH BLOCK, VTR CONTROL (FK) (TRV62/TRV72/TRV82)	
1	X-3947-370-1	CABINET (L) ASSY (TRV56E)		15	1-475-099-41	SWITCH BLOCK, VTR CONTROL (FK) (TRV54E/TRV56E/TRV94/TRV94E:E,HK,JE)	
1	X-3947-433-1	CABINET (L) ASSY (TRV94)		15	1-475-099-51	SWITCH BLOCK, VTR CONTROL (FK) (TRV94E:AEP,UK)	
1	X-3947-248-1	CABINET(L) ASSY (TRV54E/TRV94E:E,HK,JE)		16	3-975-525-01	BASE, SHOE	
2	3-969-339-31	BELT, GRIP		17	3-975-516-01	SCREW, TRIPOD	
* 3	3-975-506-01	SHEET METAL, SS (TRV54E/TRV94/TRV94E)		18	8-917-593-90	COMMANDER, REMOTE (RMT-717) (TRV94/TRV94E)	
4	3-970-854-01	SPRING, STAND-BY		19	3-742-854-01	LID, BATTERY CASE (for RMT-717) (TRV94/TRV94E)	
5	3-969-081-01	KNOB, STAND-BY		20	3-713-786-21	SCREW (M2X3)	
6	3-972-501-01	SPRING, COMPRESSION		21	1-467-574-21	REMOTE COMMANDER (RMT-708) (EXCEPT TRV94/TRV94E)	
7	3-968-729-01	SCREW (M2), LOCK ACE, P2		22	3-958-131-01	LID, BATTERY CASE (for RMT-708) (EXCEPT TRV94/TRV94E)	
8	3-948-339-61	TAPPING		23	1-500-227-11	BEAD, FERRITE (TRV94E:AEP,UK)	
9	3-679-362-11	SCREW		J001	1-565-276-21	JACK, ULTRA SMALL 1P (LANC)	
10	3-302-492-00	SPRING, COMPRESSION		S004	1-572-688-11	SWITCH, PUSH (1 KEY)(EJECT)	
11	3-975-522-01	COVER, JACK					
12	1-475-098-11	SWITCH BLOCK, CONTROL(SS-8100) (TRV54E/TRV94/TRV94E)					
12	1-475-098-21	SWITCH BLOCK, CONTROL(SS-8100) (EXCEPT TRV54E/TRV94/TRV94E)					
* 13	3-975-532-01	HOLDER, EL					
14	X-3947-199-1	LID ASSY, CASSETTE(EXCEPT TRV54E/TRV56E)					