


5-4. LS ASSEMBLY

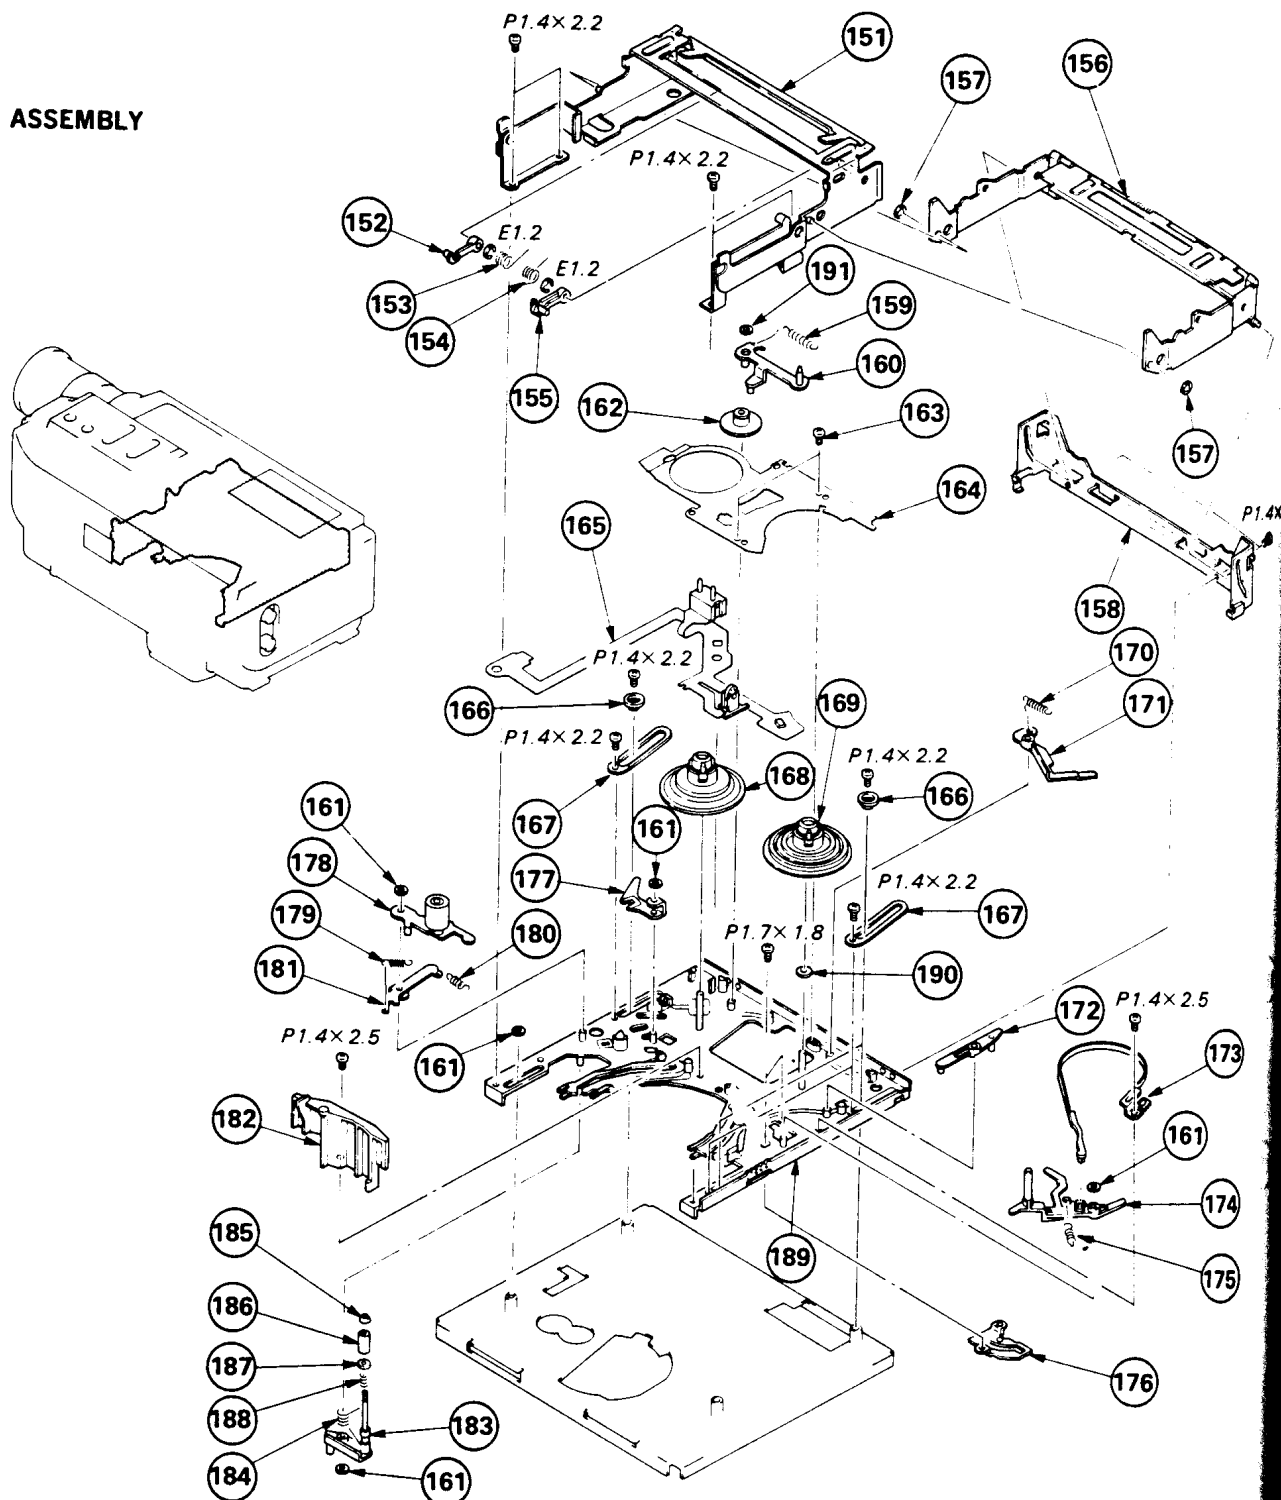

No.	Part No.	Description
151	X-3695-447-4	COMPARTMENT ASSY, CASSETTE, LS
152	3-695-595-01	RETAINER (T), CASSETTE
153	3-695-605-01	SPRING, TORSION
154	3-695-604-01	SPRING, TORSION
155	3-695-594-01	RETAINER (S), CASSETTE
156	X-3695-448-3	ARM ASSY, BLIND
157	3-669-465-00	WASHER (1.5), STOPPER
158	3-695-646-01	ARM, LS
159	3-695-718-01	SPRING, TENSION
160	X-3712-037-1	LEVER (A) ASSY (2)
161	3-315-384-31	WASHER, STOPPER
162	X-3712-025-1	GEAR ASSY, TS
163	3-699-402-01	SCREW (M1.3X5.5), TAPPING
164	3-712-165-01	PLATE (2), STOPPER
165	A-7060-693-A	FP-53 BOARD, COMPLETE
166	3-695-698-01	GUIDE, LS
167	3-695-697-01	SPRING, LEAF, LS
168	X-3695-436-1	TABLE ASSY, REEL, TAKE-UP
169	X-3712-038-1	TABLE ASSY (2), REEL, SUPPLY
170	3-542-475-00	SPRING, TENSION
171	3-712-151-01	BRAKE (2), SOFT

No.	Part No.	Description
172	3-695-735-01	ARM, TG1 RELEASE
173	X-3695-432-1	BAND ASSY, TG1
174	X-3712-019-1	ARM ASSY (2), TG1
175	3-695-591-01	SPRING, TENSION
176	3-695-733-01	PLATE, CAM, LS
177	X-3712-022-1	ARM (B) ASSY (2), PINCH
178	X-3712-032-2	ARM (C) ASSY (2), PINCH
179	3-695-622-01	SPRING, TENSION
180	3-695-719-01	SPRING, TENSION
181	X-3695-415-1	PINCH LEVER ASSY
182	3-695-624-01	BASE, PROTECT
183	X-3712-027-1	ARM ASSY (2), TG7
184	3-695-541-01	SPRING
185	3-712-158-01	FLANGE, UPPER, TG7
186	3-712-160-01	SLEEVE (2), TG7
187	3-712-159-01	FLANGE, LOWER, TG7
188	3-712-157-01	SPRING, COMPRESSION
189	X-3712-035-1	CHASSIS ASSY (2), LS
190	3-701-444-01	WASHER, 6
191	3-321-393-01	WASHER, STOPPER