


5-4. FRONT PANEL (KEY) ASSY SECTION

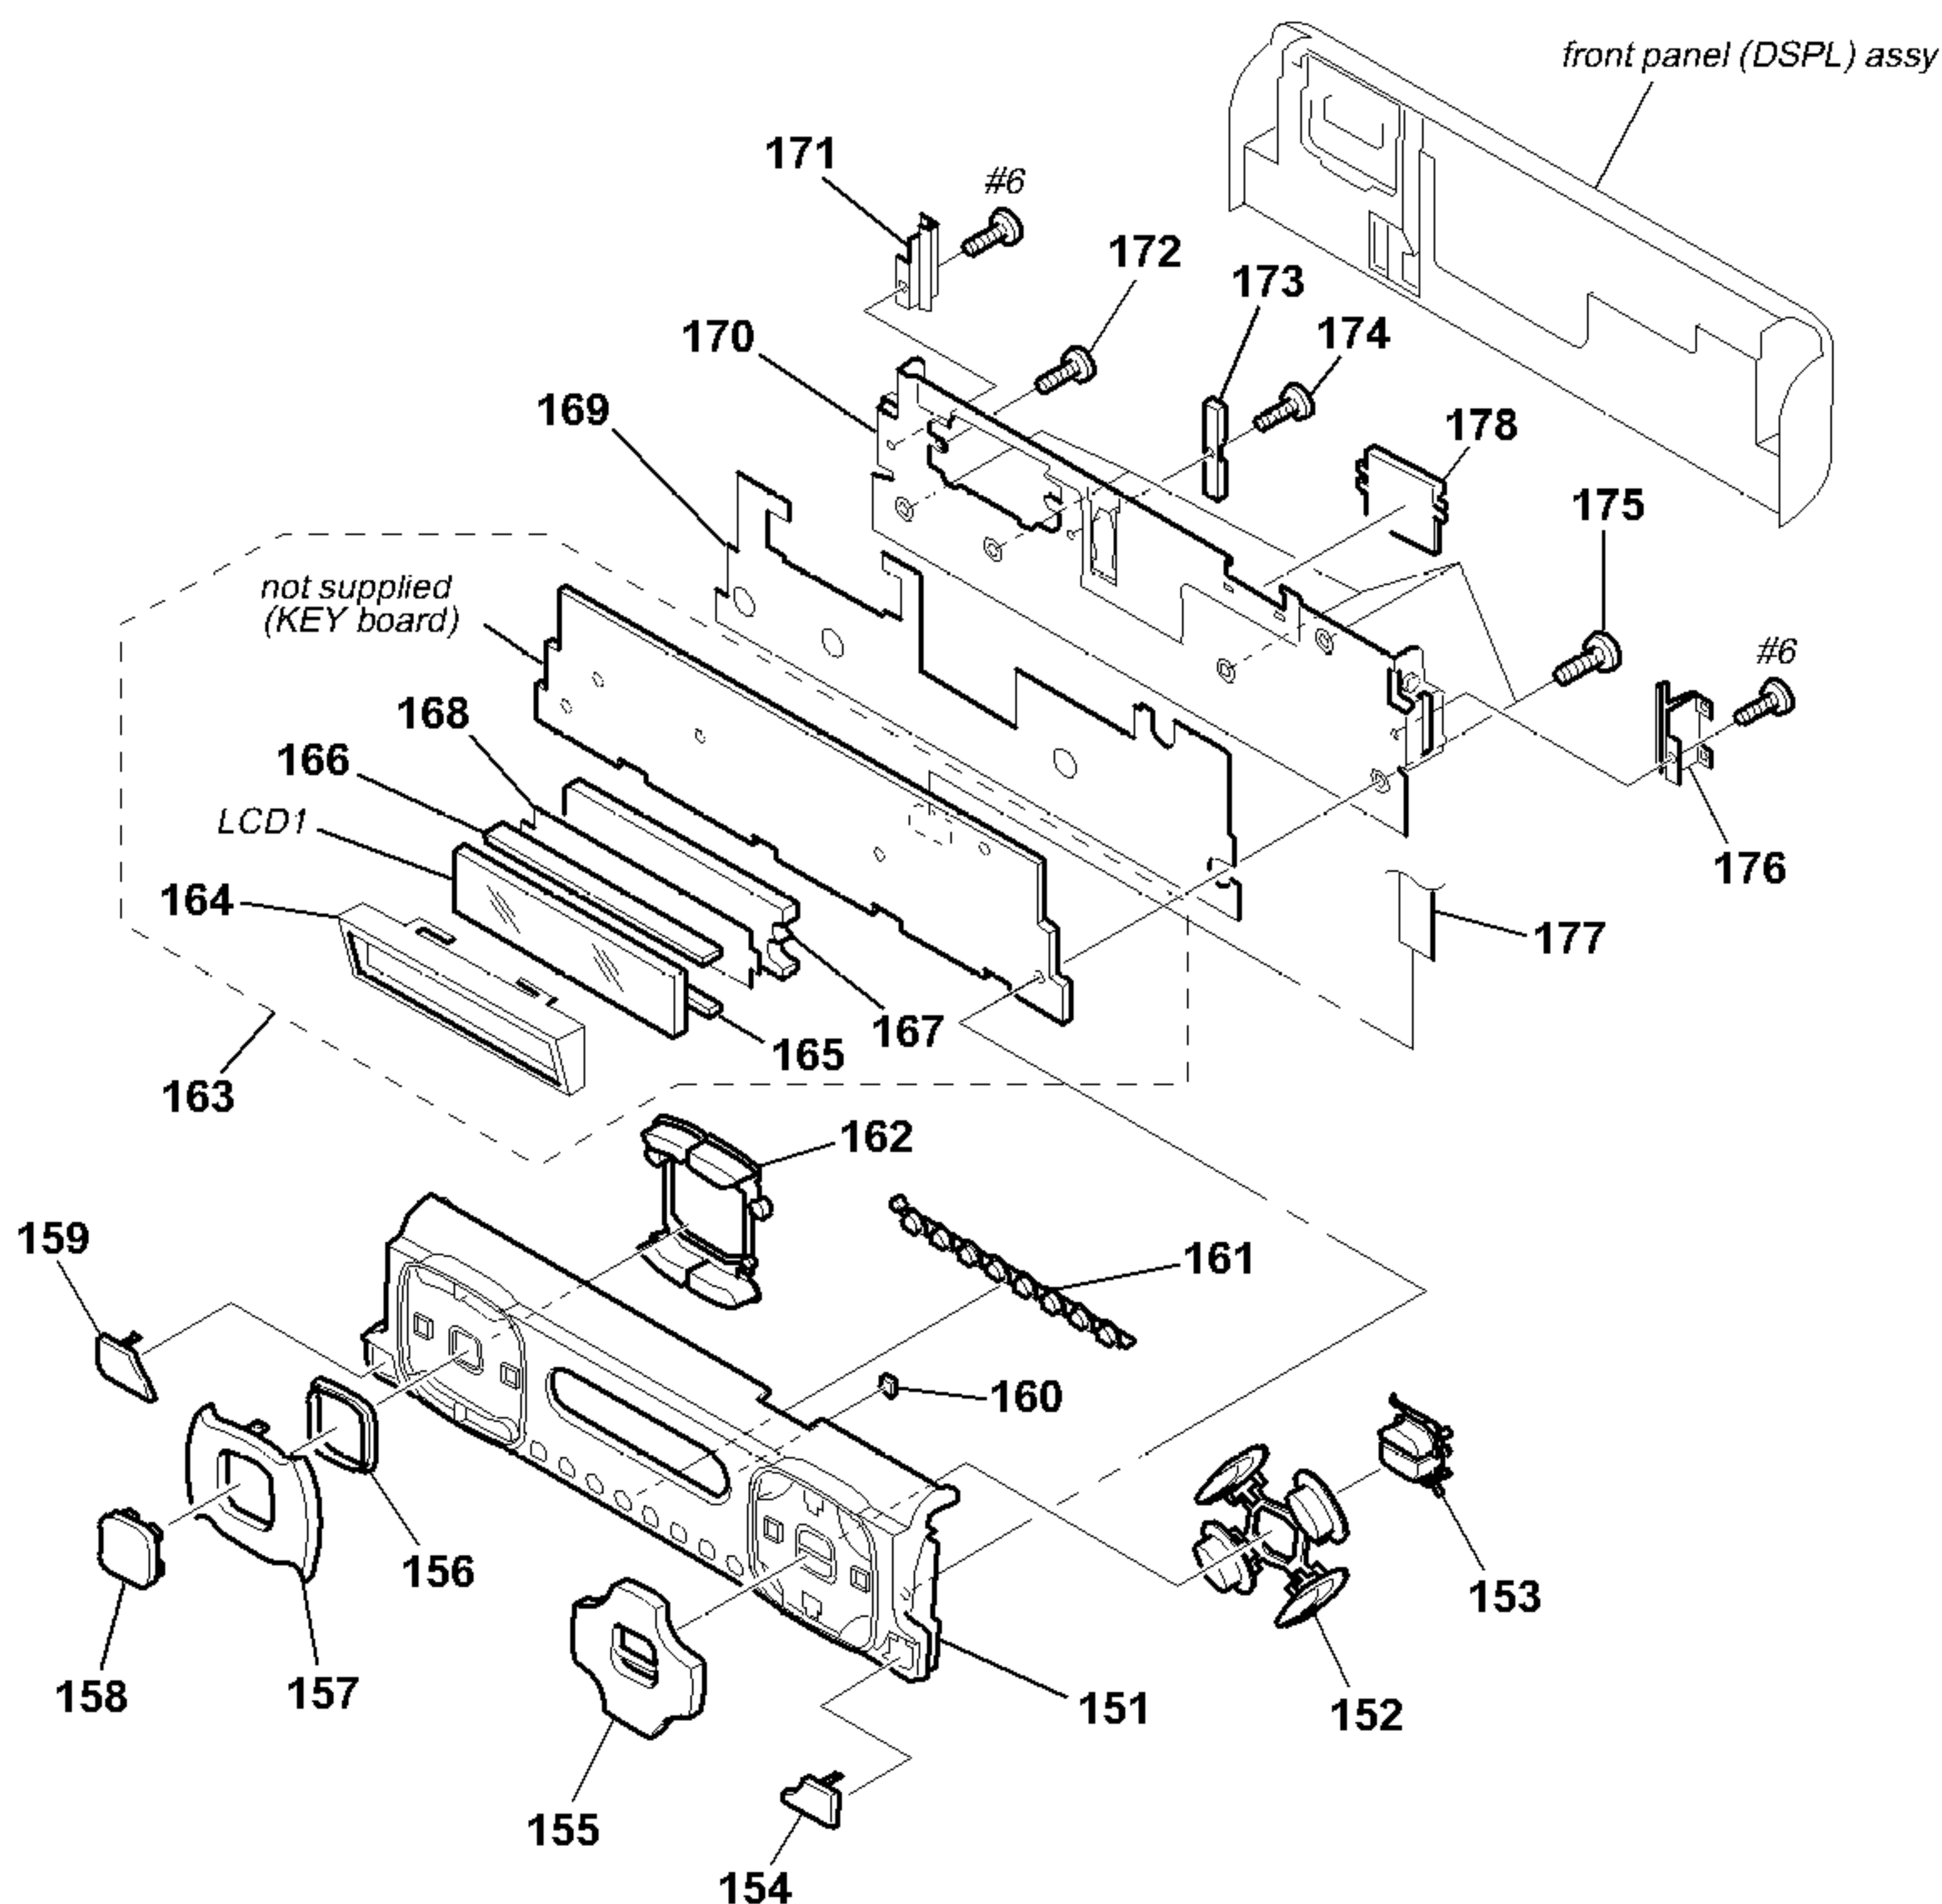

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-3380-535-1	PANEL (KEY) SUB ASSY, FRONT (US)		* 164	3-230-486-01	HOLDER (LCD-KEY)	
151	X-3380-538-1	PANEL (KEY) SUB ASSY, FRONT (AEP,UK,E)		165	1-694-808-21	CONDUCTIVE BOARD, CONNECTION	
152	3-230-483-01	BUTTON (ENTER)		166	1-694-807-21	CONDUCTIVE BOARD, CONNECTION	
153	3-230-482-01	BUTTON (EQ7)		* 167	3-230-487-01	PLATE (LCD-KEY), LIGHT GUIDE	
154	3-230-480-01	BUTTON (EJECT)		* 168	3-230-488-01	SHEET (LCD-KEY), DIFFUSION	
155	3-230-481-01	BUTTON (SEEK)		* 169	3-230-415-01	SHEET (KEY), INSULATING	
156	3-230-485-01	PLATE (RING), LIGHT GUIDE		170	X-3380-543-1	PANEL ASSY, BASE	
157	3-230-477-01	BUTTON (+/-)		171	X-3380-560-1	SPRING (DETOUCH L) ASSY	
158	3-230-478-01	BUTTON (SOURCE)		172	3-063-745-11	SCREW (+P M2 B TITE)	
159	3-230-484-01	BUTTON (CLOSE)		173	3-230-490-01	GUIDE (DETOUCH)	
160	3-231-433-01	CUSHION (ELECTROSTATIC)		174	2-134-636-31	SCREW (M1.7X2.5)	
161	3-230-398-01	BUTTON (6 KEY) (US)		175	3-230-416-01	SCREW	
161	3-230-398-11	BUTTON (6 KEY) (AEP,UK,E)		176	X-3380-561-1	SPRING (DETOUCH R) ASSY	
162	3-230-479-01	BUTTON (MODE) (US)		177	1-681-390-11	FLEXIBLE BOARD	
162	3-230-479-11	BUTTON (MODE) (AEP,UK,E)		178	3-230-491-01	GUIDE (FLEXIBLE)	
* 163	A-3283-164-A	KEY BOARD, COMPLETE (US)		LCD1	1-804-349-11	DISPLAY PANEL, LIQUID CRYSTAL	
* 163	A-3283-176-A	KEY BOARD, COMPLETE (AEP,UK,E)					