


5-4. FRONT PANEL SECTION

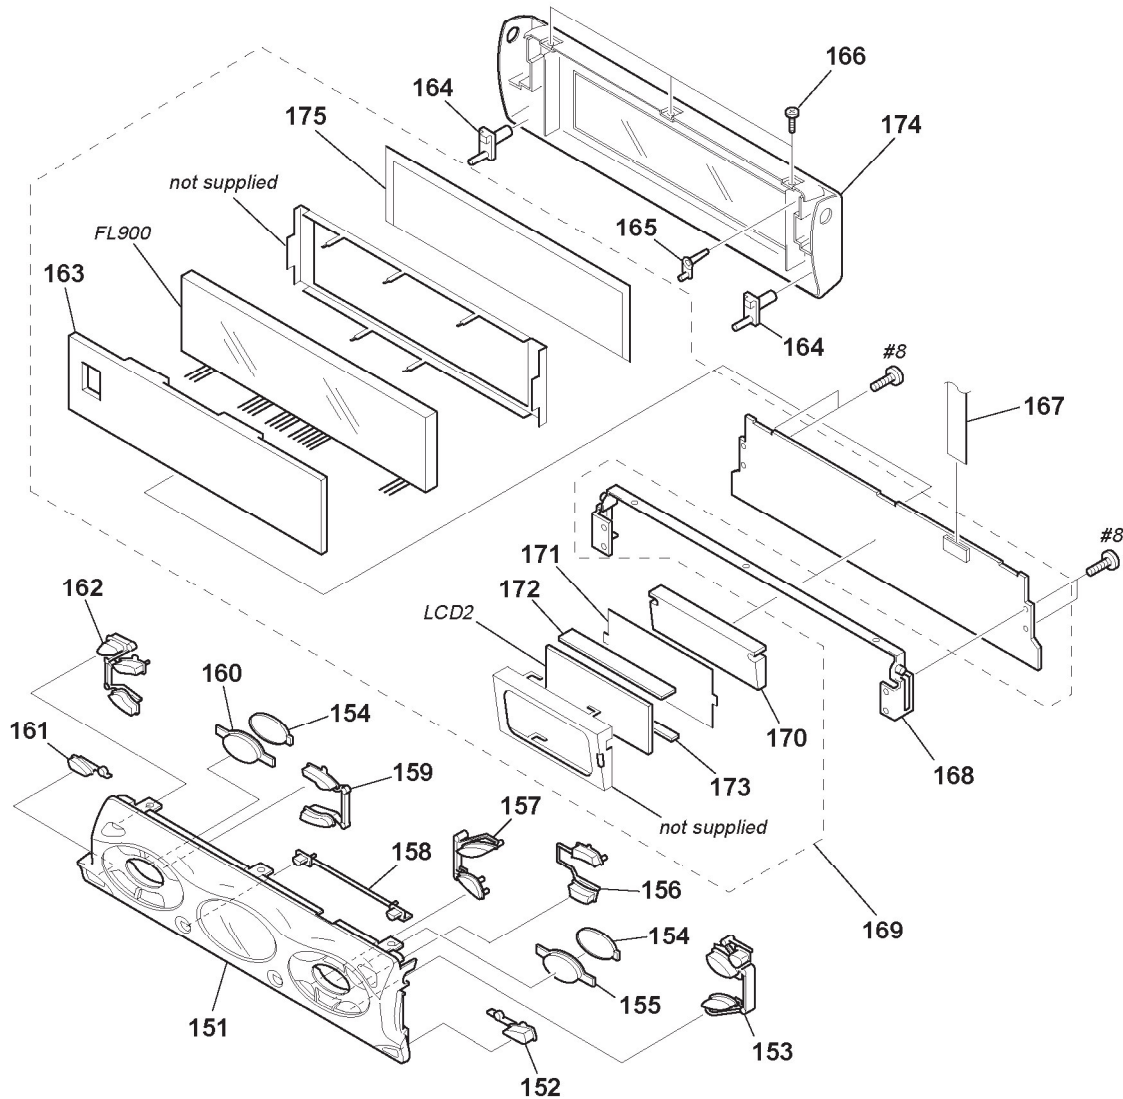

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	X-3383-766-1	PANEL (KEY) ASSY (S), FRONT (US,CND)		165	3-248-789-01	BUTTON (RESET-DSPL)	
151	X-3383-768-1	PANEL (KEY) ASSY (S), FRONT (AEP,UK,E)		166	2-626-869-01	SCREW (M2X3), SERRATION	
152	3-238-816-01	BUTTON (EJECT)		167	1-687-952-11	FLEXIBLE BOARD	
153	3-238-820-01	BUTTON (ENTER) (US,CND)		168	X-3381-646-1	BRACKET (PANEL) ASSY	
153	3-238-820-11	BUTTON (ENTER) (AEP,UK,E)		169	A-3274-766-A	DISPLAY BOARD, COMPLETE (AEP,UK,E)	
154	3-238-814-01	HOLDER (REFLECTION), BUTTON		169	A-3274-979-A	DISPLAY BOARD, COMPLETE (US,CND)	
155	X-3381-650-1	BUTTON (SEEK/AMS) ASSY		170	3-238-827-01	PLATE (LCD KEY), LIGHT GUIDE	
156	3-238-821-01	BUTTON (DISC)		171	3-238-826-01	SHEET (KEY), DIFFUSION	
157	3-238-819-01	BUTTON (SOUND)		172	1-694-925-11	CONDUCTIVE BOARD, CONNECTION	
158	3-238-817-01	BUTTON (DSO)		173	1-694-926-11	CONDUCTIVE BOARD, CONNECTION	
159	3-238-818-01	BUTTON (MODE) (US,CND)		174	X-3383-210-1	PANEL (MAIN) ASSY, FRONT (AEP,UK,E)	
159	3-238-818-11	BUTTON (MODE) (AEP,UK,E)		174	X-3383-692-1	PANEL (MAIN) ASSY, FRONT (US,CND)	
160	X-3381-649-1	BUTTON (VOL) ASSY		175	3-249-076-01	FILTER (FL) (US,CND)	
161	3-238-815-01	BUTTON (CLOSE)		175	3-249-076-21	FILTER (FL) (AEP,UK,E)	
162	3-239-338-01	BUTTON (SOURCE)		FL900	1-518-879-11	INDICATOR TUBE, FLUORESCENT	
163	3-248-825-01	PLATE (FL), GUIDE		LCD2	1-804-636-21	DISPLAY PANEL, LIQUID CRYSTAL	
164	3-248-791-01	BUTTON (OPEN)		#8	7-685-104-19	SCREW +P 2X6 TYPE2 NON-SLIT	