


4-3. FRONT PANEL SECTION

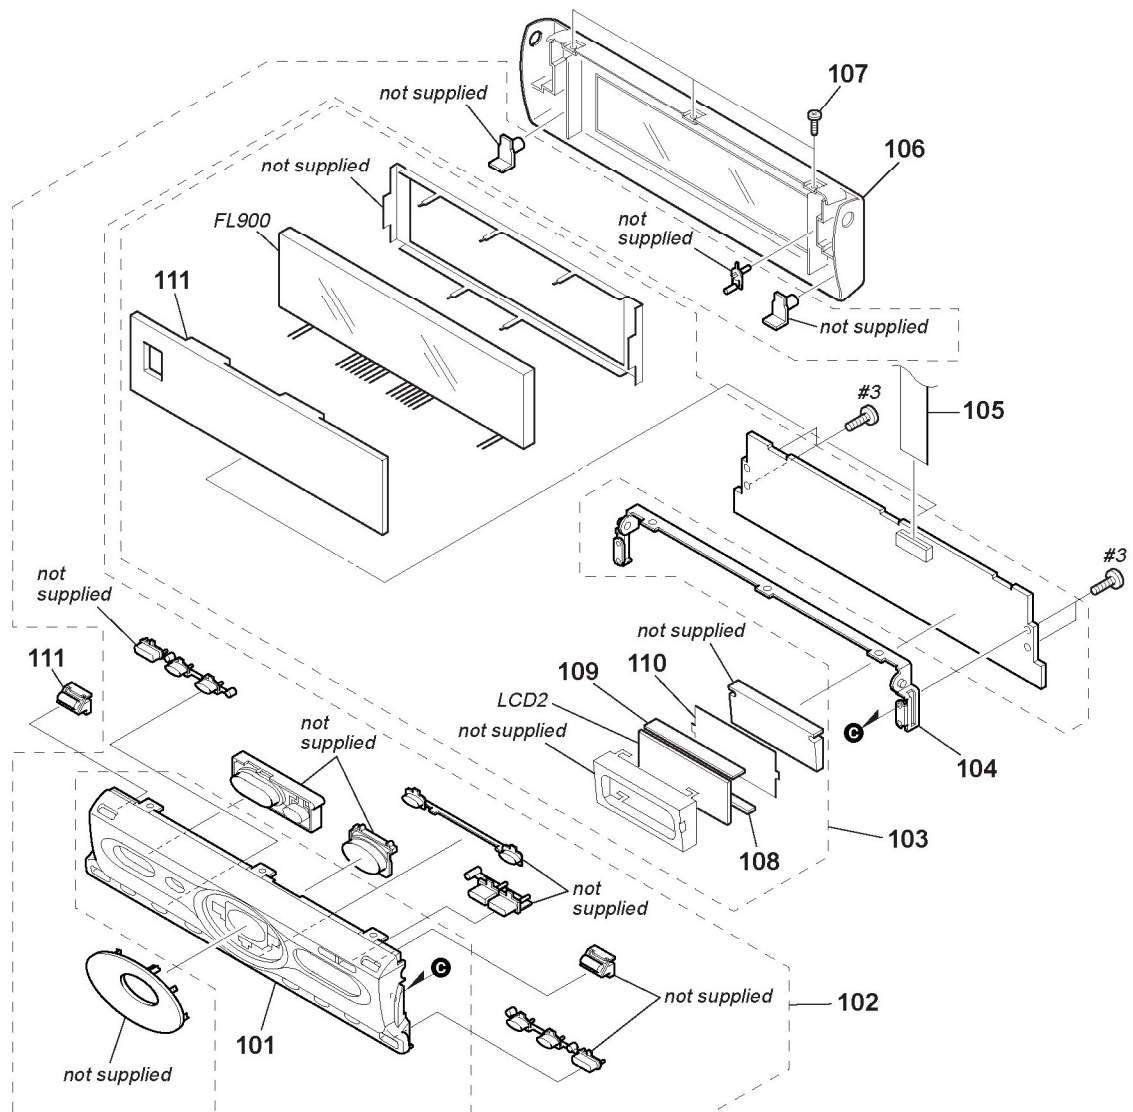

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	X-3384-477-1	PANEL (KEY) ASSY, FRONT (US,CND)		108	1-780-137-11	CONDUCTIVE BOARD, CONNECTION	
101	X-3384-480-1	PANEL (KEY) ASSY, FRONT (AEP,UK,E)		109	1-780-138-11	CONDUCTIVE BOARD, CONNECTION	
102	X-3384-912-1	BUTTON ASSY (S)		110	3-260-053-01	SHEET (LCD KEY), DIFFUSION	
103	A-3283-600-A	DISPLAY BOARD, COMPLETE (M8800:US,CND)		111	3-260-040-11	BUTTON (OFF) (US,CND)	
103	A-3283-619-A	DISPLAY BOARD, COMPLETE (EXCEPT M8800:US,CND)		111	3-260-040-21	BUTTON (OFF) (AEP,UK,E)	
104	X-3384-478-1	PANEL ASSY, BRACKET		112	3-260-035-01	PANEL (FL), GUIDE	
105	1-861-811-11	FLEXIBLE BOARD		FL900	1-518-954-11	INDICATOR TUBE, FLUORESCENT	
106	X-3384-911-1	DSPL ASSY, PANEL FRONT (S)		LCD2	1-805-459-11	DISPLAY PANEL, LIQUID CRYSTAL	
107	2-626-869-01	SCREW (M2X3), SERRATION		#3	7-685-104-19	SCREW +P 2X6 TYPE2 NON-SLIT	