

SECTION 7
EXPLODED VIEWS

NOTE:


- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories are given in the last of electrical parts list.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) . . . (RED)

↑ ↑
Parts of Color Cabinet's Color

- Abbreviation
CE1 : East European model
E41 : AC 230V area in E model
EA : Saudi Arabia model
IT : Italian model
MX : Mexican model
RU : Russian model
SP : Singapore model

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


7-1. CABINET SECTION

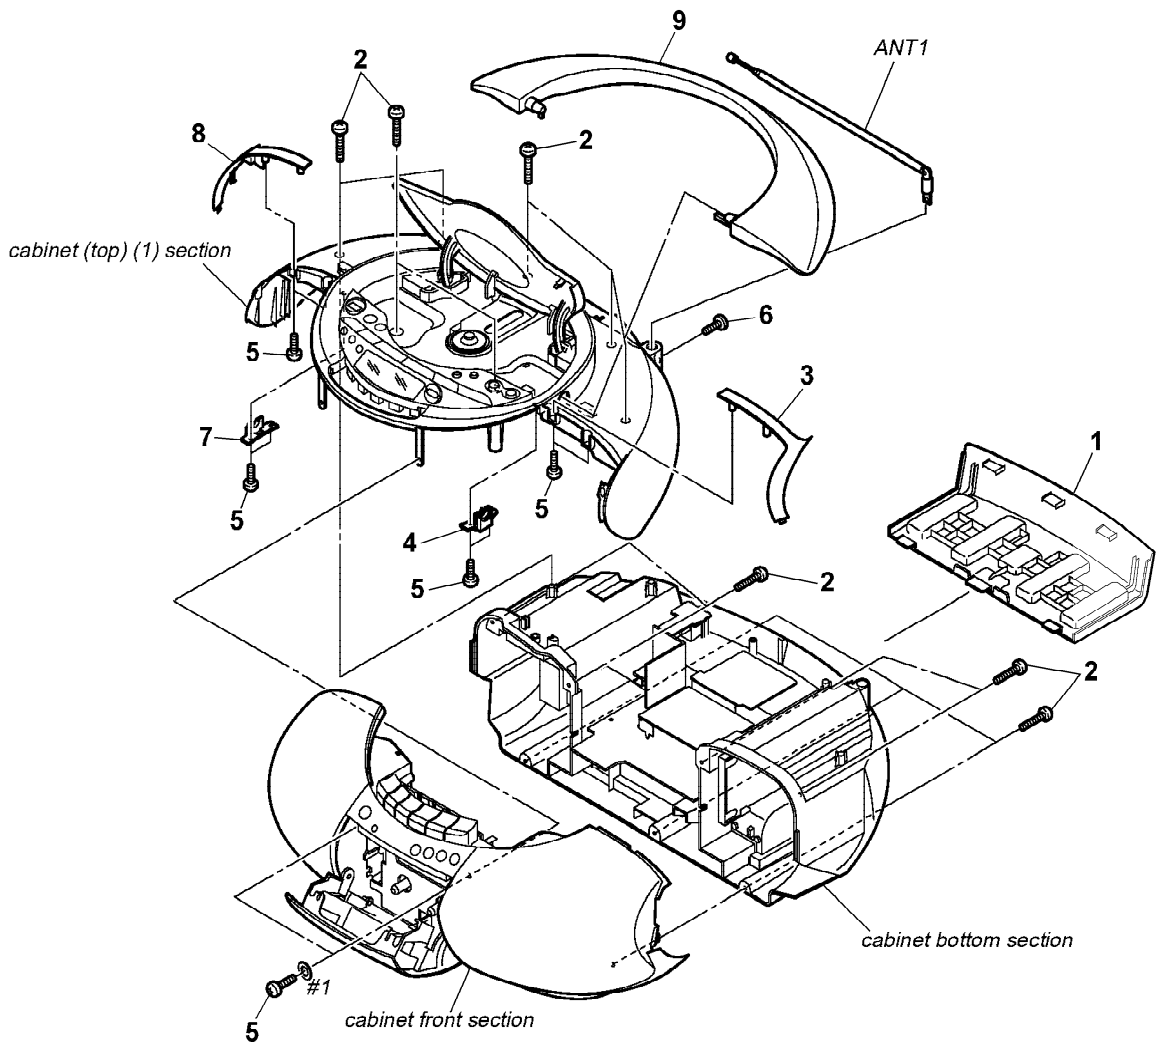

Ref. No.	Part No.	Description	Remark
1	3-216-200-01	LID, BATTERY CASE	
2	3-254-140-11	SCREW (B2.6), (+) BV TAPPING	
3	3-216-214-01	COVER (HANDLE R)	
4	2-547-159-21	HOLDER (HANDLE) (R)	
5	3-254-151-01	SCREW (B2.6), (+) P TAPPING	
6	3-252-833-01	SCREW (M3), (+) P	


Ref. No.	Part No.	Description	Remark
7	2-547-158-21	HOLDER (HANDLE) (L)	
8	3-216-213-01	COVER (HANDLE L)	
9	3-216-197-01	HANDLE	
ANT1	1-754-376-11	ANTENNA, TELESCOPIC (FM)	
#1	7-688-002-11	W 2.6, MIDDLE	

7-2. CABINET (FRONT) SECTION

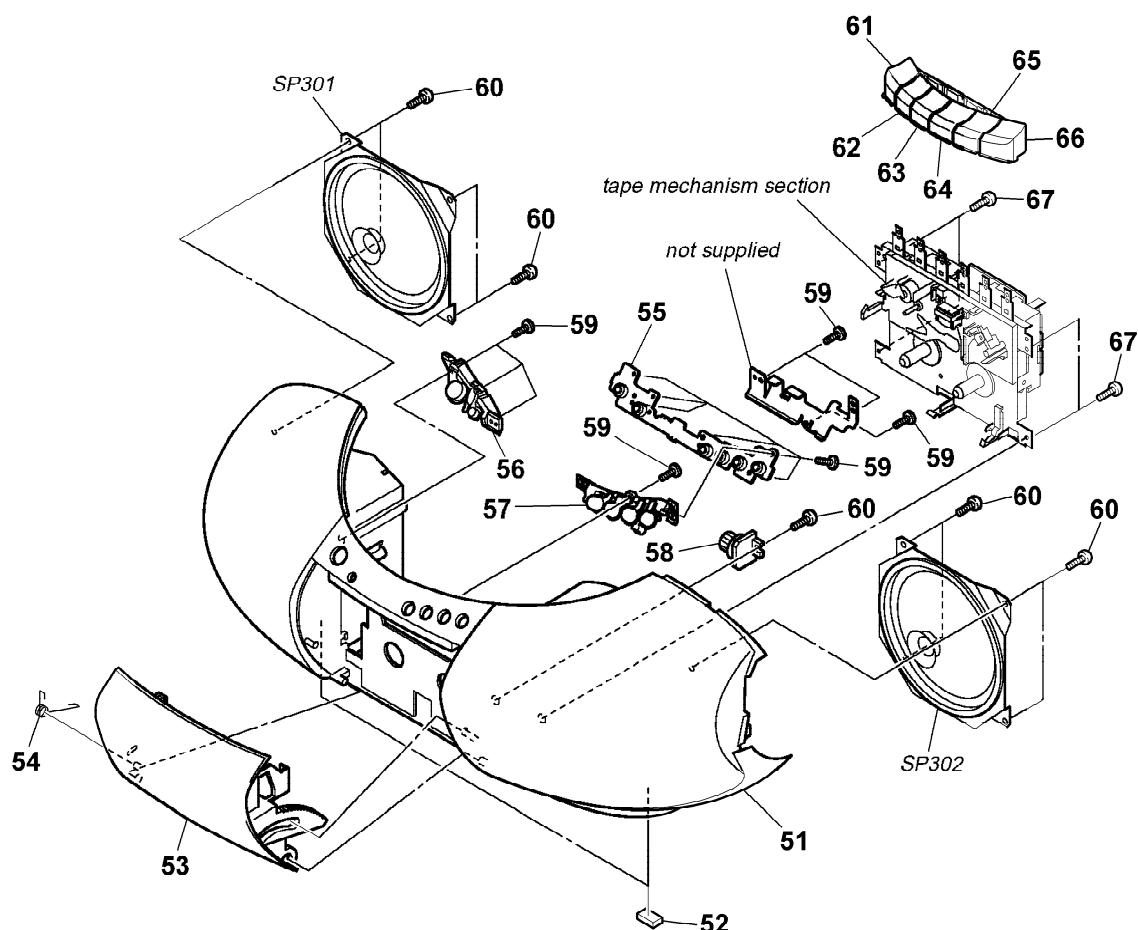

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	X-2179-687-1	CABINET (FRONT) SUB ASSY (E41,EA,MX,SP)		60	3-252-827-01	SCREW (B2.6), (+) BV TAPPING	
51	X-2179-839-1	CABINET (FRONT) SUB ASSY (CET,IT,RU)		61	3-216-207-01	BUTTON (PAUSE)	
52	3-040-916-01	FOOT (FRONT), RUBBER		62	3-216-208-01	BUTTON (S/E)	
53	3-216-199-01	HOLDER (CASSETTE)		63	3-216-209-01	BUTTON (FF)	
54	2-547-170-01	SPRING (CASSETTE)		64	3-216-210-01	BUTTON (REW)	
55	A-1317-468-A	POWER KEY BOARD, COMPLETE		65	3-216-211-01	BUTTON (PLAY)	
56	3-216-204-01	BUTTON (POWER)		66	3-216-212-01	BUTTON (REC)	
57	3-216-205-01	BUTTON (FUNCTION)		67	3-254-151-01	SCREW (B2.6), (+) P TAPPING	
58	3-047-468-11	DAMPER		SP301	1-825-690-11	SPEAKER (DIA. 10cm) (L-CH)	
59	3-254-070-01	SCREW		SP302	1-825-690-11	SPEAKER (DIA. 10cm) (R-CH)	


7-3. CABINET (TOP) (1) SECTION

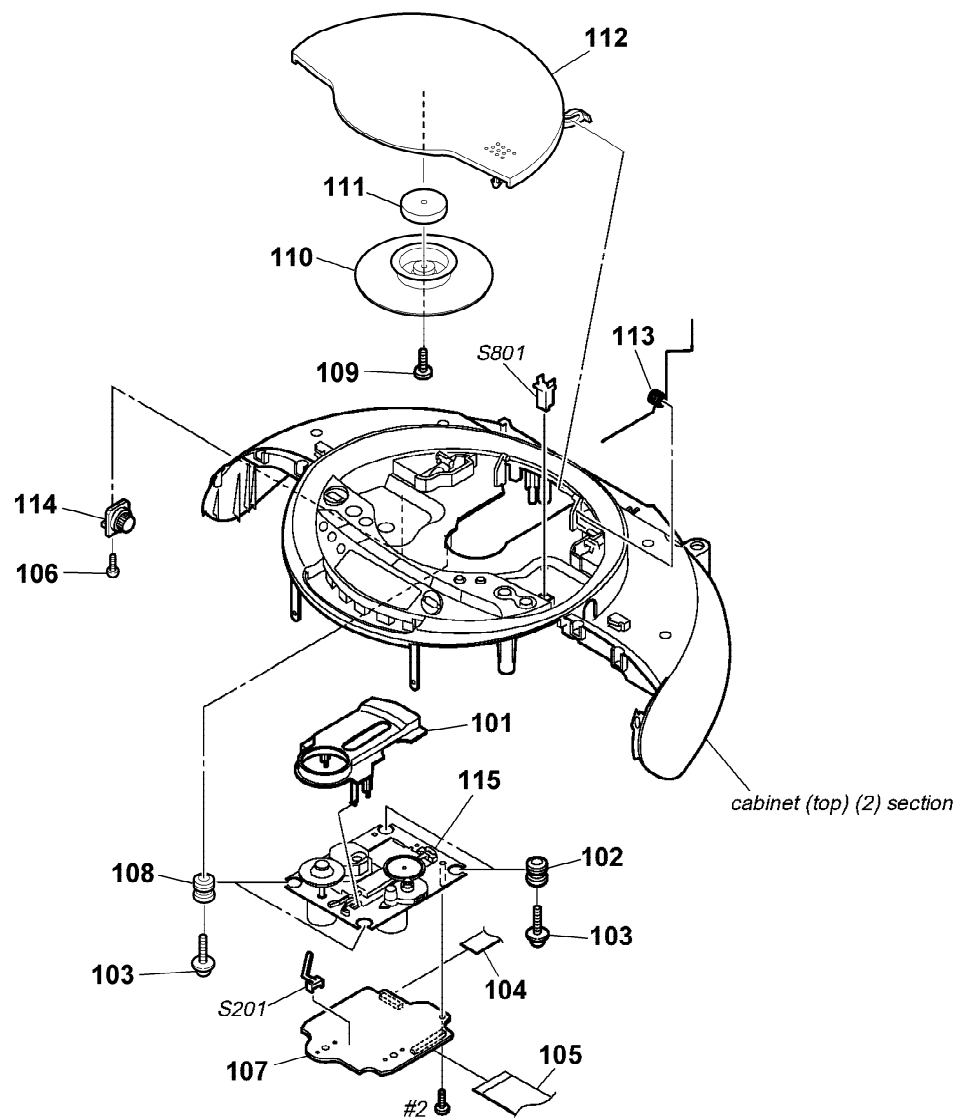

Ref. No.	Part No.	Description	Remark
101	3-923-736-01	COVER, CD	
102	3-931-379-21	RUBBER, VIBRATION PROOF (RED)	
103	3-252-828-01	SCREW (B2.6), (+) PWH TAPPING	
104	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)	
105	1-832-644-21	CABLE, FLEXIBLE FLAT (27 CORE)	
106	3-252-827-01	SCREW (B2.6), (+) BV TAPPING	
107	A-1236-250-A	BD91 BOARD, COMPLETE	
108	3-931-379-31	RUBBER, VIBRATION PROOF (GREEN)	
109	3-253-143-01	SCREW (B2.6), (+) P TAPPING	
110	3-019-395-01	PLATE, CHUCKING	


Ref. No.	Part No.	Description	Remark
111	1-452-899-11	MAGNET	
112	3-216-198-01	LID, CD	
113	2-547-171-01	SPRING (CD)	
114	3-047-468-11	DAMPER	
115	8-820-126-02	OPTICAL PICK-UP (KSM-213GDP/G2NP)	
S201	1-771-853-11	SWITCH, DETECTION (LIMIT)	
S801	1-692-960-11	SWITCH, PUSH (1 KEY)	(▲ PUSH OPEN/CLOSE)
#2	7-685-853-04	SCREW +BVTT 2X6 (S)	

7-4. CABINET (TOP) (2) SECTION

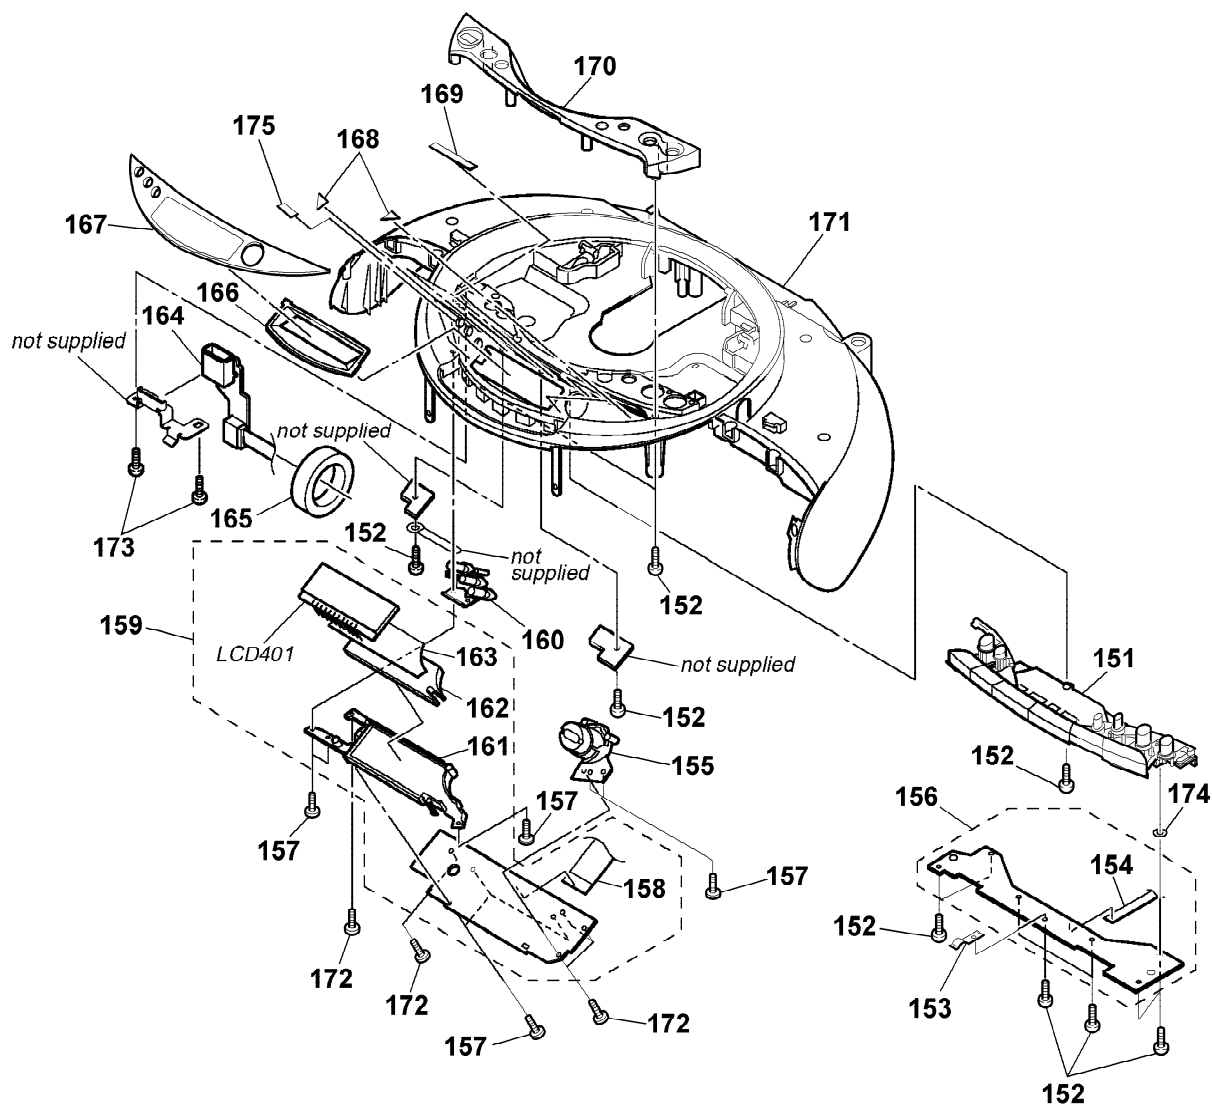


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	A-1317-472-A	BUTTON (CD) ASSY		164	A-1317-475-A	USB CONNECT BOARD, COMPLETE	
152	3-254-151-01	SCREW (B2.6), (+) P TAPPING		165	1-500-868-11	CORE, FERRITE	
153	2-594-014-01	PLATE, SUPPORT		166	3-216-216-01	ESCUTCHEON (LCD)	
154	1-834-579-21	CABLE, FLEXIBLE FLAT (5 CORE)		167	3-216-215-01	WINDOW (LCD)	
155	X-2179-688-1	BUTTON (FLDR) SUB ASSY		168	2-547-172-01	TAPE (LCD) (WINDOW)	
156	A-1317-473-A	CD KEY BOARD, COMPLETE		169	3-250-079-01	TAPE (LCD WINDOW) (B)	
157	3-254-081-01	SCREW		170	3-216-196-01	COVER (TOP)	
158	1-831-999-21	CABLE, FLEXIBLE FLAT (15 CORE)		171	3-216-193-01	CABINET (TOP)	
159	A-1317-478-A	LCD BOARD, COMPLETE		172	3-254-070-01	SCREW	
160	3-216-203-01	BUTTON (MODE)		173	3-252-827-01	SCREW (B2.6), (+) BV TAPPING	
161	2-547-164-01	HOLDER (LCD)		174	3-255-102-01	WASHER, PETP	
162	2-547-143-01	PLATE, LIGHT GUIDE		175	3-831-441-11	CUSHION (B)	
163	2-584-370-01	SHEET, LCD		LCD401	1-802-533-11	DISPLAY PANEL, LIQUID CRYSTAL	

7-5. CABINET (BOTTOM) SECTION

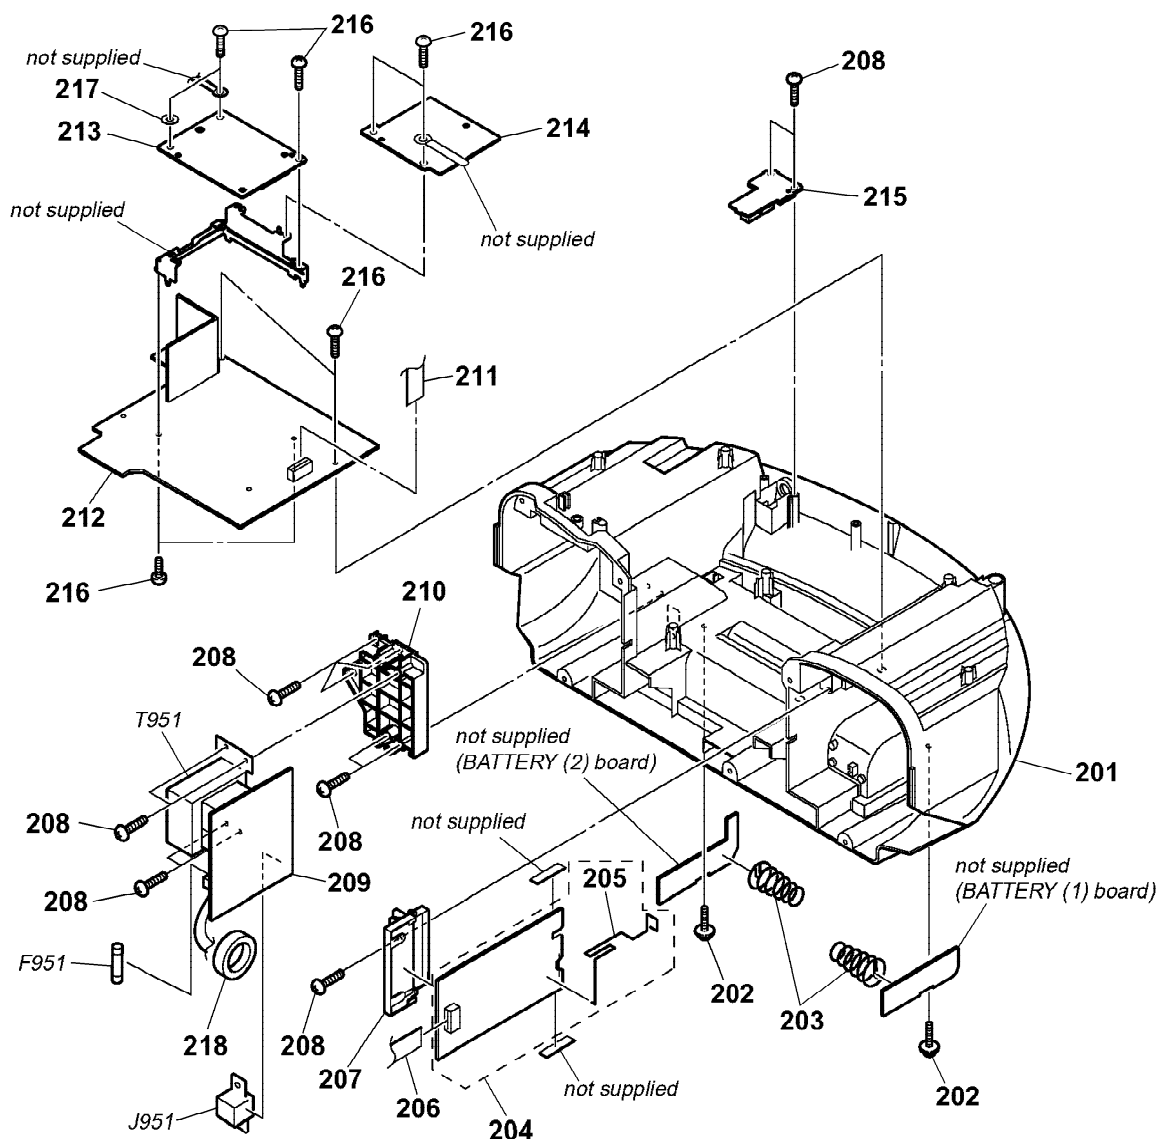

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-216-195-02	CABINET (BOTTOM) (MX)		212	A-1319-418-A	MAIN BOARD, COMPLETE (GET,EA,IT,SP)	
201	3-216-195-12	CABINET (BOTTOM) (EXCEPT MX)		212	A-1319-444-A	MAIN BOARD, COMPLETE (E41)	
202	3-252-828-01	SCREW (B2.6), (+) PWH TAPPING		212	A-1319-450-A	MAIN BOARD, COMPLETE (RU)	
203	3-240-561-02	TERMINAL (-), BATTERY		213	A-1317-463-A	USB BOARD, COMPLETE	
204	A-1098-549-A	TUNER BOARD, COMPLETE (MX)		214	A-1317-465-A	VOL BOARD, COMPLETE	
204	A-1098-611-A	TUNER BOARD, COMPLETE (EXCEPT MX)		215	A-1317-460-A	HEADPHONE BOARD, COMPLETE	
205	2-547-169-01	TERMINAL, ANTENNA		216	3-254-151-01	SCREW (B2.6), (+) P TAPPING	
206	1-832-824-21	CABLE, FLEXIBLE FLAT (11 CORE)		217	3-232-994-01	WASHER	
207	3-249-551-01	HOLDER (PWB TU)		218	1-500-868-11	CORE, FERRITE	
208	3-252-827-01	SCREW (B2.6), (+) BV TAPPING		△F951	1-532-465-33	FUSE (3.15A/250V)	
209	A-1317-459-A	POWER BOARD, COMPLETE		△J951	1-526-838-11	INLET, AC 2P (∼ AC IN) (EXCEPT MX)	
210	3-216-217-01	HOLDER (TRANS) (MX)		△J951	1-540-009-11	INLET, AC (∼ AC IN) (MX)	
210	3-216-217-11	HOLDER (TRANS) (EXCEPT MX)		△T951	1-445-291-11	TRANSFORMER, POWER (MX)	
211	1-832-611-21	CABLE, FLEXIBLE FLAT (21 CORE)		△T951	1-445-292-11	TRANSFORMER, POWER (EXCEPT MX)	
212	A-1317-462-A	MAIN BOARD, COMPLETE (MX)					

7-6. TAPE MECHANISM SECTION (MF-S350V)

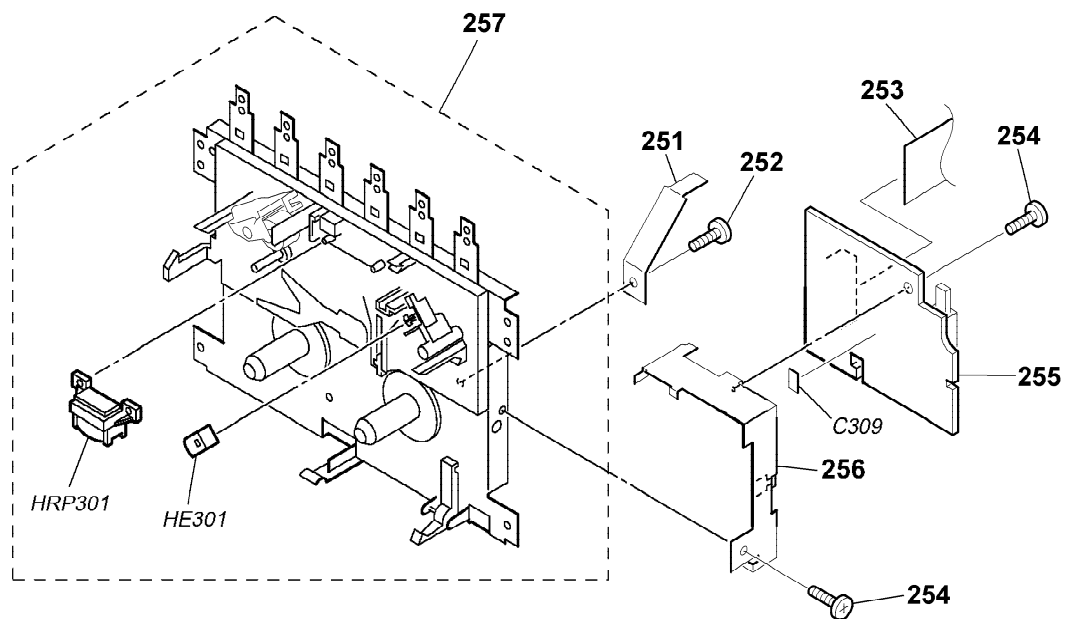

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	3-237-718-01	LEVER, REC		256	3-252-614-01	CHASSIS, TC	
252	3-254-022-01	SCREW		257	A-1211-775-A	MF-S350V//C	
253	1-832-833-21	CABLE, FLEXIBLE FLAT (13 CORE)		C309	1-162-923-11	CERAMIC CHIP 47PF	5% 50V
254	3-254-029-01	SCREW		HE301	1-500-813-11	HEAD, ERASE (ERASE)	
255	A-1108-791-A	TC BOARD, COMPLETE		HRP301	3-266-053-01	HEAD, RP (REC/PB)	

SECTION 8

ELECTRICAL PARTS LIST

BD91

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example:
uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..
- CAPACITORS
uF : μ F
- COILS
uH : μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board.

- Abbreviation
CET : East European model
E41 : AC 230V area in E model
EA : Saudi Arabia model
IT : Italian model
MX : Mexican model
RU : Russian model
SP : Singapore model

Ref. No.	Part No.	Description	Remark
		BATTERY (1) BOARD *****	
	3-240-561-02	TERMINAL (-), BATTERY	

		BATTERY (2) BOARD *****	
	3-240-561-02	TERMINAL (-), BATTERY	
		< CONNECTOR >	
CN954	1-815-550-11	PIN, CONNECTOR (PWB) 2P	

	A-1236-250-A	BD91 BOARD, COMPLETE *****	
		< CAPACITOR >	
C100	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C101	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C102	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C103	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C104	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C105	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C106	1-128-995-21	ELECT CHIP 100uF	20% 10V
C107	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C108	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C109	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C110	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C112	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C113	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C115	1-124-778-00	ELECT CHIP 22uF	20% 6.3V
C116	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C117	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V
C118	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C119	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V
C120	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C122	1-164-315-11	CERAMIC CHIP 470PF	5% 50V
C123	1-164-315-11	CERAMIC CHIP 470PF	5% 50V
C124	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C125	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C126	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C127	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C128	1-162-910-11	CERAMIC CHIP 5PF	0.25PF 50V
C130	1-162-910-11	CERAMIC CHIP 5PF	0.25PF 50V

Ref. No.	Part No.	Description	Remark
C132	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C133	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C136	1-162-923-11	CERAMIC CHIP 47PF	5% 50V
C137	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C138	1-164-315-11	CERAMIC CHIP 470PF	5% 50V
C139	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C140	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C141	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C142	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C143	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C144	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C145	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C146	1-164-315-11	CERAMIC CHIP 470PF	5% 50V
C147	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C148	1-162-923-11	CERAMIC CHIP 47PF	5% 50V
C149	1-162-919-11	CERAMIC CHIP 22PF	5% 50V
C150	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C151	1-164-315-11	CERAMIC CHIP 470PF	5% 50V
C152	1-164-315-11	CERAMIC CHIP 470PF	5% 50V
C153	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C201	1-128-995-21	ELECT CHIP 100uF	20% 10V
C202	1-128-995-21	ELECT CHIP 100uF	20% 10V
C204	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C205	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C206	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
C207	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
C301	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C302	1-137-710-11	CERAMIC CHIP 10uF	20% 6.3V
C303	1-137-710-11	CERAMIC CHIP 10uF	20% 6.3V
C306	1-128-995-21	ELECT CHIP 100uF	20% 10V
C307	1-165-908-11	CERAMIC CHIP 1uF	10% 10V
C309	1-162-964-11	CERAMIC CHIP 0.001uF	10% 50V
C401	1-128-394-11	ELECT CHIP 220uF	20% 10V
C403	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C404	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C405	1-164-360-11	CERAMIC CHIP 0.1uF	16V
		< CONNECTOR >	
CN202	1-784-835-51	CONNECTOR, FFC (LIF(NON-ZIF)) 27P	
CN301	1-770-425-51	CONNECTOR, FFC/FPC 16P	
		< IC >	
IC101	6-710-827-01	IC TC94A70FG-008(S,D)	
IC201	6-710-808-01	IC TK63115SCL-G@GT	

Ref. No.	Part No.	Description	Remark				Ref. No.	Part No.	Description	Remark			
IC401	6-710-637-01	IC BA5826SFP-E2					R216	1-216-809-11	METAL CHIP	100	5%	1/10W	
		< TRANSISTOR >					R218	1-216-845-11	METAL CHIP	100K	5%	1/10W	
							R219	1-216-845-11	METAL CHIP	100K	5%	1/10W	
Q301	6-551-120-01	TRANSISTOR 2SA2119K					R220	1-216-845-11	METAL CHIP	100K	5%	1/10W	
		< RESISTOR >					R221	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R101	1-216-813-11	METAL CHIP	220	5%	1/10W		R222	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R102	1-216-833-11	METAL CHIP	10K	5%	1/10W		R223	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R104	1-216-295-11	SHORT CHIP	0				R224	1-216-809-11	METAL CHIP	100	5%	1/10W	
R105	1-216-857-11	METAL CHIP	1M	5%	1/10W		R301	1-216-845-11	METAL CHIP	100K	5%	1/10W	
R106	1-216-821-11	METAL CHIP	1K	5%	1/10W		R302	1-216-864-11	SHORT CHIP	0			
R108	1-500-445-21	FERRITE, EMI (SMD) (2012)					R303	1-216-789-11	METAL CHIP	2.2	5%	1/10W	
R109	1-216-809-11	METAL CHIP	100	5%	1/10W		R304	1-216-789-11	METAL CHIP	2.2	5%	1/10W	
R110	1-216-833-11	METAL CHIP	10K	5%	1/10W		R402	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R111	1-216-809-11	METAL CHIP	100	5%	1/10W		R405	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R112	1-216-809-11	METAL CHIP	100	5%	1/10W		R408	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R114	1-216-833-11	METAL CHIP	10K	5%	1/10W		R414	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R118	1-216-845-11	METAL CHIP	100K	5%	1/10W		R415	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R119	1-216-864-11	SHORT CHIP	0				< VIBRATOR >						
R121	1-216-809-11	METAL CHIP	100	5%	1/10W		X102	1-795-101-21	VIBRATOR, CERAMIC (16.934MHz)				
R128	1-216-853-11	METAL CHIP	470K	5%	1/10W		*****						
R129	1-216-821-11	METAL CHIP	1K	5%	1/10W			A-1317-473-A	CD KEY BOARD, COMPLETE				
R130	1-216-829-11	METAL CHIP	4.7K	5%	1/10W				*****				
R134	1-216-857-11	METAL CHIP	1M	5%	1/10W								
R135	1-216-853-11	METAL CHIP	470K	5%	1/10W			1-834-579-21	CABLE, FLEXIBLE FLAT (5 CORE) (CN401)				
R136	1-216-837-11	METAL CHIP	22K	5%	1/10W								
R139	1-216-841-11	METAL CHIP	47K	5%	1/10W				< CAPACITOR >				
R140	1-216-864-11	SHORT CHIP	0				C401	1-135-834-11	CERAMIC CHIP	2.2uF		6.3V	
R142	1-216-837-11	METAL CHIP	22K	5%	1/10W								
R143	1-216-841-11	METAL CHIP	47K	5%	1/10W				< IC >				
R144	1-216-837-11	METAL CHIP	22K	5%	1/10W								
R145	1-216-864-11	SHORT CHIP	0				IC401	6-600-108-01	IC RPM7140 (IR)				
R146	1-216-864-11	SHORT CHIP	0										
R147	1-216-864-11	SHORT CHIP	0						< RESISTOR >				
R148	1-216-864-11	SHORT CHIP	0				R401	1-216-813-11	METAL CHIP	220	5%	1/10W	
R149	1-216-864-11	SHORT CHIP	0				R402	1-216-817-11	METAL CHIP	470	5%	1/10W	
							R403	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R150	1-216-864-11	SHORT CHIP	0				R404	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R151	1-216-864-11	SHORT CHIP	0				R405	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R153	1-216-857-11	METAL CHIP	1M	5%	1/10W								
R154	1-216-857-11	METAL CHIP	1M	5%	1/10W		R406	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R155	1-216-805-11	METAL CHIP	47	5%	1/10W		R407	1-216-821-11	METAL CHIP	1K	5%	1/10W	
							R408	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R156	1-216-809-11	METAL CHIP	100	5%	1/10W		R409	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	
R157	1-216-809-11	METAL CHIP	100	5%	1/10W		R410	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	
R201	1-216-295-11	SHORT CHIP	0										
R202	1-216-295-11	SHORT CHIP	0				R411	1-216-833-11	METAL CHIP	10K	5%	1/10W	
R203	1-216-809-11	METAL CHIP	100	5%	1/10W		R412	1-216-813-11	METAL CHIP	220	5%	1/10W	
							R413	1-216-817-11	METAL CHIP	470	5%	1/10W	
R204	1-216-809-11	METAL CHIP	100	5%	1/10W		R414	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R205	1-216-809-11	METAL CHIP	100	5%	1/10W		R415	1-216-821-11	METAL CHIP	1K	5%	1/10W	
R206	1-216-809-11	METAL CHIP	100	5%	1/10W								
R207	1-216-809-11	METAL CHIP	100	5%	1/10W		R416	1-216-841-11	METAL CHIP	47K	5%	1/10W	
R208	1-216-809-11	METAL CHIP	100	5%	1/10W		R417	1-216-845-11	METAL CHIP	100K	5%	1/10W	
							R505	1-216-809-11	METAL CHIP	100	5%	1/10W	
R209	1-216-809-11	METAL CHIP	100	5%	1/10W								
R210	1-216-809-11	METAL CHIP	100	5%	1/10W				< SWITCH >				
R211	1-216-809-11	METAL CHIP	100	5%	1/10W		S401	1-786-726-11	SWITCH, TACTILE (CD-USB SYNC/REC1)				
R212	1-216-809-11	METAL CHIP	100	5%	1/10W		S402	1-786-726-11	SWITCH, TACTILE (SOUND)				
R213	1-216-809-11	METAL CHIP	100	5%	1/10W		S403	1-786-726-11	SWITCH, TACTILE (TUNE -/◀◀)				
							S404	1-786-726-11	SWITCH, TACTILE (TUNE +/▶▶)				
R214	1-216-809-11	METAL CHIP	100	5%	1/10W								

CFD-RS60CP

CD KEY HEADPHONE LCD

Ref. No.	Part No.	Description	Remark
S405	1-786-726-11	SWITCH, TACTILE (PRESET -/◀◀)	
S406	1-786-726-11	SWITCH, TACTILE (PRESET +/▶▶)	
S407	1-786-726-11	SWITCH, TACTILE (▶▶)	
S408	1-786-726-11	SWITCH, TACTILE (■)	
S409	1-786-726-11	SWITCH, TACTILE (ERASE)	
S410	1-786-726-11	SWITCH, TACTILE (VOLUME +)	
S411	1-786-726-11	SWITCH, TACTILE (VOLUME -)	
S412	1-786-726-11	SWITCH, TACTILE (MEGABASS)	

	A-1317-460-A	HEADPHONE BOARD, COMPLETE	

		< CONNECTOR >	
* CN371	1-815-552-21	PIN, CONNECTOR (PWB) 4P	
CN372	1-815-552-11	PIN, CONNECTOR (PWB) 4P	
		< JACK >	
J371	1-815-325-11	JACK (○)	
		< COIL >	
L171	1-410-509-11	INDUCTOR 10uH	
L271	1-410-509-11	INDUCTOR 10uH	
		< RESISTOR >	
R171	1-216-809-11	METAL CHIP 100 5% 1/10W	
R271	1-216-809-11	METAL CHIP 100 5% 1/10W	

	A-1317-478-A	LCD BOARD, COMPLETE	

	1-831-999-21	CABLE, FLEXIBLE FLAT (15 CORE) (CN407)	
	2-547-143-01	PLATE, LIGHT GUIDE	
	2-547-164-01	HOLDER (LCD)	
	2-584-370-01	SHEET, LCD	
		< CAPACITOR >	
C407	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C408	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
		< CONNECTOR >	
CN402	1-770-514-31	CONNECTOR, FFC/FPC 5P	
		< DIODE >	
D401	6-501-437-01	DIODE SLI-343YC3F (LCD BACK LIGHT)	
D403	8-719-059-97	LED L-34HD (OPR/BATT)	
		< IC >	
IC402	6-709-360-01	IC NJU6533FA2	
		< COIL >	
L401	1-410-509-11	INDUCTOR 10uH	
		< LIQUID CRYSTAL DISPLAY >	
LCD401	1-802-533-11	DISPLAY PANEL, LIQUID CRYSTAL	

Ref. No.	Part No.	Description	Remark
		< RESISTOR >	
R425	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R426	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R427	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R428	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R429	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R430	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R431	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R432	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R433	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R434	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R435	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R436	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R437	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R438	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R439	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R440	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R441	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R442	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R443	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R444	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R445	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R446	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R447	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R448	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R449	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R450	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R451	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R452	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R453	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R454	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R455	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R456	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R457	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R459	1-216-813-11	METAL CHIP 220 5% 1/10W	
R461	1-216-813-11	METAL CHIP 220 5% 1/10W	
R462	1-216-813-11	METAL CHIP 220 5% 1/10W	
R463	1-216-813-11	METAL CHIP 220 5% 1/10W	
R464	1-216-813-11	METAL CHIP 220 5% 1/10W	
R465	1-216-853-11	METAL CHIP 470K 5% 1/10W	
R466	1-216-849-11	METAL CHIP 220K 5% 1/10W	
R467	1-216-841-11	METAL CHIP 47K 5% 1/10W	
R468	1-216-813-11	METAL CHIP 220 5% 1/10W	
R470	1-216-813-11	METAL CHIP 220 5% 1/10W	
R471	1-216-813-11	METAL CHIP 220 5% 1/10W	
R472	1-216-817-11	METAL CHIP 470 5% 1/10W	
R473	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R474	1-216-821-11	METAL CHIP 1K 5% 1/10W	
R475	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R501	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
R502	1-216-809-11	METAL CHIP 100 5% 1/10W	
R503	1-216-809-11	METAL CHIP 100 5% 1/10W	
R504	1-216-809-11	METAL CHIP 100 5% 1/10W	
		< SWITCH >	
S419	1-786-726-11	SWITCH, TACTILE (DISP/ENT/MEMORY)	
S420	1-786-726-11	SWITCH, TACTILE (MODE)	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
S421	1-786-726-11	SWITCH, TACTILE (REPEAT)		C818	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
S422	1-786-726-11	SWITCH, TACTILE (MP3 □ -)		C819	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
S423	1-786-726-11	SWITCH, TACTILE (MP3 □ +)		C821	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
*****				C822	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
	A-1317-462-A	MAIN BOARD, COMPLETE (MX)		C823	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
	A-1319-418-A	MAIN BOARD, COMPLETE (CET,EA,IT,SP)		C824	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
	A-1319-444-A	MAIN BOARD, COMPLETE (E41)		C825	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
	A-1319-450-A	MAIN BOARD, COMPLETE (RU)		C826	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
		*****		C827	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
	3-254-151-01	SCREW (B2.6), (+) P TAPPING		C828	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
		< CAPACITOR >		C829	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C101	1-126-926-11	ELECT 1000uF 20%	10V	C830	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C102	1-104-658-11	ELECT 100uF 20%	10V	C831	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C103	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C832	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C104	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C833	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C106	1-126-947-11	ELECT 47uF 20%	35V	C834	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C107	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	C835	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C108	1-126-959-11	ELECT 0.47uF 20%	50V	C836	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C109	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	C837	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C110	1-126-163-11	ELECT 4.7uF 20%	50V	C838	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C201	1-126-926-11	ELECT 1000uF 20%	10V	C839	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C202	1-125-972-11	ELECT 100uF 20%	16V	C840	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C203	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C841	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C204	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C842	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C206	1-124-589-11	ELECT 47uF 20%	16V	C843	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C207	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	C844	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C208	1-126-959-11	ELECT 0.47uF 20%	50V	C845	1-162-913-11	CERAMIC CHIP 8PF 0.5PF	50V
C209	1-165-908-11	CERAMIC CHIP 1uF 10%	10V	C846	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
C210	1-126-163-11	ELECT 4.7uF 20%	50V	C847	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C301	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C848	1-162-913-11	CERAMIC CHIP 8PF 0.5PF	50V
C303	1-126-947-11	ELECT 47uF 20%	35V	C849	1-162-919-11	CERAMIC CHIP 22PF 5%	50V
C304	1-126-947-11	ELECT 47uF 20%	35V	C850	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
C409	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C852	1-162-923-11	CERAMIC CHIP 47PF 5%	50V
C410	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C854	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C411	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C855	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C412	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C856	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C413	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C857	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C415	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C858	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C416	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C859	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C417	1-125-972-11	ELECT 100uF 20%	16V	C860	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C418	1-135-834-11	CERAMIC CHIP 2.2uF	6.3V	C861	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C801	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C862	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C802	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C863	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C803	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C864	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C804	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C866	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C806	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C868	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C807	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C869	1-126-925-11	ELECT 470uF 20%	10V
C808	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C870	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C809	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C872	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C810	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C873	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C811	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C874	1-162-927-11	CERAMIC CHIP 100PF 5%	50V
C812	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C875	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C813	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C876	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C814	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C879	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C815	1-162-923-11	CERAMIC CHIP 47PF 5%	50V	C884	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C816	1-162-923-11	CERAMIC CHIP 47PF 5%	50V	C885	1-164-315-11	CERAMIC CHIP 470PF 5%	50V
C817	1-164-315-11	CERAMIC CHIP 470PF 5%	50V	C886	1-135-834-11	CERAMIC CHIP 2.2uF	6.3V
				C887	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C888	1-125-972-11	ELECT	100uF 20% 16V	FB806	1-414-445-11	FERRITE, EMI (SMD) (1608)	
C889	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FB807	1-414-445-11	FERRITE, EMI (SMD) (1608)	
C890	1-125-972-11	ELECT	100uF 20% 16V	FB808	1-414-445-11	FERRITE, EMI (SMD) (1608)	
C891	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FB809	1-216-864-11	SHORT CHIP 0	
C892	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FB810	1-414-760-21	FERRITE, EMI (SMD) (1608)	
C893	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FB811	1-414-760-21	FERRITE, EMI (SMD) (1608)	
C894	1-125-972-11	ELECT	100uF 20% 16V	FB812	1-414-760-21	FERRITE, EMI (SMD) (1608)	
C895	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	FB813	1-414-445-11	FERRITE, EMI (SMD) (1608)	
C896	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	FB814	1-414-445-11	FERRITE, EMI (SMD) (1608)	
C897	1-126-935-11	ELECT	470uF 20% 16V	FB815	1-414-760-21	FERRITE, EMI (SMD) (1608)	
C898	1-165-908-11	CERAMIC CHIP	1uF 10% 10V			< IC >	
C899	1-162-927-11	CERAMIC CHIP	100PF 5% 50V	IC301	8-759-426-51	IC BA5417	
C901	1-126-937-11	ELECT	4700uF 20% 16V	IC801	6-807-680-01	IC MB90F045PF-G-9064-SPE1	
C902	1-164-156-11	CERAMIC CHIP	0.1uF 25V	IC802	6-703-740-01	IC S-24CS02AFT-TB-G	
C903	1-104-666-11	ELECT	220uF 20% 25V	IC803	8-759-523-03	IC TC74HC4066AFT(EL)	
C904	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC804	6-707-870-01	IC TC74VHC157FT(EKJ)	
C905	1-126-935-11	ELECT	470uF 20% 16V	IC805	8-759-523-03	IC TC74HC4066AFT(EL)	
C906	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC806	6-706-338-01	IC XC6202P332FR	
C907	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	IC807	6-704-118-01	IC S-80828CNMC-B8NT2G	
C908	1-126-935-11	ELECT	470uF 20% 16V	IC901	6-702-472-01	IC PQ1CZ21H2ZPH	
C909	1-126-964-11	ELECT	10uF 20% 50V			< JUMPER RESISTOR >	
C910	1-125-972-11	ELECT	100uF 20% 16V	JC802	1-216-864-11	SHORT CHIP 0	
C911	1-100-566-11	CERAMIC CHIP	0.1uF 10% 25V	JC804	1-216-864-11	SHORT CHIP 0	
C912	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	JC805	1-216-864-11	SHORT CHIP 0	
C913	1-126-941-11	ELECT	470uF 20% 25V	JC808	1-216-864-11	SHORT CHIP 0	
C914	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V			< COIL >	
C915	1-126-947-11	ELECT	47uF 20% 35V	L801	1-410-509-11	INDUCTOR 10uH	
C916	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	L802	1-410-509-11	INDUCTOR 10uH	
C917	1-126-947-11	ELECT	47uF 20% 35V	L806	1-410-509-11	INDUCTOR 10uH	
		< CONNECTOR >		L901	1-481-245-11	INDUCTOR 220uH	
CN404	1-815-443-11	PIN, CONNECTOR (PWB) 2P				< TRANSISTOR >	
CN408	1-784-776-11	CONNECTOR, FFC 15P		Q101	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
CN801	1-779-295-11	CONNECTOR, FFC (LIF(NON-ZIF)) 27P		Q201	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
CN802	1-779-289-11	CONNECTOR, FFC (LIF(NON-ZIF)) 21P		Q401	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
CN804	1-568-830-11	CONNECTOR, FFC 11P		Q403	8-729-027-26	TRANSISTOR DTA114YKA-T146	
CN805	1-784-774-11	CONNECTOR, FFC 13P		Q404	8-729-027-46	TRANSISTOR DTC114YKA-T146	
CN806	1-815-445-11	PIN, CONNECTOR (PWB) 4P		Q801	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
CN901	1-815-447-11	PIN, CONNECTOR (PWB) 6P		Q802	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
		< DIODE >		Q803	8-729-027-46	TRANSISTOR DTC114YKA-T146	
D404	8-719-404-50	DIODE MA111-TX		Q804	6-551-067-01	FET RTF015P02TL	
D801	8-719-404-50	DIODE MA111-TX		Q805	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D802	6-500-335-01	DIODE MC2838-T112-1		Q806	8-729-027-26	TRANSISTOR DTA114YKA-T146	
D901	6-500-334-01	DIODE MC2836-T112-1		Q807	8-729-027-46	TRANSISTOR DTC114YKA-T146	
D902	8-719-404-50	DIODE MA111-TX		Q808	8-729-027-26	TRANSISTOR DTA114YKA-T146	
D903	8-719-978-33	DIODE DTZ-TT11-6.8B		Q809	8-729-027-46	TRANSISTOR DTC114YKA-T146	
D904	6-500-335-01	DIODE MC2838-T112-1		Q810	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
D905	8-719-069-54	DIODE UDZSNPTE-175.1B		Q811	8-729-027-46	TRANSISTOR DTC114YKA-T146	
D906	8-719-085-36	DIODE 11EQS04-TB5		Q812	8-729-037-13	TRANSISTOR KTA1271Y	
D907	8-719-083-58	DIODE UDZSNPTE-173.9B		Q813	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
		< FERRITE BEAD >		Q814	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
FB801	1-216-864-11	SHORT CHIP 0		Q901	8-729-040-76	TRANSISTOR KTA1273-Y-AT	
FB802	1-216-864-11	SHORT CHIP 0		Q902	6-551-276-01	TRANSISTOR RT1N431C-TP-1	
FB803	1-216-864-11	SHORT CHIP 0		Q903	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
FB804	1-414-445-11	FERRITE, EMI (SMD) (1608)		Q904	8-729-018-99	TRANSISTOR 2SD2394-F	
FB805	1-414-445-11	FERRITE, EMI (SMD) (1608)		Q905	8-729-018-99	TRANSISTOR 2SD2394-F	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
		< RESISTOR >									
R101	1-216-789-11	METAL CHIP	2.2	5%	1/10W	R810	1-216-821-11	METAL CHIP	1K	5%	1/10W
R102	1-216-813-11	METAL CHIP	220	5%	1/10W	R811	1-216-809-11	METAL CHIP	100	5%	1/10W
R103	1-216-817-11	METAL CHIP	470	5%	1/10W	R812	1-216-809-11	METAL CHIP	100	5%	1/10W
R105	1-216-833-11	METAL CHIP	10K	5%	1/10W	R813	1-216-809-11	METAL CHIP	100	5%	1/10W
R106	1-216-833-11	METAL CHIP	10K	5%	1/10W	R814	1-216-809-11	METAL CHIP	100	5%	1/10W
R107	1-216-821-11	METAL CHIP	1K	5%	1/10W	R815	1-216-809-11	METAL CHIP	100	5%	1/10W
R108	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R816	1-216-821-11	METAL CHIP	1K	5%	1/10W
R109	1-216-833-11	METAL CHIP	10K	5%	1/10W	R817	1-216-821-11	METAL CHIP	1K	5%	1/10W
R110	1-216-821-11	METAL CHIP	1K	5%	1/10W	R818	1-216-821-11	METAL CHIP	1K	5%	1/10W
R112	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R819	1-216-821-11	METAL CHIP	1K	5%	1/10W
R201	1-216-789-11	METAL CHIP	2.2	5%	1/10W	R820	1-216-821-11	METAL CHIP	1K	5%	1/10W
R202	1-216-813-11	METAL CHIP	220	5%	1/10W	R821	1-216-821-11	METAL CHIP	1K	5%	1/10W
R203	1-216-817-11	METAL CHIP	470	5%	1/10W	R822	1-216-809-11	METAL CHIP	100	5%	1/10W
R205	1-216-833-11	METAL CHIP	10K	5%	1/10W	R823	1-216-809-11	METAL CHIP	100	5%	1/10W
R206	1-216-833-11	METAL CHIP	10K	5%	1/10W	R824	1-216-817-11	METAL CHIP	470	5%	1/10W
R207	1-216-821-11	METAL CHIP	1K	5%	1/10W	R825	1-216-817-11	METAL CHIP	470	5%	1/10W
R208	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R826	1-216-817-11	METAL CHIP	470	5%	1/10W
R209	1-216-833-11	METAL CHIP	10K	5%	1/10W	R827	1-216-809-11	METAL CHIP	100	5%	1/10W
R210	1-216-821-11	METAL CHIP	1K	5%	1/10W	R828	1-216-809-11	METAL CHIP	100	5%	1/10W
R212	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R830	1-216-821-11	METAL CHIP	1K	5%	1/10W
R301	1-216-821-11	METAL CHIP	1K	5%	1/10W	R831	1-216-821-11	METAL CHIP	1K	5%	1/10W
R302	1-216-853-11	METAL CHIP	470K	5%	1/10W	R832	1-216-821-11	METAL CHIP	1K	5%	1/10W
R303	1-216-821-11	METAL CHIP	1K	5%	1/10W	R833	1-216-821-11	METAL CHIP	1K	5%	1/10W
R476	1-216-821-11	METAL CHIP	1K	5%	1/10W	R834	1-216-837-11	METAL CHIP	22K	5%	1/10W
R477	1-216-821-11	METAL CHIP	1K	5%	1/10W	R835	1-216-821-11	METAL CHIP	1K	5%	1/10W
R478	1-216-821-11	METAL CHIP	1K	5%	1/10W	R836	1-216-837-11	METAL CHIP	22K	5%	1/10W
R479	1-216-821-11	METAL CHIP	1K	5%	1/10W	R837	1-216-864-11	SHORT CHIP	0		
R480	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R838	1-216-833-11	METAL CHIP	10K	5%	1/10W
R481	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R839	1-216-833-11	METAL CHIP	10K	5%	1/10W
R482	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R840	1-216-864-11	SHORT CHIP	0		
R483	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R841	1-216-833-11	METAL CHIP	10K	5%	1/10W
R484	1-216-841-11	METAL CHIP	47K	5%	1/10W	R842	1-216-837-11	METAL CHIP	22K	5%	1/10W
R485	1-216-853-11	METAL CHIP	470K	5%	1/10W	R843	1-216-864-11	SHORT CHIP	0		
R486	1-216-864-11	SHORT CHIP	0			R844	1-216-833-11	METAL CHIP	10K	5%	1/10W
R487	1-216-821-11	METAL CHIP	1K	5%	1/10W	R845	1-216-841-11	METAL CHIP	47K	5%	1/10W
R488	1-216-817-11	METAL CHIP	470	5%	1/10W	R846	1-216-821-11	METAL CHIP	1K	5%	1/10W
R489	1-216-817-11	METAL CHIP	470	5%	1/10W	R847	1-216-833-11	METAL CHIP	10K	5%	1/10W
R490	1-216-817-11	METAL CHIP	470	5%	1/10W	R848	1-216-821-11	METAL CHIP	1K	5%	1/10W
R491	1-216-809-11	METAL CHIP	100	5%	1/10W	R849	1-216-841-11	METAL CHIP	47K	5%	1/10W
R492	1-216-809-11	METAL CHIP	100	5%	1/10W	R850	1-216-841-11	METAL CHIP	47K	5%	1/10W
R493	1-216-817-11	METAL CHIP	470	5%	1/10W	R851	1-216-841-11	METAL CHIP	47K	5%	1/10W
R494	1-216-845-11	METAL CHIP	100K	5%	1/10W	R852	1-216-821-11	METAL CHIP	1K	5%	1/10W
R495	1-216-825-11	METAL CHIP	2.2K	5%	1/10W	R853	1-216-845-11	METAL CHIP	100K	5%	1/10W
R496	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R854	1-216-821-11	METAL CHIP	1K	5%	1/10W
R497	1-216-853-11	METAL CHIP	470K	5%	1/10W	R855	1-216-809-11	METAL CHIP	100	5%	1/10W
R498	1-216-841-11	METAL CHIP	47K	5%	1/10W	R856	1-216-821-11	METAL CHIP	1K	5%	1/10W
R499	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R857	1-216-821-11	METAL CHIP	1K	5%	1/10W
R801	1-216-833-11	METAL CHIP	10K	5%	1/10W	R858	1-216-821-11	METAL CHIP	1K	5%	1/10W
					(CET,EA,IT,RU,SP)	R859	1-216-821-11	METAL CHIP	1K	5%	1/10W
R802	1-216-864-11	SHORT CHIP	0 (E41,MX)			R860	1-216-809-11	METAL CHIP	100	5%	1/10W
R803	1-216-833-11	METAL CHIP	10K	5%	1/10W	R861	1-216-821-11	METAL CHIP	1K	5%	1/10W
					(E41,MX)	R862	1-216-821-11	METAL CHIP	1K	5%	1/10W
R804	1-216-864-11	SHORT CHIP	0 (CET,EA,IT,RU,SP)			R863	1-216-833-11	METAL CHIP	10K	5%	1/10W
R805	1-216-833-11	METAL CHIP	10K	5%	1/10W	R864	1-216-833-11	METAL CHIP	10K	5%	1/10W
					(CET,E41,EA,IT,SP)	R865	1-216-821-11	METAL CHIP	1K	5%	1/10W
R806	1-216-864-11	SHORT CHIP	0 (MX,RU)			R866	1-216-821-11	METAL CHIP	1K	5%	1/10W
R809	1-216-821-11	METAL CHIP	1K	5%	1/10W	R867	1-216-821-11	METAL CHIP	1K	5%	1/10W
						R868	1-216-845-11	METAL CHIP	100K	5%	1/10W

CFD-RS60CP

MAIN POWER POWER KEY TC

Ref. No.	Part No.	Description	Remark
R869	1-216-821-11	METAL CHIP 1K 5%	1/10W
R870	1-216-821-11	METAL CHIP 1K 5%	1/10W
R871	1-216-821-11	METAL CHIP 1K 5%	1/10W
R872	1-216-821-11	METAL CHIP 1K 5%	1/10W
R874	1-216-817-11	METAL CHIP 470 5%	1/10W
R875	1-216-833-11	METAL CHIP 10K 5%	1/10W
R877	1-216-821-11	METAL CHIP 1K 5%	1/10W
R878	1-216-821-11	METAL CHIP 1K 5%	1/10W
R879	1-216-821-11	METAL CHIP 1K 5%	1/10W
R880	1-216-809-11	METAL CHIP 100 5%	1/10W
R881	1-216-809-11	METAL CHIP 100 5%	1/10W
R882	1-216-809-11	METAL CHIP 100 5%	1/10W
R883	1-216-809-11	METAL CHIP 100 5%	1/10W
R884	1-216-809-11	METAL CHIP 100 5%	1/10W
R885	1-216-833-11	METAL CHIP 10K 5%	1/10W
R886	1-216-845-11	METAL CHIP 100K 5%	1/10W
R887	1-216-853-11	METAL CHIP 470K 5%	1/10W
R888	1-216-837-11	METAL CHIP 22K 5%	1/10W
R889	1-216-837-11	METAL CHIP 22K 5%	1/10W
R890	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R891	1-216-857-11	METAL CHIP 1M 5%	1/10W
R892	1-216-864-11	SHORT CHIP 0	
R893	1-216-845-11	METAL CHIP 100K 5%	1/10W
R894	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R895	1-216-833-11	METAL CHIP 10K 5%	1/10W
R896	1-216-845-11	METAL CHIP 100K 5%	1/10W
R897	1-216-821-11	METAL CHIP 1K 5%	1/10W
R898	1-216-845-11	METAL CHIP 100K 5%	1/10W
R899	1-216-837-11	METAL CHIP 22K 5%	1/10W
R901	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R902	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R903	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R904	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R905	1-216-841-11	METAL CHIP 47K 5%	1/10W
R906	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R907	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R908	1-216-833-11	METAL CHIP 10K 5%	1/10W
R909	1-216-833-11	METAL CHIP 10K 5%	1/10W
R910	1-216-821-11	METAL CHIP 1K 5%	1/10W
R911	1-216-821-11	METAL CHIP 1K 5%	1/10W
R912	1-216-821-11	METAL CHIP 1K 5%	1/10W
R913	1-216-821-11	METAL CHIP 1K 5%	1/10W
R914	1-216-821-11	METAL CHIP 1K 5%	1/10W
R915	1-216-809-11	METAL CHIP 100 5%	1/10W
R916	1-216-817-11	METAL CHIP 470 5%	1/10W
R917	1-216-817-11	METAL CHIP 470 5%	1/10W
R918	1-216-817-11	METAL CHIP 470 5%	1/10W
R919	1-218-863-11	METAL CHIP 4.7K 0.5%	1/10W
R920	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
R921	1-218-895-11	METAL CHIP 100K 0.5%	1/10W
R922	1-218-847-11	METAL CHIP 1K 0.5%	1/10W
R923	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R924	1-216-809-11	METAL CHIP 100 5%	1/10W
R925	1-216-809-11	METAL CHIP 100 5%	1/10W
R926	1-216-833-11	METAL CHIP 10K 5%	1/10W
R927	1-216-809-11	METAL CHIP 100 5%	1/10W

Ref. No.	Part No.	Description	Remark
		< VIBRATOR >	
X801	1-813-940-21	PIEZOELECTRIC OSCILLATOR (5.53MHz)	

	A-1317-459-A	POWER BOARD, COMPLETE	

	1-533-233-31	HOLDER, FUSE	
		< CAPACITOR >	
C951	1-126-947-11	ELECT 47uF 20% 35V	
C952	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C953	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C954	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C955	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C956	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C957	1-126-768-11	ELECT 2200uF 20% 16V	
		< CONNECTOR >	
CN952	1-815-446-11	PIN, CONNECTOR (PWB) 5P	
		< DIODE >	
D951	6-501-569-01	DIODE 1N5401-C352	
D952	6-501-569-01	DIODE 1N5401-C352	
D953	6-501-569-01	DIODE 1N5401-C352	
D954	6-501-569-01	DIODE 1N5401-C352	

	A-1317-468-A	POWER KEY BOARD, COMPLETE	

		< RESISTOR >	
R418	1-216-821-11	METAL CHIP 1K 5%	1/10W
R419	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R420	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R421	1-216-821-11	METAL CHIP 1K 5%	1/10W
R422	1-216-821-11	METAL CHIP 1K 5%	1/10W
R423	1-216-817-11	METAL CHIP 470 5%	1/10W
R424	1-216-813-11	METAL CHIP 220 5%	1/10W
		< SWITCH >	
S413	1-786-726-11	SWITCH, TACTILE (USB)	
S414	1-786-726-11	SWITCH, TACTILE (TAPE)	
S415	1-786-726-11	SWITCH, TACTILE (RADIO/AUTO PRESET)	
S416	1-786-726-11	SWITCH, TACTILE (CD)	
S417	1-786-726-11	SWITCH, TACTILE (SLEEP)	
S418	1-786-726-11	SWITCH, TACTILE (OPERATE)	

	A-1108-791-A	TC BOARD, COMPLETE	

		< CAPACITOR >	
C101	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C102	1-104-658-11	ELECT 100uF 20% 10V	
C103	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C104	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V	
C105	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C107	1-162-962-11	CERAMIC CHIP 470PF 10% 50V		R212	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
C201	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		R301	1-216-857-11	METAL CHIP 1M 5% 1/10W	
C202	1-104-658-11	ELECT 100uF 20% 10V		R302	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
C203	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V		R303	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
C204	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V		R304	1-216-821-11	METAL CHIP 1K 5% 1/10W	
C205	1-162-923-11	CERAMIC CHIP 47PF 5% 50V		R305	1-216-817-11	METAL CHIP 470 5% 1/10W	
C207	1-162-962-11	CERAMIC CHIP 470PF 10% 50V		R306	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W	
C301	1-104-658-11	ELECT 100uF 20% 10V		R307	1-216-797-11	METAL CHIP 10 5% 1/10W	
C302	1-104-658-11	ELECT 100uF 20% 10V		R308	1-216-837-11	METAL CHIP 22K 5% 1/10W	
C303	1-104-658-11	ELECT 100uF 20% 10V		R309	1-216-805-11	METAL CHIP 47 5% 1/10W	
C304	1-126-947-11	ELECT 47uF 20% 35V		R310	1-216-857-11	METAL CHIP 1M 5% 1/10W	
C305	1-162-962-11	CERAMIC CHIP 470PF 10% 50V		R311	1-216-857-11	METAL CHIP 1M 5% 1/10W	
C306	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		R314	1-216-817-11	METAL CHIP 470 5% 1/10W	
C307	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		R315	1-216-817-11	METAL CHIP 470 5% 1/10W	
C308	1-162-927-11	CERAMIC CHIP 100PF 5% 50V				< SWITCH >	
C310	1-164-230-11	CERAMIC CHIP 220PF 5% 50V		S301	1-786-126-11	SWITCH, SLIDE (REC/PB)	
		< CONNECTOR >				< TRANSFORMER >	
CN303	1-784-774-11	CONNECTOR, FFC 13P		T301	1-416-041-11	TRANSFORMER, BIAS OSCILLATION	
		< IC >				*****	
IC301	6-710-092-01	IC TA2068NG(5,HZ)			A-1098-549-A	TUNER BOARD, COMPLETE (MX)	
		< JUMPER RESISTOR >			A-1098-611-A	TUNER BOARD, COMPLETE (EXCEPT MX)	

JC301	1-216-864-11	SHORT CHIP 0			2-547-169-01	TERMINAL, ANTENNA	
JC302	1-216-864-11	SHORT CHIP 0				< CAPACITOR >	
JC303	1-216-864-11	SHORT CHIP 0					
JC304	1-216-864-11	SHORT CHIP 0		C1	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	
JC305	1-216-864-11	SHORT CHIP 0		C4	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
JC306	1-216-295-11	SHORT CHIP 0		C7	1-162-910-11	CERAMIC CHIP 5PF 0.25PF 50V	
JC307	1-216-864-11	SHORT CHIP 0		C8	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
JC308	1-216-295-11	SHORT CHIP 0		C9	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
JC309	1-216-864-11	SHORT CHIP 0					
		< TRANSISTOR >		C10	1-126-960-11	ELECT 1uF 20% 50V	
Q301	8-729-901-81	TRANSISTOR 2SC2412K-T-146-R		C11	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
Q302	8-729-907-00	TRANSISTOR DTC114EU		C12	1-126-963-11	ELECT 4.7uF 20% 50V	
Q303	8-729-907-00	TRANSISTOR DTC114EU		C13	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(MX)
		< RESISTOR >		C14	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(EXCEPT MX)
R101	1-216-835-11	METAL CHIP 15K 5% 1/10W		C14	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	(MX)
R102	1-216-807-11	METAL CHIP 68 5% 1/10W		C15	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(EXCEPT MX)
R103	1-216-843-11	METAL CHIP 68K 5% 1/10W		C15	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	(MX)
R104	1-216-835-11	METAL CHIP 15K 5% 1/10W		C18	1-126-923-11	ELECT 220uF 20% 10V	
R105	1-216-835-11	METAL CHIP 15K 5% 1/10W		C20	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
R106	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		C21	1-126-960-11	ELECT 1uF 20% 50V	
R110	1-216-809-11	METAL CHIP 100 5% 1/10W		C22	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
R111	1-216-829-11	METAL CHIP 4.7K 5% 1/10W		C23	1-126-960-11	ELECT 1uF 20% 50V	
R112	1-216-827-11	METAL CHIP 3.3K 5% 1/10W		C24	1-162-960-11	CERAMIC CHIP 220PF 10% 50V	
R201	1-216-835-11	METAL CHIP 15K 5% 1/10W		C26	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
R202	1-216-807-11	METAL CHIP 68 5% 1/10W		C27	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
R203	1-216-843-11	METAL CHIP 68K 5% 1/10W		C29	1-104-658-11	ELECT 100uF 20% 10V	
R204	1-216-835-11	METAL CHIP 15K 5% 1/10W		C30	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
R205	1-216-835-11	METAL CHIP 15K 5% 1/10W		C31	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
R206	1-216-825-11	METAL CHIP 2.2K 5% 1/10W		C32	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
R210	1-216-025-11	RES-CHIP 100 5% 1/10W					
R211	1-216-829-11	METAL CHIP 4.7K 5% 1/10W					

CFD-RS60CP

Ver. 1.1

TUNER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C33	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		JC4	1-216-864-11	SHORT CHIP 0	
C34	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		JC5	1-216-864-11	SHORT CHIP 0	
C35	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		JC6	1-216-864-11	SHORT CHIP 0	
C37	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		JC11	1-216-864-11	SHORT CHIP 0	
C39	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		JC12	1-216-864-11	SHORT CHIP 0	
C41	1-164-230-11	CERAMIC CHIP 220PF 5% 50V		JC13	1-216-864-11	SHORT CHIP 0	
C42	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		JC24	1-216-864-11	SHORT CHIP 0 (EXCEPT MX)	
C43	1-162-919-11	CERAMIC CHIP 22PF 5% 50V		JC33	1-216-864-11	SHORT CHIP 0	
C47	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V		JC34	1-216-864-11	SHORT CHIP 0	
C49	1-161-051-00	CERAMIC 0.01uF 10% 25V				< COIL >	
C51	1-162-919-11	CERAMIC CHIP 22PF 5% 50V		L1	1-409-775-11	COIL, AIR-CORE	
C52	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V		L2	1-416-509-11	COIL, AIR-CORE	
C53	1-137-190-11	FILM 0.22uF 5% 50V		L3	1-754-117-12	ANTENNA, FERRITE-ROD (AM)	
C54	1-126-923-11	ELECT 220uF 20% 10V		L4	1-411-234-21	COIL, AM OSC	
C55	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		L11	1-414-142-11	INDUCTOR 1uH (MX)	
C56	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		L21	1-410-509-11	INDUCTOR 10uH	
C57	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V				< RESISTOR >	
C59	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R1	1-216-817-11	METAL CHIP 470 5% 1/10W	
C60	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		R2	1-216-817-11	METAL CHIP 470 5% 1/10W	
C61	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R3	1-216-833-11	METAL CHIP 10K 5% 1/10W	
C62	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R4	1-216-833-11	METAL CHIP 10K 5% 1/10W	
C63	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R5	1-216-821-11	METAL CHIP 1K 5% 1/10W	
C65	1-126-963-11	ELECT 4.7uF 20% 50V		R10	1-216-805-11	METAL CHIP 47 5% 1/10W	
C66	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R11	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
C68	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R13	1-216-821-11	METAL CHIP 1K 5% 1/10W	
C77	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V (EXCEPT MX)		R14	1-216-821-11	METAL CHIP 1K 5% 1/10W	
C78	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V (EXCEPT MX)		R24	1-216-813-11	METAL CHIP 220 5% 1/10W	
C80	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		R30	1-216-837-11	METAL CHIP 22K 5% 1/10W	
C95	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		R31	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
		< FILTER >		R32	1-216-845-11	METAL CHIP 100K 5% 1/10W	
CF2	1-760-235-81	FILTER, CERAMIC		R33	1-216-833-11	METAL CHIP 10K 5% 1/10W	
CF4	1-781-962-21	FILTER, CERAMIC		R40	1-216-849-11	METAL CHIP 220K 5% 1/10W	
		< CONNECTOR >		R41	1-216-833-11	METAL CHIP 10K 5% 1/10W	
CNP1	1-568-854-11	CONNECTOR, FFC 11P		R50	1-216-821-11	METAL CHIP 1K 5% 1/10W	
		< TRIMMER >		R51	1-216-833-11	METAL CHIP 10K 5% 1/10W	
CT1	1-141-442-91	CAP, CERAMIC TRIMMER 20PF		R52	1-216-864-11	SHORT CHIP 0	
CT3	1-141-304-21	CAP, CERAMIC TRIMMER 10PF		R53	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
		< DIODE >		R54	1-216-817-11	METAL CHIP 470 5% 1/10W	
D1	8-719-078-48	DIODE KV1471ETR-G		R55	1-216-833-11	METAL CHIP 10K 5% 1/10W	
D2	8-719-078-48	DIODE KV1471ETR-G		R56	1-216-813-11	METAL CHIP 220 5% 1/10W	
D3	8-719-050-69	DIODE KV1520N		R57	1-216-809-11	METAL CHIP 100 5% 1/10W	
D10	8-719-988-61	DIODE 1SS355TE-17		R58	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
D11	8-719-988-61	DIODE 1SS355TE-17		R59	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
		< IC >		R60	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
IC1	6-700-512-01	IC TA2149BN		R61	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
IC2	8-759-483-40	IC LC72137M-TLM-E		R63	1-216-833-11	METAL CHIP 10K 5% 1/10W	
		< JUMPER RESISTOR >		R65	1-216-833-11	METAL CHIP 10K 5% 1/10W	
JC1	1-216-864-11	SHORT CHIP 0		R91	1-216-813-11	METAL CHIP 220 5% 1/10W	
JC2	1-216-864-11	SHORT CHIP 0		R92	1-216-813-11	METAL CHIP 220 5% 1/10W	
JC3	1-216-864-11	SHORT CHIP 0		R94	1-216-821-11	METAL CHIP 1K 5% 1/10W	
						< TRANSFORMER >	
				T1	1-433-741-11	TRANSFORMER, IF	
				T2	1-419-465-11	COIL (DET)	

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
< VIBRATOR >						R903	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
X1	1-795-449-11	VIBRATOR, CRYSTAL (75kHz)	*****			R904	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R905	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R906	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						R907	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
						A-1317-463-A USB BOARD, COMPLETE					
*****						R915	1-216-833-11	METAL CHIP	10K	5%	1/10W
< CAPACITOR >						R916	1-216-864-11	SHORT CHIP	0		
C901	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R917	1-216-864-11	SHORT CHIP	0		
C902	1-124-779-00	ELECT CHIP	10uF	20%	16V	R919	1-216-809-11	METAL CHIP	100	5%	1/10W
C903	1-124-779-00	ELECT CHIP	10uF	20%	16V	R920	1-216-833-11	METAL CHIP	10K	5%	1/10W
C904	1-124-779-00	ELECT CHIP	10uF	20%	16V	R921	1-216-845-11	METAL CHIP	100K	5%	1/10W
C905	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R922	1-216-845-11	METAL CHIP	100K	5%	1/10W
C906	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R923	1-216-802-11	METAL CHIP	27	5%	1/10W
C907	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R924	1-216-802-11	METAL CHIP	27	5%	1/10W
C908	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R925	1-216-835-11	METAL CHIP	15K	5%	1/10W
C909	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	R926	1-216-835-11	METAL CHIP	15K	5%	1/10W
C910	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	R928	1-216-864-11	SHORT CHIP	0		
C912	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	R932	1-216-809-11	METAL CHIP	100	5%	1/10W
C913	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R933	1-216-864-11	SHORT CHIP	0		
C914	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R934	1-216-833-11	METAL CHIP	10K	5%	1/10W
C915	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R937	1-216-809-11	METAL CHIP	100	5%	1/10W
C916	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R938	1-216-809-11	METAL CHIP	100	5%	1/10W
C917	1-100-354-21	ELECT CHIP	220uF	20%	6.3V	R941	1-216-845-11	METAL CHIP	100K	5%	1/10W
C918	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V	R942	1-216-845-11	METAL CHIP	100K	5%	1/10W
C919	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R943	1-216-845-11	METAL CHIP	100K	5%	1/10W
C920	1-164-360-11	CERAMIC CHIP	0.1uF		16V	R944	1-216-845-11	METAL CHIP	100K	5%	1/10W
C921	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R945	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C922	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R947	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
C930	1-216-864-11	SHORT CHIP	0			R950	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
< CONNECTOR >						R970	1-216-809-11	METAL CHIP	100	5%	1/10W
CN901	1-770-160-21	PIN, CONNECTOR (PC BOARD) 2P				R971	1-216-809-11	METAL CHIP	100	5%	1/10W
CN903	1-779-993-11	PIN, CONNECTOR (PWB) 5P				R972	1-216-809-11	METAL CHIP	100	5%	1/10W
CN904	1-784-859-51	CONNECTOR, FFC (LIF(NON-ZIF)) 7P				R973	1-216-809-11	METAL CHIP	100	5%	1/10W
CN907	1-784-833-51	CONNECTOR, FFC (LIF(NON-ZIF)) 21P				R974	1-216-809-11	METAL CHIP	100	5%	1/10W
< DIODE >						R975	1-216-809-11	METAL CHIP	100	5%	1/10W
D903	8-719-978-33	DIODE DTZ-TT11-6.8B				R976	1-216-809-11	METAL CHIP	100	5%	1/10W
D904	8-719-978-33	DIODE DTZ-TT11-6.8B				R977	1-216-809-11	METAL CHIP	100	5%	1/10W
D905	6-501-579-01	DIODE MC2837				R978	1-216-809-11	METAL CHIP	100	5%	1/10W
< JUMPER RESISTOR >						R979	1-216-809-11	METAL CHIP	100	5%	1/10W
FB901	1-216-295-11	SHORT CHIP	0			R981	1-216-809-11	METAL CHIP	100	5%	1/10W
FB902	1-216-295-11	SHORT CHIP	0			R982	1-216-809-11	METAL CHIP	100	5%	1/10W
< IC >						R983	1-216-809-11	METAL CHIP	100	5%	1/10W
IC901	6-807-284-01	IC TMP92CD28AFG-2CB4				R984	1-216-809-11	METAL CHIP	100	5%	1/10W
IC915	6-710-887-01	IC R5523N001B-TR-F				R985	1-216-809-11	METAL CHIP	100	5%	1/10W
IC921	6-704-832-01	IC IS61LV6416-10TLT				R986	1-216-809-11	METAL CHIP	100	5%	1/10W
< JUMPER RESISTOR >						< NETWORK RESISTOR >					
JR902	1-216-295-11	SHORT CHIP	0			RB921	1-234-944-21	RES, NETWORK 47X4 (1005)			
< RESISTOR >						RB922	1-234-944-21	RES, NETWORK 47X4 (1005)			
R901	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB923	1-234-944-21	RES, NETWORK 47X4 (1005)			
R902	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	RB924	1-234-944-21	RES, NETWORK 47X4 (1005)			
< VIBRATOR >						< VIBRATOR >					
						X901	1-813-931-21	VIBRATOR, CRYSTAL (9MHz)			

CFD-RS60CP

Ver. 1.1

USB CONNECT VOL

Ref. No.	Part No.	Description	Remark
	A-1317-475-A	USB CONNECT BOARD, COMPLETE *****	
		< CAPACITOR >	
C1003	1-135-834-11	CERAMIC CHIP 2.2uF	6.3V
		< DIODE >	
D1003	8-719-978-33	DIODE DTZ-TT11-6.8B	
D1004	8-719-978-33	DIODE DTZ-TT11-6.8B	
		< FERRITE BEAD >	
FB1003	1-414-233-22	INDUCTOR, FERRITE BEAD	
FB1004	1-414-233-22	INDUCTOR, FERRITE BEAD	
		< COIL >	
L1001	1-456-799-11	COIL, COMMON MODE CHOKE	
		< CONNECTOR >	
J1001	1-794-548-21	CONNECTOR, USB (A) (🔌)	

	A-1317-465-A	VOL BOARD, COMPLETE *****	
		< CAPACITOR >	
C152	1-126-160-11	ELECT 1uF	20% 50V
C153	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C154	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C155	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C156	1-126-163-11	ELECT 4.7uF	20% 50V
C157	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V
C158	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V
C159	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V
C160	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V
C161	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C162	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C252	1-126-160-11	ELECT 1uF	20% 50V
C253	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C254	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C255	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C256	1-126-163-11	ELECT 4.7uF	20% 50V
C257	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V
C258	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V
C259	1-165-176-11	CERAMIC CHIP 0.047uF	10% 16V
C260	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V
C261	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C262	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C351	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C352	1-162-927-11	CERAMIC CHIP 100PF	5% 50V
C353	1-124-261-11	ELECT 10uF	20% 10V
C354	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
C355	1-125-972-11	ELECT 100uF	20% 16V
		< CONNECTOR >	
CN351	1-815-558-11	PIN, CONNECTOR (PWB) 10P	

Ref. No.	Part No.	Description	Remark
		< IC >	
IC351	6-710-289-01	IC R2S15904SP	
		< JUMPER RESISTOR >	
JC351	1-216-864-11	SHORT CHIP 0	
		< COIL >	
L351	1-410-509-11	INDUCTOR 10uH	
		< RESISTOR >	
R151	1-216-821-11	METAL CHIP 1K	5% 1/10W
R153	1-216-853-11	METAL CHIP 470K	5% 1/10W
R154	1-216-841-11	METAL CHIP 47K	5% 1/10W
R155	1-216-833-11	METAL CHIP 10K	5% 1/10W
R251	1-216-821-11	METAL CHIP 1K	5% 1/10W
R253	1-216-853-11	METAL CHIP 470K	5% 1/10W
R254	1-216-841-11	METAL CHIP 47K	5% 1/10W
R255	1-216-833-11	METAL CHIP 10K	5% 1/10W
R351	1-216-809-11	METAL CHIP 100	5% 1/10W
R352	1-216-809-11	METAL CHIP 100	5% 1/10W
R353	1-216-809-11	METAL CHIP 100	5% 1/10W
R354	1-216-809-11	METAL CHIP 100	5% 1/10W
R355	1-216-833-11	METAL CHIP 10K	5% 1/10W
R356	1-216-833-11	METAL CHIP 10K	5% 1/10W

		MISCELLANEOUS *****	
104	1-832-404-21	CABLE, FLEXIBLE FLAT (16 CORE)	
105	1-832-644-21	CABLE, FLEXIBLE FLAT (27 CORE)	
111	1-452-899-11	MAGNET	
△ 115	8-820-126-02	OPTICAL PICK-UP (KSM-213CDP/C2NP)	
165	1-500-868-11	CORE, FERRITE	
206	1-832-824-21	CABLE, FLEXIBLE FLAT (11 CORE)	
211	1-832-611-21	CABLE, FLEXIBLE FLAT (21 CORE)	
218	1-500-868-11	CORE, FERRITE	
253	1-832-833-21	CABLE, FLEXIBLE FLAT (13 CORE)	
ANT1	1-754-376-11	ANTENNA, TELESCOPIC (FM)	
C309	1-162-923-11	CERAMIC CHIP 47PF	5% 50V
△ F951	1-532-465-33	FUSE (3.15A/250V)	
HE301	1-500-813-11	HEAD, ERASE (ERASE)	
HRP301	3-266-053-01	HEAD, RP (REC/PB)	
△ J951	1-526-838-11	INLET, AC 2P (～ AC IN) (EXCEPT MX)	
△ J951	1-540-009-11	INLET, AC (～ AC IN) (MX)	
S201	1-771-853-11	SWITCH, DETECTION (LIMIT)	
S801	1-692-960-11	SWITCH, PUSH (1 KEY)	
		(▲ PUSH OPEN/CLOSE)	
SP301	1-825-690-11	SPEAKER (DIA. 10cm) (L-CH)	
SP302	1-825-690-11	SPEAKER (DIA. 10cm) (R-CH)	
△ T951	1-445-291-11	TRANSFORMER, POWER (MX)	
△ T951	1-445-292-11	TRANSFORMER, POWER (EXCEPT MX)	

Ref. No.	Part No.	Description	Remark
		ACCESSORIES *****	
△	1-769-412-22	CORD, POWER (EXCEPT MX)	
△	1-834-027-11	CORD, POWER (MX)	
	3-267-151-11	BATTERY, LID (for RMT-CRS60A/CRS60AD)	
	3-268-767-11	MANUAL, INSTRUCTION (ENGLISH) (E41,MX)	
	3-268-767-21	MANUAL, INSTRUCTION (SPANISH) (MX)	
	3-268-767-31	MANUAL, INSTRUCTION (SPANISH) (E41)	
	3-268-767-41	MANUAL, INSTRUCTION (ENGLISH) (SP)	
	3-268-767-51	MANUAL, INSTRUCTION (SPANISH) (SP)	
	3-268-767-61	MANUAL, INSTRUCTION (RUSSIAN) (RU)	
	3-268-767-71	MANUAL, INSTRUCTION (UKRAINIAN) (RU)	
	3-268-767-81	MANUAL, INSTRUCTION (ARABIC) (EA)	
	3-277-987-11	MANUAL, INSTRUCTION (ENGLISH) (IT)	
	3-277-987-21	MANUAL, INSTRUCTION (FRENCH,GERMAN)	
	3-277-987-31	MANUAL, INSTRUCTION (ITALIAN,SPANISH)	(IT)
	3-277-987-41	MANUAL, INSTRUCTION (DUTCH, PORTUGUESE) (IT)	
	3-277-987-51	MANUAL, INSTRUCTION (SWEDISH,FINNISH)	(CET)
	3-277-987-61	MANUAL, INSTRUCTION (POLISH,CZECH)	(CET)
	3-277-987-71	MANUAL, INSTRUCTION (HUNGARIAN, SLOVAKIAN) (CET)	
	A-1317-437-A	REMOTE COMMANDER (RMT-CRS60A)	(E41,EA,MX,SP)
	A-1317-438-A	REMOTE COMMANDER (RMT-CRS60AD)	(CET,IT,RU)

REVISION HISTORY

Clicking the version allows you to jump to the revised page.

Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

[illegible]