


2.5 REMOTE CONTROLLER (CU-V160)

*1 Grease PN-92KB
Check that the JOG dial moves smoothly after a small quantity put grease on.

Do not use the alcohol when cleans a JOG dial because acrylic section clouds over.

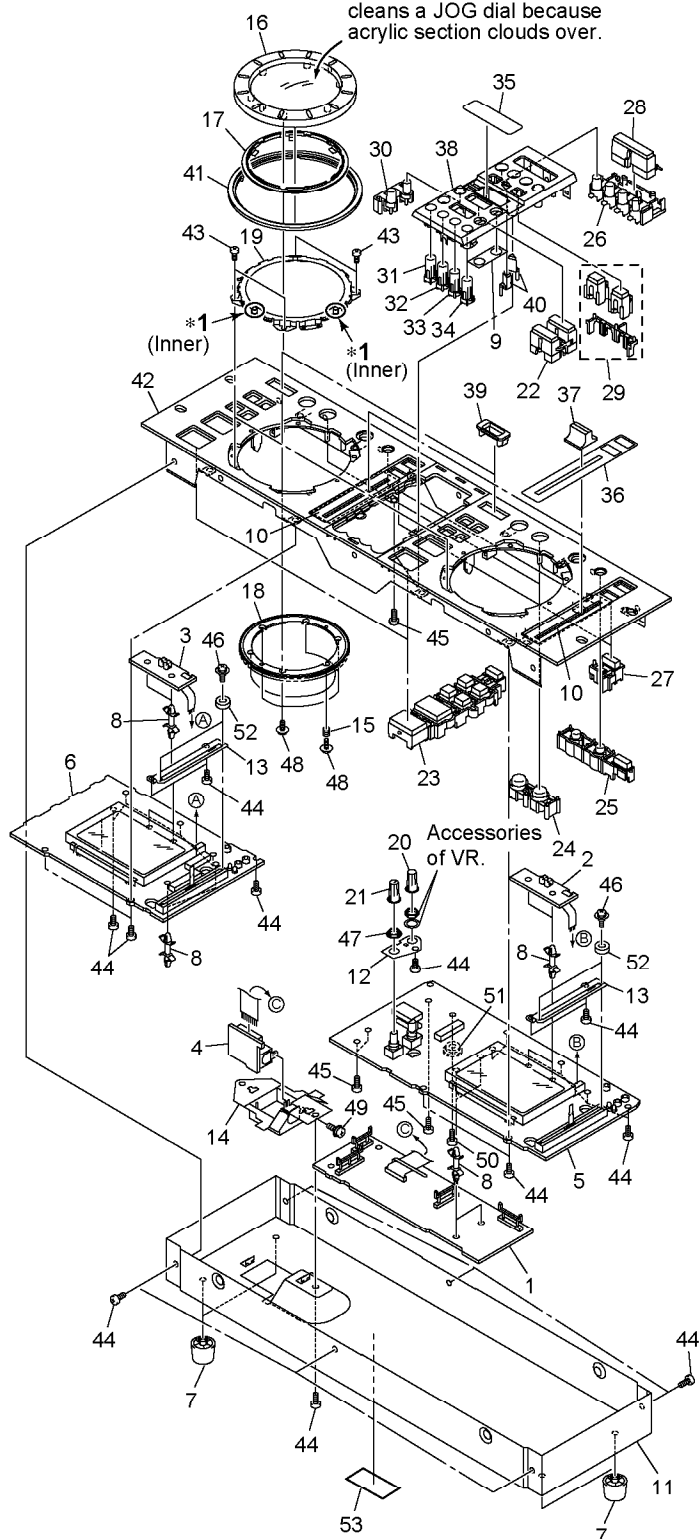

(1) REMOTE CONTROLLER (CU-V160) PARTS LIST

Mark	No.	Description	Part No.
	1	CNNB ASSY	DWG1534
	2	PHT1 ASSY	DWG1535
	3	PHT2 ASSY	DWG1536
	4	CTJB ASSY	DWG1537
	5	FLK1 ASSY	DWG1538
	6	FLK2 ASSY	DWG1539
	7	Foot Assy	AEC1531
	8	PCB Spacer (10)	DEC1388
	9	Rotary VR Packing	DED1151
	10	Slide VR Packing	DED1154
	11	Cover	DNE1383
	12	VR Stay	DNF1635
	13	VR Holder	DNF1638
	14	Terminal Holder	DNH2448
	15	Jog Spring	DBH1460
	16	Jog Dial	DNK3797
	17	J Ring A	DNK3723
	18	J Ring B	DNK3732
	19	Jog Stay Assy	DXB1727
	20	BPM Knob	DAA1144
	21	VR Knob	DAA1145
	22	BPM Knob	DAC1925
	23	Knob (PLAY)	DAC1927
	24	Knob (LOOP)	DAC1928
	25	Knob (TEMPO)	DAC1929
	26	Mode Select Knob	DAC1930
	27	MT Knob	DAC1931
	28	MIX Knob	DAC1932
	29	Player Select Knob	DAC1933
	30	Start Knob	DAC1934
	31	Knob A	DAC1935
	32	Knob B	DAC1936
	33	Knob C	DAC1937
	34	Knob D	DAC1938
	35	Display Plate	DAH1937
	36	Slide Sheet	DAH1938
	37	Slide Knob	DNK2936
	38	Function Panel (C)	DNK3726
	39	Eject Guide	DNK3727
	40	Lens	DNK3730
	41	Jog Guard	DNK3731
	42	Control Panel Assy	DXB1728
	43	Screw	BBZ26P060FMC
	44	Screw	BBZ30P060FZK
	45	Screw	BPZ30P080FMC
	46	Screw	PMB20P060FMC
	47	Flange Nut M9	DBN1004
	48	Screw	PBA1062
	49	Screw	PMH30P060FMC
	50	Screw	BPZ30P120FCU
	51	POM Bush	DEC2397
	52	Spacer	DLA1801
	53	Label	See Contrast table (2)