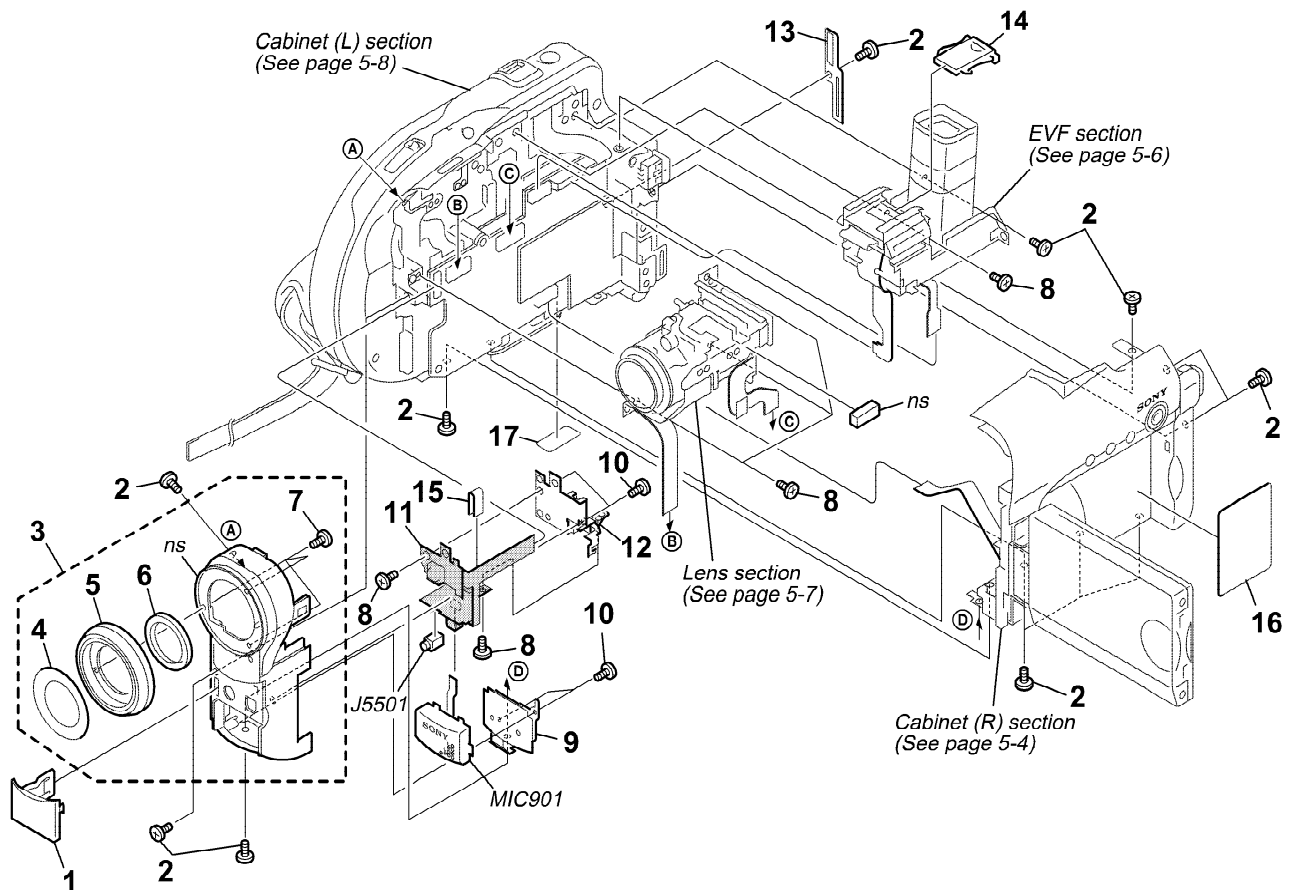


5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

ns : not supplied




Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	3-090-510-21	COVER, JACK (DVD201)	11	A-7112-893-A	MA-429 BOARD, COMPLETE
1	3-090-510-31	COVER, JACK (DVD201E)			(J5501 is not included in this complete board.)
2	3-087-376-01	O PLATE +P2 MAIN M1.7EG GRIP	12	3-090-513-01	PLATE, FLEXIBLE RETAINER
3	X-3954-378-1	PANEL (M) ASSY, FRONT (J)	13	3-090-600-01	LID, CPC
3	X-3954-396-1	PANEL (M) ASSY, FRONT (EXCEPT J)	14	3-090-675-11	COVER, HOT SHOE
4	3-090-638-01	RING (M), NAME	15	3-091-672-01	SHEET, MA
5	3-090-518-01	SCREW (M)	16	3-091-962-01	LABEL, DIA FINALIZE CAUTION (J)
6	3-090-517-01	CUSHION (M), LENS	16	3-091-963-01	LABEL, DIA FINALIZE CAUTION (EXCEPT J)
7	3-055-573-21	SCREW (M1.7), LOCK ACE, P2	17	3-092-186-01	LABEL (S), TEMPERATURE CAUTION (J)
8	3-078-889-11	SCREW (M1.7)	J5501	1-691-737-41	JACK (SMALL TYPE)(MIC)
9	X-3954-355-1	PLATE ASSY, FIXED, MICROPHONE			(J5501 is not included in the complete board of MA-429.)
10	3-080-204-21	SCREW, TAPPING, P2	MIC901	1-542-577-21	MIC UNIT

5. REPAIR PARTS LIST

5-1-2. CABINET (R) SECTION

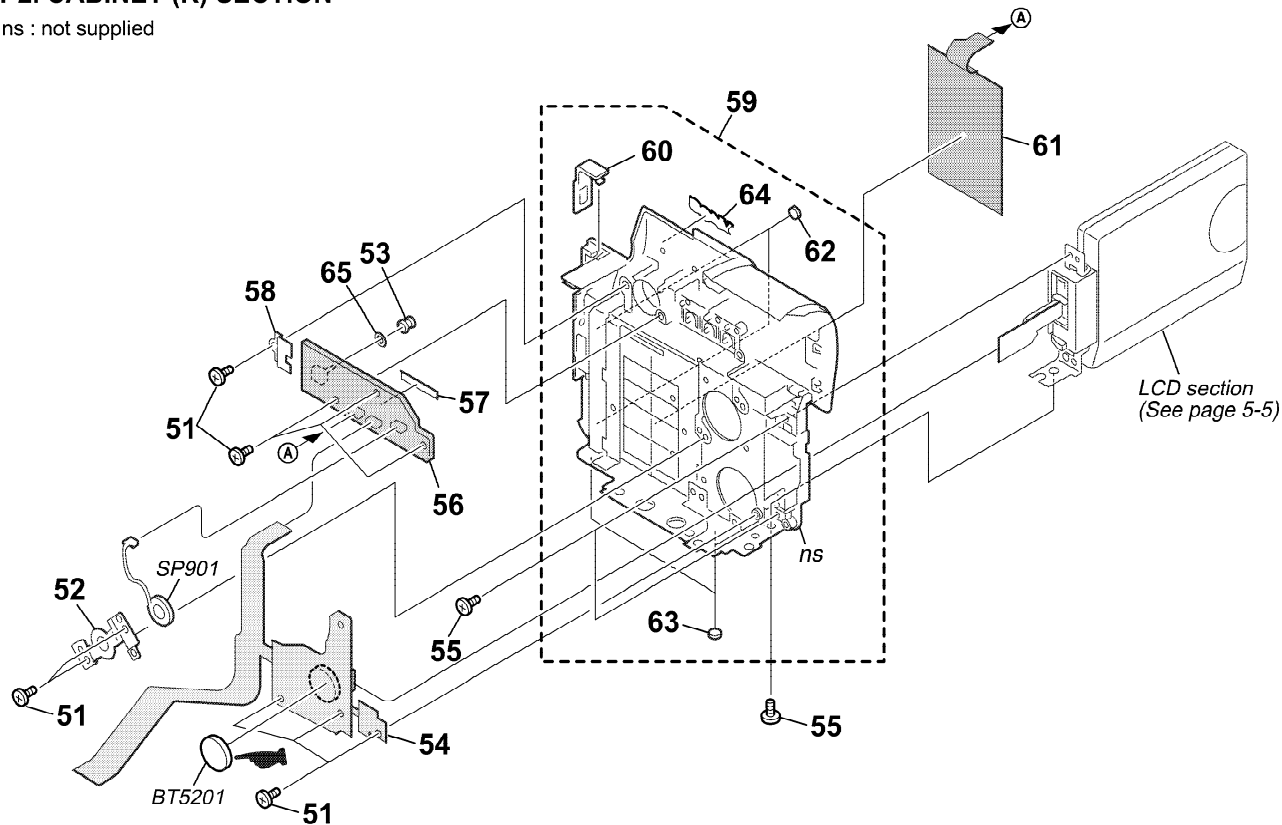ns : not supplied



 : BT5201 (Lithium battery) FP-884 flexible board on the mount position. (See page 4-88)

CAUTION :
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意
電池の交換は、正しく行わないと破裂する可能性があります。
電池を交換する場合には必ず同じ型名の電池又は
同等品と交換してください。

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
51	3-078-890-01	SCREW, TAPPING	60	3-090-554-01	COVER (US), JACK
52	X-3954-351-1	PLATE ASSY, SPEAKER RETAINER	61	1-478-566-11	SWITCH BLOCK, CONTROL (SH8700)(J)
53	3-090-549-01	KNOB, JS	61	1-478-566-21	SWITCH BLOCK, CONTROL (SH8700)(EXCEPT J)
54	1-861-881-21	FP-884 FLEXIBLE BOARD	62	3-090-599-01	CUSHION, PANEL
55	3-087-376-01	O PLATE +P2 MAIN M1.7EG GRIP	63	3-091-628-01	FOOT, RUBBER
56	A-7112-890-A	JS-030 BOARD, COMPLETE	64	4-942-636-01	EMBLEM (NO.3.5), SONY
57	3-091-759-01	SHEET (JS), INSULATED	65	3-090-643-01	SHEET (JS), MUFFLE
58	3-090-644-01	SHEET METAL (JS), RETAINER	△BT5201	1-756-128-11	BATTERY, LITHIUM (SECONDARY)
59	X-3954-379-1	CABINET (R) ASSY (J)	SP901	1-825-260-21	LOUD SPEAKER (1.6CM)
59	X-3954-398-1	CABINET (R) ASSY (EXCEPT J)			

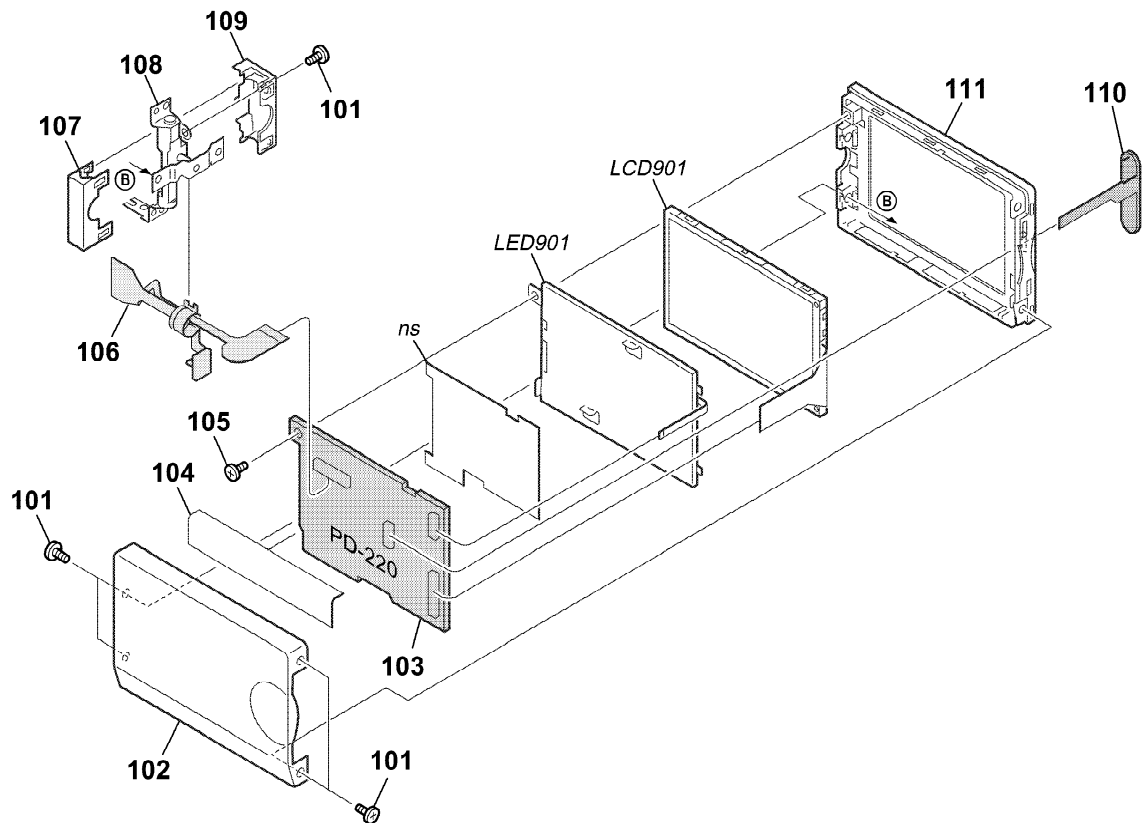
The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

△印の部品、または△印付の点線で囲まれた部品は、安全性を維持するために、重要な部品です。
従って交換時は、必ず指定の部品を使用してください。

5. REPAIR PARTS LIST

5-1-3. LCD SECTION




Ref. No.	Part No.	Description
101	3-084-817-21	GRIP
102	X-3954-380-1	CABINET (C) ASSY, P
103	A-7112-894-A	PD-220 BOARD, COMPLETE
104	3-091-663-01	SHEET (MY)
105	3-080-204-21	SCREW, TAPPING, P2
106	A-7112-895-A	FP-890 BOARD, COMPLETE
107	3-090-562-11	COVER (O), HINGE

Ref. No.	Part No.	Description
108	X-3954-339-1	HINGE (87) ASSY
109	3-090-563-01	COVER (U), HINGE
110	1-478-567-11	SWITCH BLOCK, CONTROL (BL8700)(J)
110	1-478-567-21	SWITCH BLOCK, CONTROL (BL8700)(EXCEPT J)
111	X-3954-344-1	CABINET (M) ASSY, P
LCD901	8-753-210-98	ACX528AK-J
LED901	1-478-462-11	BLOCK, LIGHT GUIDE PLATE (2.5)

5. REPAIR PARTS LIST

5-1-4. EVF SECTION

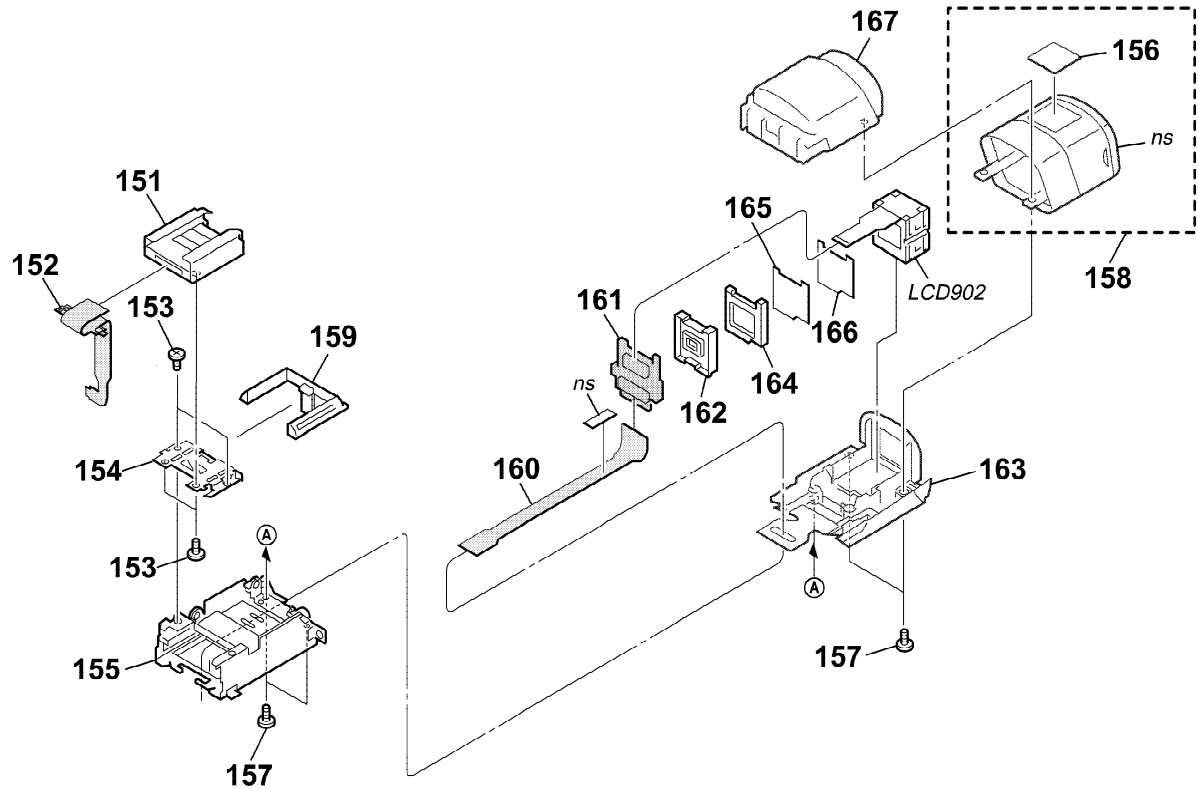ns : not supplied




Ref. No.	Part No.	Description
151	1-793-996-11	CONNECTOR, EXTERNAL
152	1-861-887-11	FP-883 FLEXIBLE BOARD
153	3-078-889-11	SCREW (M1.7)
154	3-090-603-01	FRAME, HS
155	X-3954-343-1	HINGE ASSY, VF
156	3-074-433-01	LABEL, COLOR (VF)
157	3-080-204-21	SCREW, TAPPING, P2
158	X-3954-336-1	LENS ASSY, VF
159	3-090-602-01	BASE, HS

Ref. No.	Part No.	Description
160	1-861-886-11	FP-889 FLEXIBLE BOARD
161	A-7113-449-A	LB-107 BOARD, COMPLETE
162	3-089-415-01	GUIDE, LAMP
163	X-3954-356-1	CABINET (LOWER) ASSY, VF
164	3-089-419-01	CUSHION, LCD
165	3-089-417-01	ILLUMINATOR (WHITE)
166	3-089-416-01	SHEET, PRISM (SILVER)
167	3-090-530-11	CABINET (UPPER), VF
LCD902	8-753-208-78	LCX059AKA-J

5. REPAIR PARTS LIST

5-1-5. LENS SECTION

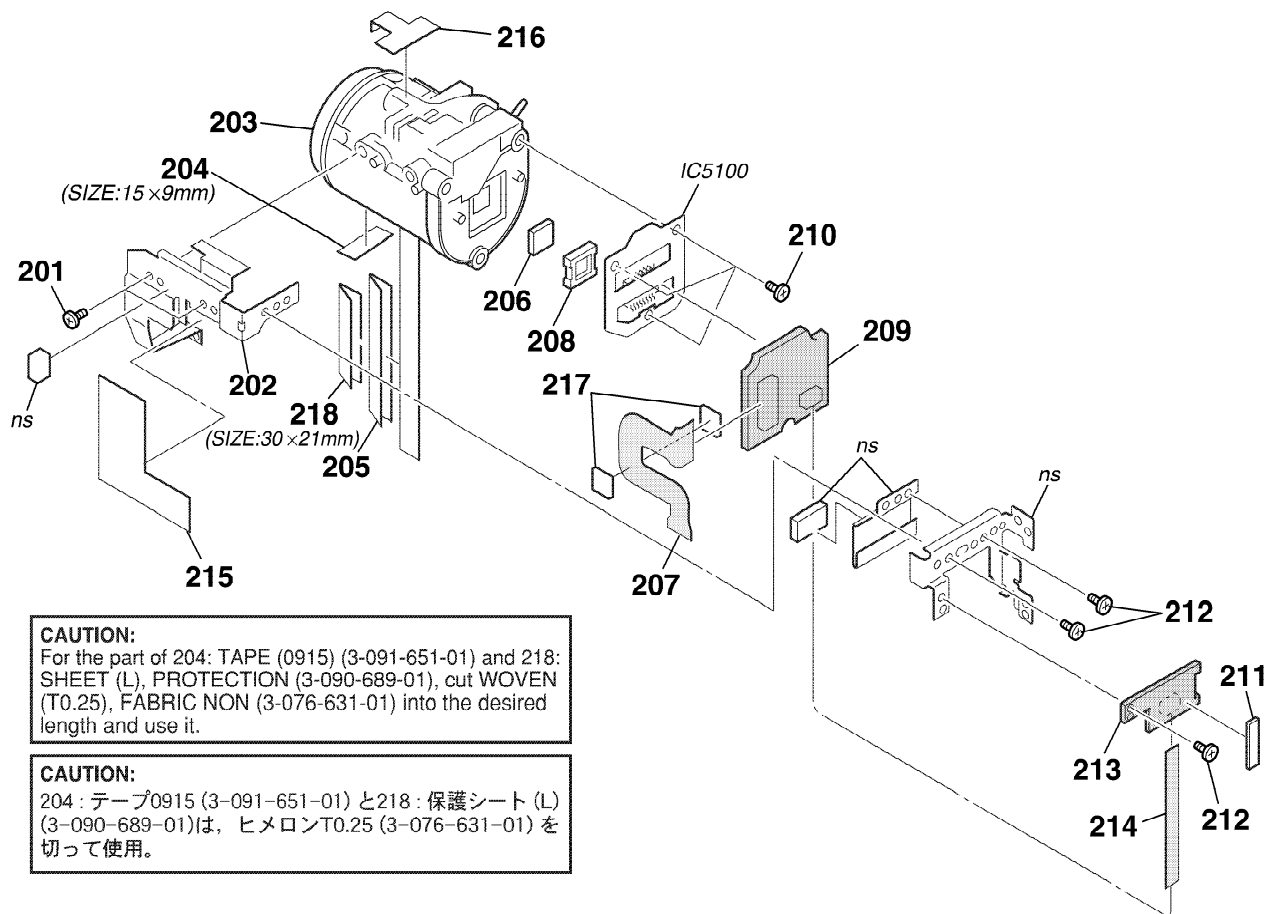ns : not supplied



CAUTION:

For the part of 204: TAPE (0915) (3-091-651-01) and 218: SHEET (L), PROTECTION (3-090-689-01), cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.

CAUTION:

204 : テープ0915 (3-091-651-01) と218 : 保護シート (L) (3-090-689-01)は、ヒメロンT0.25 (3-076-631-01) を切って使用。

Be sure to read "Precautions upon replacing CCD imager" on page 4-9 when changing the CCD imager.

CCDイメージャの交換時はサービスマニュアル 4-10 ページの "CCDイメージャ交換時の注意" を必ずお読みください。


Ref. No.	Part No.	Description
201	3-078-890-01	SCREW, TAPPING
202	3-090-504-01	FRAME (M), LENS
203	A-7112-105-A	841A (CZ) BLOCK ASSY
204	CAUTION	TAPE (0915)
205	3-091-650-01	SHEET (L), DS
206	1-788-061-11	FILTER BLOCK, OPTICAL
207	1-861-884-21	FP-892 FLEXIBLE BOARD
208	3-088-645-01	RUBBER (Z), SEAL
209	A-7112-892-A	CD-504 BOARD, COMPLETE (IC5100 is not included in this complete board.)
210	3-080-204-21	SCREW, TAPPING, P2

Ref. No.	Part No.	Description
211	3-090-617-01	SPECER, HS
212	3-078-889-01	SCREW (M1.7)
213	A-7112-889-A	SE-143 BOARD, COMPLETE
214	1-861-885-11	FP-888 FLEXIBLE BOARD
215	3-091-658-01	SHEET (IM)
216	2-023-031-01	NY SHEET (M)
217	1-400-711-11	FILTER, EMI
218	CAUTION	SHEET (L), PROTECTION
IC5100	A-7112-341-A	CCD BLOCK ASSY (1M) (CCD IMAGER) (IC5100 is not included in the complete board of CD-504.)

5. REPAIR PARTS LIST

5-1-6. CABINET (L) SECTION

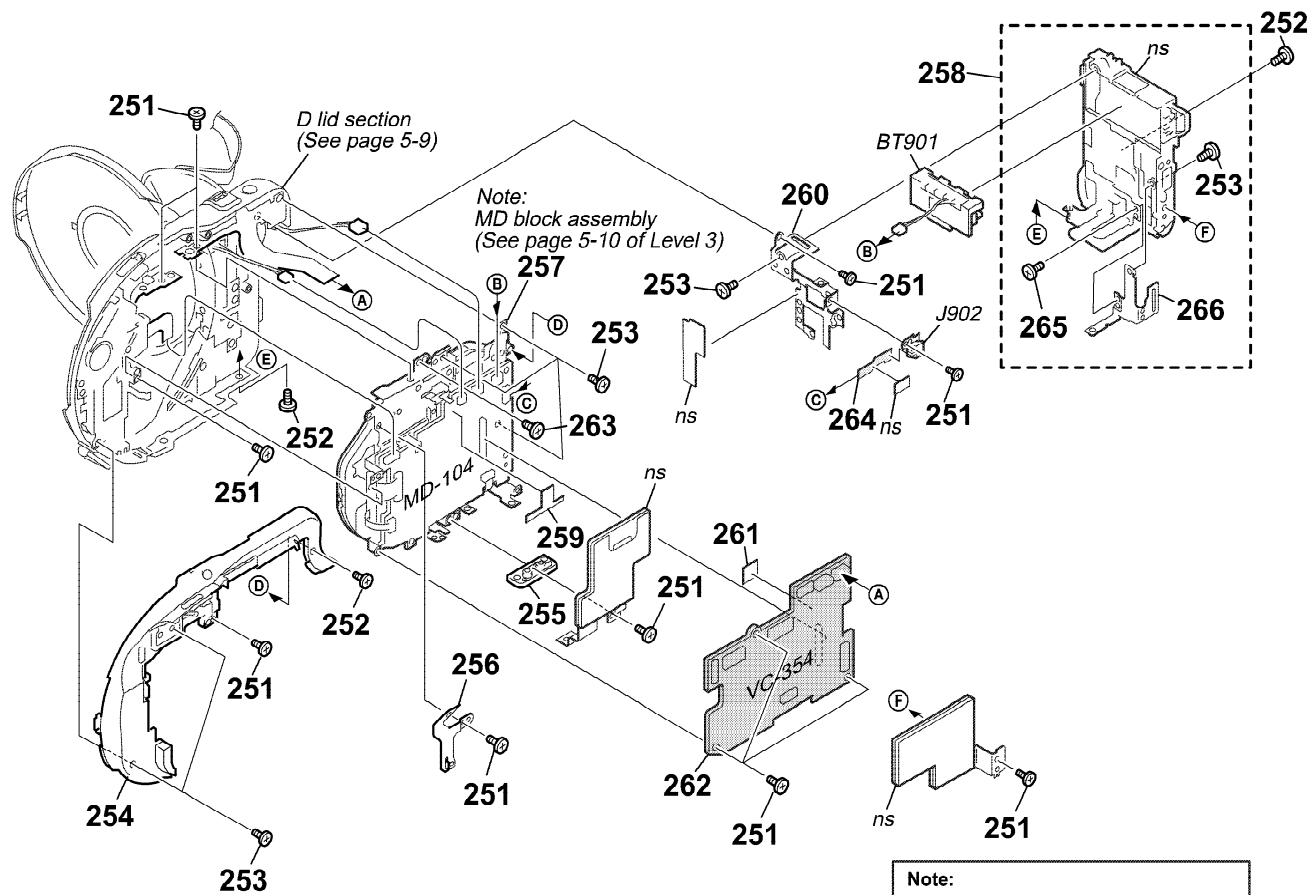ns : not supplied




Ref. No.	Part No.	Description
251	3-078-889-11	SCREW (M1.7)
252	3-087-376-01	O PLATE +P2 MAIN M1.7EG GRIP
253	3-080-204-21	SCREW, TAPPING, P2
254	X-3954-377-1	CENTER (M) ASSY, CABINET (J)
254	X-3954-394-1	CENTER (M) ASSY, CABINET (EXCEPT J)
255	3-090-548-01	LARGE, TRIPOD
256	3-090-633-01	PLATE, FIXED, FRONT
257	A-7113-371-A	MD BLOCK ASSY (SERVICE)
258	X-3954-342-1	PANEL ASSY, BATTERY
259	3-091-622-01	SHEET RADIATION (2345)
260	X-3954-350-1	SHEET METAL (UPPER) ASSY, STRAP

Ref. No.	Part No.	Description
261	3-090-687-01	SHEET (135), RADIATION
262	A-7079-027-A	VC-354 BOARD, COMPLETE (SERVICE) (DVD201)
262	A-7079-029-A	VC-354 BOARD, COMPLETE (SERVICE) (DVD201E)
263	3-078-890-01	SCREW, TAPPING
264	1-861-880-11	FP-887 FLEXIBLE BOARD
265	3-080-198-11	SCREW (M1.7), LOCK ACE, P2
266	3-090-520-01	SHEET METAL (LOWER), STRAP
BT901	1-694-796-11	TERMINAL BOARD, BATTERY
J902	1-794-962-11	CONNECTOR, SQUARE TYPE (USB 5P)

5. REPAIR PARTS LIST

5-1-7. D LID SECTION

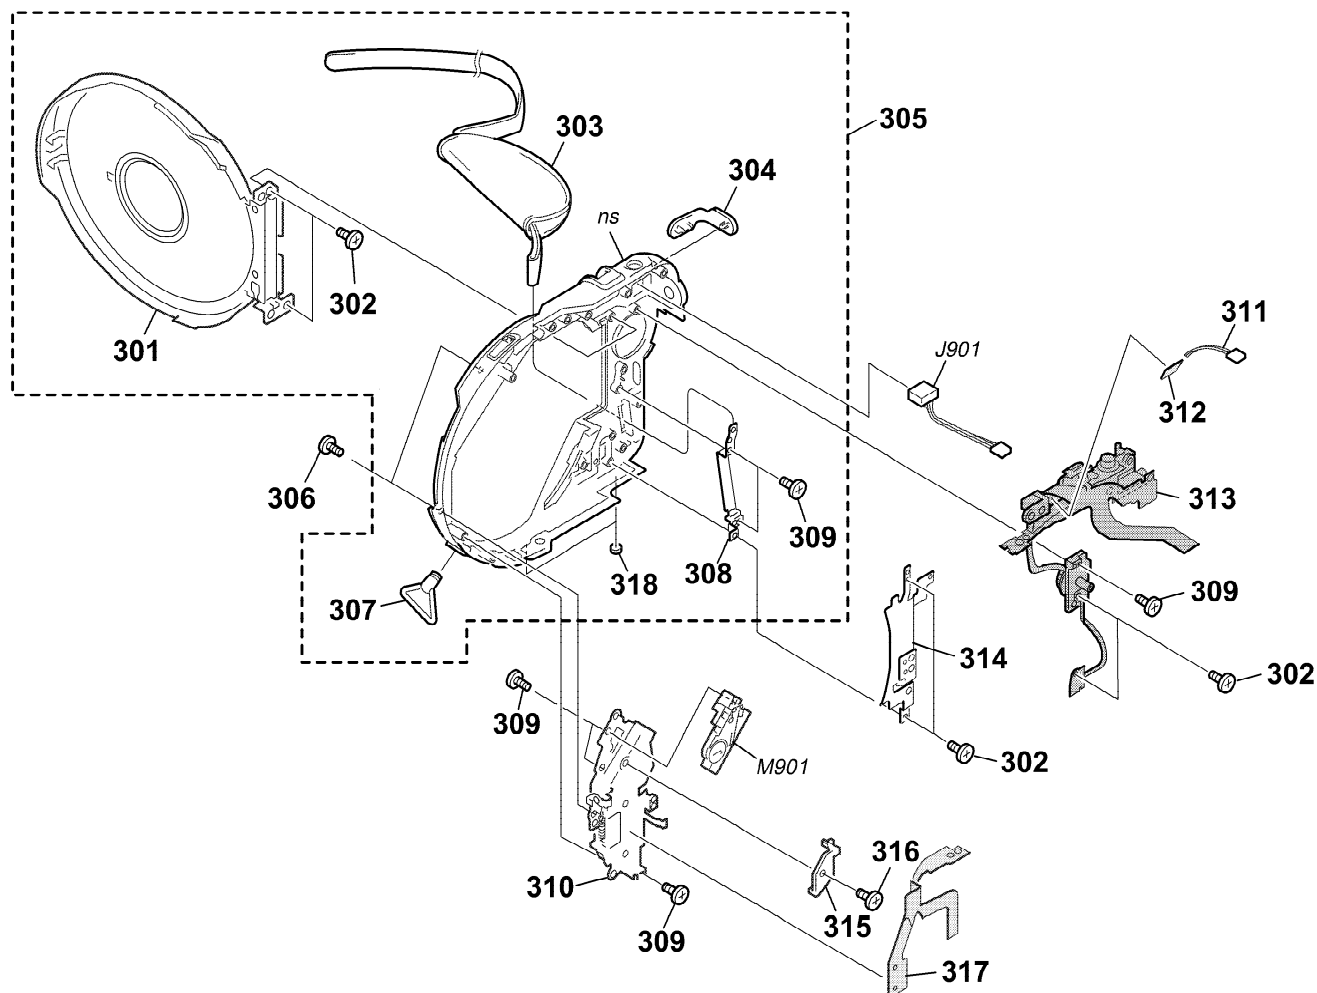ns : not supplied



Ref. No.	Part No.	Description
301	X-3954-376-1	LID ASSY, D
302	3-080-204-21	SCREW, TAPPING, P2
303	3-090-478-01	BELT, GRIP
304	3-090-472-01	COVER (DC), JACK
305	X-3954-375-1	CABINET (L) ASSY (J)
306	X-3954-392-1	CABINET (L) ASSY (EXCEPT J)
307	3-087-376-01	O PLATE +P2 MAIN M1.7EG GRIP
308	3-090-616-01	SHAFT (F), STRAP
309	3-090-474-01	SHEET METAL (REAR), GRIP BELT
310	3-078-890-01	SCREW, TAPPING
310	X-3954-340-1	FRAME ASSY, EJECT

Ref. No.	Part No.	Description
311	1-962-366-11	HARNESS (DM-144)
312	1-677-049-11	FP-228 FLEXIBLE BOARD
313	1-478-565-11	SWITCH BLOCK, CONTROL (PS8700)
314	X-3954-505-1	PLATE ASSY, BLIND, D
315	3-090-657-01	COVER, EJECT FLEXIBLE
316	3-084-817-21	GRIP
317	1-861-882-21	FP-891 FLEXIBLE BOARD
318	3-091-628-01	FOOT, RUBBER
J901	1-818-356-11	DC-IN CONNECTOR (DC IN)
M901	1-787-130-11	MOTOR ASSY (EJECT)

Exploded view and parts list of MD BLOCK are not shown. Pages 5-10 and 5-11 are not shown.

5. REPAIR PARTS LIST

• EXCEPT J MODEL

to J MODEL

Checking supplied accessories.

Make sure that the following accessories are supplied with your camcorder.

Power cord (Main lead)(1) (AEP, EE, E: EXCEPT Saudi Arabia model) △ 1-769-608-11	AC power adaptor (1) (AC-L15A/L15B) △ 1-477-533-51	NP-FM50 battery pack (1) (not supplied)	A/V connecting cable (1.5m) (1) 1-823-156-13
Power cord (Main lead)(1) (AUS model) △ 1-827-945-11	 Lid Battery Case (3-083-973-01)		
Power cord (Main lead)(1)- (KR model) △ 1-776-985-11	Wireless Remote Commander (1) (RMT-835) 1-478-496-21	USB cable (1) 1-823-930-21	DVD-R (DMR30) (1) (not supplied)
Power cord (Main lead)(1) (UK, HK, E: Saudi Arabia model) △ 1-783-374-11		Cleaning cloth (1) 3-073-861-01	
Power cord (Main lead)(1) (US, CND model) △ 1-790-107-22	CD-ROM (SPVD-011 (I) USB Driver) (1) (US, CND model) 3-086-131-01	21-pin conversion connector (1) (AEP, UK, EE model) 1-770-783-21	Lens cap (1) X-3954-323-1
Power cord (Main lead)(1) (CH model) △ 1-782-476-13	CD-ROM (SPVD-011 USB Driver) (1) (EXCEPT US, CND model) 3-086-132-01		Shoulder strap (1) 2-021-016-01
Power cord (Main lead)(1) (JE model) △ 1-790-732-12			2-pin conversion adaptor (1) (JE model) 1-569-007-12

• Abbreviation

CND : Canadian model	KR : Korea model
EE : East European model	CH : Chinese model
HK : Hong Kong model	JE : Tourist model
AUS : Australian model	

Other accessories

3-089-913-11	MANUAL, INSTRUCTION (ENGLISH) (DVD201:US,CND,E,JE)
3-089-913-21	MANUAL, INSTRUCTION (FRENCH)(DVD201:CND)
3-089-913-31	MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) (DVD201:E,JE)
3-089-913-41	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (DVD201:E)
3-089-913-51	MANUAL, INSTRUCTION (KOREAN)(DVD201:KR,JE)
3-089-914-11	MANUAL, INSTRUCTION (ENGLISH) (DVD201E:AEP,UK,E,AUS,CH,JE)
3-089-914-21	MANUAL, INSTRUCTION (FRENCH)(DVD201E:AEP,E)
3-089-914-31	MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) (DVD201E:AEP)
3-089-914-41	MANUAL, INSTRUCTION (ITALIAN/GREEK) (DVD201E:AEP)










3-089-914-51	MANUAL, INSTRUCTION (GERMAN/DUTCH) (DVD201E:AEP)
3-089-914-61	MANUAL, INSTRUCTION (SWEDISH/RUSSIAN) (DVD201E:JE)
3-089-914-71	MANUAL, INSTRUCTION (ARABIC/PERSIAN) (DVD201E:E)
3-089-914-81	MANUAL, INSTRUCTION (TRADITIONAL CHINESE) (DVD201E:HK)
3-089-914-91	MANUAL, INSTRUCTION (SIMPLIFIED CHINESE) (DVD201E:E,CH,JE)

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5. REPAIR PARTS LIST

         • J MODEL
付属品

			 リモコン電池蓋 (3-083-973-01) 
電源コード (1) △ 1-790-732-12	AC アダプター (1) (AC-L15A/L15B) △ 1-477-533-51	リチャージャブル バッテリーパック (1) (NP-FM50) (供給せず)	ワイヤレスリモコン (1) (RMT-835) 1-478-496-11
			
AV接続ケーブル (1) 1-823-156-13	USBケーブル (1) 1-823-930-21	クリーニングクロス (1) 3-073-861-01	レンズキャップ (1) X-3954-323-1
			
8cm DVD-R DMR30 (1) (供給せず)	CD-ROM「SPVD-011 (I) USBドライバ」 (1) 3-086-131-01		
図面 番号	部品コード	部 品 名	
	3-089-913-01	取扱説明書	

△印の部品、または△印付の点線で囲まれた部品は、
安全性を維持するために、重要な部品です。
従って交換時は、必ず指定の部品を使用してください。

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
A-7112-892-A	CD-504 BOARD, COMPLETE	***** (IC5100 is not included in this complete board.)
< CAPACITOR >		
C5100	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C5101	1-113-987-11	TANTAL. CHIP 4.7uF 20% 25V
C5102	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5103	1-104-851-11	TANTAL. CHIP 10uF 20% 10V
C5104	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5105	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V
C5106	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C5108	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C5110	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5111	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5112	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C5113	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V
C5114	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
CN5100	1-766-336-21	CONNECTOR, FFC/FPC 6P
CN5101	1-784-423-21	FFC/CONNECTOR, FPC (ZIF) 39P
< FERRITE BEAD >		
FB5100	1-414-554-21	FERRITE, EMI (SMD) (1608)
FB5101	1-414-554-21	FERRITE, EMI (SMD) (1608)
FB5102	1-469-667-21	FERRITE, EMI (SMD) (1608)
FB5103	1-469-667-21	FERRITE, EMI (SMD) (1608)
< IC >		
IC5100	A-7112-341-A	CCD BLOCK ASSY (1M) (CCD IMAGER) (IC5100 is not included in the complete board of CD-504.)
IC5101	6-701-755-01	IC AD80017AJRURL
< COIL >		
L5100	1-469-528-91	INDUCTOR 100uH
L5101	1-469-525-91	INDUCTOR 10uH
< TRANSISTOR >		
Q5100	6-550-234-01	TRANSISTOR UNR32A300LS0
Q5101	8-729-055-21	TRANSISTOR 2SC5096-O/R (TE85L)
< RESISTOR >		
R5100	1-218-965-11	RES-CHIP 10K 5% 1/16W
R5101	1-218-990-11	SHORT CHIP 0
R5102	1-218-990-11	SHORT CHIP 0
R5103	1-218-966-11	RES-CHIP 12K 5% 1/16W
R5104	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R5105	1-218-953-11	RES-CHIP 1K 5% 1/16W
R5106	1-218-990-11	SHORT CHIP 0

Be sure to read "Precautions upon replacing CCD imager" on page 4-9 when changing the CCD imager.

CCDイメージャの交換時はサービスマニュアル 4-10 ページの "CCDイメージャ交換時の注意" を必ずお読みください。

Ref. No.	Part No.	Description
A-7112-895-A	FP-890 BOARD, COMPLETE	*****
< SWITCH >		
S001	1-786-179-31	SWITCH, PUSH (1KEY) (PANEL REVERSE)
A-7112-890-A JS-030 BOARD, COMPLETE		

< CONNECTOR >		
CN5301	1-779-327-11	CONNECTOR, FFC/FPC 6P
CN5302	1-794-057-21	PIN, CONNECTOR (PC BOARD) 2P
CN5303	1-764-680-21	CONNECTOR, FFC/FPC (ZIF) 8P
< DIODE >		
D5301	6-500-776-01	DIODE MAZW068H0LS0
D5302	6-500-240-01	DIODE DF5A6.8JE (TPLR3)
D5303	6-500-240-01	DIODE DF5A6.8JE (TPLR3)
D5304	6-500-776-01	DIODE MAZW068H0LS0
< RESISTOR >		
R5304	1-216-822-11	METAL CHIP 1.2K 5% 1/10W
R5305	1-216-823-11	METAL CHIP 1.5K 5% 1/10W
R5306	1-216-825-11	METAL CHIP 2.2K 5% 1/10W
R5307	1-216-828-11	METAL CHIP 3.9K 5% 1/10W
R5308	1-216-832-11	METAL CHIP 8.2K 5% 1/10W
R5309	1-216-838-11	METAL CHIP 27K 5% 1/10W
< SWITCH >		
S5301	1-771-138-82	SWITCH, KEY BOARD (BACK LIGHT)
S5302	1-771-138-82	SWITCH, KEY BOARD (DISPLAY BATT INFO)
S5303	1-771-138-82	SWITCH, KEY BOARD (VISUAL INDEX)
S5304	1-786-721-11	TACTILE SWITCH (JOY STICK)
A-7113-449-A LB-107 BOARD, COMPLETE		

< CAPACITOR >		
C301	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C302	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C303	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
< CONNECTOR >		
* CN301	1-816-648-21	FFC/FPC CONNECTOR (LIF) 20P
CN302	1-784-420-11	CONNECTOR, FFC/FPC (ZIF) 21P
< DIODE >		
D302	8-719-074-67	DIODE EDZ-TE61-5.6B
D303	6-500-875-01	DIODE E1S35-AW0C7-01-A3 (BACK LIGHT)
< RESISTOR >		
R302	1-216-839-11	METAL CHIP 33K 5% 1/10W
R303	1-218-971-11	RES-CHIP 33K 5% 1/16W
R304	1-218-975-11	RES-CHIP 68K 5% 1/16W
R305	1-218-989-11	RES-CHIP 1M 5% 1/16W

MA-429

PD-220

Ref. No.	Part No.	Description
	A-7112-893-A	MA-429 BOARD, COMPLETE ***** (J5501 is not included in this complete board.)
		< CAPACITOR >
C5501	1-117-919-11	TANTAL. CHIP 10uF 20% 6.3V
C5502	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
		< CONNECTOR >
CN5501	1-815-794-21	CONNECTOR (MULTIPLE) (VIDEO/AUDIO)
CN5502	1-779-327-11	CONNECTOR, FFC/FPC 6P
		< DIODE >
D5501	8-719-073-01	DIODE MA111-(K8).S0
D5502	8-719-064-07	DIODE SML-310LTT86 (TALLY)
D5503	6-500-512-01	DIODE CL-330IRS-X-TU (IR EMITTER)
		< IC >
IC5501	8-742-221-00	HYB IC SBX3055-01 (REMOTE SENSOR)
		< JACK >
J5501	1-691-737-41	JACK (SMALL TYPE)(MIC) (J5501 is not included in the complete board of MA-429.)
		< RESISTOR >
R5501	1-218-937-11	RES-CHIP 47 5% 1/16W
R5502	1-218-951-11	RES-CHIP 680 5% 1/16W
	A-7112-894-A	PD-220 BOARD, COMPLETE *****
		< CAPACITOR >
C603	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C604	1-125-839-91	TANTAL. CHIP 47uF 20% 6.3V
C606	1-100-506-91	CERAMIC CHIP 1uF 20% 6.3V
C607	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C608	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C609	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C610	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C612	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C614	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C615	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C616	1-164-943-11	CERAMIC CHIP 0.01uF 10% 16V
C618	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V
C622	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C623	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C624	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C626	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C627	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C631	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C632	1-100-786-91	TANTAL. CHIP 22uF 20% 6.3V
C633	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C643	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V
C645	1-100-671-11	CERAMIC CHIP 4.7uF 20% 25V

Ref. No.	Part No.	Description
		< CONNECTOR >
CN601	1-816-179-11	CONNECTOR, FFC/FPC (ZIF) 22P
CN602	1-766-336-21	CONNECTOR, FFC/FPC 6P
CN605	1-785-905-11	CONNECTOR, FFC/FPC (ZIF) 24P
CN606	1-691-344-11	CONNECTOR, FFC/FPC (ZIF) 6P
		< DIODE >
D601	8-719-073-01	DIODE MA111-(K8).S0
D602	8-719-074-67	DIODE EDZ-TE61-5.6B
D603	8-719-056-85	DIODE UDZ-TE-17-8.2B
D604	8-719-056-85	DIODE UDZ-TE-17-8.2B
		< FERRITE BEAD >
FB601	1-414-760-21	FERRITE, EMI (SMD) (1608)
		< IC >
IC601	8-759-693-13	IC NJM12904V (TE2)
IC602	8-752-109-72	IC CXM3006R
		< COIL >
L601	1-469-570-11	INDUCTOR 10uH
L602	1-469-570-11	INDUCTOR 10uH
L603	1-469-570-11	INDUCTOR 10uH
		< TRANSISTOR >
Q603	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q604	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q605	6-550-237-01	TRANSISTOR 2SC5658T2LQ/R
Q606	8-729-420-24	TRANSISTOR 2SB1218A-QRS
Q607	8-729-420-24	TRANSISTOR 2SB1218A-QRS
Q608	6-550-119-01	TRANSISTOR DTC144EMT2L
Q609	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q610	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
		< RESISTOR >
R603	1-216-864-11	SHORT CHIP 0
R604	1-216-864-11	SHORT CHIP 0
R605	1-218-965-11	RES-CHIP 10K 5% 1/16W
R606	1-208-943-11	METAL CHIP 220K 0.5% 1/16W
R607	1-218-989-11	RES-CHIP 1M 5% 1/16W
R608	1-208-927-11	METAL CHIP 47K 0.5% 1/16W
R609	1-218-975-11	RES-CHIP 68K 5% 1/16W
R610	1-218-949-11	RES-CHIP 470 5% 1/16W
R611	1-218-977-11	RES-CHIP 100K 5% 1/16W
R613	1-220-206-11	RES-CHIP 91K 5% 1/16W
R614	1-208-707-11	METAL CHIP 10K 0.5% 1/16W
R615	1-218-961-11	RES-CHIP 4.7K 5% 1/16W
R616	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R617	1-218-953-11	RES-CHIP 1K 5% 1/16W
R619	1-208-647-11	METAL CHIP 33 0.5% 1/16W
R620	1-218-969-11	RES-CHIP 22K 5% 1/16W
R621	1-218-990-11	SHORT CHIP 0
R622	1-218-990-11	SHORT CHIP 0
R623	1-208-647-11	METAL CHIP 33 0.5% 1/16W
R624	1-218-973-11	RES-CHIP 47K 5% 1/16W

DCR-DVD201/DVD201E

PD-220	SE-143	MD-104	VC-354
--------	--------	--------	--------

Ref. No.	Part No.	Description			
R625	1-218-963-11	RES-CHIP	6.8K	5%	1/16W
R627	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R628	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R633	1-218-990-11	SHORT CHIP	0		
R634	1-218-989-11	RES-CHIP	1M	5%	1/16W
R635	1-218-990-11	SHORT CHIP	0		
R636	1-218-953-11	RES-CHIP	1K	5%	1/16W
R637	1-218-978-11	RES-CHIP	120K	5%	1/16W
R640	1-218-990-11	SHORT CHIP	0		
R641	1-218-990-11	SHORT CHIP	0		
R642	1-218-973-11	RES-CHIP	47K	5%	1/16W
R643	1-218-973-11	RES-CHIP	47K	5%	1/16W
R644	1-218-990-11	SHORT CHIP	0		
< COMPOSITION CIRCUIT BLOCK >					
RB601	1-234-369-21	RES, NETWORK 10X4 (1005)			
A-7112-889-A SE-143 BOARD, COMPLETE					

< CONNECTOR >					
CN5206	1-766-336-21	CONNECTOR, FFC/FPC 6P			
< FERRITE BEAD >					
FB5501	1-469-179-21	INDUCTOR, FERRITE BEAD			
FB5502	1-469-179-21	INDUCTOR, FERRITE BEAD			
FB5503	1-469-179-21	INDUCTOR, FERRITE BEAD			
FB5504	1-469-179-21	INDUCTOR, FERRITE BEAD			
< RESISTOR >					
R5501	1-216-864-11	SHORT CHIP	0		
R5507	1-216-864-11	SHORT CHIP	0		
< SENSOR >					
SE5501	1-476-807-31	SENSOR, ANGULAR VELOCITY (YAW)			
SE5502	1-476-807-41	SENSOR, ANGULAR VELOCITY (PITCH)			

Ref. No.	Part No.	Description
		MD-104 BOARD, COMPLETE

		VC-354 BOARD, COMPLETE

Electrical parts list of the MD-104 board and VC-354 board are not shown. Pages from 5-17 to 5-30 are not shown.		