


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-1. OVERALL ASSEMBLY

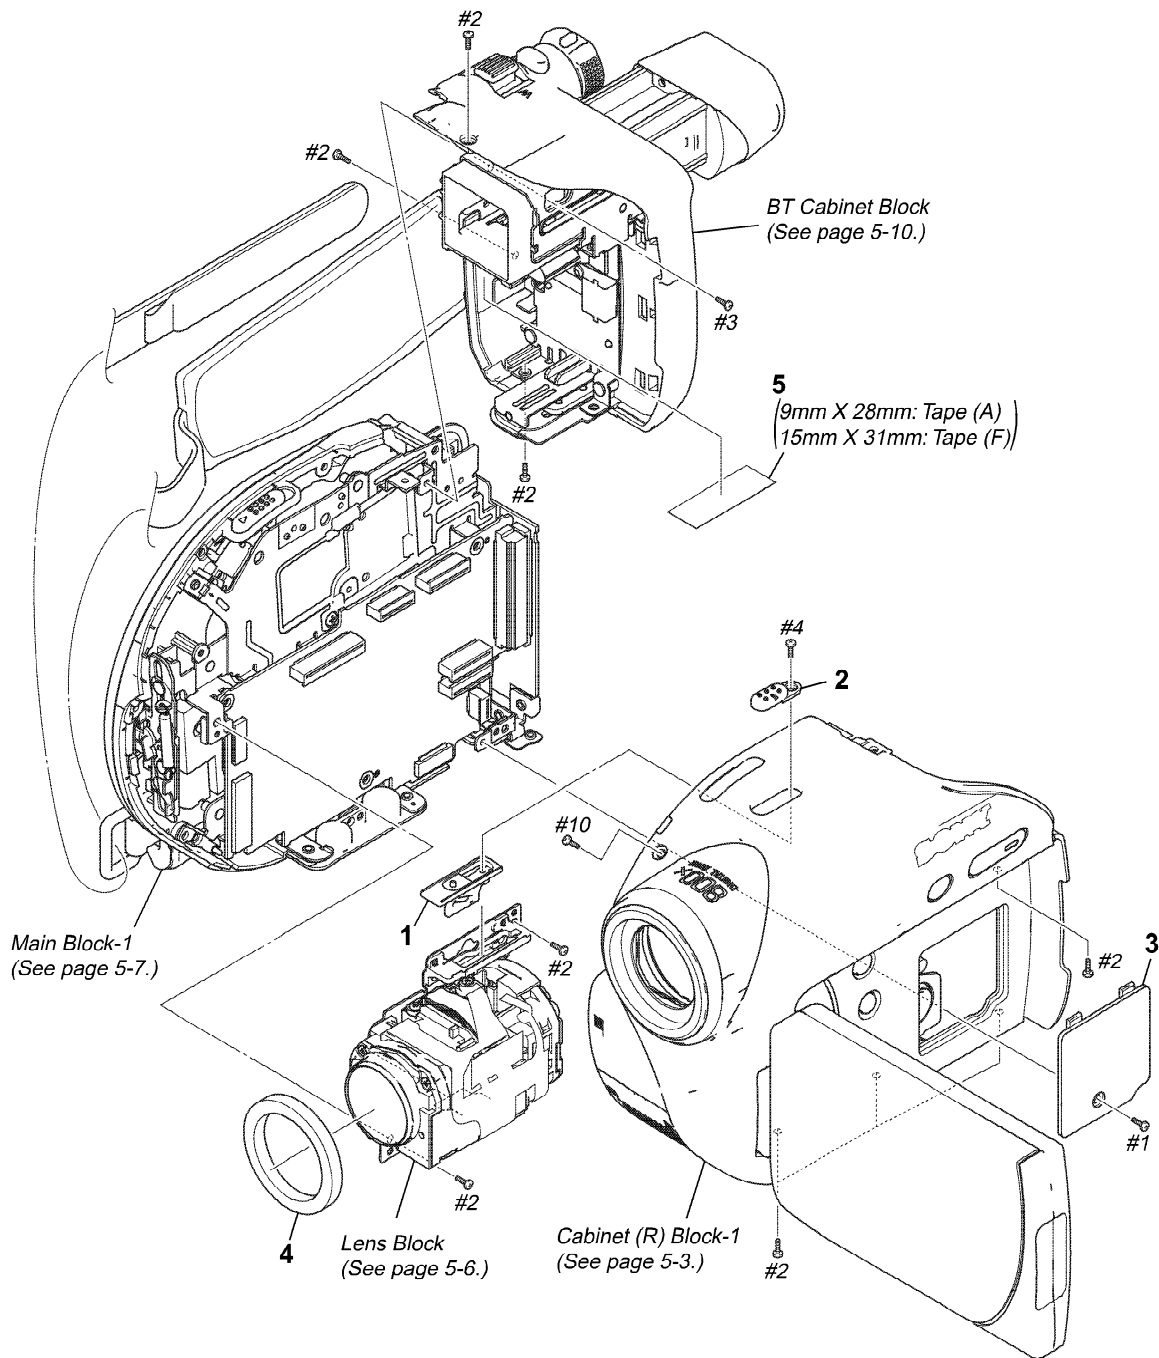

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
* 1	2-638-623-01	BASE, KNOB (193), NS
2	2-654-824-01	KNOB (UPPER), NS
3	2-638-854-11	LID, CPC (191) (DVD205/DVD205E/DVD304E/DVD705/DVD705E)
3	2-654-856-01	LID, CPC (193) (DVD305/DVD305E/DVD755/DVD755E)
* 4	2-669-908-01	CUSHION, LENS MUFFLE
5	3-941-343-21	TAPE (A) (DVD205/DVD205E/DVD705/ DVD705E)

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
5	3-075-231-01	TAPE (F) (DVD304E/DVD305/DVD305E/ DVD755/DVD755E)
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#4	3-348-998-81	SCREW (M1.4) (Dark Silver)
#10	2-599-475-31	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. CABINET (R) BLOCK-1

ns: not supplied

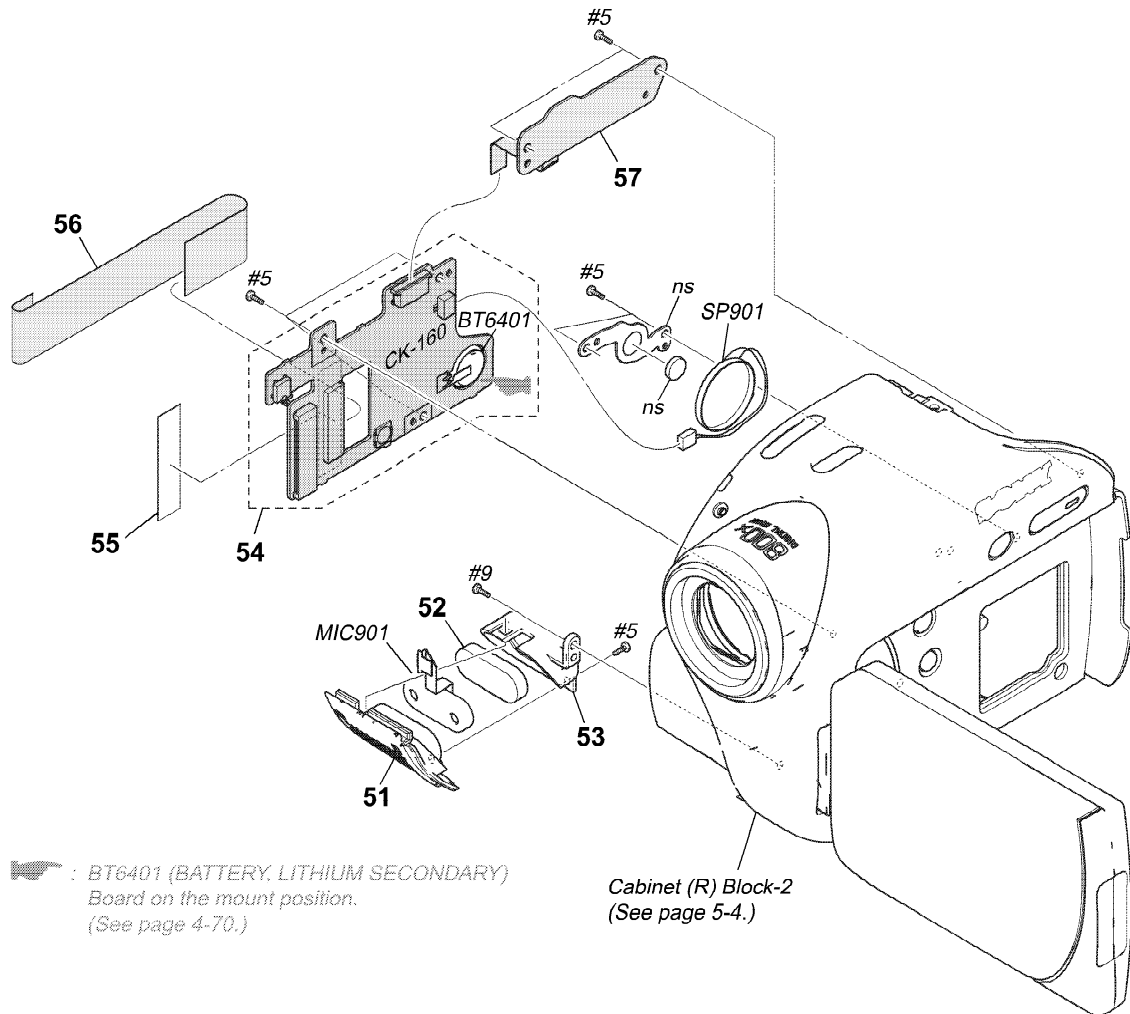

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

- Refer to page 5-1 for mark $\triangle$.

Ref. No.	Part No.	Description
* 51	2-638-760-01	GRILLE, MICROPHONE (DVD205/DVD205E/DVD705/DVD705E)
* 51	2-638-760-11	GRILLE, MICROPHONE (DVD304E/DVD305/DVD305E/DVD755/DVD755E)
* 52	2-667-297-01	CUSHION, MUFFLE
* 53	2-638-761-01	HOLDER, MIC
54	A-1166-571-A	CK-160 BOARD, COMPLETE
55	3-941-343-21	TAPE (A)
* 56	1-867-587-11	FP-343 FLEXIBLE BOARD


Ref. No.	Part No.	Description
57	A-1166-575-A	FP-377 FLEXIBLE BOARD, COMPLETE
$\triangle$ BT6401	1-528-999-61	BATTERY, LITHIUM SECONDARY
MIC901	1-542-660-11	MICROPHONE UNIT
SP901	1-825-260-23	LOUD SPEAKER (1.6CM)
#5	3-080-204-01	SCREW, TAPPING, P2 (Silver)
#9	3-078-890-21	SCREW, TAPPING (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. CABINET (R) BLOCK-2

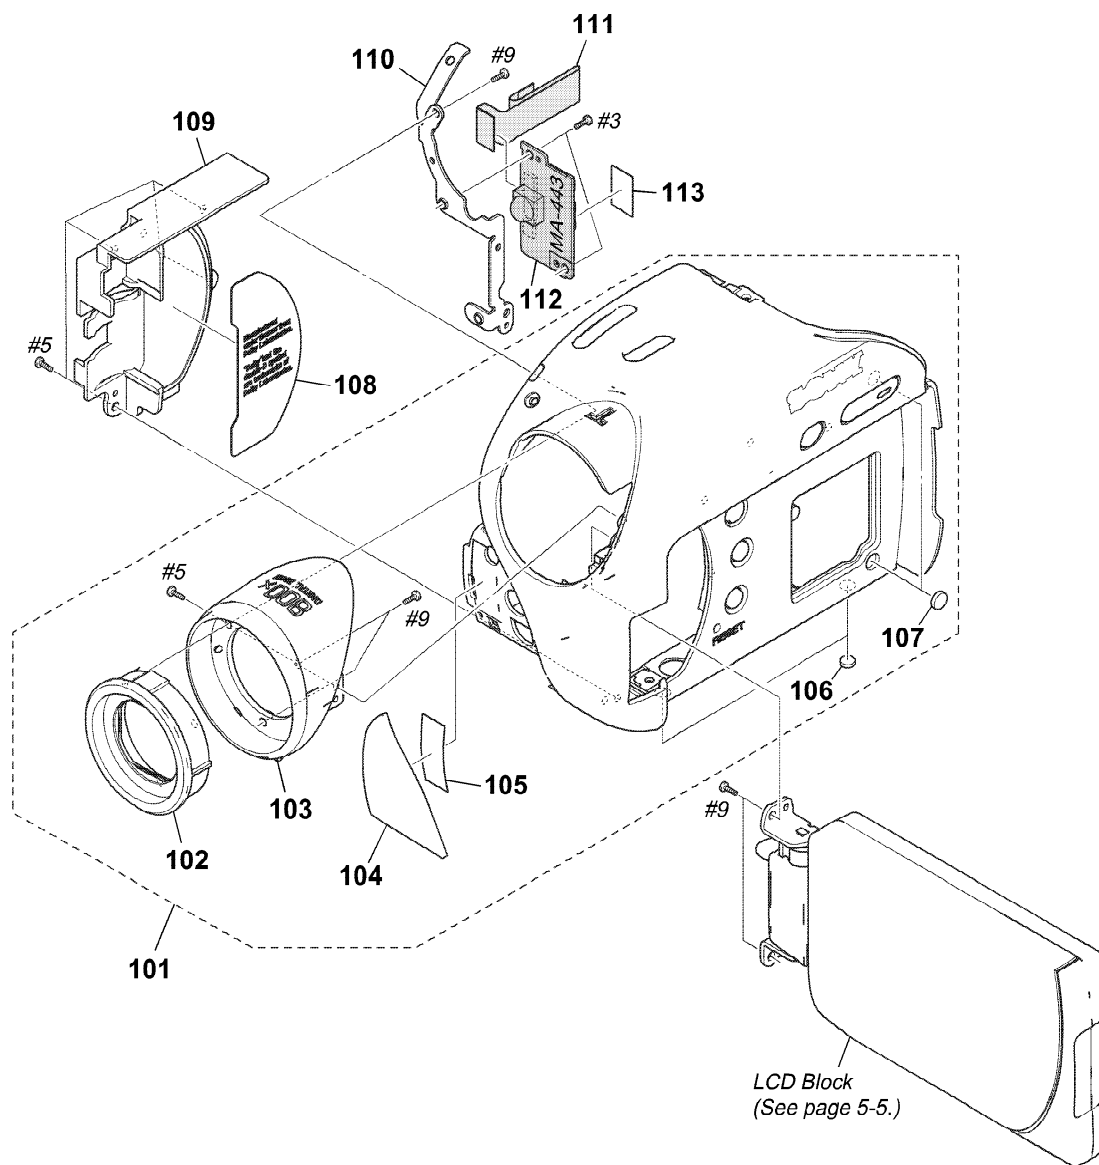

Ref. No.	Part No.	Description
101	X-2108-343-1	CABINET (R) (193) ASSY (DVD304E/DVD305/ DVD305E/DVD755/DVD755E)
101	X-2108-344-1	CABINET (R) (192) ASSY (DVD205/DVD205E/DVD705/DVD705E)
102	2-638-773-11	SCREW, FILTER (3)
103	2-638-772-01	FRONT, RING
104	2-638-770-01	WINDOW (191), REMOTE CONTROL (DVD205/DVD205E/DVD705/DVD705E)
104	2-667-294-01	WINDOW (193), REMOTE CONTROL (DVD304E/ DVD305/DVD305E/DVD755/DVD755E)
105	2-667-295-01	SHEET, REMOTE CONTROL WINDOW
106	2-589-376-01	FOOT (395), RUBBER
107	3-090-599-01	CUSHION, PANEL
* 108	2-638-769-11	SHEET, GUARD

Ref. No.	Part No.	Description
* 109	2-638-759-11	BLIND, HINGE
* 110	2-638-762-01	FRAME, R
* 111	1-867-585-11	FP-341 FLEXIBLE BOARD
112	A-1166-574-A	MA-443 BOARD, COMPLETE (DVD304E/ DVD305/DVD305E/DVD755/DVD755E)
112	A-1166-573-A	MA-443 BOARD, COMPLETE (DVD205/DVD205E/DVD705/DVD705E)
* 113	2-667-173-01	SHEET, GYRO LIGHT INTERCEPTION
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#9	3-078-890-21	SCREW, TAPPING (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. LCD BLOCK

ns: not supplied

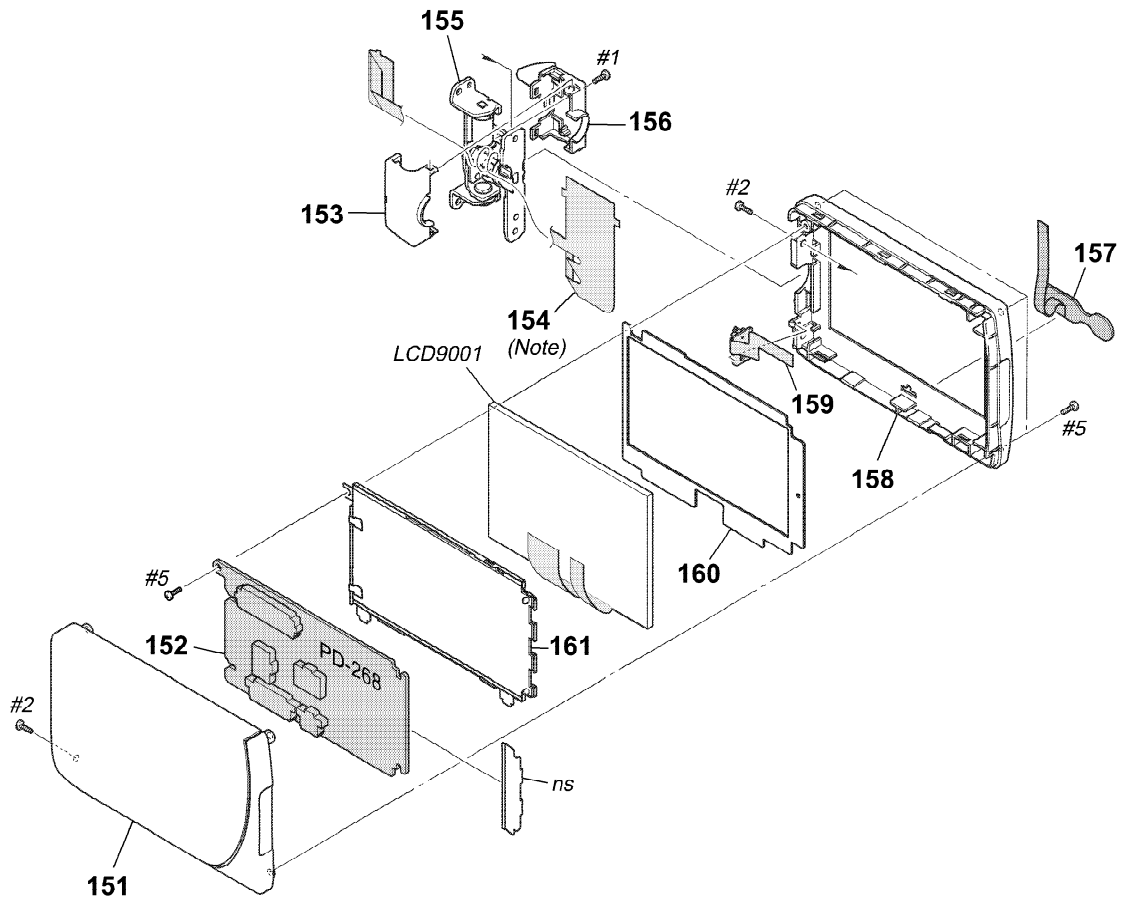

Note: Be sure read "HELP" when you install the FP-340 flexible board.


Ref. No.	Part No.	Description
151	2-638-775-01	CABINET (C (193)), P (DVD305/DVD305E)
151	2-638-775-11	CABINET (C (193)), P (DVD205/DVD205E)
151	2-638-775-21	CABINET (C (193)), P (DVD755/DVD755E)
151	2-638-775-31	CABINET (C (193)), P (DVD705/DVD705E)
151	2-638-775-41	CABINET (C (193)), P (DVD304E)
152	A-1166-591-A	PD-268 BOARD, COMPLETE
153	2-638-778-11	COVER (C), HINGE (DVD304E/DVD305/ DVD305E/DVD755/DVD755E)
153	2-638-778-21	COVER (C), HINGE (DVD205/DVD205E/DVD705/DVD705E)
* 154	1-867-584-11	FP-340 FLEXIBLE BOARD
155	X-2067-431-1	HINGE ASSY

Ref. No.	Part No.	Description
156	2-638-779-01	COVER (M), HINGE
157	1-479-063-11	KEY BLOCK, CONTROL (SB9000)
158	X-2067-402-1	CABINET (M (193)) ASSY, P
159	A-1166-592-A	FP-346 FLEXIBLE BOARD, COMPLETE
* 160	2-638-777-01	CUSHION (193), PANEL
161	A-1153-904-A	LIGHT GUIDE BLOCK (2.7)
LCD9001	A-1083-763-A	TP BLOCK ASSY 27STGU
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. LENS BLOCK

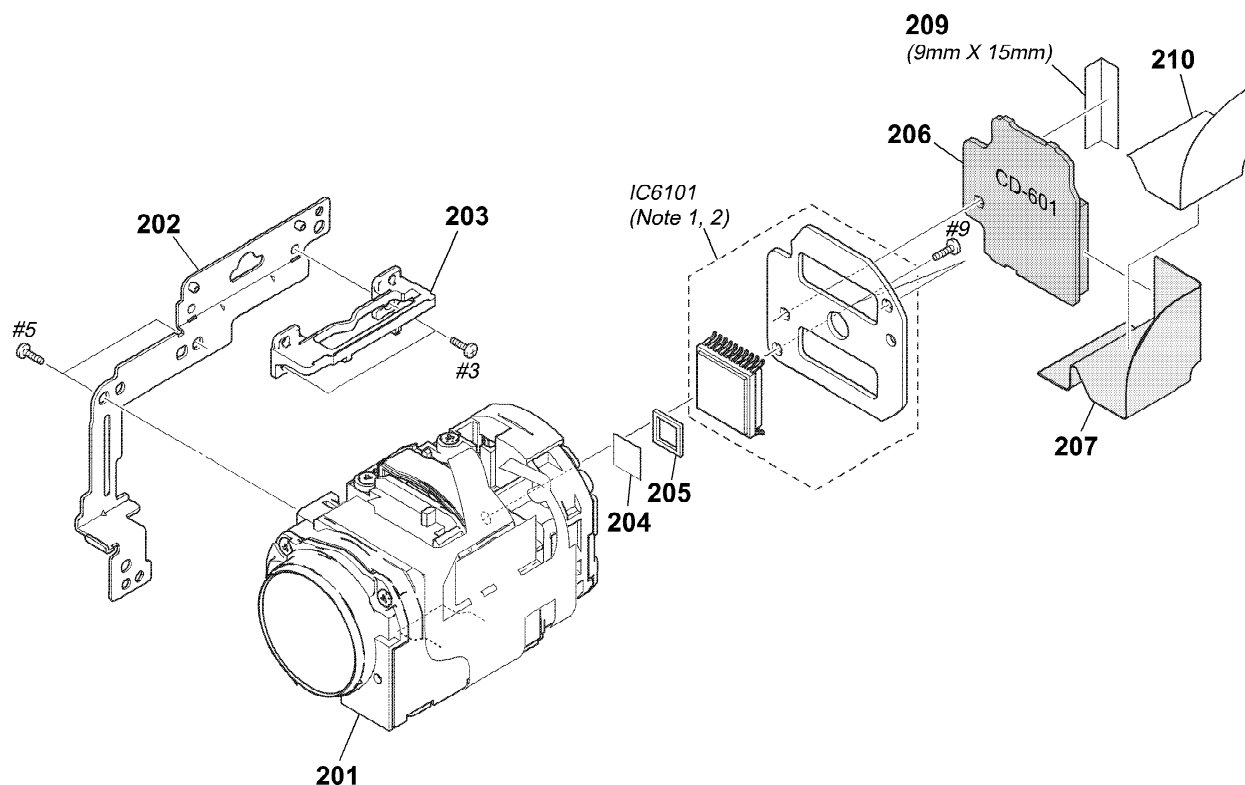

CAUTION :

For the part of 5 : TAPE (W) (3-083-794-01), cut WOVEN (T0.25), FABRIC NON (3-076-631-01) into the desired length and use it.

Note 1: IC6101 is not included in CD-601 complete board.

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-1 when changing the imager.

Ref. No.	Part No.	Description
201	8-848-805-01	LSV-1080B
202	2-638-613-01	FRAME, LENS
* 203	2-638-621-01	PLATE, NS CLICK
204	1-788-241-11	OPTICAL FILTER BLOCK
205	3-088-645-01	RUBBER (Z), SEAL
206	A-1166-586-A	CD-601 BOARD, COMPLETE
* 207	1-867-578-11	FP-334 FLEXIBLE BOARD
* 208	2-657-558-01	SHEET (CD), RADIATION


Ref. No.	Part No.	Description
209	CAUTION	TAPE (W)
* 210	2-657-558-01	SHEET (CD), RADIATION
IC6101	A-1116-777-A	CCD BLOCK ASSY (1M) (CCD IMAGER) (Note 1, 2)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#9	3-078-890-21	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. MAIN BLOCK-1

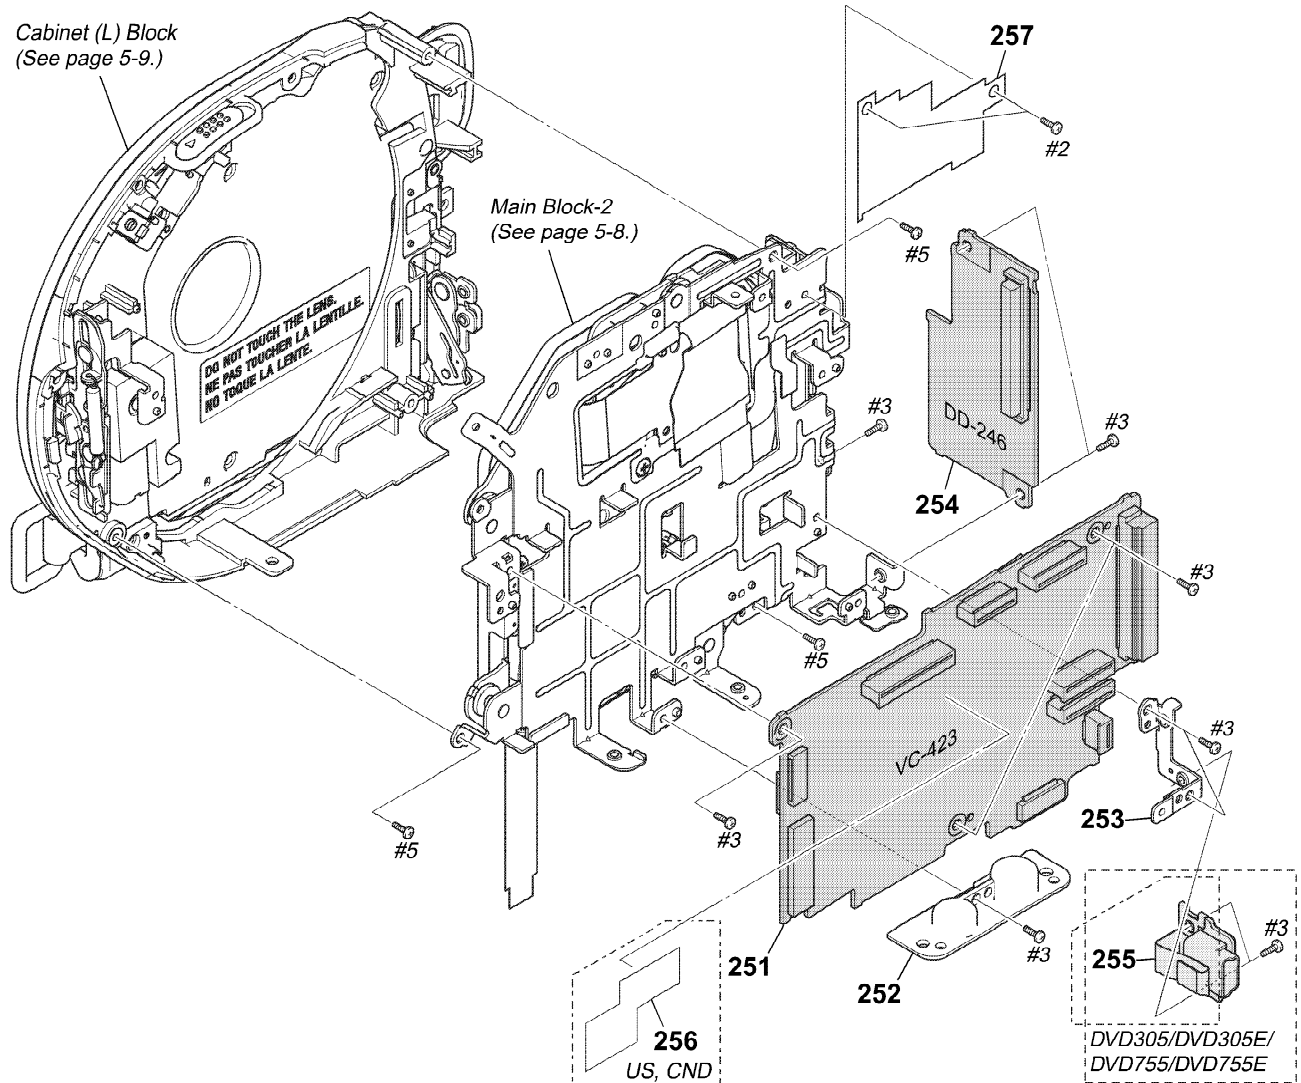

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
251	A-1168-213-A	VC-423 BOARD, COMPLETE (SERVICE) (DVD305/DVD755)	252	2-654-826-01	SCREW, TRIPOD
251	A-1175-870-A	VC-423 BOARD, COMPLETE (SERVICE) (DVD305E/DVD755E)	253	2-638-841-01	FRAME, USB
251	A-1175-871-A	VC-423 BOARD, COMPLETE (SERVICE) (DVD304E)	254	A-1168-279-A	DD-246 BOARD, COMPLETE (SERVICE)
251	A-1168-211-A	VC-423 BOARD, COMPLETE (SERVICE) (DVD205/DVD705)	* 255	1-867-583-21	FP-339 FLEXIBLE BOARD (DVD305/DVD305E/DVD755/DVD755E)
251	A-1168-212-A	VC-423 BOARD, COMPLETE (SERVICE) (DVD205E/DVD705E)	* 256	2-669-717-01	LABEL (193), CAUTION (US, CND)
			* 257	2-665-272-01	RETAINER, OP FLEXIBLE
			#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
			#5	3-080-204-01	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. MAIN BLOCK-2

ns: not supplied

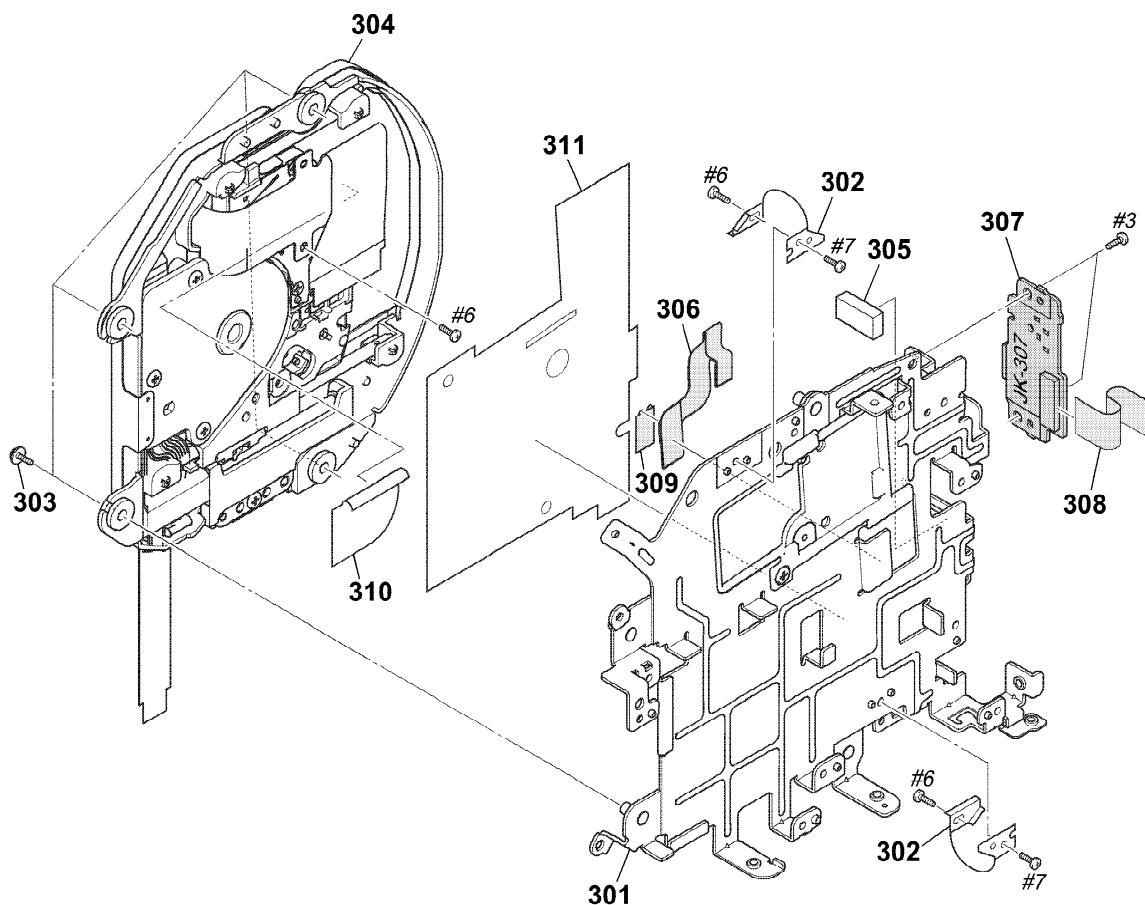

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 301	X-2067-429-1	FRAME ASSY, MD
302	2-595-197-01	SPRING, FK
303	2-586-337-01	SCREW, MD
△ 304	A-1172-749-A	DDX-C1002 (SERVICE)
305	2-596-924-01	GASKET (MD)
* 306	1-867-586-11	FP-342 FLEXIBLE BOARD
307	A-1166-564-A	JK-307 BOARD, COMPLETE (DVD304E/ DVD305/DVD305E/DVD755/DVD755E)


Ref. No.	Part No.	Description
307	A-1166-563-A	JK-307 BOARD, COMPLETE (DVD205/DVD205E/DVD705/DVD705E)
* 308	1-867-582-11	FP-338 FLEXIBLE BOARD
309	1-677-049-11	FP-228 FLEXIBLE BOARD
* 310	2-677-448-01	SHEET (OP), PADIATION
* 311	2-638-781-01	COVER SHEET (VC)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#6	2-598-474-01	SCREW (M1.4), SPECIAL HEAD (Silver)
#7	7-627-552-18	SCREW, PRECISION +P 1.7X1.6 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-8. CABINET (L) BLOCK

ns: not supplied

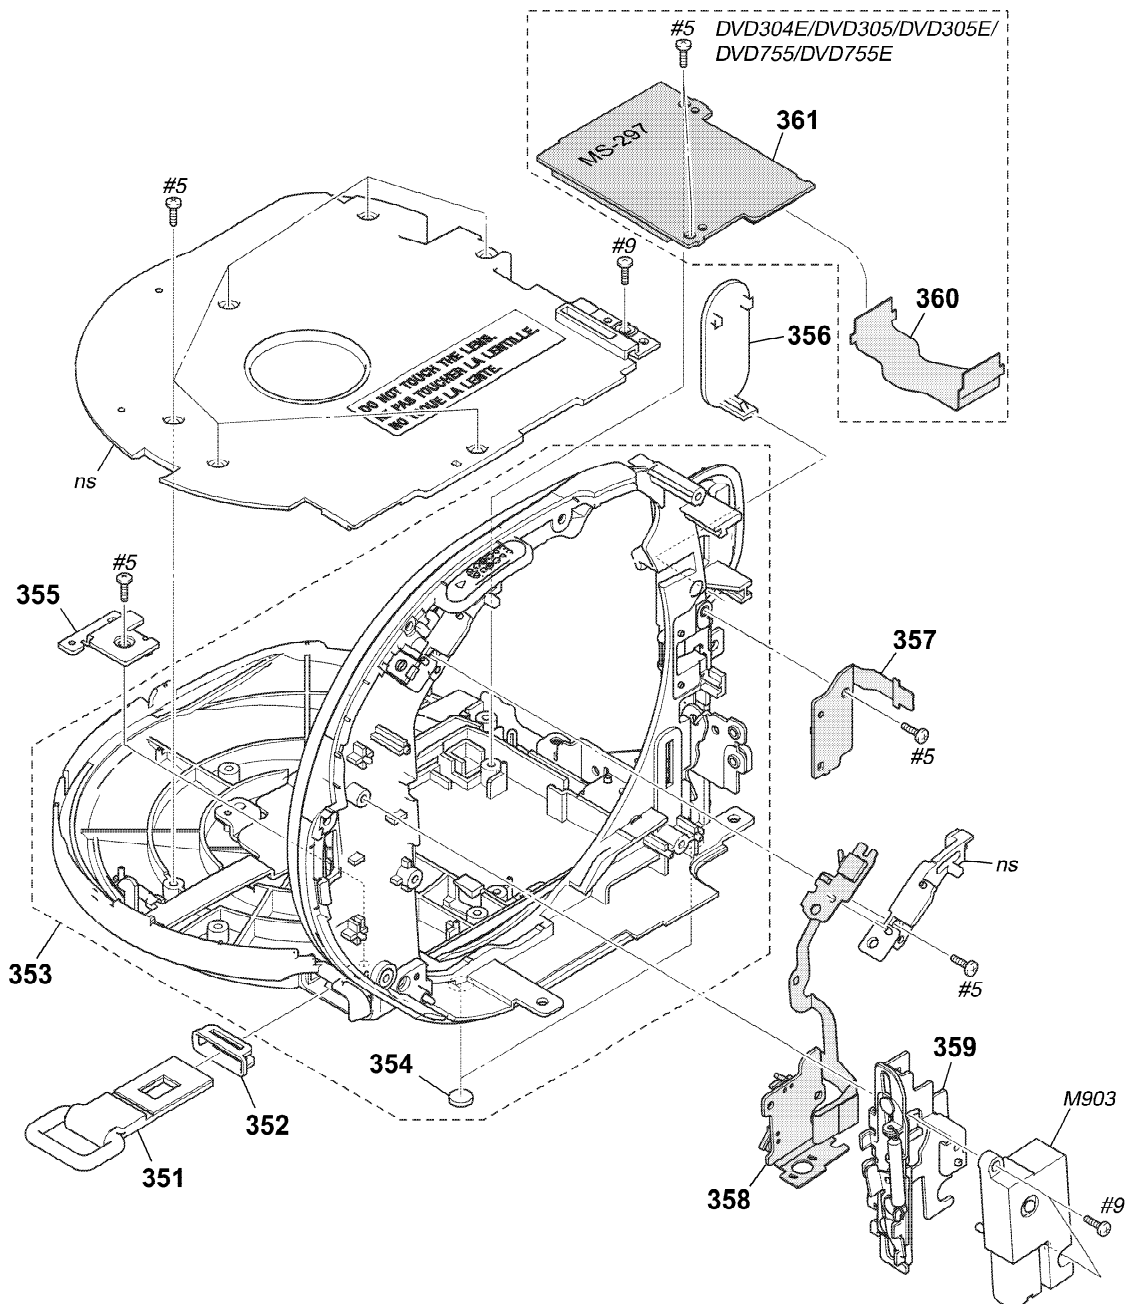


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
351	2-664-929-01	BELT (FRONT), GRIP	358	A-1166-569-A	FP-344 FLEXIBLE BOARD, COMPLETE
352	2-659-753-01	GUIDE (FRONT), BELT	359	X-2067-404-1	FRAME ASSY, EJECT
353	X-2067-403-1	CABINET (L) (191) ASSY (DVD205/DVD205E/DVD705/DVD705E)	* 360	1-867-589-11	FP-345 FLEXIBLE BOARD (DVD304E/DVD305/ DVD305E/DVD755/DVD755E)
353	X-2102-549-1	CABINET (L) (193) ASSY (DVD304E/DVD305/ DVD305E/DVD755/DVD755E)	361	A-1166-587-A	MS-297 BOARD, COMPLETE (DVD304E/DVD305/DVD305E/DVD755/DVD755E)
354	2-589-376-01	FOOT (395), RUBBER	M903	1-787-237-11	MOTOR UNIT (GEARD MOTOR)
355	2-638-793-01	BRACKET (FRONT), BELT	#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
356	2-638-790-01	COVER, JACK	#9	3-078-890-21	SCREW, TAPPING (Silver)
357	A-1166-568-A	FP-347 FLEXIBLE BOARD, COMPLETE			

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-9. BT CABINET BLOCK

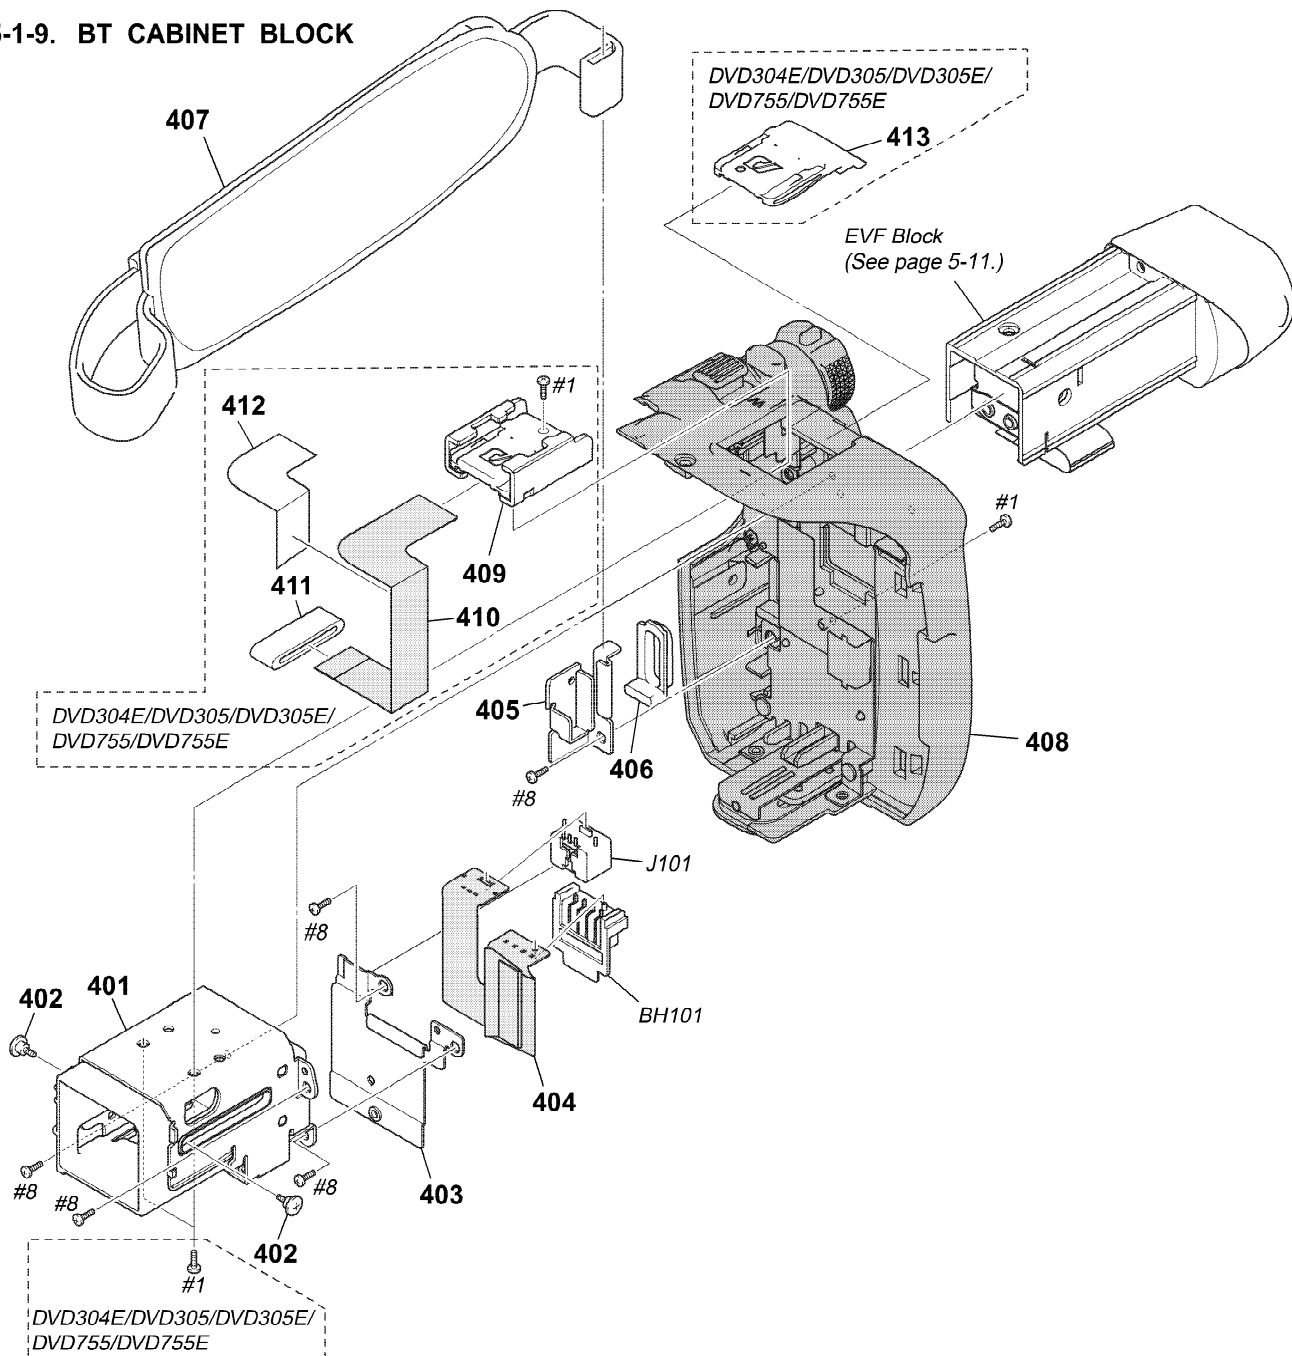

Ref. No.	Part No.	Description
----------	----------	-------------

401	X-2067-430-1	BASE ASSY, SLIDE
402	2-639-225-01	SCREW (M1.7X4.5)
* 403	2-638-829-01	FRAME, BT PANEL (UPPER)
* 404	1-867-581-11	FP-337 FLEXIBLE BOARD
405	2-638-830-01	FRAME, GRIP BELT (BACK)
406	2-667-298-01	GUIDE (REAR), GRIP BELT
407	2-664-928-01	BELT, GRIP
408	1-479-434-11	SWITCH BLOCK, CONTROL (PS19100) (DVD205/DVD205E/DVD705/DVD705E)
408	1-479-434-21	SWITCH BLOCK, CONTROL (PS19100) (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)
409	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE) (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)


Ref. No.	Part No.	Description
----------	----------	-------------

* 410	1-867-579-11	FP-335 FLEXIBLE BOARD (DVD304E/DVD305/ DVD305E/DVD755/DVD755E)
* 411	1-400-857-11	CORE, FERRITE (E04FD110504) (DVD304E/ DVD305/DVD305E/DVD755/DVD755E)
412	2-674-559-01	SHEET (HS), RADIATION (DVD304E/ DVD305/DVD305E/DVD755/DVD755E)
413	2-638-842-01	COVER, SHOE (DVD304E/DVD305/DVD305E/ DVD755/DVD755E)
BH101	1-780-064-21	BATTERY TERMINAL BOARD
J101	1-815-792-11	CONNECTOR, DC-IN (7.2V)
#1	2-635-562-11	SCREW (M1.7) (Black)
#8	3-078-890-01	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-10. EVF BLOCK

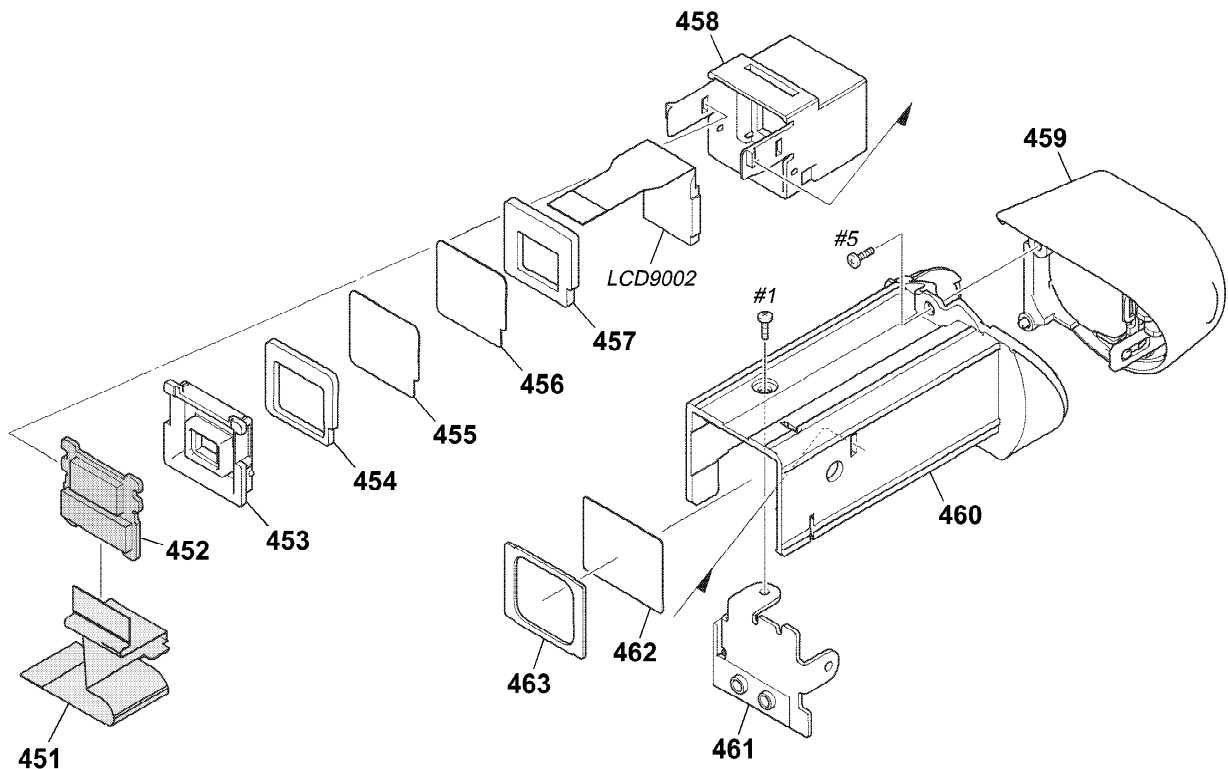

Ref. No.	Part No.	Description
* 451	1-867-580-11	FP-336 FLEXIBLE BOARD
452	A-1166-594-A	LB-120 BOARD, COMPLETE
* 453	2-638-820-01	GUIDE, LAMP
* 454	2-638-819-01	CUSHION, LCD
* 455	2-638-818-01	ILLUMINATOR
* 456	2-638-816-01	PLATE (TFT), DEFLECTION
* 457	2-638-815-01	SPACER, LCD
458	2-638-814-01	CABINET, INNER

Ref. No.	Part No.	Description
459	X-2067-424-1	EYE CUP ASSY
460	X-2067-425-1	CABINET ASSY, VF
461	X-2067-426-1	SPRING ASSY, SLIDE
* 462	2-638-813-01	PLATE (CF), DEFLECTION
* 463	2-654-871-01	CUSHION (CF)
LCD9002 8-753-245-09 LCX059CKK-1		
#1	2-635-562-11	SCREW (M1.7) (Black)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1166-586-A	CD-601 BOARD, COMPLETE ***** (IC6101 is not included in this complete board.)
		< CAPACITOR >
C6102	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V
C6103	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C6105	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V
C6106	1-104-851-11	TANTAL. CHIP 10uF 20% 10V
C6107	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6116	1-113-987-11	TANTAL. CHIP 4.7uF 20% 25V
C6118	1-127-573-11	CERAMIC CHIP 1uF 10% 16V
		< CONNECTOR >
CN6101	1-817-544-51	CONNECTOR, FPC (ZIF) 39P
		< FERRITE BEAD >
FB6101	1-469-082-21	INDUCTOR, FERRITE BEAD (1005)
		< IC >
IC6101	A-1116-777-A	CCD BLOCK ASSY (1M) (CCD IMAGER) (Note)
		< COIL >
L6102	1-400-317-21	INDUCTOR 100uH
		< TRANSISTOR >
Q6101	6-550-234-01	TRANSISTOR UNR32A300LS0
Q6102	8-729-055-21	TRANSISTOR 2SC5096-O/R (TE85L)
		< RESISTOR >
R6103	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R6104	1-218-990-81	SHORT CHIP 0
R6105	1-218-966-11	RES-CHIP 12K 5% 1/16W
R6106	1-218-965-11	RES-CHIP 10K 5% 1/16W
R6107	1-218-953-11	RES-CHIP 1K 5% 1/16W
R6114	1-218-990-81	SHORT CHIP 0
R6115	1-218-990-81	SHORT CHIP 0
		< BATTERY >
△ BT6401	1-528-999-61	BATTERY, LITHIUM SECONDARY
		< CONNECTOR >
* CN6401	1-817-283-51	CONNECTOR, FPC (ZIF) 51P
CN6402	1-766-338-51	CONNECTOR, FFC/FPC 8P
CN6403	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
* CN6404	1-818-073-51	CONNECTOR, FFC/FPC (ZIF) 36P
		< DIODE >
D6401	8-719-083-91	DIODE EDZ TE61 6.8B
D6403	6-500-776-01	DIODE MAZW068H0LS0
D6404	8-719-083-91	DIODE EDZ TE61 6.8B

Ref. No.	Part No.	Description
D6405	8-719-083-91	DIODE EDZ TE61 6.8B
		< RESISTOR >
R6402	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R6403	1-218-960-11	RES-CHIP 3.9K 5% 1/16W
R6404	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R6405	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
		< SWITCH >
S6401	1-771-138-82	SWITCH, KEY BOARD (WIDE SELECT)
S6402	1-771-138-82	SWITCH, KEY BOARD (RESET)
S6403	1-771-138-82	SWITCH, KEY BOARD (DISP/BATT INFO)
S6404	1-786-179-11	SWITCH, PUSH (1KEY) (PANEL OPEN/CLOSE)
S6405	1-771-138-82	SWITCH, KEY BOARD (EASY)

Electrical parts list of DD-246 board is not shown.
Pages 5-13 to 5-14 are not shown.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

• Refer to page 5-1 for mark △.

FP-344

FP-346

FP-347

FP-377

JK-307

LB-120

MA-443

Ref. No.	Part No.	Description
	A-1166-569-A	FP-344 FLEXIBLE BOARD, COMPLETE *****
		< DIODE >
D3441	8-719-064-07	DIODE SML-310LTT86 (ACCESS)
		< SWITCH >
S3441	1-786-707-11	SWITCH, DETECTION (SMD) (OPEN)
S3442	1-786-707-11	SWITCH, DETECTION (SMD) (LID OPEN)
S3443	1-786-707-11	SWITCH, DETECTION (SMD) (EJECT DET)
	A-1166-592-A	FP-346 FLEXIBLE BOARD, COMPLETE *****
		< SWITCH >
S3461	1-786-180-31	SWITCH, PUSH (1KEY) (PANEL REVERSE)
	A-1166-568-A	FP-347 FLEXIBLE BOARD, COMPLETE *****
		< SWITCH >
S3471	1-786-148-11	SWITCH, PUSH (1 KEY) (LID OEPN R)
	A-1166-575-A	FP-377 FLEXIBLE BOARD, COMPLETE *****
		< DIODE >
D3772	8-719-083-91	DIODE EDZ TE61 6.8B
		< SWITCH >
S3771	1-771-138-82	SWITCH, KEY BOARD (PLAY/EDIT)
S3773	1-771-138-82	SWITCH, KEY BOARD (BACK LIGHT)
	A-1166-563-A	JK-307 BOARD, COMPLETE (DVD205/DVD205E/DVD705/DVD705E)
	A-1166-564-A	JK-307 BOARD, COMPLETE (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)

		< CONNECTOR >
CN6201	1-815-794-21	CONNECTOR (MULTIPLE) (A/V OUT)
* CN6203	1-816-646-51	FFC/FPC CONNECTOR (LIF) 16P
		< DIODE >
D6201	8-719-083-91	DIODE EDZ TE61 6.8B (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)
D6202	8-719-083-91	DIODE EDZ TE61 6.8B (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)
		< FERRITE BEAD >
FB6201	1-400-833-21	SMD EMI FERRITE
FB6202	1-400-833-21	SMD EMI FERRITE
FB6203	1-400-833-21	SMD EMI FERRITE

Ref. No.	Part No.	Description
FB6204	1-400-833-21	SMD EMI FERRITE
FB6205	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB6206	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB6207	1-400-619-11	BEAD, FERRITE (CHIP) (1608)
		< JACK >
J6201	1-793-995-21	JACK, SUPER SMALL TYPE (LANC) (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)
		< RESISTOR >
R6202	1-218-949-11	RES-CHIP 470 5% 1/16W
R6203	1-218-990-81	SHORT CHIP 0 (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)
		< VARISTOR >
VD6202	1-803-974-21	VARISTOR, CHIP (1608)
VD6203	1-803-974-21	VARISTOR, CHIP (1608)
VD6205	1-803-974-21	VARISTOR, CHIP (1608)
	A-1166-594-A	LB-120 BOARD, COMPLETE *****
		< CAPACITOR >
C301	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C302	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C303	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
		< CONNECTOR >
* CN301	1-816-648-51	FFC/FPC CONNECTOR (LIF) 20P
* CN302	1-817-560-51	CONNECTOR, FPC (ZIP) 21P
		< DIODE >
D301	8-719-074-67	DIODE EDZ-TE61-5.6B
* D302	6-501-325-01	DIODE NESW007T-T017 (BACKLIGHT)
		< RESISTOR >
R301	1-218-969-11	RES-CHIP 22K 5% 1/16W
R302	1-218-973-11	RES-CHIP 47K 5% 1/16W
R303	1-216-841-11	METAL CHIP 47K 5% 1/10W
R304	1-218-989-11	RES-CHIP 1M 5% 1/16W
	A-1166-573-A	MA-443 BOARD, COMPLETE (DVD205/DVD205E/DVD705/DVD705E)
	A-1166-574-A	MA-443 BOARD, COMPLETE (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)

		< CAPACITOR >
C6301	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6302	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6303	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6304	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6305	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)

Ref. No.	Part No.	Description
C6306	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C6307	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C6308	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C6309	1-119-923-11	CERAMIC CHIP 0.047uF 10% 10V
C6310	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6311	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6312	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6313	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6314	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6315	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
< CONNECTOR >		
* CN6301	1-816-654-51	FFC/FPC CONNECTOR (LIF) 6P
* CN6302	1-816-646-51	FFC/FPC CONNECTOR (LIF) 16P
< DIODE >		
D6301	8-719-073-01	DIODE MA111-(K8).S0 (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)
D6302	6-500-512-01	DIODE CL-330IRS-X-TU (NIGHTSHOT)
< FERRITE BEAD >		
FB6301	1-469-116-21	FERRITE, EMI (SMD) (1608)
FB6302	1-469-116-21	FERRITE, EMI (SMD) (1608)
FB6303	1-469-116-21	FERRITE, EMI (SMD) (1608)
FB6304	1-469-116-21	FERRITE, EMI (SMD) (1608)
< IC >		
IC6301	6-600-163-01	IC RS-770 (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)
IC6302	8-759-489-19	IC uPC6756GR-8JG-E2
< COIL >		
L6301	1-400-588-11	INDUCTOR 10uH
< RESISTOR >		
R6301	1-218-937-11	RES-CHIP 47 5% 1/16W (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)
R6302	1-218-965-11	RES-CHIP 10K 5% 1/16W
R6303	1-218-989-11	RES-CHIP 1M 5% 1/16W
R6304	1-218-989-11	RES-CHIP 1M 5% 1/16W
R6305	1-218-965-11	RES-CHIP 10K 5% 1/16W
< COMPOSITION CIRCUIT BLOCK >		
RB6301	1-234-379-21	RES, NETWORK 22K (1005X4)
< ANGULAR SENSOR >		
* SE6301	1-479-022-81	SENSOR, ANGULAR VELOCITY
* SE6302	1-479-022-71	SENSOR, ANGULAR VELOCITY

Ref. No.	Part No.	Description
A-1166-587-A	MS-297 BOARD, COMPLETE (DVD304E/DVD305/DVD305E/DVD755/ DVD755E)	*****
< CAPACITOR >		
C6801	1-107-726-91	CERAMIC CHIP 0.01uF 10% 16V
< CONNECTOR >		
* CN6801	1-816-646-51	FFC/FPC CONNECTOR (LIF) 16P
CN6802	1-817-913-41	MEMORY STICK DUO CONNECTOR (MEMORY STICK DUO)
< DIODE >		
D6801	6-500-817-01	DIODE (LED) SML-512UWT86 (MS ACCESS)
< RESISTOR >		
R6801	1-218-949-11	RES-CHIP 470 5% 1/16W
R6802	1-218-990-81	SHORT CHIP 0
R6803	1-218-990-81	SHORT CHIP 0
< FERRITE BEAD >		
A-1166-591-A	PD-268 BOARD, COMPLETE *****	*****
< CAPACITOR >		
C6502	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C6504	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6508	1-137-710-11	CERAMIC CHIP 10uF 20% 6.3V
C6512	1-125-889-91	CERAMIC CHIP 2.2uF 10% 10V
C6513	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C6522	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6524	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6525	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C6526	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
* CN6502	1-691-370-51	CONNECTOR, FFC/FPC 6P
* CN6503	1-691-370-51	CONNECTOR, FFC/FPC 6P
* CN6504	1-818-069-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN6505	1-818-071-51	CONNECTOR, FFC/FPC (ZIF) 24P
* CN6506	1-818-073-51	CONNECTOR, FFC/FPC (ZIF) 36P
< DIODE >		
* D6503	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D6504	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D6505	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
D6506	8-719-074-67	DIODE EDZ-TE61-5.6B
< IC >		
IC6501	8-759-693-13	IC NJM12904V (TE2)
< COIL >		
L6502	1-400-588-11	INDUCTOR 10uH
L6503	1-400-588-11	INDUCTOR 10uH
< TRANSISTOR >		
Q6501	8-729-427-67	TRANSISTOR XP421F-TXE


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	
Q6502	8-729-427-37	TRANSISTOR	XP411F-TXE
Q6503	8-729-053-52	TRANSISTOR	HN1C01FE-Y/GR (TPLR3)
Q6504	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR
Q6505	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR
Q6506	8-729-026-53	TRANSISTOR	2SA1576A-T106-QR
Q6507	6-550-232-01	TRANSISTOR	2SA2029T2LQ/R
Q6508	6-550-234-01	TRANSISTOR	UNR32A300LS0
Q6509	8-729-041-23	TRANSISTOR	NDS356AP

< RESISTOR >

R6503	1-218-954-11	RES-CHIP	1.2K	5%	1/16W
R6504	1-218-955-11	RES-CHIP	1.5K	5%	1/16W
R6509	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R6516	1-218-953-11	RES-CHIP	1K	5%	1/16W
R6517	1-218-973-11	RES-CHIP	47K	5%	1/16W
R6518	1-218-961-11	RES-CHIP	4.7K	5%	1/16W
R6519	1-218-957-11	RES-CHIP	2.2K	5%	1/16W
R6521	1-208-643-11	METAL CHIP	22	0.5%	1/16W
R6522	1-208-643-11	METAL CHIP	22	0.5%	1/16W
R6524	1-208-643-11	METAL CHIP	22	0.5%	1/16W
R6528	1-218-978-11	RES-CHIP	120K	5%	1/16W
R6530	1-218-977-11	RES-CHIP	100K	5%	1/16W
R6532	1-218-989-11	RES-CHIP	1M	5%	1/16W
R6536	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R6540	1-218-957-11	RES-CHIP	2.2K	5%	1/16W

Electrical parts list of VC-423 board is not shown.
Pages 5-18 to 5-27 are not shown.

Checking supplied accessories.

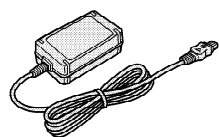

AC Adaptor
(AC-L25A/L25B)
△ 1-479-288-13



 
Power Cord
△ 1-555-074-71 (AUS)
△ 1-783-374-22 (HK)
△ 1-790-107-51 (US, CND)
△ 1-792-549-31 (JE)
△ 1-823-947-51 (KR)
△ 1-824-910-31 (AEP, EE, NE, E: PAL)
△ 1-827-269-22 (UK)
△ 1-830-518-31 (E: NTSC)



Conversion (2P) Adaptor
△ 1-569-007-12 (E: NTSC, JE)



Conversion (2P) Adaptor
△ 1-569-008-12 (E: PAL, HK)



USB cable
1-829-579-61
(DVD305/DVD305E/
DVD755/DVD755E)



 
A/V Connection Cable
1-831-553-11




Lens Cap
X-2108-241-1




Cleaning Cloth
3-073-861-01



 
Rechargeable battery pack
NP-FP50
(not supplied)



 Wireless Remote Commander
RMT-835
1-478-496-21
(DVD304E/DVD305/DVD305E/
DVD755/DVD755E)



CD-ROM
2-666-753-01 "Picture Package Ver.1.8.1"
(DVD305/DVD305E/DVD755/DVD755E)
2-666-757-01 "NeroExpress 6"
(DVD205/DVD205E/DVD304E/DVD705/DVD705E)

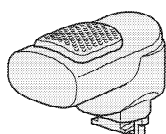

Mic Unit ECM-L100
A-1169 271-A
(DVD305/DVD305E/DVD755/DVD755E)


Other accessories

- 2-661-359-11 MANUAL, INSTRUCTION (ENGLISH)
(DVD205/DVD305) (US, CND, E, JE)
- 2-661-359-21 MANUAL, INSTRUCTION (FRENCH)
(DVD205/DVD305) (CND)
- 2-661-359-31 MANUAL, INSTRUCTION (SPANISH)
(DVD205/DVD305) (E)
- 2-661-359-41 MANUAL, INSTRUCTION (PORTUGUESE)
(DVD205/DVD755) (E, JE)
- 2-661-359-51 MANUAL, INSTRUCTION (TRADITIONAL CHINESE)
(DVD705/DVD755) (E)
- 2-661-359-61 MANUAL, INSTRUCTION (KOREAN)
(DVD305/DVD705/DVD755) (KR, JE)
- 2-661-360-11 MANUAL, INSTRUCTION (ENGLISH)
(DVD205E/DVD304E/DVD305E/DVD705E/DVD755E)
(AEP, UK, E, HK, AUS, JE)
- 2-661-360-21 MANUAL, INSTRUCTION (FRENCH)
(DVD205E/DVD304E/DVD705E/DVD755E) (AEP)
- 2-661-360-31 MANUAL, INSTRUCTION (GERMAN, DUTCH)
(DVD205E/DVD304E) (AEP)
- 2-661-360-51 MANUAL, INSTRUCTION (SPANISH, PORTUGUESE)
(DVD205E/DVD304E) (AEP)
- 2-661-360-61 MANUAL, INSTRUCTION (ITALIAN, GREEK)
(DVD205E/DVD304E) (AEP)
- 2-661-360-71 MANUAL, INSTRUCTION (SWEDISH, RUSSIAN)
(DVD205E/DVD304E/DVD305E) (NE, JE)
- 2-661-360-81 MANUAL, INSTRUCTION (DANISH, FINNISH)
(DVD205E/DVD304E/DVD305E) (NE)
- 2-661-360-91 MANUAL, INSTRUCTION (POLISH, CZECH)
(DVD205E/DVD304E) (EE)
- 2-661-361-11 MANUAL, INSTRUCTION (HUNGARIAN, SLOVAK)
(DVD205E/DVD304E) (EE)
- 2-661-361-21 MANUAL, INSTRUCTION (SIMPLIFIED CHINESE)
(DVD305E/DVD705E/DVD755E) (E, JE)
- 2-661-361-61 MANUAL, INSTRUCTION (TRADITIONAL CHINESE)
(DVD705E/DVD755E) (HK)
- 2-661-361-71 MANUAL, INSTRUCTION (ARABIC, PERSIAN)
(DVD705E/DVD755E) (E)


• Refer to page 5-1 for mark △.

HARDWARE LIST


#1: M1.7 X 2.5 (Black)
2-635-562-11

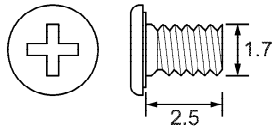


#2: M1.7 X 4.0 (Black)
2-635-562-31

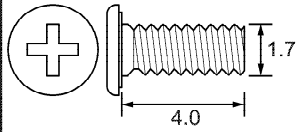


#3: M1.7 X 2.5 (Red)
2-660-401-01

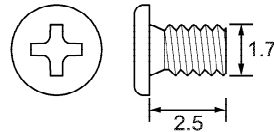


#4: M1.4 X 2.5 (Dark Silver)
3-348-998-81

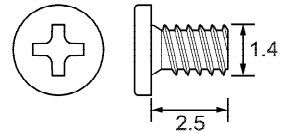


#5: M1.7 X 3.5 (Black)
3-080-204-01

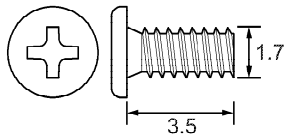


#6: M1.4 X 1.7 (Silver)
2-598-474-01

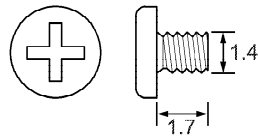


#7: M1.7 X 1.6 (Black)
7-627-552-18

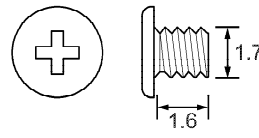

#8: M1.7 X 3.5 (Silver)
3-078-890-01

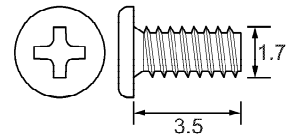

#9: M1.7 X 5.0 (Silver)
3-078-890-21

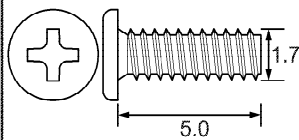

#10: M1.7 X 4.0 (Silver)
2-599-475-31

