


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY

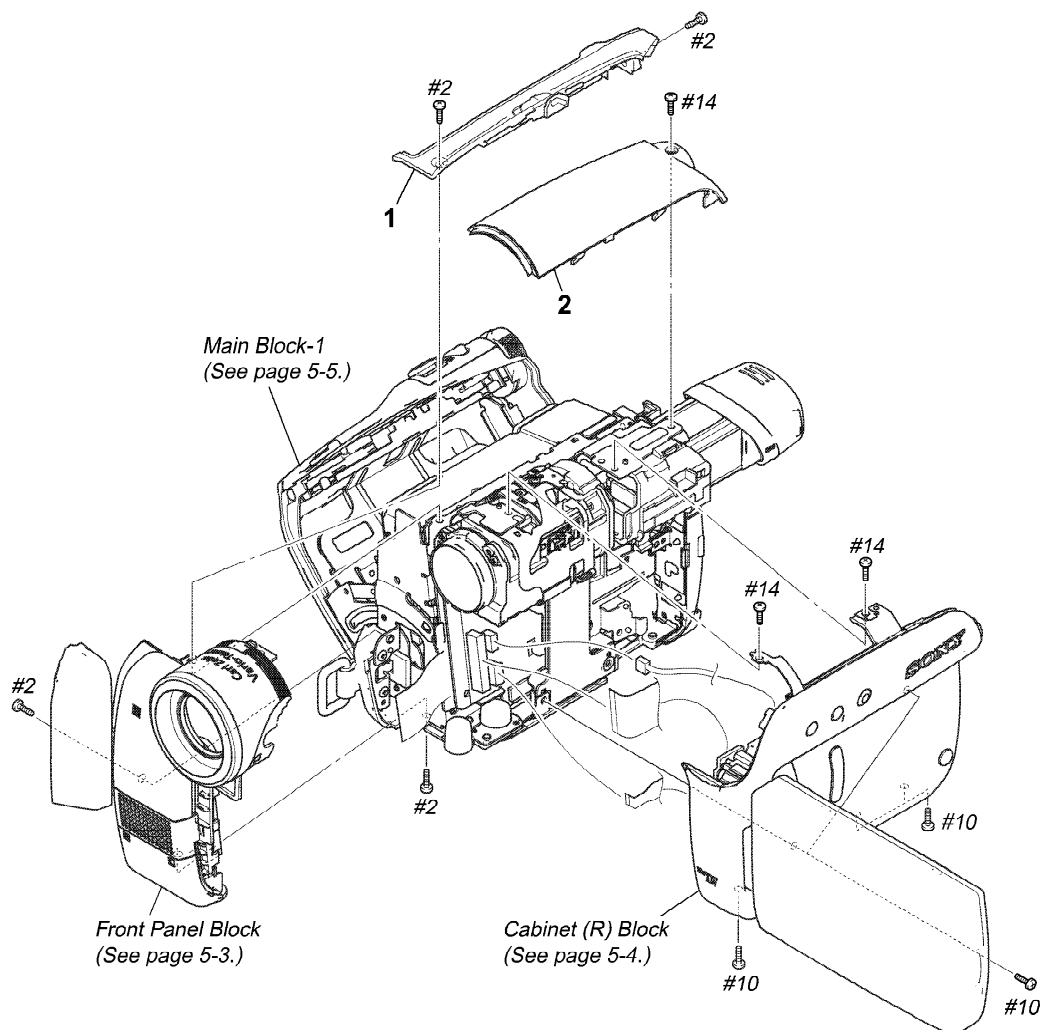

Ref. No.	Part No.	Description
1	X-2108-030-1	CABINET (172) ASSY, NS
2	2-664-983-11	CABINET (UPPER (172)) (HC24E/HC26/HC26E/HC35E)
2	2-664-983-21	CABINET (UPPER (172)) (HC23E)


Ref. No.	Part No.	Description
#2	2-635-562-31	SCREW (M1.7) (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-2. FRONT PANEL BLOCK

ns: not supplied

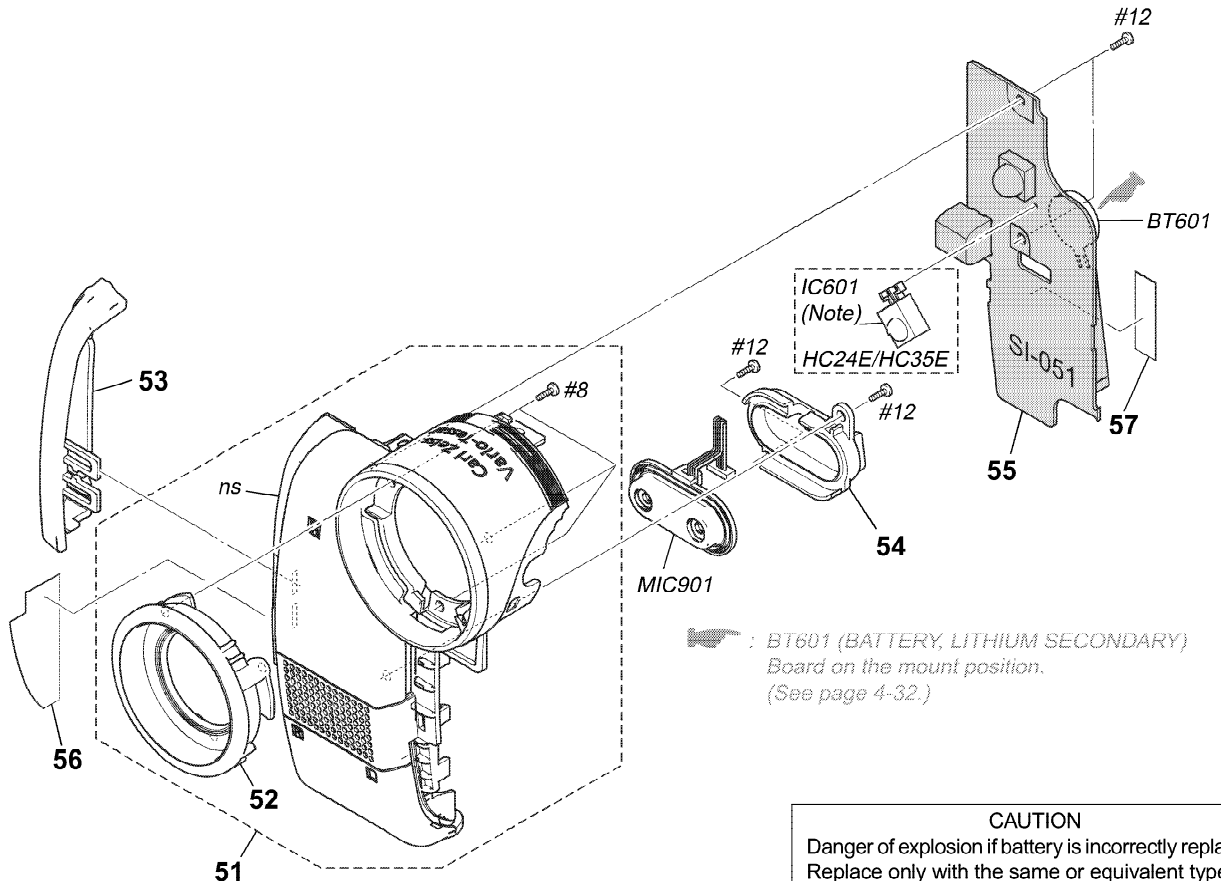

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Note: IC601 is not included in SI-051 complete board.

- Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
51	X-2108-154-1	PANEL (170) ASSY, F (HC23E)
51	X-2108-155-1	PANEL (17R) ASSY, F (HC24E)
51	X-2108-156-1	PANEL (171) ASSY, F (HC26/HC26E)
51	X-2108-157-1	PANEL (17C) ASSY, F (HC35E)
52	2-664-940-01	SCREW (172), FILTER
53	2-664-986-01	COVER, JACK
* 54	2-664-946-01	RETAINER, MICROPHONE
55	A-1153-836-A	SI-051 BOARD, COMPLETE (HC23E/HC24E/HC26/HC26E)
55	A-1153-837-A	SI-051 BOARD, COMPLETE (HC35E)

Ref. No.	Part No.	Description
* 56	2-672-995-01	SHEET (F)
57	3-941-343-01	TAPE (A)
△* BT601	1-756-640-11	BATTERY, LITHIUM SECONDARY
* IC601	6-600-505-01	IC RPM7640-V17 (HC24E/HC35E) (Note)
MIC901	1-542-513-21	MICROPHONE
#8	3-078-890-01	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. CABINET (R) BLOCK

ns: not supplied

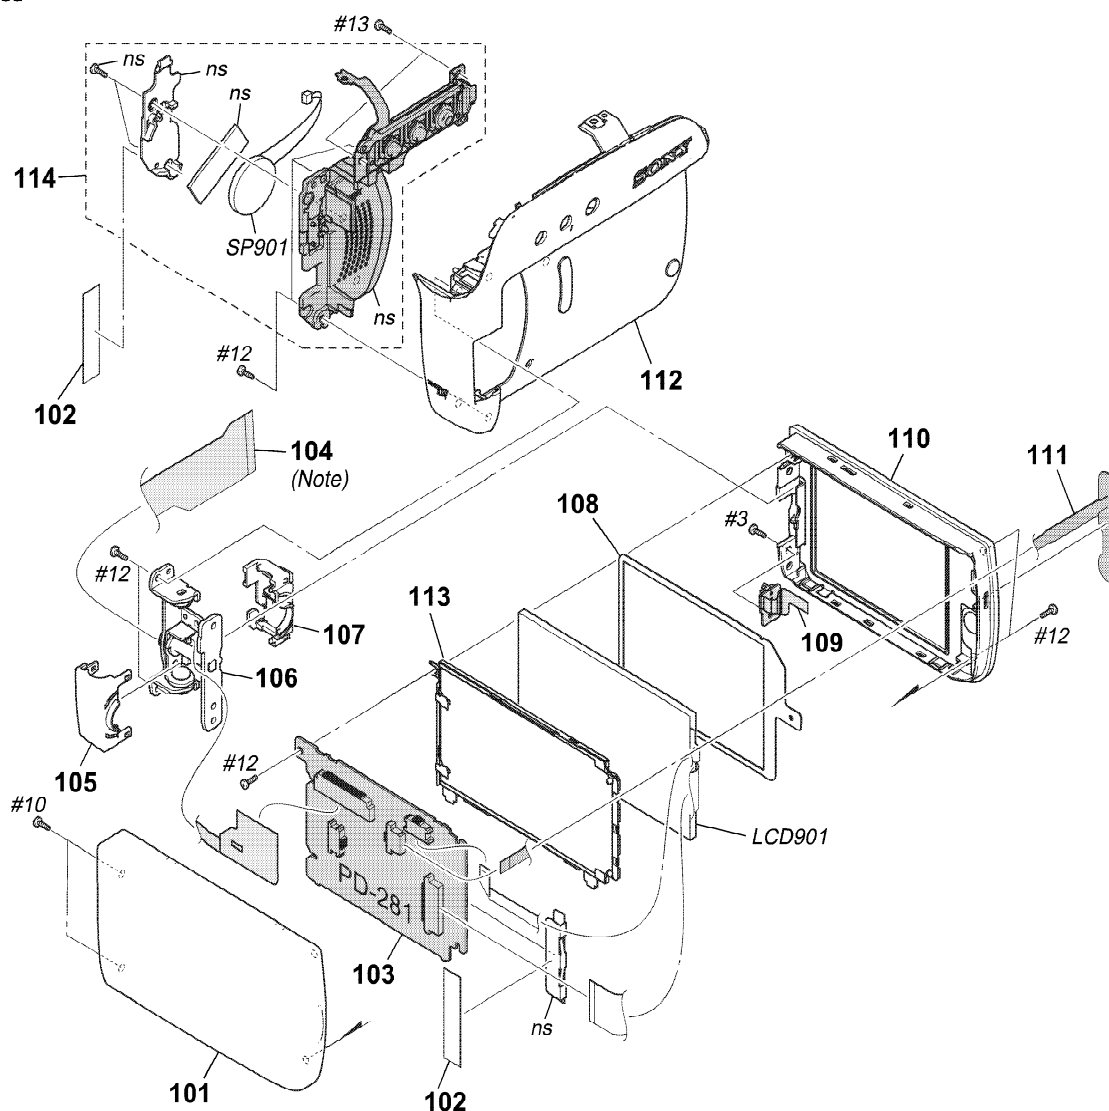

Note: Be sure read "HELP" when you install the FP-380 flexible board.

Ref. No.	Part No.	Description
101	2-664-728-11	CABINET (C), P (HC26/HC26E)
101	2-664-728-41	CABINET (C), P (HC23E)
101	2-664-728-51	CABINET (C), P (HC24E)
101	2-664-728-61	CABINET (C), P (HC35E)
102	3-941-343-01	TAPE (A)
103	A-1153-839-A	PD-281 BOARD, COMPLETE
* 104	1-867-778-11	FP-380 FLEXIBLE BOARD (Note)
105	2-664-737-01	COVER (C), HINGE
106	X-2067-431-1	HINGE ASSY
107	2-664-738-01	COVER (M), HINGE
108	2-664-735-01	CUSHION (172), TP
109	A-1153-842-A	FP-386 FLEXIBLE BOARD, COMPLETE

Ref. No.	Part No.	Description
110	X-2103-699-1	CABINET (M (172)) ASSY, P
111	1-479-063-21	KEY BLOCK, CONTROL (SB9000)
112	X-2103-698-1	CABINET (R (171)) ASSY
113	A-1153-903-A	LIGHT GUIDE BLOCK (2.5)
114	1-479-506-11	KEY BLOCK, CONTROL (CF17000)
LCD901	A-1149-654-A	TP BLOCK ASSY (25STMG06)
* SP901	1-825-260-31	K016NA503-12
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#13	3-085-397-01	SCREW (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. MAIN BLOCK-1

ns: not supplied

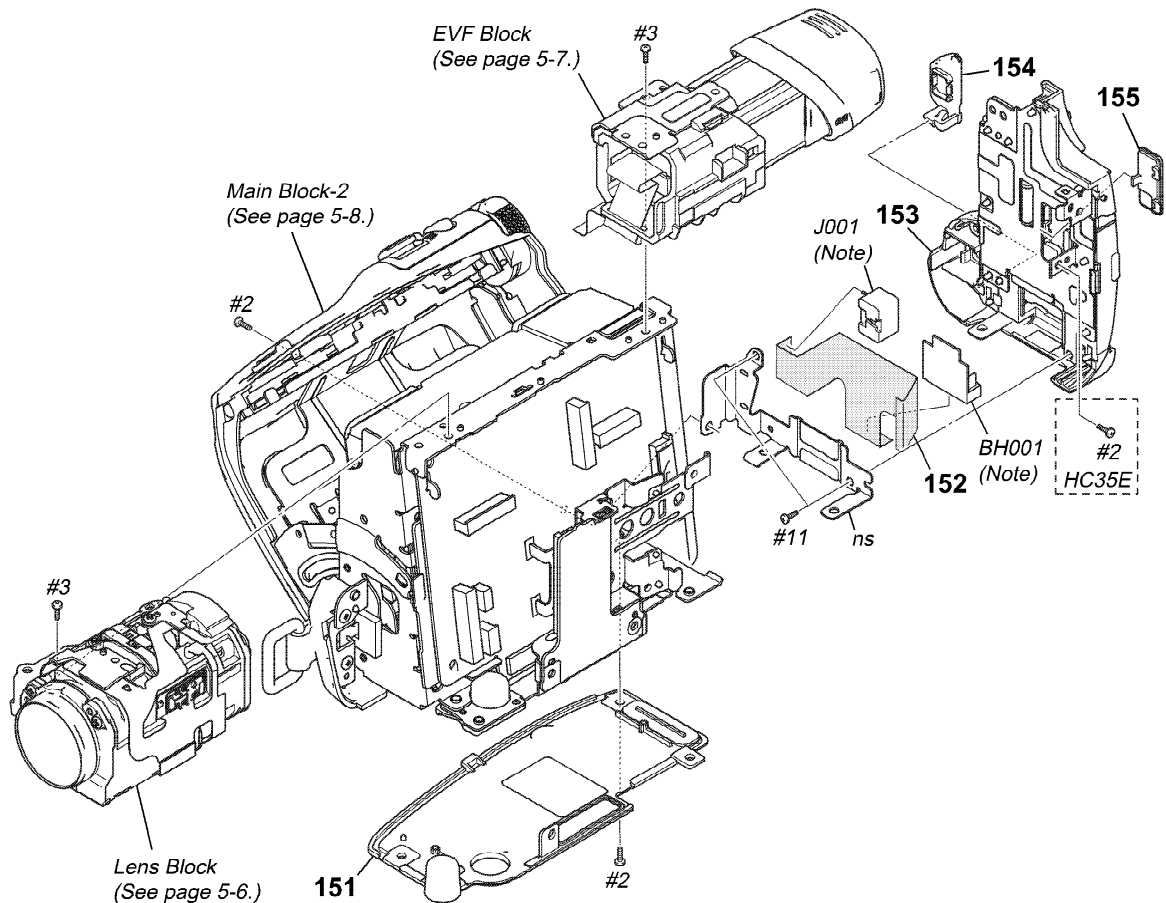

Note: BH001 and J001 are not included in FP-381 flexible board.


Ref. No.	Part No.	Description
151	X-2108-032-1	BOTTOM (172) ASSY, CABINET (HC23E/HC24E/HC26/HC26E)
151	X-2108-033-1	BOTTOM (173) ASSY, CABINET (HC35E)
* 152	1-867-779-11	FP-381 FLEXIBLE BOARD
153	X-2108-652-1	PANEL (172) ASSY, BT
154	2-664-984-01	COVER, DC (IN)
155	2-664-985-01	LID, CPC

Ref. No.	Part No.	Description
BH001	1-780-064-21	BATTERY TERMINAL BOARD (Note)
J001	1-815-792-11	CONNECTOR, DC-IN (7.2V) (Note)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. LENS BLOCK

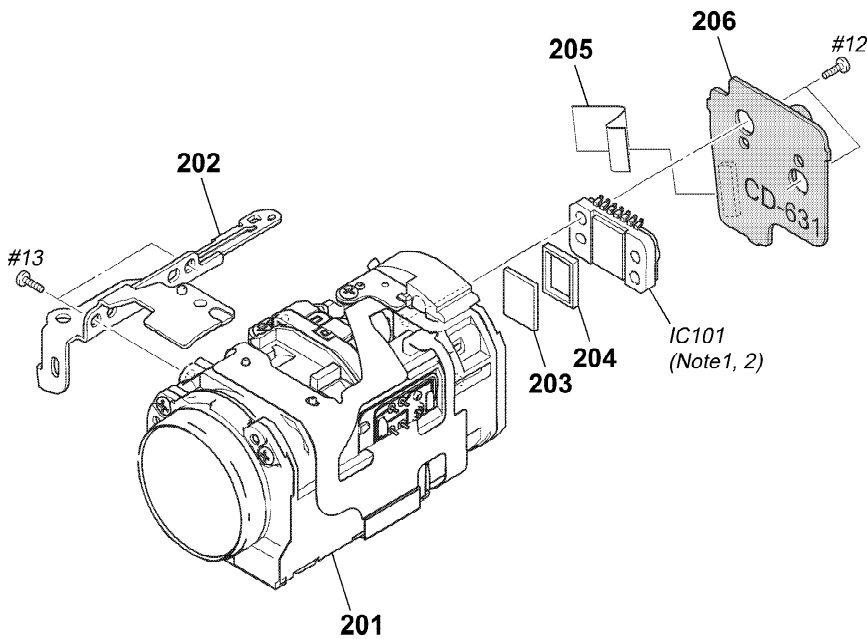

- Note 1: IC101 is not included in CD-631 complete board.
- Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.


Ref. No.	Part No.	Description
201	1-788-332-11	OPTICS UNIT (EG03B)
201	8-848-804-01	LSV-1070B
* 202	2-664-981-01	FRAME (172), LENS
203	1-788-242-11	OPTICAL FILTER BLOCK
204	2-318-138-01	RUBBER, SEAL 1070
* 205	1-830-778-11	CABLE, FLEXIBLE FLAT (FFC-063)

Ref. No.	Part No.	Description
206	A-1153-810-A	CD-631 BOARD, COMPLETE
IC101	8-753-244-70	ICX610NKF-13 (CCD IMAGER) (HC26) (Note 1, 2)
IC101	8-753-244-71	ICX611NKF-13 (CCD IMAGER) (HC23E/HC24E/HC26E/HC35E) (Note 1, 2)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#13	3-085-397-01	SCREW (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-6. EVF BLOCK

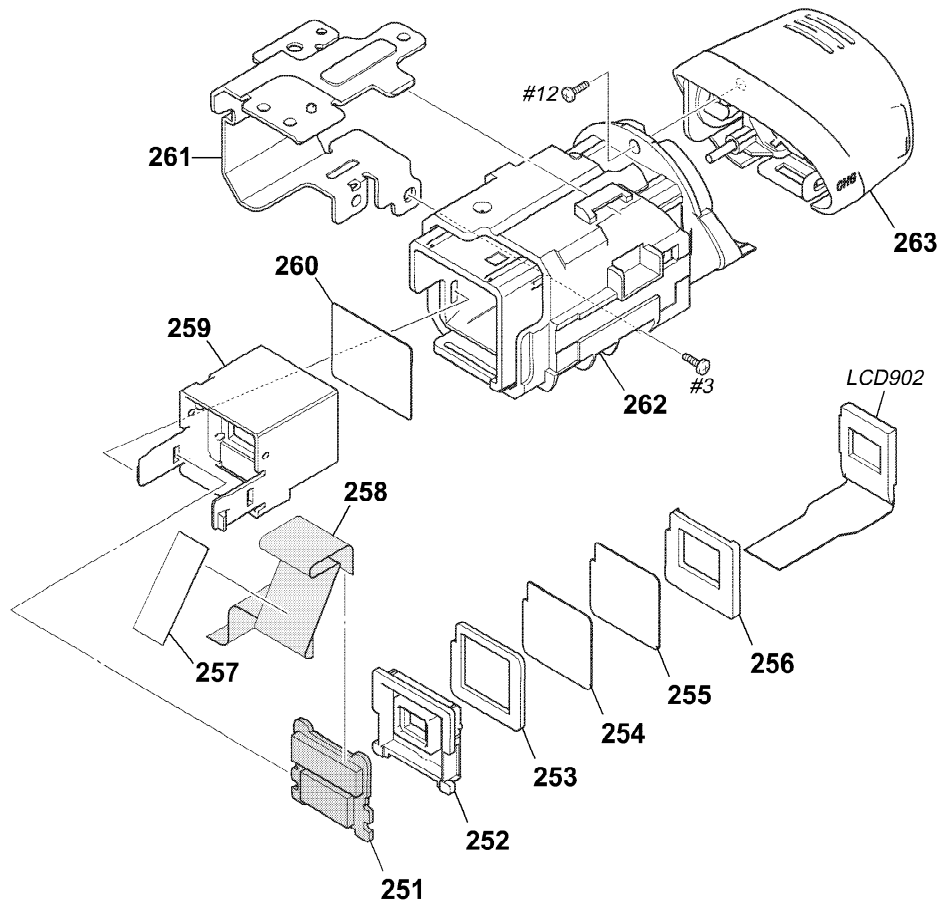

Ref. No.	Part No.	Description
251	A-1153-834-A	LB-121 BOARD, COMPLETE
252	2-664-672-01	GUIDE, LAMP
* 253	2-638-819-01	CUSHION, LCD
* 254	2-638-818-01	ILLUMINATOR
* 255	2-638-816-01	PLATE (TFT), DEFLECTION
256	2-664-671-01	SPACER, LCD
257	3-941-343-01	TAPE (A)
* 258	1-867-777-11	FP-379 FLEXIBLE BOARD

Ref. No.	Part No.	Description
* 259	2-664-670-01	CABINET, INNER
* 260	2-638-813-01	PLATE (CF), DEFLECTION
* 261	2-664-669-01	FRAME (172), FIXED
262	X-2103-696-1	VF (172) ASSY
263	X-2103-695-1	EYE CUP ASSY
LCD902	8-753-245-09	LCX059CKK-1
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. MAIN BLOCK-2

ns: not supplied

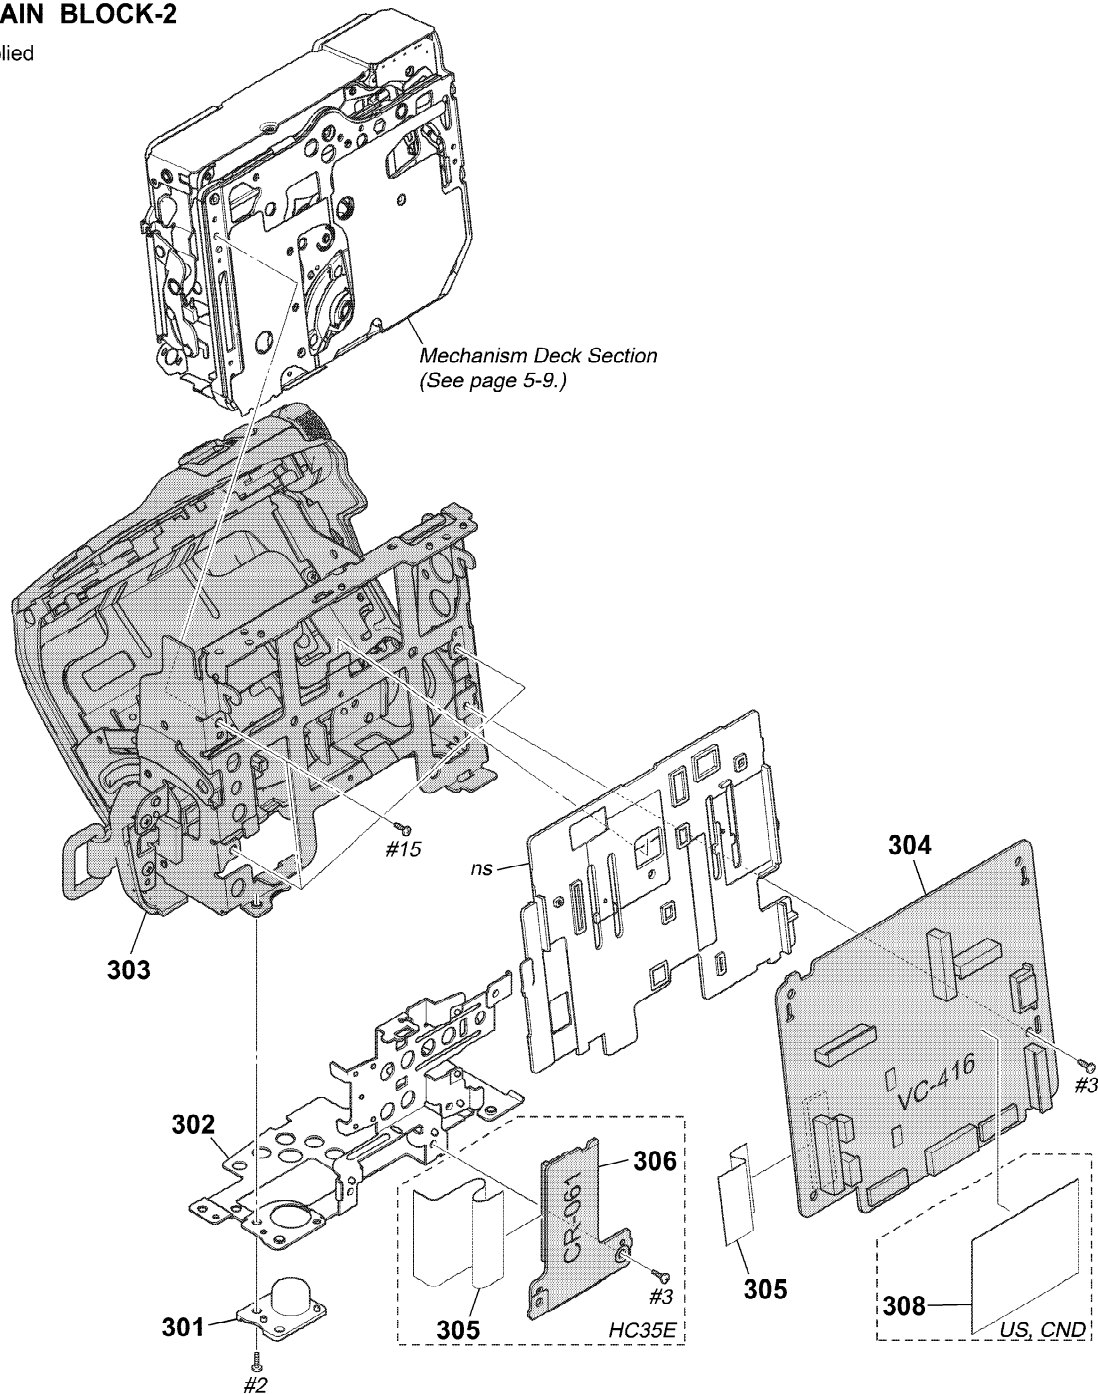


Ref. No.	Part No.	Description
301	2-664-982-01	SCREW, TRIPOD
* 302	2-664-976-01	FRAME (171), BOTTOM (HC23E/HC24E/HC26/HC26E)
* 302	2-664-977-01	FRAME (172), BOTTOM (HC35E)
303	1-479-507-11	KEY BLOCK, CONTROL (SS17000)
304	A-1154-404-A	VC-416 BOARD, COMPLETE (SERVICE) (HC23E/HC24E/HC26/HC26E)
304	A-1154-405-A	VC-416 BOARD, COMPLETE (SERVICE) (HC35E)

Ref. No.	Part No.	Description
* 305	1-830-775-11	CABLE, FLEXIBLE FLAT (FFC-060)
306	A-1153-808-A	CR-061 BOARD, COMPLETE (HC35E)
308	2-659-500-01	LABEL, FUSE REPLACEMENT CAUTION (US, CND)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#15	3-062-214-01	SCREW (M1.4X1.5) (Silver)

5. REPAIR PARTS LIST

5-1-8. MECHANISM DECK SECTION

ns : not supplied

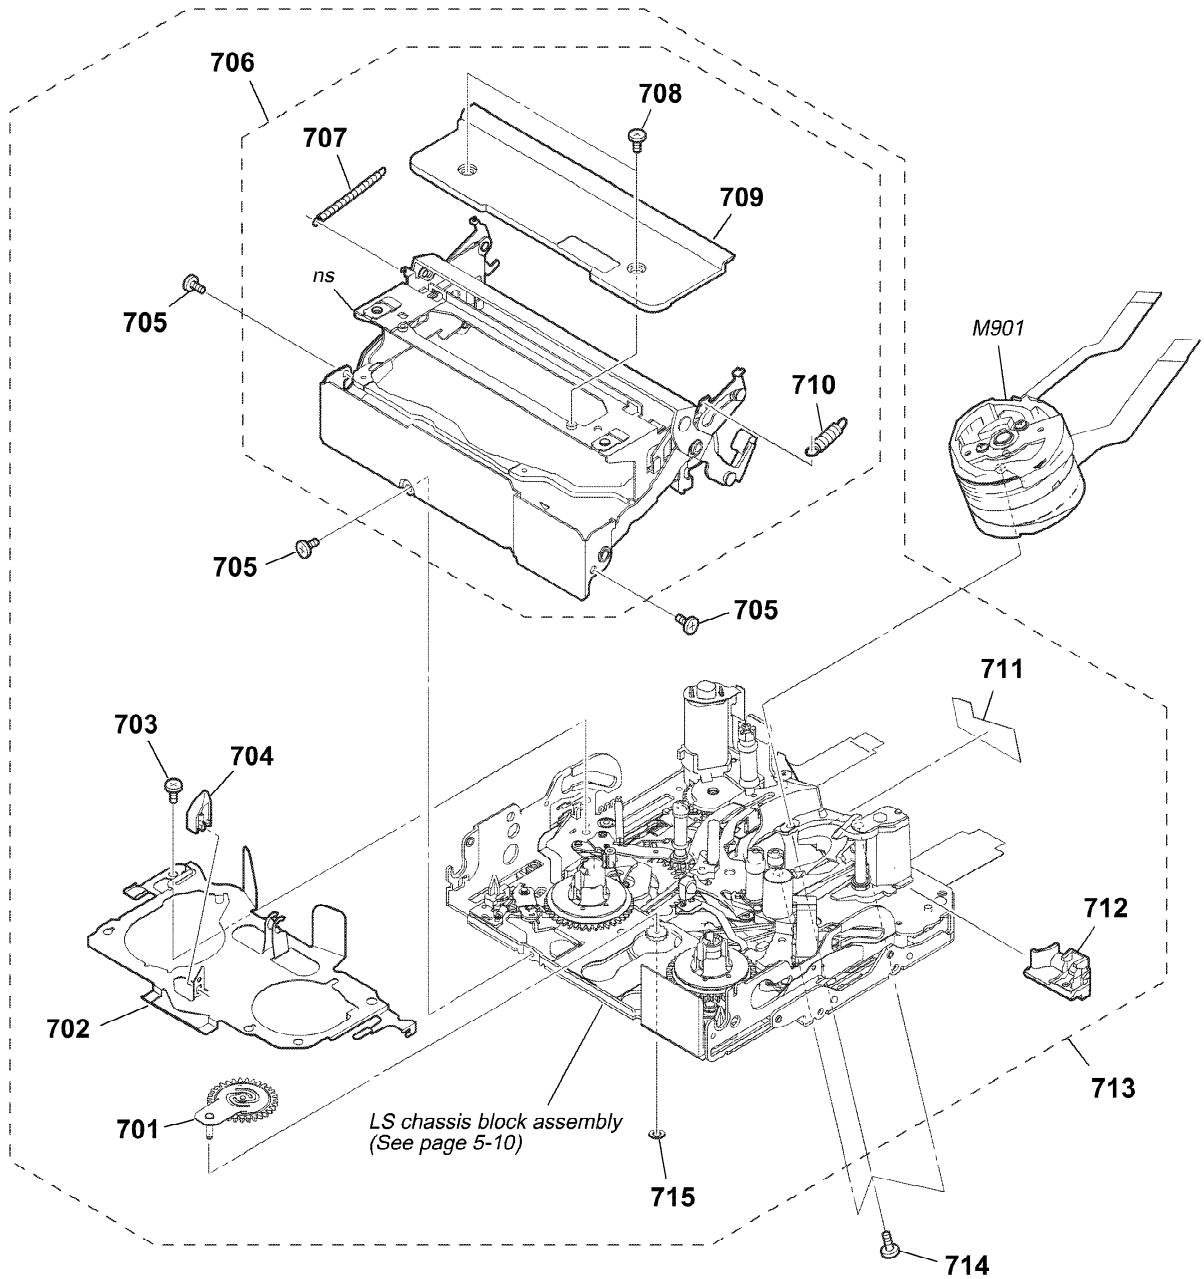


Ref. No.	Part No.	Description
701	X-2024-478-1	PENDULUM ASSY
702	2-342-917-02	LED BASE
703	7-627-850-77	SCREW, PRECISION +P 1.4X1.8
704	3-079-366-11	RELEASE, REEL LOCK
705	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
706	X-2024-450-1	COMPARTMENT ASSY, CASSETTE
707	2-342-926-01	SPRING (ARM S), TENSION COIL
708	2-546-417-01	SCREW (M1.4)

Ref. No.	Part No.	Description
709	2-342-933-01	PLATE, TOP
710	2-342-927-01	SPRING (ARM T), TENSION COIL
711	2-541-585-01	SHEET, FLEXIBLE ADHESIVE
712	2-342-918-01	TG6 CATCHER
713	A-1080-997-A	MD (N100) SUB ASSY A
714	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
715	3-315-414-31	WASHER
M901	A-1137-055-A	DRUM (DEH-33D-R) (SERVICE)

5. REPAIR PARTS LIST

5-1-9. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns : not supplied

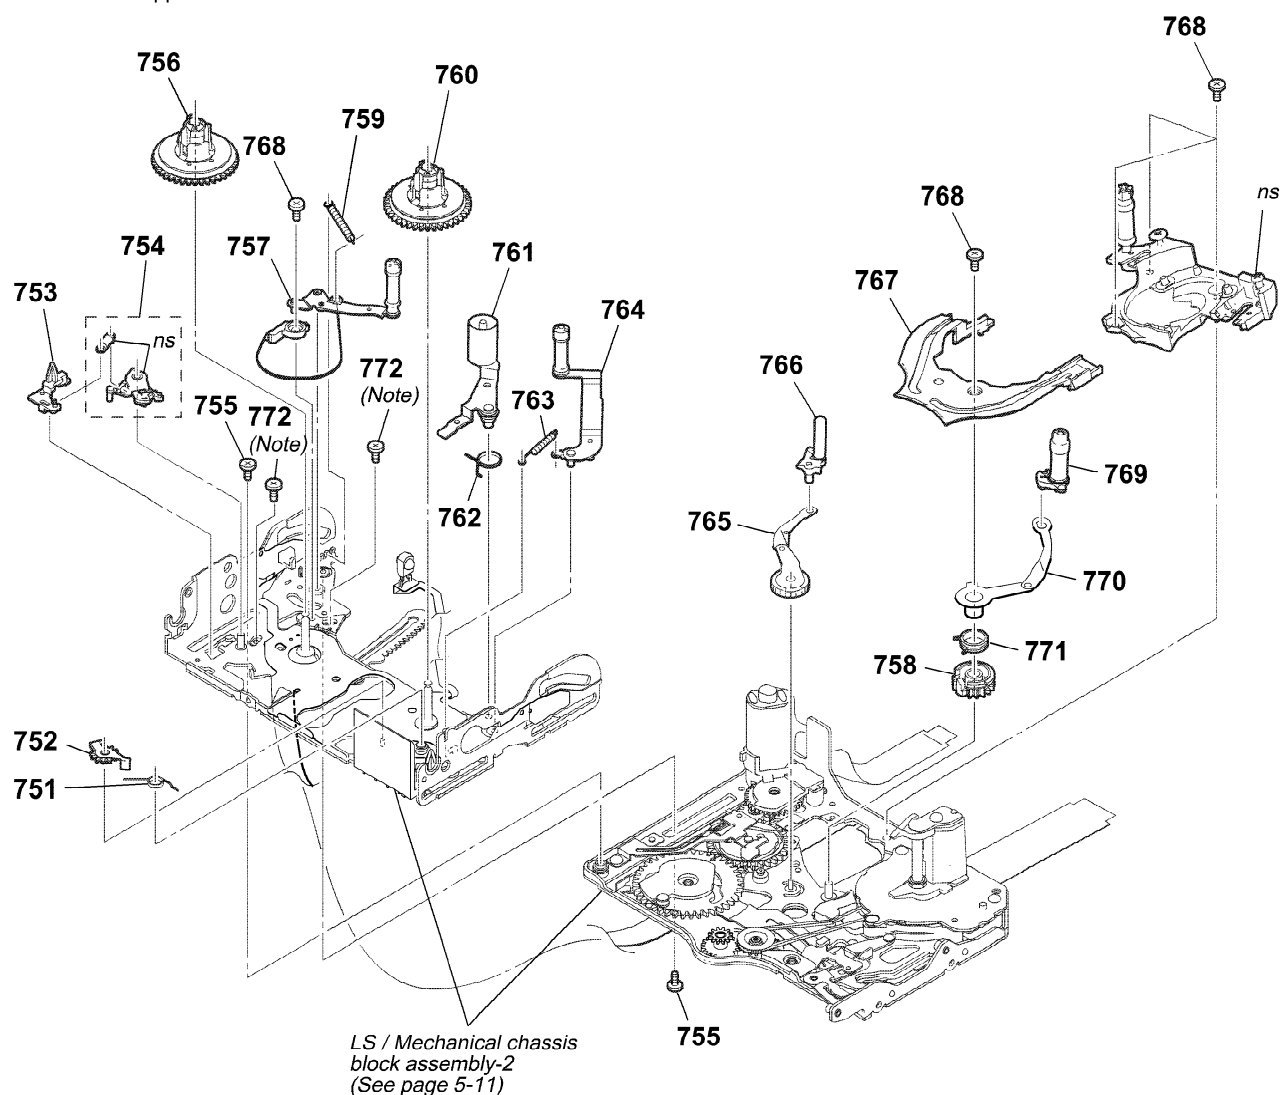


Note: These two screws are the fixing screws of the LS cam plate.
These two fixing screws are used for adjusting the LS cam plate position.
(refer to 4-2. LS cam adjustment of DV mechanical adjustment manual IX)

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
751	2-342-759-01	SPRING, RVS BRAKE	762	2-342-906-01	SPRING (PINCH RETURN), TORSION
752	A-1083-005-A	BLOCK ASSY, RVS BRAKE	763	2-342-626-01	SPRING (RETURN TG6), EXTENSION
753	2-342-731-01	POSITIONING, S	764	A-1083-002-A	BLOCK ASSY, TG6
754	A-1083-006-A	BLOCK ASSY, S BRAKE	765	X-2024-468-1	ARM ASSY (S), GL
755	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	766	X-2024-465-1	COASTER (S) ASSY
756	X-2024-473-1	TABLE ASSY, S REEL	767	2-342-612-01	RAIL
757	A-1083-007-B	BLOCKASSY, TENSION REGULATOR	768	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
758	2-342-705-01	GEAR (T), GL	769	X-2024-466-1	COASTER (T) ASSY
759	2-342-902-01	SPRING, TENSION REGULATOR	770	X-2024-469-1	ARM (T) ASSY, GL
760	X-2024-474-1	TABLE ASSY, T REEL	771	2-342-716-01	SPRING (T), TORSION COIL
761	X-2024-476-1	ARM ASSY, PINCH	772	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD (for adjustment)

5. REPAIR PARTS LIST

5-1-10. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

ns : not supplied

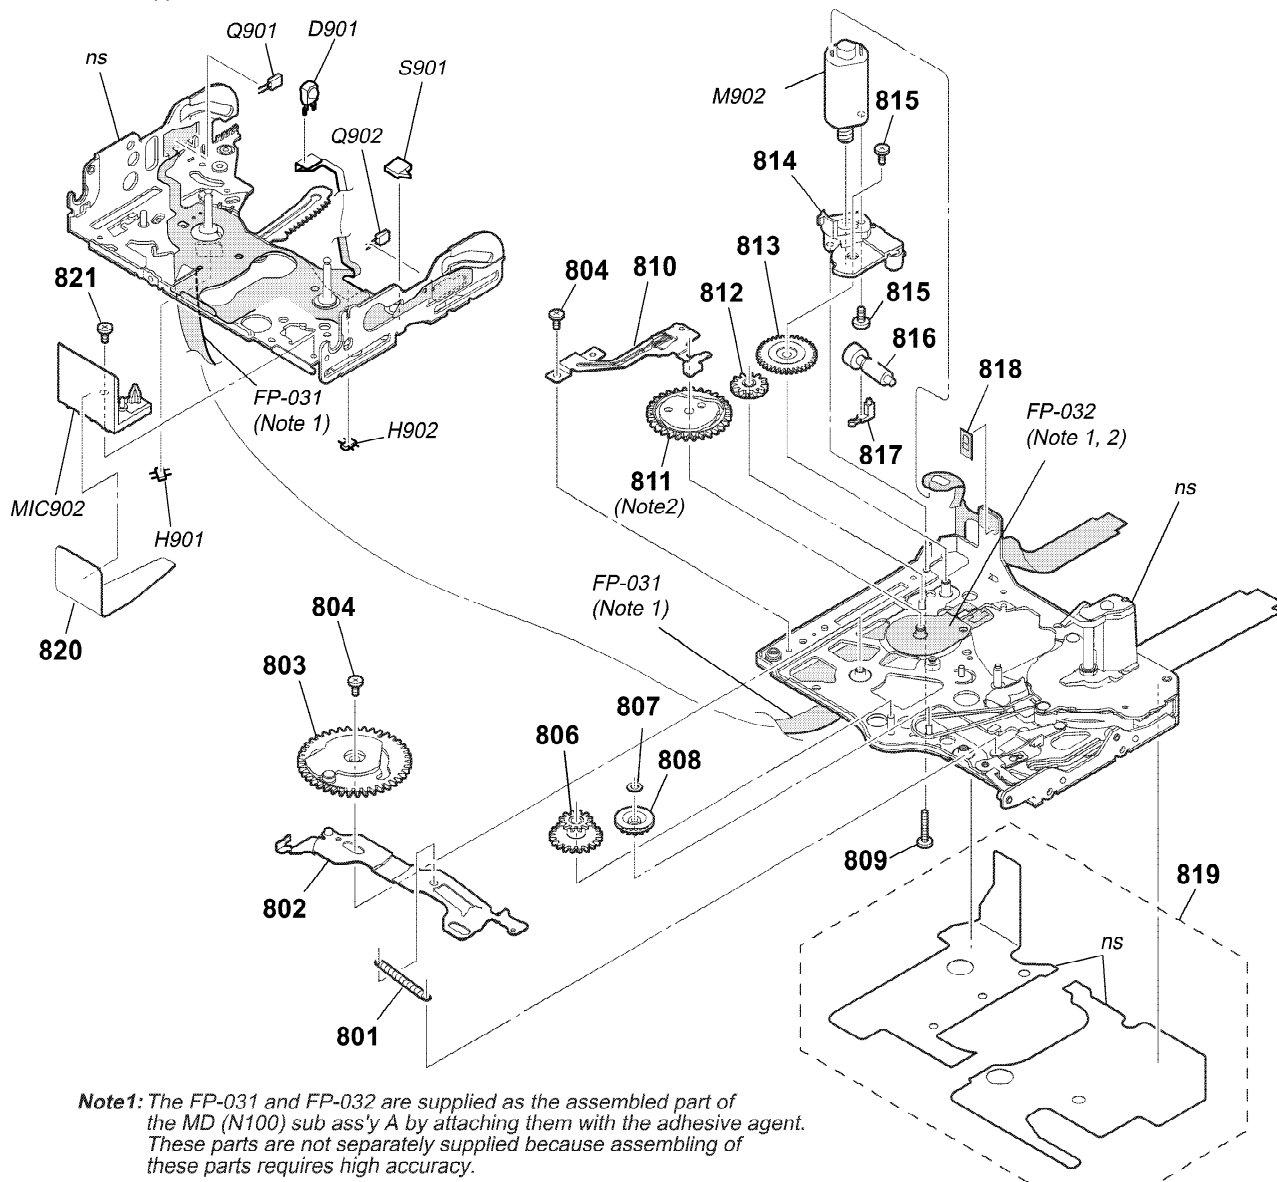

Note1: The FP-031 and FP-032 are supplied as the assembled part of the MD (N100) sub ass'y A by attaching them with the adhesive agent. These parts are not separately supplied because assembling of these parts requires high accuracy.

Note2: The mode switch (S903) function works when the contactor of the FP-032 contacts with the bottom surface of wiper of the mode gear ass'y.

Ref. No.	Part No.	Description
801	2-342-624-01	SPRING (PINCH LIMITTER), EXTENSION
802	X-2024-463-1	SLIDER ASSY, MODE
803	X-2024-462-1	GEAR ASSY, CAM
804	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD
806	2-342-621-01	GEAR, RELAY
807	3-315-414-31	WASHER
808	2-342-620-01	GEAR, CONVERSION
809	3-084-377-01	HEAD (SCREW M1.2)
810	X-2024-460-1	BASE ASSY, CAM
811	X-2024-461-1	GEAR ASSY, MODE
812	2-342-615-01	GEAR, NO.2
813	2-342-691-01	GEAR, NO.1
814	2-342-688-01	MOTOR HOLDER
815	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0
816	2-342-689-01	WORM SHAFT (2J)

Ref. No.	Part No.	Description
817	2-342-690-01	BASE, MOTOR HOLDER
818	1-677-049-11	FP-228 FLEXIBLE BOARD (DEW SENSOR)
819	2-342-686-01	COVER, CAPSTAN
820	2-541-984-01	MIC COVER
821	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
D901	6-500-652-01	DIODE GL453SE000F (TAPE LED)
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
M902	X-2024-464-1	MOTOR ASSY (LOADING)
MIC902	1-818-576-11	PIN, CONNECTOR (WITH DETECTION SWITCH)
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)

CD-631

CR-061

FP-031

FP-032

FP-228

FP-380

FP-381

FP-386

LB-121

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
A-1153-810-A	CD-631 BOARD, COMPLETE	***** (IC101 is not included in CD-631 complete board.)
< CAPACITOR >		
C101	1-124-779-00	ELECT CHIP 10uF 20% 16V
C102	1-164-850-11	CERAMIC CHIP 10PF 0.5PF 50V
C104	1-124-779-00	ELECT CHIP 10uF 20% 16V
< CONNECTOR >		
CN101	1-766-344-51	CONNECTOR, FFC/FPC 14P
< IC >		
IC101	8-753-244-70	ICX610NKF-13 (CCD IMAGER) (HC26) (Note)
IC101	8-753-244-71	ICX611NKF-13 (CCD IMAGER) (HC23E/HC24E/HC26E/HC35E) (Note)
< COIL >		
L101	1-400-588-11	INDUCTOR 10uH
< TRANSISTOR >		
Q101	8-729-423-55	TRANSISTOR 2SC3931-D
< RESISTOR >		
R101	1-218-959-11	RES-CHIP 3.3K 5% 1/16W
A-1153-808-A	CR-061 BOARD, COMPLETE (HC35E)	***** (CN002 (multi connector) is not supplied, but this is included in CR-061 complete board.)
< CAPACITOR >		
C001	1-164-934-11	CERAMIC CHIP 330PF 10% 50V
C002	1-164-934-11	CERAMIC CHIP 330PF 10% 50V
< CONNECTOR >		
CN002	(Not supplied)	CONNECTOR, MULTIPLE (SOCKET)
CN003	1-766-613-51	CONNECTOR, FFC/FPC 36P
(Not supplied) FP-031 FLEXIBLE BOARD		
***** (This flexible board is included in MD (N100) SUB ASSY A (A-1080-997-A).)		
< DIODE >		
D901	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
< HOLE ELEMENT >		
H901	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (S REEL)
H902	8-719-067-74	ELEMENT, HOLE HW-105A-CDE-T (T REEL)
< CONNECTOR >		
MIC902	1-818-576-11	PIN, CONNECTOR (WITH DETECTION SWITCH)

Ref. No.	Part No.	Description
< TRANSISTOR >		
Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
< SWITCH >		
S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
(Not supplied) FP-032 FLEXIBLE BOARD		
***** (This flexible board with S903 is included in MD (N100) SUB ASSY A (A-1080-997-A).)		
1-677-049-11 FP-228 FLEXIBLE BOARD (DEW SENSOR)		

* 1-867-778-11 FP-380 FLEXIBLE BOARD		

* 1-867-779-11 FP-381 FLEXIBLE BOARD		
***** (BH001 and J001 are not included in FP-381 flexible board.)		
< BATTERY TERMINAL >		
BH001	1-780-064-21	BATTERY TERMINAL BOARD
< JACK >		
J001	1-815-792-11	CONNECTOR, DC-IN (7.2V)
A-1153-842-A FP-386 FLEXIBLE BOARD, COMPLETE		

< SWITCH >		
S101	1-786-180-31	SWITCH, PUSH (1KEY) (PANEL REVERSE)
A-1153-834-A LB-121 BOARD, COMPLETE		

< CAPACITOR >		
C301	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C302	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
< CONNECTOR >		
* CN301	1-818-046-51	CONNECTOR, FFC/FPC 20P
* CN302	1-817-560-51	CONNECTOR, FPC (ZIP) 21P
< DIODE >		
D301	6-500-941-01	DIODE MAZS056008S0
* D302	6-501-325-01	DIODE NESW007T-T017 (BACKLIGHT)

Ref. No.	Part No.	Description
< RESISTOR >		
R304	1-218-989-11	RES-CHIP 1M 5% 1/16W
A-1153-839-A PD-281 BOARD, COMPLETE *****		
< CAPACITOR >		
C9603	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C9605	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C9606	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
* CN9601	1-817-513-51	CONNECTOR, FFC/FPC (ZIF) 30P
* CN9602	1-818-069-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN9603	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN9604	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P
CN9605	1-815-031-51	CONNECTOR, FFC/FPC (ZIF) 24P
< DIODE >		
D9602	6-500-941-01	DIODE MAZS056008S0
* D9603	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D9604	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
* D9605	6-501-476-01	DIODE NSSW008CT-T071 (BACKLIGHT)
< TRANSISTOR >		
Q9601	8-729-427-67	TRANSISTOR XP421F-TXE
Q9602	8-729-427-37	TRANSISTOR XP411F-TXE
< RESISTOR >		
R9602	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R9603	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R9604	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R9607	1-218-989-11	RES-CHIP 1M 5% 1/16W
A-1153-836-A SI-051 BOARD, COMPLETE (HC23E/HC24E/HC26/HC26E)		
A-1153-837-A SI-051 BOARD, COMPLETE (HC35E) ***** (IC601 is not included in SI-051 complete board.)		
< BATTERY >		
△* BT601	1-756-640-11	BATTERY, LITHIUM SECONDARY
< CAPACITOR >		
C616	1-164-935-11	CERAMIC CHIP 470PF 10% 50V
C617	1-164-935-11	CERAMIC CHIP 470PF 10% 50V
< CONNECTOR >		
CN601	1-815-794-21	CONNECTOR (MULTIPLE) (A/V OUT)
CN602	1-778-507-21	PIN, CONNECTOR (PC BOARD) 4P
CN603	1-794-962-11	CONNECTOR, SQUARE TYPE (USB 5P) (USB) (HC23E/HC24E/HC26/HC26E)
CN604	1-794-276-11	CONNECTOR, SQUARE TYPE 4P (DV OUT: HC23E/HC24E) (DV: HC26/HC26E)
CN605	1-818-074-51	CONNECTOR, FFC/FPC (ZIF) 36P

• Refer to page 5-1 for mark △.


Ref. No.	Part No.	Description
< DIODE >		
D602	6-500-044-01	DIODE DF6A6.8FU (TE85R)
D603	6-500-776-01	DIODE MAZW068H0LS0
D606	6-500-512-01	DIODE CL-330IRS-X-TU (IR EMITTER/NIGHTSHOT)
D608	8-719-078-02	DIODE 1SS357 (T3SONY1) (HC23E/HC24E/HC26/HC26E)
< FUSE >		
△ F601	1-576-897-21	FUSE (0.2A/32V) (HC23E/HC24E/HC26/HC26E)
△ F602	1-576-897-21	FUSE (0.2A/32V) (HC23E/HC24E/HC26/HC26E)
< FERRITE BEAD >		
FB601	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
FB602	1-414-760-21	BEAD, FERRITE (CHIP) (1608)
< IC >		
* IC601	6-600-505-01	IC RPM7640-V17 (HC24E/HC35E)
< LINE FILTER >		
LF602	1-400-633-21	COMMON MODE CHOKE COIL (HC23E/HC24E/HC26/HC26E)
LF603	1-400-633-21	COMMON MODE CHOKE COIL (HC23E/HC24E/HC26/HC26E)
< RESISTOR >		
R623	1-216-801-11	METAL CHIP 22 5% 1/10W
R624	1-216-801-11	METAL CHIP 22 5% 1/10W
< COMPOSITION CIRCUIT BLOCK >		
RB602	1-234-378-21	RES, NETWORK 10K (1005X4) (HC23E/HC24E/HC26/HC26E)

Electrical parts list of the VC-416 board is not shown.
Pages 5-14 to 5-18 are not shown.


CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

Checking supplied accessories.

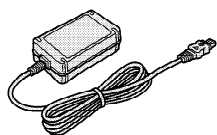

 AC Adaptor
(AC-L25A/L25B)
△ 1-479-288-13




Power Cord
△ 1-555-074-71 (AUS)
△ 1-782-476-41 (CH)
△ 1-783-374-22 (HK)
△ 1-790-107-51 (US, CND)
△ 1-823-150-21 (AEP, EE, NE)
△ 1-824-910-31 (E: PAL)
△ 1-830-518-31 (E: NTSC)
△ 1-830-736-21 (UK)
△ 1-832-115-11 (KR)



Conversion (2P) Adaptor
△ 1-569-007-12 (E: NTSC)



 
Conversion (2P) Adaptor
△ 1-569-008-12 (E: PAL, HK)




Lens Cap
X-2108-241-1



 A/V Connection Cable
1-823-156-51



 
Rechargeable Battery Pack
NP-FP30
△ A-1082-950-A (US, CND)
△ A-1082-951-A
(EXCEPT US, CND)




CD-ROM
"Picture Package Ver. 1.5.1"
2-666-755-01



 USB Cable
1-829-868-31
(HC24E/HC35E)



 Wireless Remote Commander
RMT-830
1-477-898-71
(HC24E/HC35E)



Handycam Station
1-819-870-11 (HC35E)



21-pin Adaptor
1-770-783-21 (HC35E)


Other accessories

2-659-811-11	MANUAL, INSTRUCTION (HC26) (ENGLISH)(US, CND, E)
2-659-811-21	MANUAL, INSTRUCTION (HC26) (FRENCH) (CND)
2-659-811-31	MANUAL, INSTRUCTION (HC26) (SPANISH) (E, AR)
2-659-811-51	MANUAL, INSTRUCTION (HC26) (TRADITIONAL CHINESE) (E)
2-659-811-61	MANUAL, INSTRUCTION (HC26) (KOREAN) (KR)
2-659-812-11	MANUAL, INSTRUCTION (HC23E/HC26E/HC35E) (ENGLISH) (AEP, UK, E, AUS, HK)
2-659-812-21	MANUAL, INSTRUCTION (HC23E/HC26E/HC35E) (FRENCH) (AEP)
2-659-812-31	MANUAL, INSTRUCTION (HC23E/HC24E/HC35E) (GERMAN) (AEP)
2-659-812-41	MANUAL, INSTRUCTION (HC23E/HC24E/HC35E) (DUTCH) (AEP)
2-659-812-51	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (SPANISH) (AEP)
2-659-812-61	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (PORTUGUESE) (AEP)
2-659-812-71	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (ITALIAN) (AEP)
2-659-812-81	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (GREEK) (AEP)
2-659-812-91	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (SWEDISH) (NE)
2-665-183-11	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (RUSSIAN) (NE)
2-665-183-21	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (DANISH) (NE)
2-665-183-31	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (FINNISH) (NE)
2-665-183-41	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (POLISH) (EE)
2-665-183-51	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (CZECH) (EE)
2-665-183-61	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (HUNGARIAN) (EE)
2-665-183-71	MANUAL, INSTRUCTION (HC23E/HC24E/HC26E/HC35E) (SLOVAK) (EE)
2-665-183-81	MANUAL, INSTRUCTION (HC26E) (ARABIC) (E)
2-665-183-91	MANUAL, INSTRUCTION (HC24E/HC26E/HC35E) (PERSIAN) (E)
2-665-184-11	MANUAL, INSTRUCTION (HC26E) (TRADITIONAL CHINESE) (HK)
2-665-184-21	MANUAL, INSTRUCTION (HC26E) (SIMPLIFIED CHINESE) (E)
2-665-184-31	MANUAL, INSTRUCTION (HC26E) (THAI) (E)
2-665-185-11	MANUAL, INSTRUCTION (HC26E) (SIMPLIFIED CHINESE) (CH)


• Refer to the page 5-1 for mark △.

HARDWARE LIST


#1: M1.7 X 2.5 (Black)
2-635-562-11

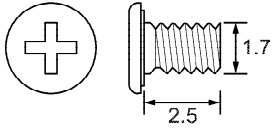


#2: M1.7 X 4.0 (Black)
2-635-562-31

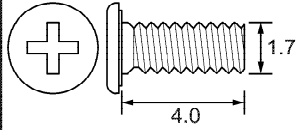


#3: M1.7 X 2.5 (Red)
2-660-401-01

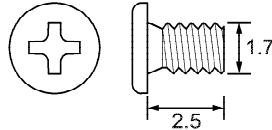


#4: M1.4 X 2.5 (Dark Silver)
3-348-998-81

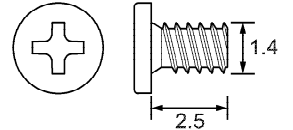


#5: M1.7 X 3.5 (Black)
3-080-204-01

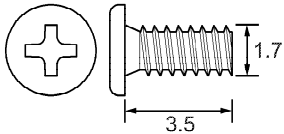


#6: M1.4 X 1.7 (Silver)
2-598-474-01

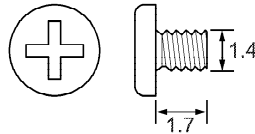


#7: M1.7 X 1.6 (Black)
7-627-552-18

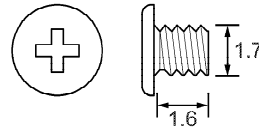


#8: M1.7 X 3.5 (Silver)
3-078-890-01

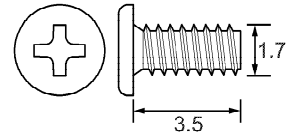


#9: M1.7 X 5.0 (Silver)
3-078-890-21

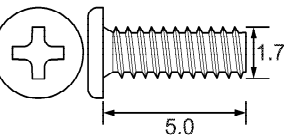


#10: M1.7 X 4.0 (Silver)
2-599-475-31

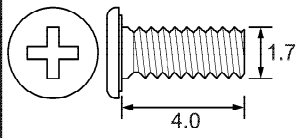


#11: M1.7 X 4.0 (Silver)
3-078-890-11

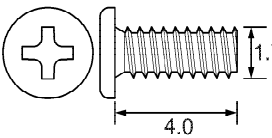


#12: M1.7 X 5.0 (Black)
3-080-204-21

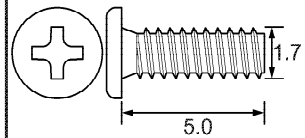

#13: M1.7 X 2.5 (Silver)
3-085-397-01

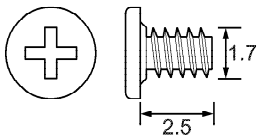

#14: M1.7 X 2.5 (Silver)
2-599-475-11

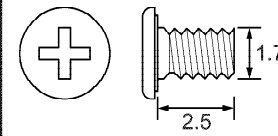

#15: M1.4 X 1.5 (Silver)
3-062-214-01

