


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. HDD SECTION

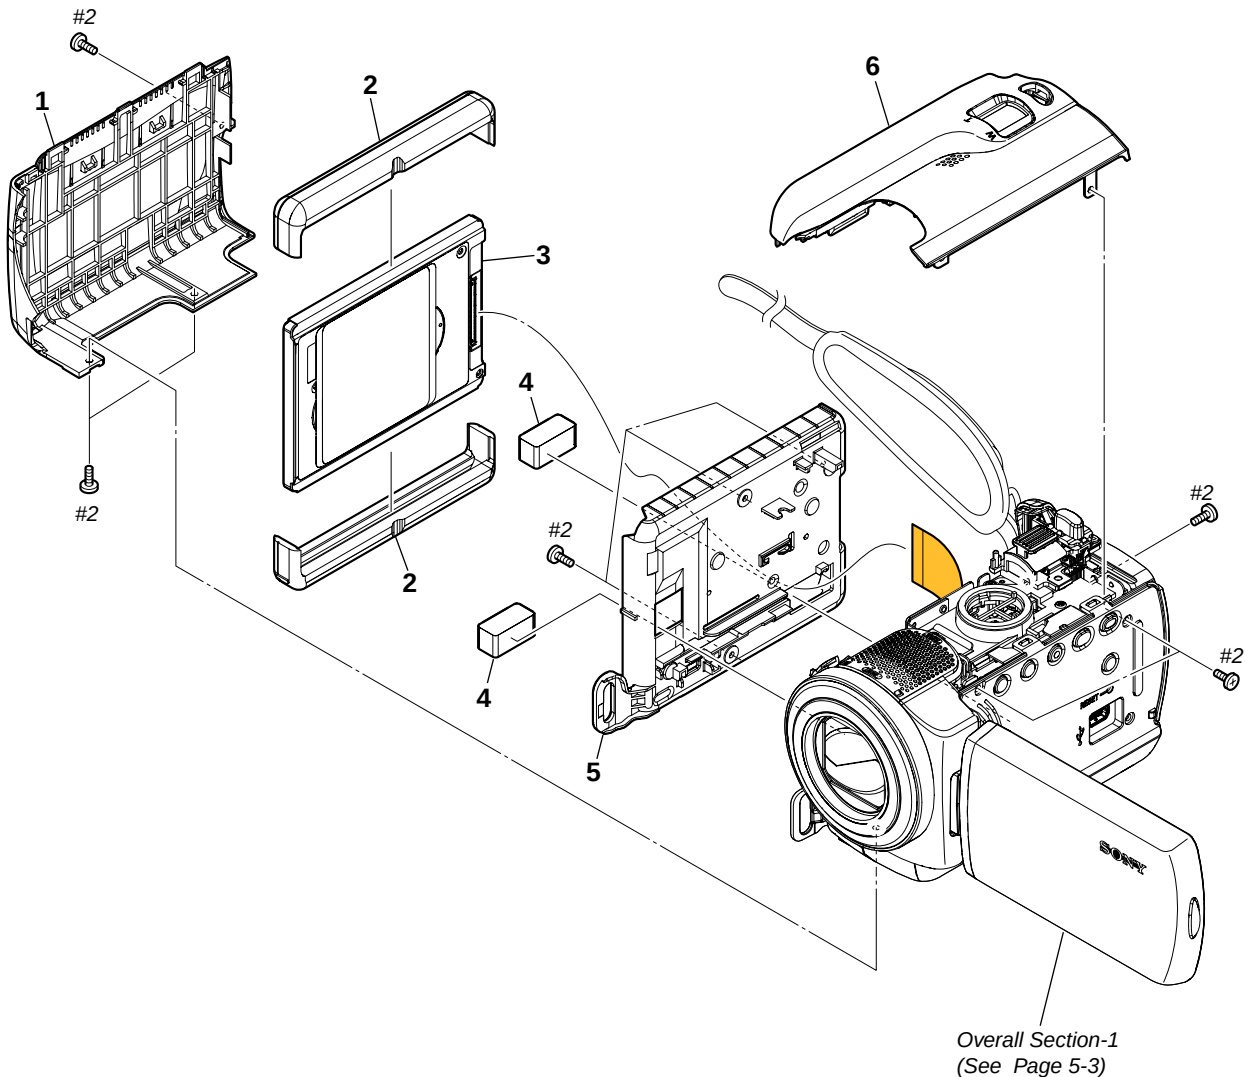

Ref. No.	Part No.	Description
1	4-128-635-01	LID, HDD (SR57E/SR67/SR67E)
1	4-128-635-11	LID, HDD (SR37E/SR38E/SR47/SR47E/SR48/SR48E)
2	4-128-711-01	DAMPER B (1), 9STYLE
3	1-840-184-21	HDD (MK6031GAL-60GB) (SR37E/SR47/SR47E)
3	1-840-185-21	HDD (MK8031GAL-80GB) (SR38E/SR48/SR48E/R57E/SR67/SR67E)
4	4-134-206-01	GASKET (OG)
5	4-128-653-01	HOLDER, HDD

Ref. No.	Part No.	Description
6	A-1643-693-A	CABINET ASSY (303), TOP (SR57E/SR67/SR67E)
6	A-1643-695-A	CABINET ASSY (301), TOP (SR37E/SR38E/SR47: SILVER/SR47E: SILVER/SR48/SR48E)
6	A-1643-696-A	CABINET ASSY (301R), TOP (SR47: RED/SR47E: RED)
6	A-1643-697-A	CABINET ASSY (301L), TOP (SR47: BLUE/SR47E: BLUE)
#2	2-635-562-31	SCREW (M1.7) (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL SECTION-1

ns: not supplied

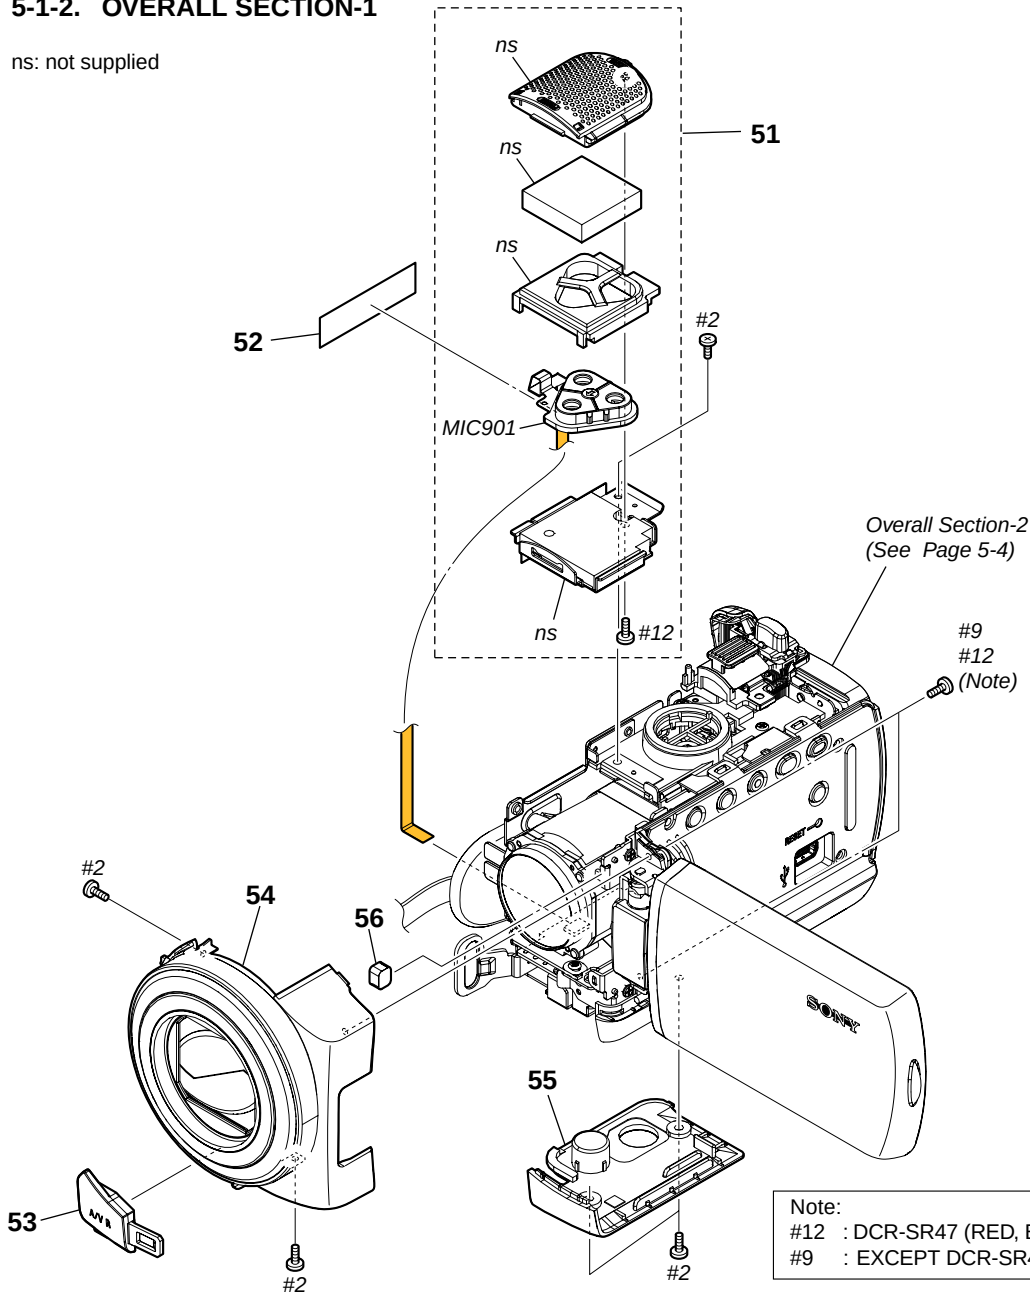

Note:

#12 : DCR-SR47 (RED, BLUE)/SR47E (RED, BLUE)
#9 : EXCEPT DCR-SR47 (RED, BLUE)/SR47E (RED, BLUE)

Ref. No.	Part No.	Description
51	A-1643-700-A	MICROPHONE ASSY (303) (5.1ch) (SR57E/SR67/SR67E)
51	A-1643-702-A	MICROPHONE ASSY (301) (2ch) (SR37E/ SR38E/SR47: SILVER/SR47E: SILVER/SR48/SR48E)
51	A-1643-703-A	MICROPHONE ASSY (301R) (2ch) (SR47: RED/ SR47E: RED)
51	A-1643-704-A	MICROPHONE ASSY (301L) (2ch) (SR47: BLUE/SR47E: BLUE)
52	3-080-272-01	TAPE (A)
53	4-128-576-01	COVER, AV JACK
54	A-1643-666-A	PANEL ASSY (303), F (SR57E/SR67/SR67E)
54	A-1643-670-A	PANEL ASSY (301), F (SR37E/SR38E/ SR47: SILVER/SR47E: SILVER/SR48/SR48E)
54	A-1643-673-A	PANEL ASSY (301R), F (SR47: RED/SR47E: RED)

Ref. No.	Part No.	Description
54	A-1643-675-A	PANEL ASSY (301L), F (SR47: BLUE/SR47E: BLUE)
55	4-128-647-01	CABINET, BOTTOM
56	4-134-216-01	GASKET (YB)
MIC901	1-542-723-11	MICROPHONE UNIT (5.1ch) (SR57E/SR67/ SR67E)
MIC901	1-542-723-21	MICROPHONE UNIT (2ch) (SR37E/SR38E/ SR47/SR47E/SR48/SR48E)
#2	2-635-562-31	SCREW (M1.7) (Black)
#9	3-078-890-21	SCREW, TAPPING (Silver) (Note)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black) (Note)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. OVERALL SECTION-2

ns: not supplied

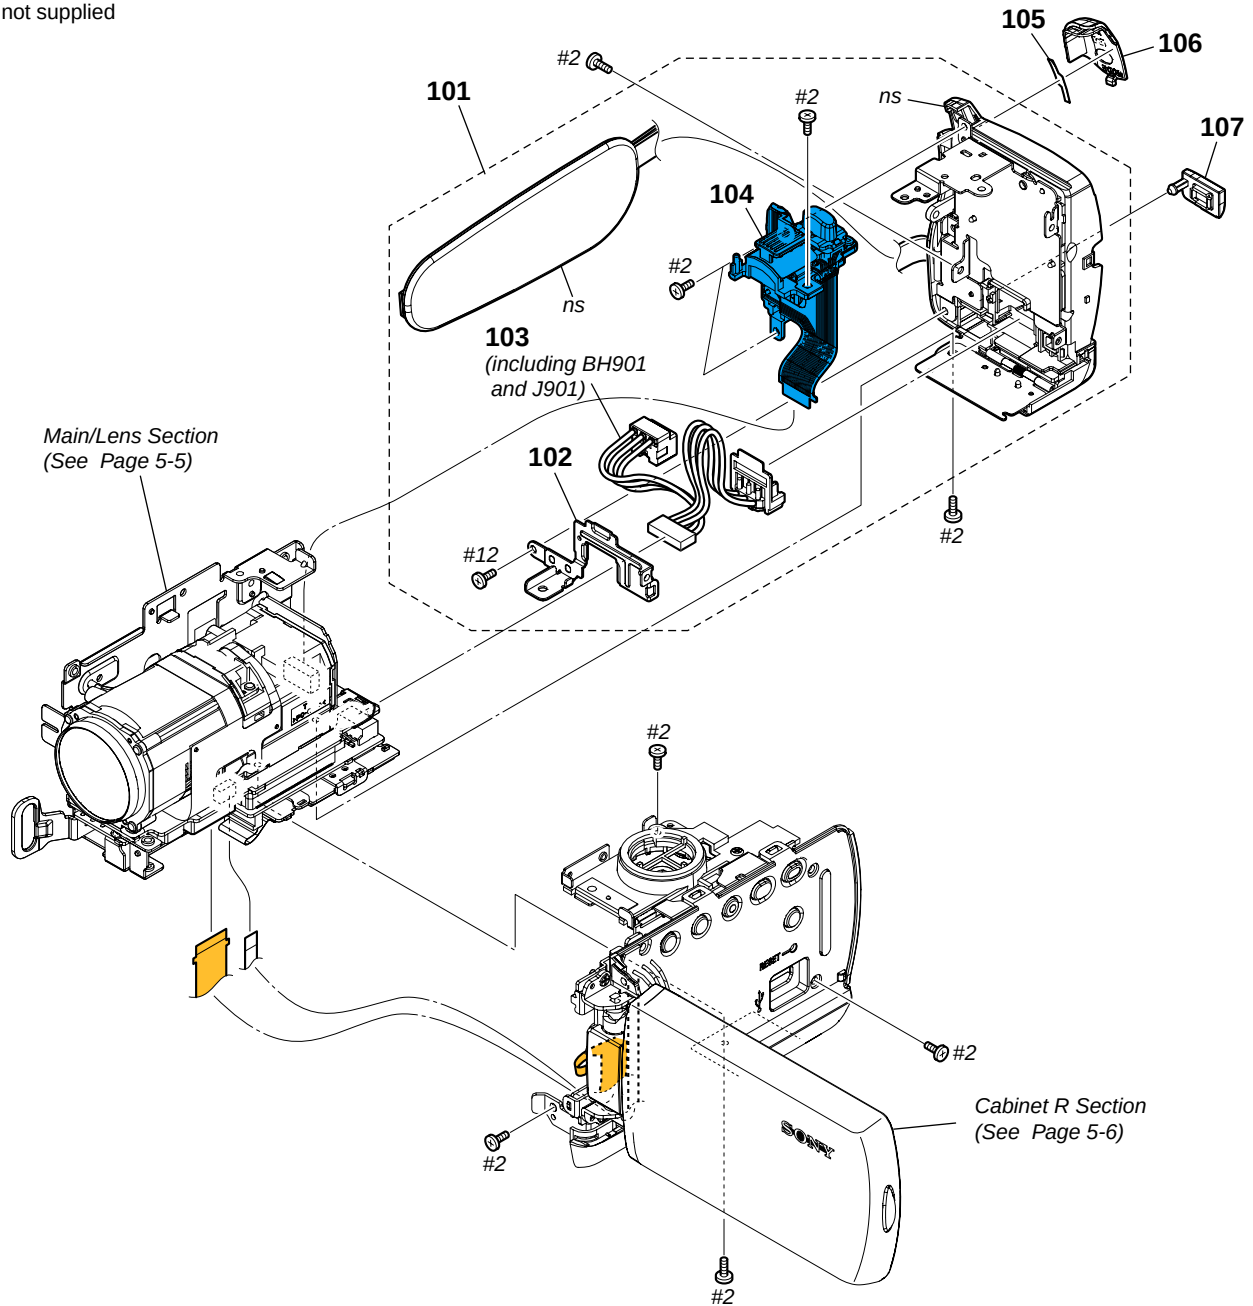

• Refer to page 5-1 for mark ▲.


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	A-1643-648-A	BT BLOCK ASSY (SR57E/SR67/SR67E)	105	4-128-595-01	SHEET, PS ADHESIVE
101	A-1643-653-A	BT BLOCK ASSY (SR37E/SR38E/SR47/SR47E/SR48/SR48E)	106	4-128-637-01	CABINET, PS (SR57E/SR67/SR67E)
* 102	4-128-593-01	FRAME, DC	106	4-128-637-11	CABINET, PS (SR37E/SR38E/SR47/SR47E/SR48/SR48E)
▲ 103	1-822-470-11	JACK, DC (including BH901 and J901)	107	4-128-578-01	COVER, DCIN
104	1-487-054-11	SWITCH BLOCK, CONTROL (PS30300) (SR57E/SR67/SR67E)	#2	2-635-562-31	SCREW (M1.7) (Black)
104	1-487-054-21	SWITCH BLOCK, CONTROL (PS30300) (SR37E/SR38E/SR47/SR47E/SR48/SR48E)	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. MAIN/LENS SECTION

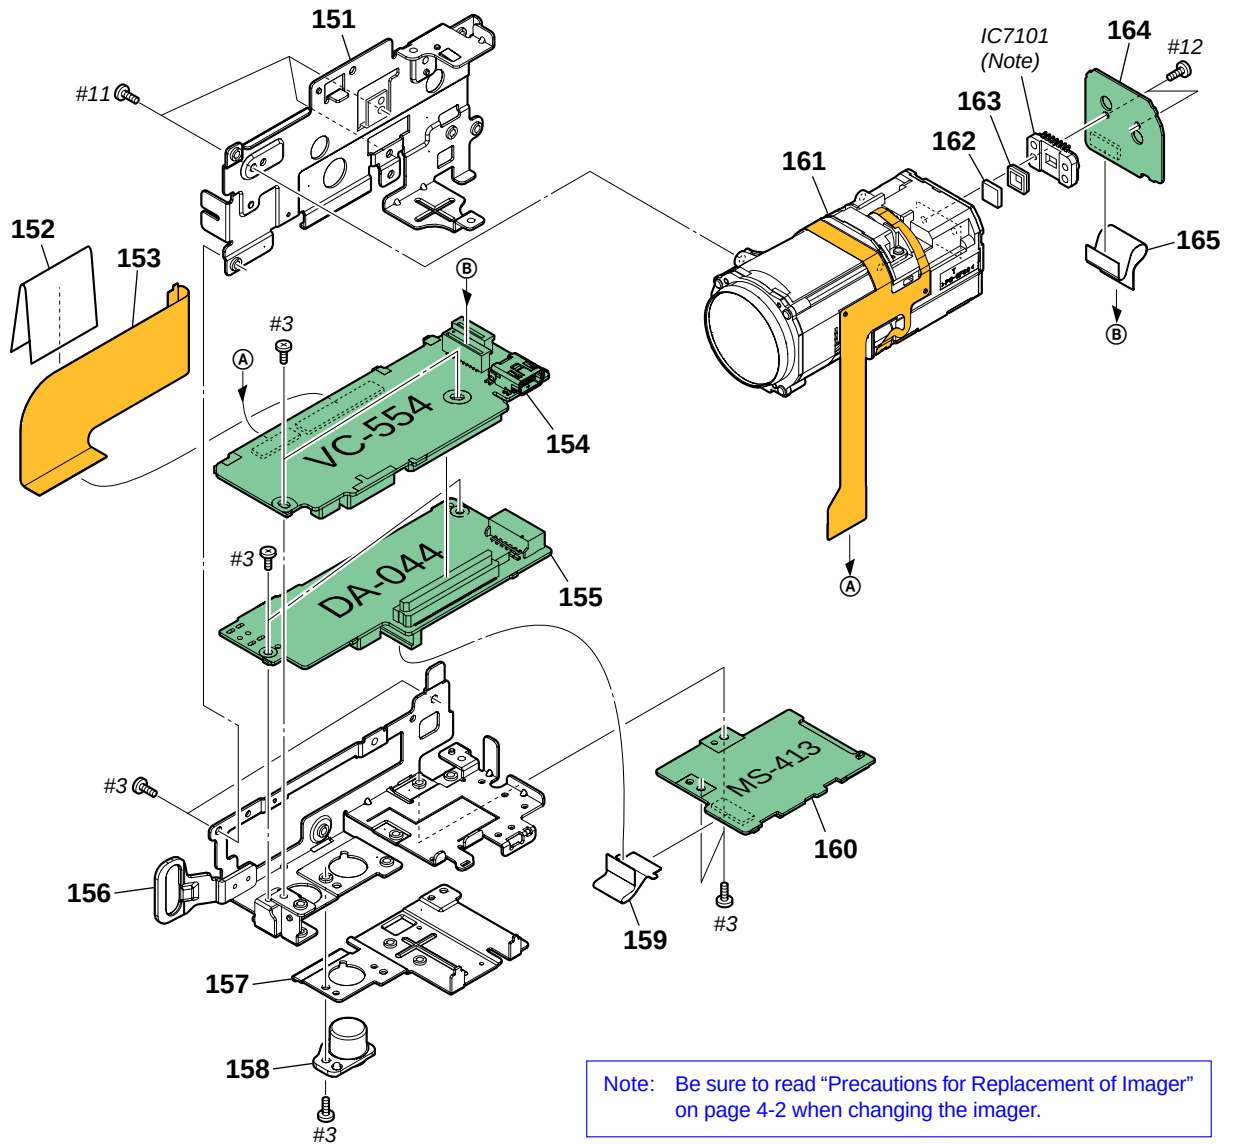

Ref. No.	Part No.	Description
* 151	4-128-634-01	FRAME, MAIN
152	4-134-225-01	*** (HDD), BUS
153	1-877-872-11	FP-1063 FLEXIBLE BOARD
154	A-1643-026-A	VC-554 BOARD, COMPLETE (SERVICE)
155	A-1641-838-A	DA-044 BOARD, COMPLETE (SR47/SR47E/ SR48/SR48E)
155	A-1641-839-A	DA-044 BOARD, COMPLETE (SR37E/SR38E)
155	A-1641-840-A	DA-044 BOARD, COMPLETE (SR67/SR67E)
155	A-1641-841-A	DA-044 BOARD, COMPLETE (SR57E)
* 156	X-2342-905-1	DA FRAME ASSY
* 157	4-128-646-01	FRAME, BOTTOM
158	3-283-643-01	SCREW, TRIPOD
159	1-835-743-11	CABLE, FLEXIBLE FLAT (FFC-184)

Ref. No.	Part No.	Description
160	A-1641-848-A	MS-413 BOARD, COMPLETE
161	1-788-861-11	OPTICAL UNIT (CK001)
162	1-788-870-11	OPTICAL FILTER BLOCK
163	3-878-748-01	RUBBER (1340), SEAL
164	A-1641-847-A	CD-753 BOARD, COMPLETE
165	1-835-742-11	CABLE, FLEXIBLE FLAT (FFC-183)
IC7101	8-753-288-68	ICX650NKF-H (CCD IMAGER) (SR47/SR48/ SR67) (Note)
IC7101	8-753-289-10	ICX651NKF-H (CCD IMAGER) (SR37E/SR38E/ SR47E/SR48E/SR57E/SR67E) (Note)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET R SECTION

ns: not supplied

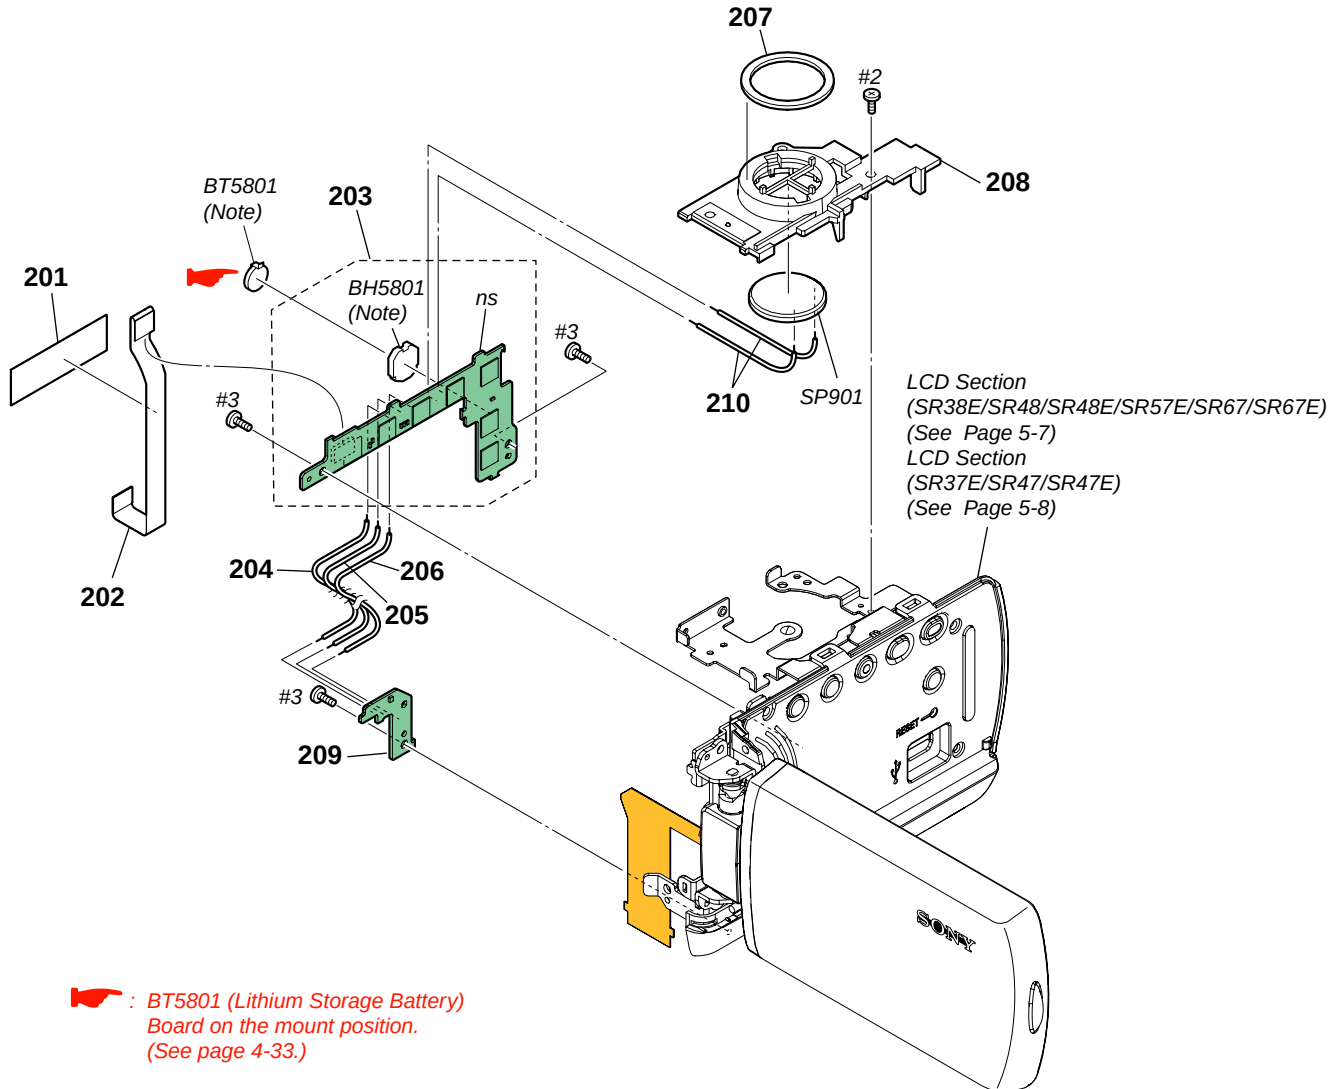

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
201	3-080-272-01	TAPE (A)
202	1-835-744-11	CABLE, FLEXIBLE FLAT (FFC-185)
203	A-1641-844-A	CK-209 BOARD, COMPLETE
204	1-966-307-11	HARNESS (HN-080) (Red)
205	1-966-306-11	HARNESS (HN-079) (Gray)
206	1-966-308-11	HARNESS (HN-081) (Black)
207	4-128-622-01	CUSHION, SP
208	4-128-623-01	HOLDER, SP
209	A-1641-849-A	OC-015 BOARD, COMPLETE

Ref. No.	Part No.	Description
210	1-964-966-11	HARNESS (HN-024) (Gray)
△BH5801	1-756-615-61	HOLDER, BATTERY (Note)
△BT5801	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
SP901	1-825-262-11	LOUD SPEAKER (1.6CM)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-6. LCD SECTION (SR38E/SR48/SR48E/SR57E/SR67/SR67E)

Refer to page 5-8 about DCR-SR37E/SR47/SR47E.

ns: not supplied

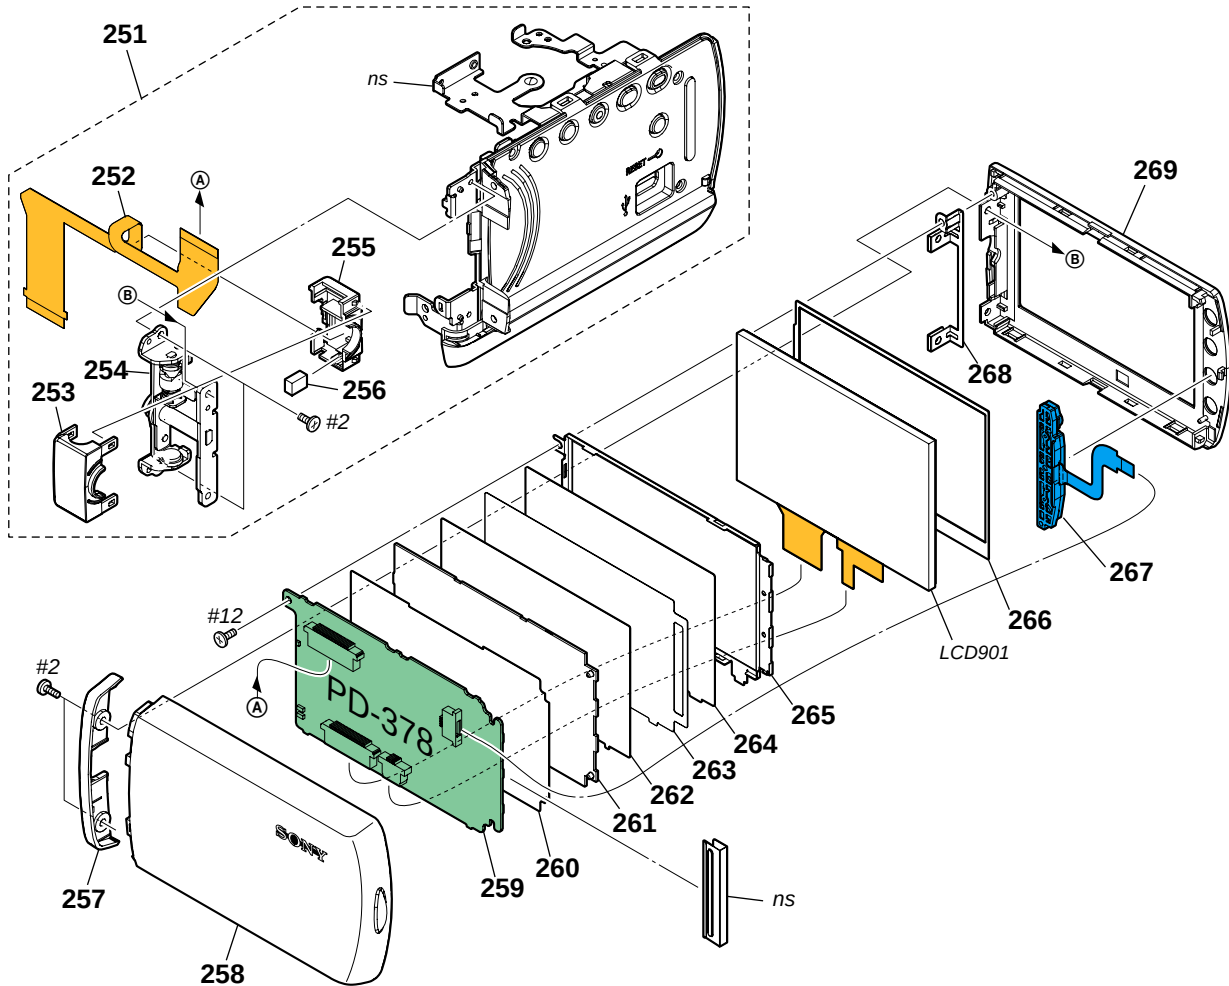

Refer to page 5-8 about DCR-SR37E/SR47/SR47E.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
251	A-1643-664-A	CABINET (R) ASSY (303)	262	2-694-514-01	DIFFUSION SHEET (2.7)
252	1-877-871-11	FP-1062 FLEXIBLE BOARD	263	2-694-513-01	PRISM SHEET H (2.7)
253	4-128-597-01	COVER (C), HINGE	264	2-694-512-01	PRISM SHEET V (2.7)
254	X-2342-900-1	HINGE ASSY (303)	265	2-694-516-01	FRONT FRAME (2.7)
255	4-128-598-01	COVER (M), HINGE	266	4-128-620-01	CUSHION, TP
256	1-471-504-11	MAGNET (ND5X3.5X2.4-B)	267	1-487-053-11	SWITCH BLOCK, CONTROL (SB30300)
257	4-128-655-01	BELT, LCD ORNAMENTAL	268	4-128-621-01	PLATE, LCD GROUND
258	A-1643-650-A	CABINET (C) ASSY (303), P (SR67/SR67E)	269	4-128-656-01	CABINET (M), P
258	A-1643-652-A	CABINET (C) ASSY (302), P (SR57E)	LCD901	A-1363-617-A	TP BLOCK ASSY (27STMG08T)
258	A-1643-658-A	CABINET (C) ASSY (3012), P (SR48/SR48E)	#2	2-635-562-31	SCREW (M1.7) (Black)
258	A-1643-660-A	CABINET (C) ASSY (3017), P (SR38E)	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
259	A-1641-846-A	PD-378 BOARD, COMPLETE			
260	2-694-515-01	REFLECTION SHEET (2.7)			
261	2-666-801-01	LIGHT GUIDE (2.7)			

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-7. LCD SECTION (SR37E/SR47/SR47E)

Refer to page 5-7 about DCR-SR38E/SR48/SR48E/SR57E/SR67/SR67E.

ns: not supplied

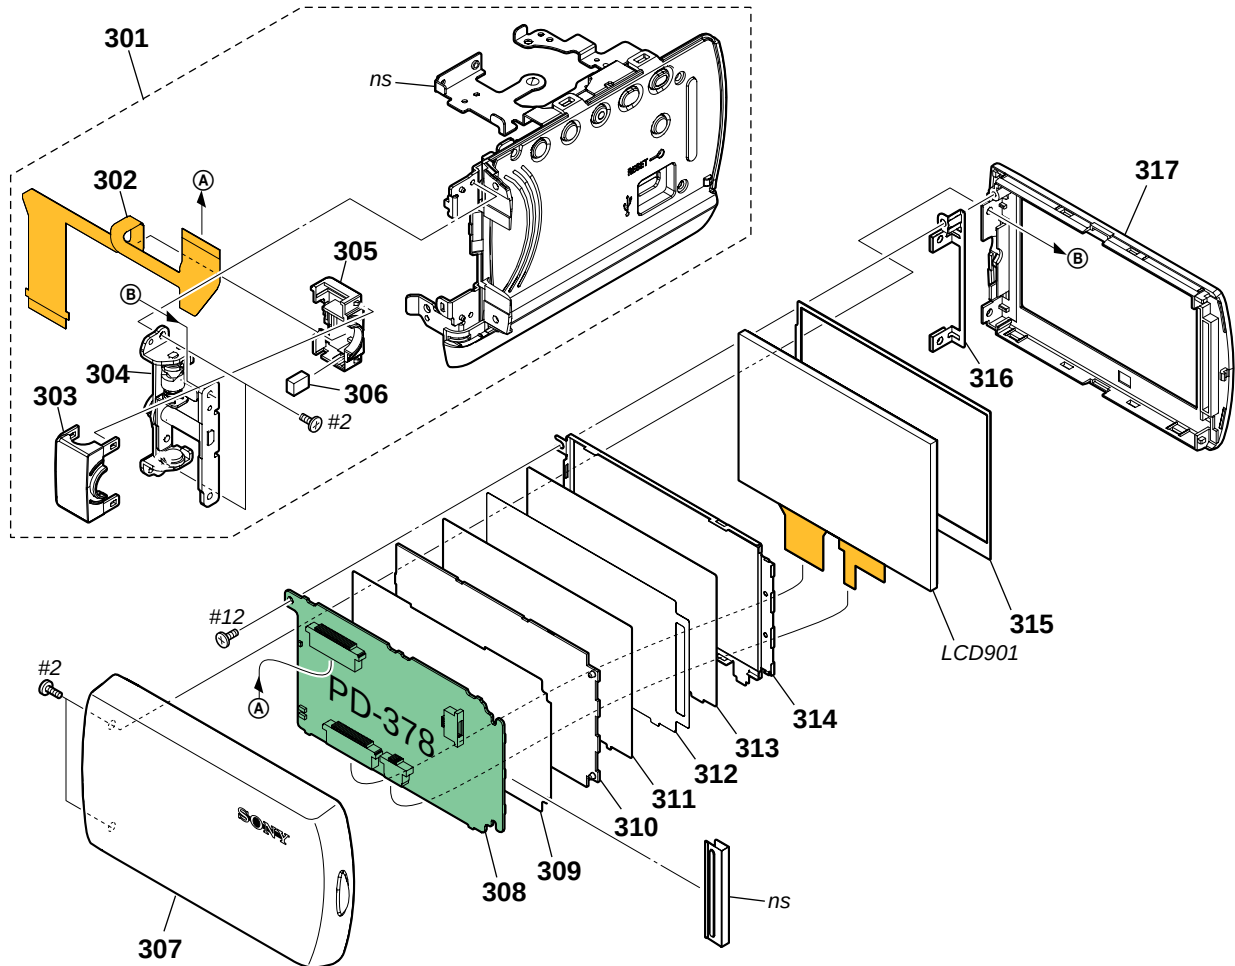

Refer to page 5-7 about DCR-SR38E/SR48/SR48E/SR57E/SR67/SR67E.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
301	A-1643-667-A	CABINET (R) ASSY (301) (SR37E/ SR47: SILVER/SR47E: SILVER)	307	A-1643-655-A	CABINET (C) ASSY (3010R), P (SR47: RED/ SR47E: RED)
301	A-1643-669-A	CABINET (R) ASSY (301R) (SR47: RED/ SR47E: RED)	307	A-1643-656-A	CABINET (C) ASSY (3010L), P (SR47: BLUE/ SR47E: BLUE)
301	A-1643-671-A	CABINET (R) ASSY (301L) (SR47: BLUE/ SR47E: BLUE)	307	A-1643-659-A	CABINET (C) ASSY (3015), P (SR37E)
302	1-877-871-11	FP-1062 FLEXIBLE BOARD	308	A-1641-845-A	PD-378 BOARD, COMPLETE
303	4-128-597-01	COVER (C), HINGE (SR37E/SR47: SILVER/ SR47E: SILVER)	309	2-694-515-01	REFLECTION SHEET (2.7)
303	4-128-597-21	COVER (C), HINGE (SR47: BLUE/SR47E: BLUE)	310	2-666-801-01	LIGHT GUIDE (2.7)
303	4-128-597-31	COVER (C), HINGE (SR47: RED/SR47E: RED)	311	2-694-514-01	DIFFUSION SHEET (2.7)
304	X-2342-900-1	HINGE ASSY (303)	312	2-694-513-01	PRISM SHEET H (2.7)
305	4-128-598-01	COVER (M), HINGE (SR37E/SR47: SILVER/ SR47E: SILVER)	313	2-694-512-01	PRISM SHEET V (2.7)
305	4-128-598-11	COVER (M), HINGE (SR47: BLUE/SR47E: BLUE/ SR47: RED/SR47E: RED)	314	2-694-516-01	FRONT FRAME (2.7)
306	1-471-504-11	MAGNET (ND5X3.5X2.4-B)	315	4-128-620-01	CUSHION, TP
307	A-1643-654-A	CABINET (C) ASSY (3010), P (SR47: SILVER/ SR47E: SILVER)	316	4-128-621-01	PLATE, LCD GROUND
			317	4-128-657-01	CABINET (M), P
			LCD901	A-1363-617-A	TP BLOCK ASSY (27STMG08T)
			#2	2-635-562-31	SCREW (M1.7) (Black)
			#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1641-847-A	CD-753 BOARD, COMPLETE *****
(IC7101 is not included in CD-753 complete board.)		
< CAPACITOR >		
C7101	1-124-779-00	ELECT CHIP 10uF 20% 16V
C7103	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C7104	1-124-779-00	ELECT CHIP 10uF 20% 16V
C7105	1-164-854-11	CERAMIC CHIP 15PF 5% 50V
C7108	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
< CONNECTOR >		
CN7101	1-816-648-61	FFC/CONNECTOR, FPC (LIF) 20P
< IC >		
IC7101	8-753-288-68	ICX650NKF-H (CCD IMAGER) (SR47/SR48/SR67) (Note 1)
IC7101	8-753-289-10	ICX651NKF-H (CCD IMAGER) (SR37E/SR38E/SR47E/SR48E/SR57E/SR67E) (Note 1)
< COIL >		
L7101	1-400-588-11	INDUCTOR 10uH
< TRANSISTOR >		
* Q7101	6-551-873-01	TRANSISTOR 2SC3931G0LS0
< RESISTOR >		
R7101	1-218-959-11	METAL CHIP 3.3K 5% 1/16W
A-1641-844-A CK-209 BOARD, COMPLETE *****		
(BT5801 and SP901 are not included in CK-209 complete board.)		
< BATTERY HOLDER >		
△BH5801	1-756-615-61	HOLDER, BATTERY (Note 2)
< BATTERY >		
△BT5801	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note 2)
< CONNECTOR >		
* CN5805	1-816-643-51	FFC/CONNECTOR, FPC (LIF) 10P
< RESISTOR >		
R5802	1-218-954-11	METAL CHIP 1.2K 5% 1/16W
R5803	1-218-955-11	METAL CHIP 1.5K 5% 1/16W
R5804	1-218-957-11	METAL CHIP 2.2K 5% 1/16W
R5805	1-218-960-11	METAL CHIP 3.9K 5% 1/16W
< SWITCH >		
* S5801	1-786-914-51	SWITCH, TACTILE (DISC BURN)
* S5802	1-786-914-51	SWITCH, TACTILE (RESET)
* S5803	1-786-914-51	SWITCH, TACTILE (BACKLIGHT)
* S5804	1-786-914-51	SWITCH, TACTILE (VIEW IMAGES)
* S5805	1-786-914-51	SWITCH, TACTILE (EASY)

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* S5806	1-786-914-51	SWITCH, TACTILE (DISP)
* S5807	1-786-914-51	SWITCH, TACTILE (POWER)

< SPEAKER >

SP901 1-825-262-11 LOUD SPEAKER (1.6CM)

Electrical parts list of the DA-044 board is not shown.
Pages 5-10 to 5-12 are not shown.

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

Note 2: Replace the battery holder (BH5801) together when replacing the lithium storage battery (BT5801) on the CK-209 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium storage battery next.


Ref. No.	Part No.	Description
	1-877-871-11	FP-1062 FLEXIBLE BOARD *****
(There isn't mounted electrical parts in FP-1062 flexible board.)		
	1-877-872-11	FP-1063 FLEXIBLE BOARD *****
(There isn't mounted electrical parts in FP-1063 flexible board.)		
	A-1641-848-A	MS-413 BOARD, COMPLETE *****
< CONNECTOR >		
* CN7301	1-816-646-51	FFC/CONNECTOR, FPC (LIF) 16P
CN7302	1-819-613-22	MEMORY STICK DUO CONNECTOR 10P
< DIODE >		
D7301	6-502-193-01	DIODE SML-D12V8WT86SN (MS ACCESS)
< FERRITE BEAD >		
FB7301	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7302	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7303	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7304	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
< RESISTOR >		
R7302	1-218-943-11	METAL CHIP 150 5% 1/16W
R7303	1-218-943-11	METAL CHIP 150 5% 1/16W
R7306	1-218-943-11	METAL CHIP 150 5% 1/16W
R7307	1-218-943-11	METAL CHIP 150 5% 1/16W
R7309	1-218-951-11	METAL CHIP 680 5% 1/16W
	A-1641-849-A	OC-015 BOARD, COMPLETE *****
< CAPACITOR >		
C8301	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< SENSOR >		
* SE8301	1-487-118-21	GMR SENSOR (PANEL OPEN/CLOSE)
	A-1641-845-A	PD-378 BOARD, COMPLETE (SR37E/SR47/SR47E)
	A-1641-846-A	PD-378 BOARD, COMPLETE (SR38E/SR48/SR48E/SR57E/SR67/SR67E) *****
< CAPACITOR >		
C6201	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6202	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6203	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6205	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6206	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6207	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6210	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6212	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C6216	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V

Ref. No.	Part No.	Description
C6217	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6218	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6224	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6225	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6226	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6231	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
* C6232	1-100-741-81	CERAMIC CHIP 560PF 5% 50V
C6233	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
< CONNECTOR >		
CN6201	1-815-031-51	FFC/CONNECTOR, FPC (ZIF) 24P
* CN6202	1-573-915-51	CONNECTOR, FFC/FPC (ZIF) 6P
* CN6204	1-818-069-61	CONNECTOR, FFC/FPC (ZIF) 6P
CN6205	1-815-031-51	FFC/CONNECTOR, FPC (ZIF) 24P
< DIODE >		
D6201	8-719-084-17	DIODE EMZ6.8ET2R
* D6203	6-501-955-01	DIODE MAZS056G08S0
* D6205	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
* D6206	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
* D6207	6-501-597-01	DIODE NSSW008DT-T108 (LCD BACKLIGHT)
< IC >		
* IC6201	8-753-307-97	IC CXM3018R-T4
< COIL >		
* L6201	1-481-425-21	INDUCTOR 10uH
* L6202	1-481-425-21	INDUCTOR 10uH
< TRANSISTOR >		
Q6201	8-729-427-37	TRANSISTOR XP411F-TXE
Q6202	8-729-427-67	TRANSISTOR XP421F-TXE
* Q6204	6-551-766-01	TRANSISTOR UNR32A3G0LS0
Q6205	6-551-184-01	TRANSISTOR MCH6305-TL-E-S
< RESISTOR >		
R6202	1-218-955-11	METAL CHIP 1.5K 5% 1/16W
R6203	1-218-957-11	METAL CHIP 2.2K 5% 1/16W
R6204	1-218-975-11	METAL CHIP 68K 5% 1/16W
R6209	1-218-953-11	METAL CHIP 1K 5% 1/16W
R6210	1-208-935-11	METAL CHIP 100K 0.5% 1/16W
R6215	1-218-965-11	METAL CHIP 10K 5% 1/16W
R6217	1-218-977-11	METAL CHIP 100K 5% 1/16W
R6218	1-218-989-11	METAL CHIP 1M 5% 1/16W
R6226	1-218-954-11	METAL CHIP 1.2K 5% 1/16W
< COMPOSITION CIRCUIT BLOCK >		
* RB621	1-200-016-21	RES, NETWORK 82 (1005X4)
< SENSOR >		
* SE6201	1-487-118-11	GMR SENSOR (PANEL REVERSE DETECTION)

Electrical parts list of the VC-554 board is not shown.
Pages 5-14 to 5-16 are not shown.

Checking supplied accessories.

 Note : This item is supplied with the unit as an accessory, but is not prepared as a service part.



AC Adaptor
(AC-L200C/L200D)
(EXCEPT BR)
* Compatible in
L200C and L200D
△ 1-487-150-21



Power cord (Mains lead)
(EXCEPT BR)
△ 1-783-952-71 (AR)
△ 1-832-121-41 (CH)
△ 1-832-169-41 (UK, HK)
△ 1-833-892-41 (KR)
△ 1-834-482-31
(AEP, NE, E:NTSC (Latin America), E:PAL)
△ 1-834-484-31 (US, CND)
△ 1-834-852-11 (E:NTSC (EXCEPT Latin America))
△ 1-835-983-11 (AUS)



Conversion (2P) Adaptor
△ 1-569-008-12
(E:NTSC (Latin America))



Conversion (2P) Adaptor
△ 1-569-007-12 (E:NTSC (EXCEPT Latin America))



 
A/V connecting cable
1-823-156-61




USB cable
1-829-868-31



Operating Guide
(DCR-SR47/SR48/SR67)
4-124-308-11 (ENGLISH, SPANISH) (US, CND, AR, E:NTSC)
4-124-308-21 (FRENCH) (CND)
4-124-308-41 (TRADITIONAL CHINESE)
(E:NTSC (EXCEPT Latin America))
4-124-308-51 (KOREAN) (KR)



 Rechargeable battery pack
(NP-FH30)
(Note)



CD-ROM "Handycam
Application Software"
— "PMB" (software) including "PMB Guide"
— "Handycam Handbook" (PDF)
4-133-038-01

Operating Guide
(DCR-SR37E/SR38E/SR47E/SR48E/SR57E/SR67E)
4-128-142-31 (TRADITIONAL CHINESE) (HK)
4-124-309-11 (ENGLISH) (AEP, UK, HK, AUS, E:PAL)
4-124-309-21 (FRENCH, DUTCH, GERMAN, ITALIAN) (AEP)
4-124-309-31 (TURKISH, SPANISH, PORTUGUESE, GREEK) (AEP)
4-124-309-41 (POLISH, CZECH, HUNGARIAN, SLOVAK) (AEP)
4-124-309-51 (ROMANIAN, SWEDISH, DANISH, FINNISH) (AEP)
4-124-309-61 (RUSSIAN, UKRAINIAN) (NE)
4-124-309-71 (SIMPLIFIED CHINESE) (CH, E:PAL)
4-124-309-91 (ARABIC, PERSIAN) (E:PAL)



The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Handycam Handbook.pdf) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.

- (Only for destination Japanese model)

"tmMox w U,,npw ... D pbf

Handycam Handbook (PDF)

DCR-SR47/SR48/SR67


- 4-124-310-01 (JAPANESE)
- * 4-124-310-11 (ENGLISH)
- * 4-124-310-21 (SPANISH)
- * 4-124-310-31 (FRENCH)
- * 4-124-310-41 (PORTUGUESE)
- * 4-124-310-51 (TRADITIONAL CHINESE)
- * 4-124-310-61 (KOREAN)

DCR-SR37E/SR38E/SR47E/SR48E/SR57E/SR67E


- * 4-124-311-11 (ENGLISH)
- * 4-124-311-21 (FRENCH)
- * 4-124-311-31 (DUTCH)
- * 4-124-311-41 (GERMAN)
- * 4-124-311-51 (ITALIAN)
- * 4-124-311-61 (TRUKISH)
- * 4-124-311-71 (SPANISH)
- * 4-124-311-81 (PORTUGUESE)
- * 4-124-311-91 (GREEK)
- * 4-124-312-11 (POLISH)
- * 4-124-312-21 (CZECH)
- * 4-124-312-31 (HUNGARIAN)
- * 4-124-312-41 (SLOVAK)
- * 4-124-312-51 (ROMANIAN)
- * 4-124-312-61 (RUSSIAN)
- * 4-124-312-71 (UKRAINIAN)
- * 4-124-312-81 (SWEDISH)
- * 4-124-312-91 (DANISH)
- * 4-124-313-11 (FINNISH)
- * 4-124-313-21 (SIMPLIFIED CHINESE)
- * 4-124-313-31 (MALAY)
- * 4-124-313-41 (ARABIC)
- * 4-124-313-51 (PERSIAN)
- * 4-124-313-61 (INDONESIAN)
- * 4-124-313-71 (THAI)
- * 4-124-313-81 (TRADITIONAL CHINESE)

HARDWARE LIST (1/8)


#1: M1.7 X 2.5
(Black)
2-635-562-11

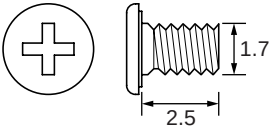


#2: M1.7 X 4.0
(Black)
2-635-562-31

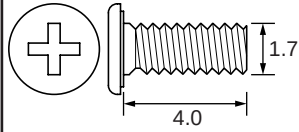


#3: M1.7 X 2.5
(Red)
2-660-401-01

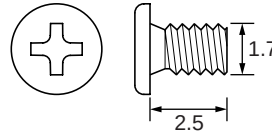


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

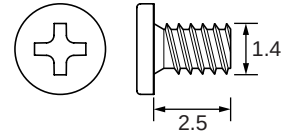


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

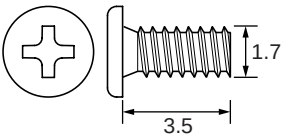


#6: M1.4 X 1.7
(Silver)
2-598-474-01

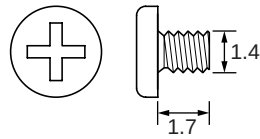


#7: M1.7 X 1.6
(Black)
7-627-552-18

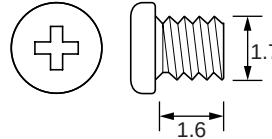


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

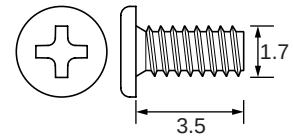


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

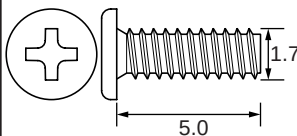


#10: M1.7 X 4.0
(Silver)
2-599-475-31

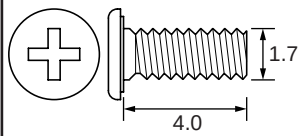


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

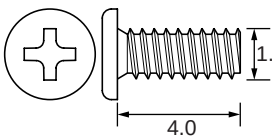


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

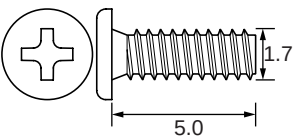


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

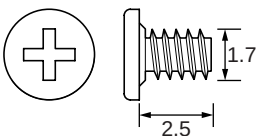


#14: M1.7 X 2.5
(Silver)
2-599-475-11

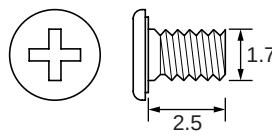


#15: M1.4 X 1.5
(Silver)
3-062-214-01

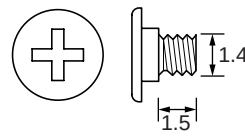


#16: M1.4 X 2.5
(Silver)
2-586-337-01

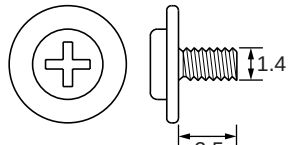


#17: M1.7 X 1.5
(Silver)
2-586-389-01

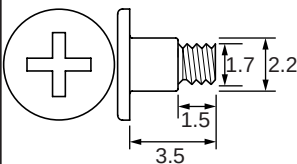


#18: M1.4 X 2.5
(Silver)
2-635-591-21

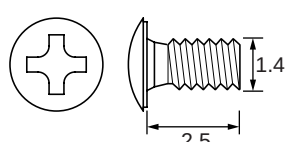

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

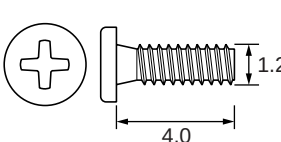


#20: M1.4 X 3.0
(Silver)
2-635-591-31

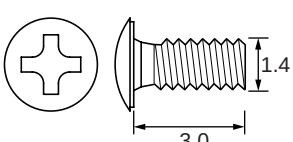


HARDWARE LIST (2/8)


#21: M1.4 X 3.0
(Black)
2-662-396-21

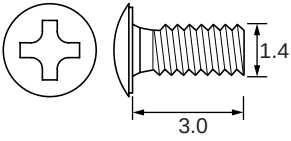


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

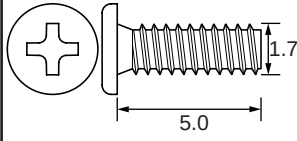


#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

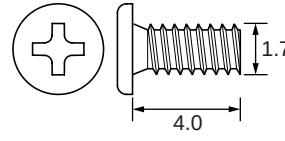


#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

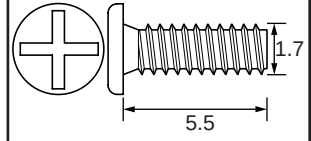


#25: M1.7 X 3.0
(Black)
2-635-562-21

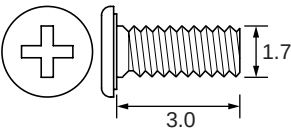


#26: M1.4 X 2.0
(Silver)
2-635-591-11

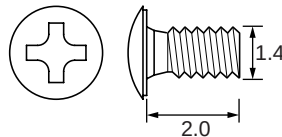


#27: M1.4 X 2.0
(Black)
2-662-396-11

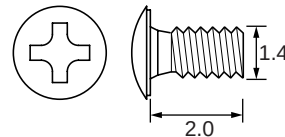


#28: M1.4 X 4.0 (Tapping)
(Silver)
3-348-998-61

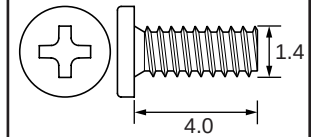


#29: M1.4 X 2.5
(Black)
2-662-396-01

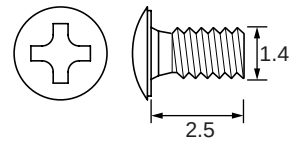


#30: M1.2 X 3.5 (Tapping)
(White)
3-086-156-11

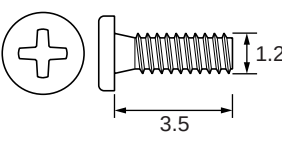


#31: M3.0 X 4.0
(Silver)
2-102-434-01

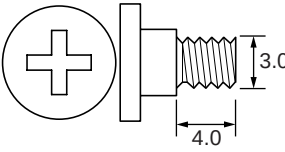


#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

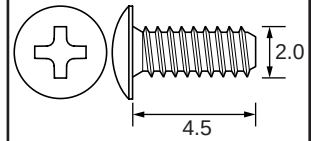


#33: M3.0 X 6.0
(Silver)
3-077-331-21

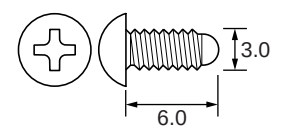


#34: M3.0 X 8.0
(Black)
3-077-331-41

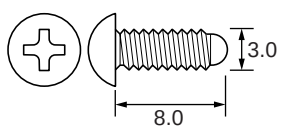


#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

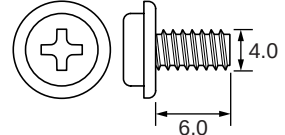


#36: M3.0 X 6.0
(Silver)
4-886-821-11

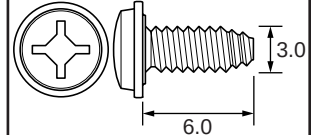


#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

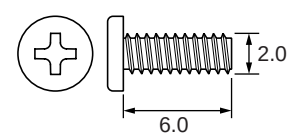


#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

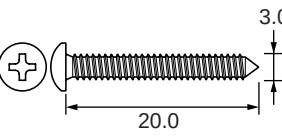

#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

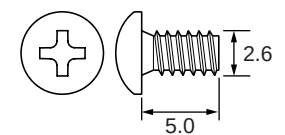


#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

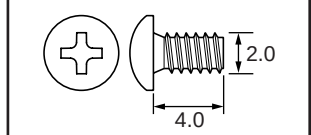


HARDWARE LIST (3/8)


#41: M3.0 X 8.0 (Tapping)
(Silver)
3-065-748-01

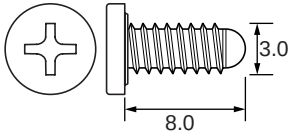


#42: M2.0 X 4.0 (Tapping)
(Silver)
7-628-253-00

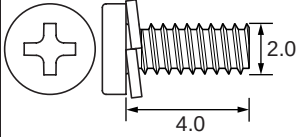


#43: M1.7 X 4.0
(Red)
2-660-401-31

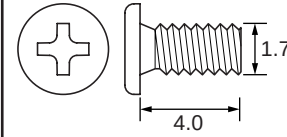


#44: M1.7 X 3.0 (Tapping)
(Silver)
3-078-890-61

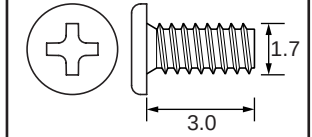


#45: M1.4 X 2.5
(Silver)
2-587-151-01

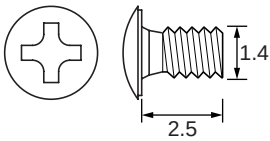


#46: M1.7 X 3.0
(Red)
2-660-401-11

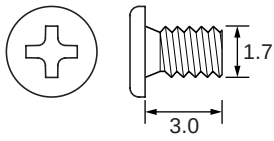


#47: M1.4 X 3.0 (Tapping)
(Silver)
2-665-774-01

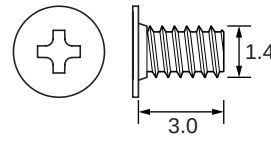


#48: M1.7 X 2.5
(Silver)
3-973-497-91

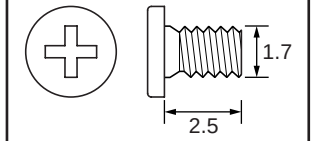


#49: M2.0 X 4.0
(Black)
2-630-005-31

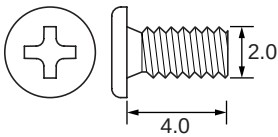


#50: M2.0 X 3.0
(Red)
2-891-494-11

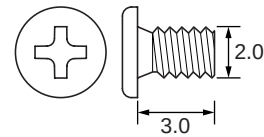


#51: M2.0 X 2.5
(Silver)
3-073-686-01

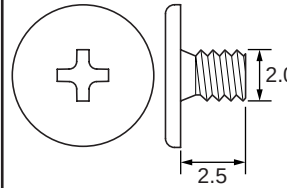


#52: M2.0 X 4.0 (Tapping)
(Black)
3-080-206-11

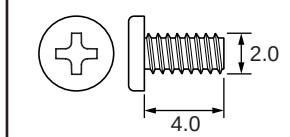


#53: M2.0 X 5.0 (Tapping)
(Black)
3-080-206-21

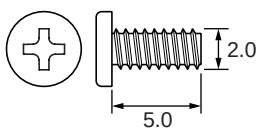


#54: M1.75 X 6.0 (Tapping)
(Black)
3-318-203-11

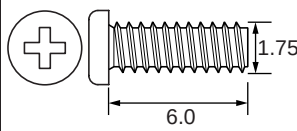


#55: M2.0 X 4.0
(Silver)
2-655-582-11

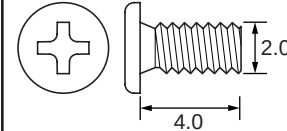


#56: M2.0 X 3.5
(Silver)
3-067-187-11

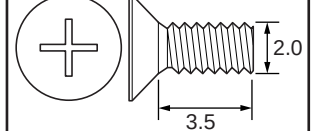


#57: M1.7 X 4.0
(Black)
7-627-852-18

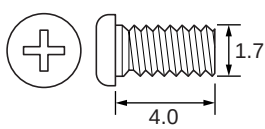


#58: M2.0 X 6.0 (Tapping)
(Silver)
3-719-408-11

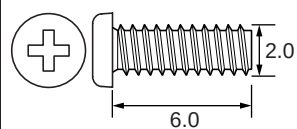

#59: M2.0 X 5.0 (Tapping)
(Silver)
3-080-205-21

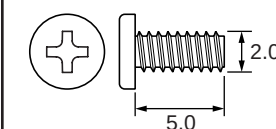


#60: M2.6 X 5.0
(Black)
3-061-062-11

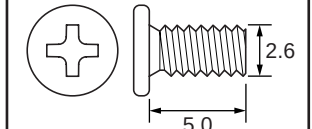


HARDWARE LIST (4/8)


#61: M3.0 X 10.0
(Black)
7-682-549-09

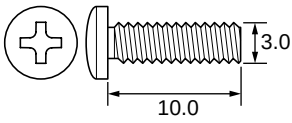


#62: M2.0 X 3.0
(Silver)
3-080-202-21

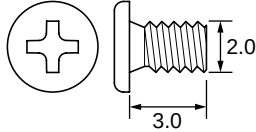


#63: M5.0 X 12.5
(Black)
3-060-811-21

 


#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

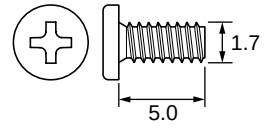


#65: M1.4 X 3.5
(Silver)
2-635-591-01

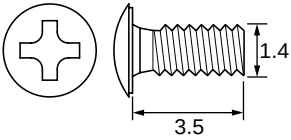


#66: M1.4 X 1.4
(Silver)
2-635-591-41

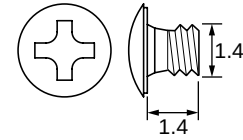


#67: M1.4 X 2.0
(Silver)
3-389-523-16

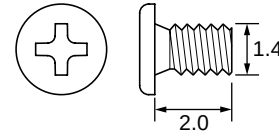


#68: M1.7 X 4.0
(Silver)
2-655-581-01

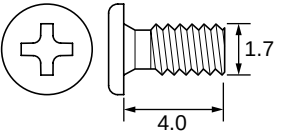


#69: M1.7 X 3.0
(Silver)
2-599-475-21

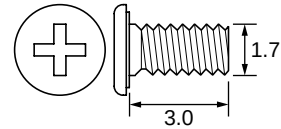


#70: M1.7 X 5.0
(Silver)
2-599-475-41

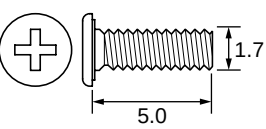


#71: M1.4 X 2.0
(Red)
3-208-537-01

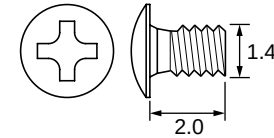


#72: M1.4 X 2.0
(Silver)
4-663-621-41

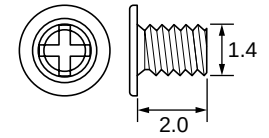


#73: M1.2 X 4.0 (Tapping)
(Black)
3-086-156-61

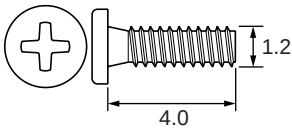


#74: M1.7 X 6.0 (Tapping)
(Silver)
2-666-551-31

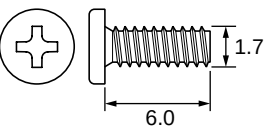


#75: M1.7 X 3.5 (Tapping)
(Silver)
2-666-551-01

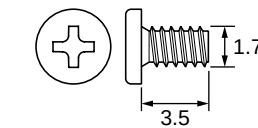


#76: M1.7 X 4.0 (Tapping)
(Silver)
2-666-551-11

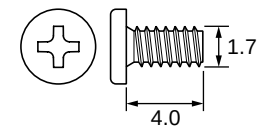


#77: M1.2 X 5.0 (Tapping)
(Silver)
3-086-156-31

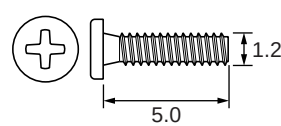


#78: M1.4 X 3.5
(Red)
3-208-537-11

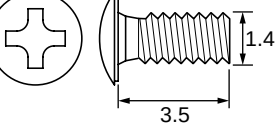

#79: M1.4 X 2.0
(Silver)
2-587-151-11

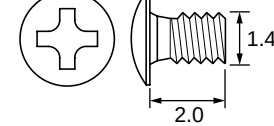


#80: M1.4 X 2.0
(Black)
3-279-411-01

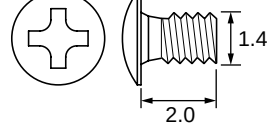


HARDWARE LIST (5/8)


#81: M1.7 X 2.5
(Silver)
2-515-756-01

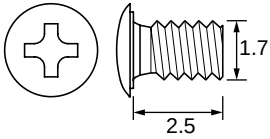


#82: M1.4 X 1.4
(Silver)
3-272-251-01

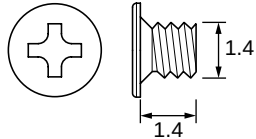


#83: M1.7 X 7.0 (Tapping)
(Black)
3-080-204-41

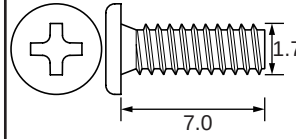


#84: M2.0 X 3.0
(Silver)
3-072-453-11

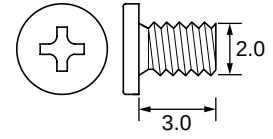


#85: M1.7 X 2.5
(Black)
2-515-483-11

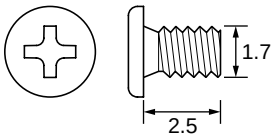


#86: M1.7 X 4.0 (Tapping)
(Silver)
2-695-434-21

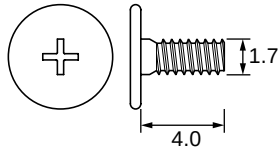


#87: M1.6 X 5.3
(Black)
2-689-328-01

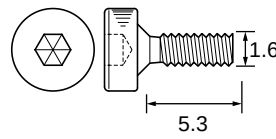


#88: M1.6 X 5.9 (Tapping)
(Silver)
2-689-015-01

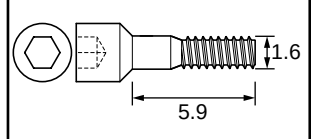


#89: M2.0 X 5.5 (Tapping)
(Silver)
2-695-575-01

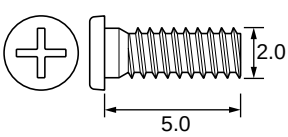


#90: M1.7 X 3.0
(Silver)
3-271-395-01

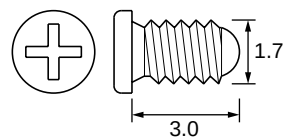


#91: M1.7 X 3.0 (Tapping)
(Silver)
2-695-434-11

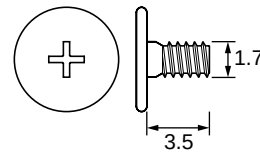


#92: M2.0 X 3.9
(Black)
3-268-954-01

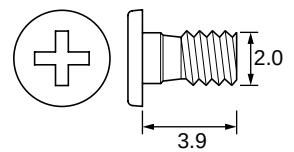


#93: M1.7 X 3.5 (Tapping)
(Silver)
3-254-082-01

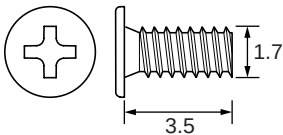


#94: M1.7 X 4.0
(Black)
2-515-483-31

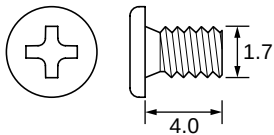


#95: M3.0 X 8.0 (Tapping)
(Black)
7-685-646-79

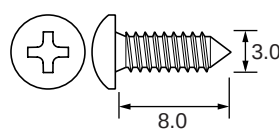


#96: M1.4 X 2.5
(Silver)
2-587-151-21

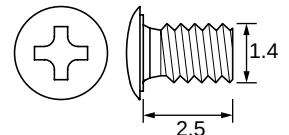


#97: M1.4 X 2.5
(Black)
2-662-396-31

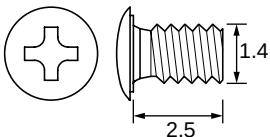


#98: M3.0 X 8.0
(Silver)
3-077-331-01

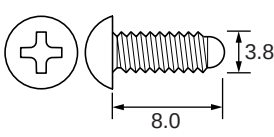

#99: M2.5 X 6.0 (Tapping)
(Silver)
3-776-750-02

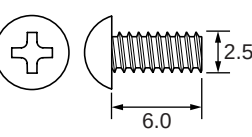


#100: M2.0 X 6.0
(Black)
3-080-203-51

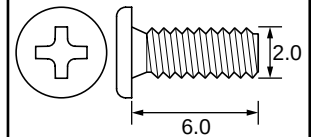


HARDWARE LIST (6/8)


#101: M2.0 X 5.0
(Silver)
7-621-555-39

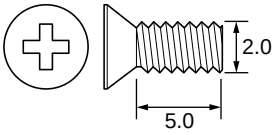


#102: M2.6 X 8.0
(Black)
7-621-284-30

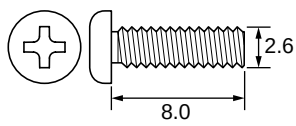


#103: M2.6 X 10.0
(Silver)
7-685-794-09

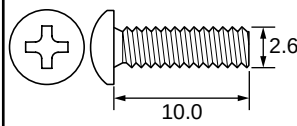


#104: M3.0 X 8.0
(Black)
7-682-548-09

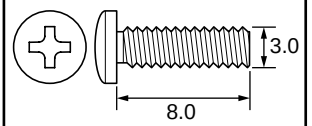


#105: M2.0 X 4.0
(Red)
2-891-494-31

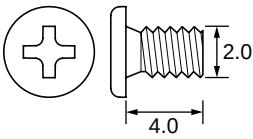


#106: M2.0 X 6.0
(Black)
3-713-786-11

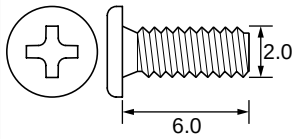


#107: M2.0 X 5.0
(Silver)
3-032-750-01

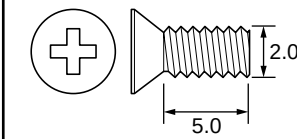


#108: M1.7 X 3.0 (Tapping)
(Black)
2-695-430-01

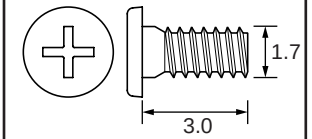


#109: M1.7 X 3.0
(Black)
2-515-483-21

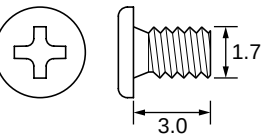


#110: M2.0 X 3.0
(Black)
2-630-005-21

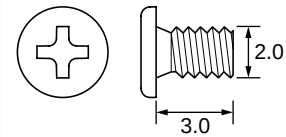


#111: M1.7 X 4.0 (Tapping)
(Black)
2-887-124-01

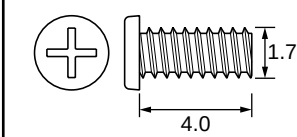


#112: M1.4 X 5.0
(Black)
2-178-410-11

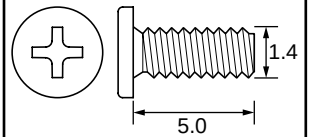


#113: M1.7 X 5.0
(Black)
2-635-562-41

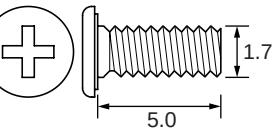


#114: M2.0 X 5.5 (Tapping)
(Silver)
2-698-464-01

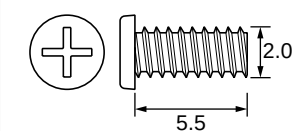


#115: M1.4 X 3.5 (Tapping)
(Silver)
3-348-998-51

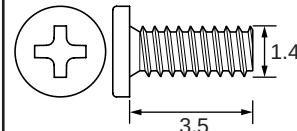


#116: M2.0 X 3.5 (Tapping)
(Silver)
2-695-435-01

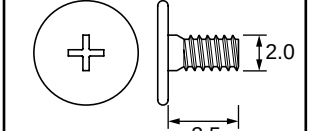


#117: M1.7 X 4.5 (Tapping)
(Silver)
2-695-429-31

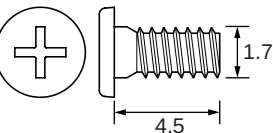


#118: M1.4 X 2.0
(Black)
2-655-580-01

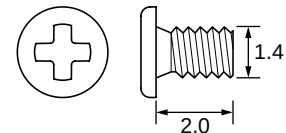

#119: M2.6 X 5.0
(Black)
7-627-556-58

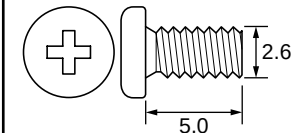


#120: M2.6 X 6.0
(Silver)
7-621-770-67

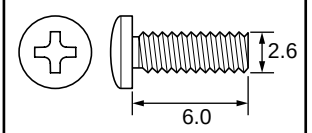


HARDWARE LIST (7/8)


#121: M2.0 X 4.0 (Tapping)
(Silver)
3-080-205-11

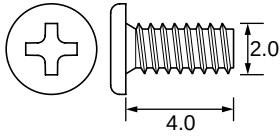


#122: M3.0 X 6.0
(Black)
7-682-547-09

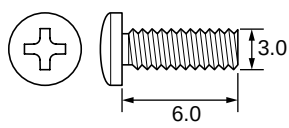


#123: M4.0 X 8.0
(Black)
7-682-561-09

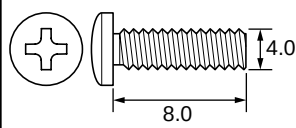


#124: M1.7 X 2.0
(Silver)
2-599-475-01

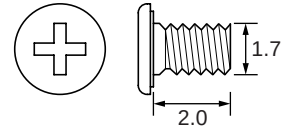


#125: M1.4 X 3.0
(Black)
3-291-847-01

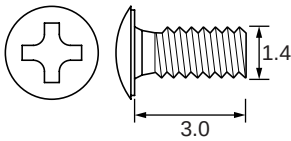


#126: M2.9 X 3.5
(Black)
3-292-616-01

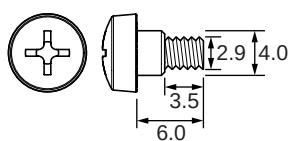


#127: M3.0 X 25.0
(Black)
7-682-654-09

 


#128: M4.0 X 12.0
(Black)
3-452-472-01

 


#129: M3.0 X 12.0
(Black)
7-682-550-09

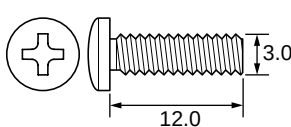


#130: M2.0 X 4.5 (Tapping)
(Silver)
3-732-817-11

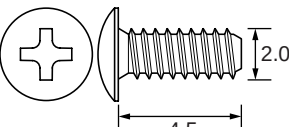


#131: M4.0 X 12.0
(Silver)
3-452-471-01

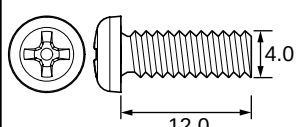


#132: M2.6 X 6.0
(Black)
4-673-655-01

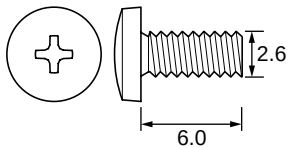


#133: M3.0 X 6.0
(Black)
3-452-484-01

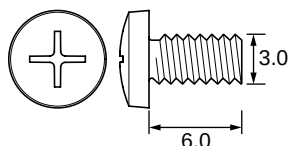


#134: M2.6 X 7.0
(Black)
3-299-572-01

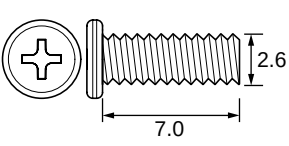


#135: M2.0 X 2.5
(Black)
7-627-553-28

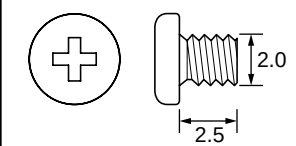


#136: M1.4 X 4.0 (Tapping)
(Black)
3-065-509-11

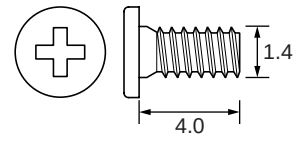


#137: M1.7 X 3.0
(Black)
3-090-976-62

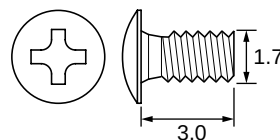


#138: M1.4 X 3.5
(Silver)
4-104-078-01

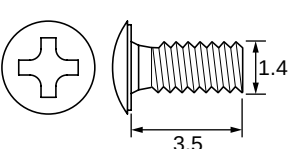

#139: M1.4 X 2.0
(Silver)
2-655-579-01

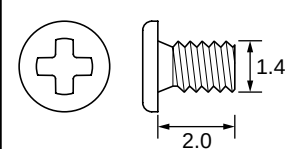


#140: M1.7 X 2.0
(Black)
2-635-562-01

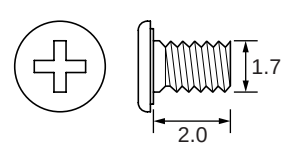


HARDWARE LIST (8/8)


#141: M2.6 X 5.0 (Tapping)
(Silver)
7-685-791-01

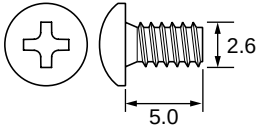


#142: M1.4 X 2.0
(Silver)
4-111-392-01

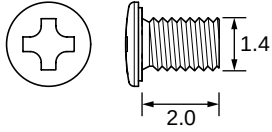


#143: M1.4 X 2.0
(Black)
4-111-392-11

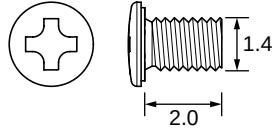


#144: M1.4 X 1.2
(Silver)
4-111-392-21

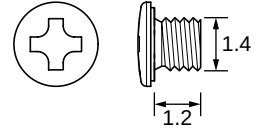


#145: M1.4 X 2.4
(Silver)
4-111-248-01

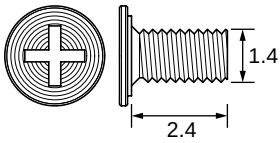


#146: M1.4 X 2.4
(Black)
4-111-248-11

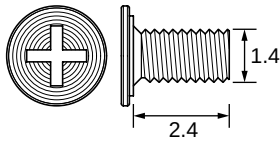


#147: M1.4 X 3.5
(Black)
2-662-396-41

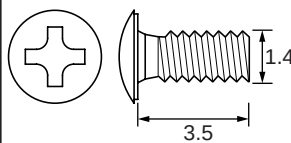


#148: M1.7 X 3.0
(Silver)
3-057-082-21

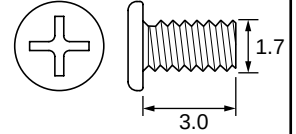


#149: M1.6 X 7.5 (Tapping)
(Silver)
4-115-505-01

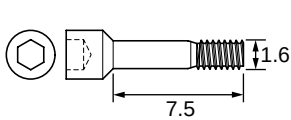


#150: M1.4 X 3.0
(Black)
4-105-150-01

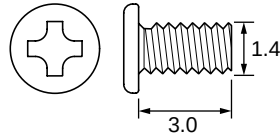


#151: M1.4 X 1.4
(Silver)
3-272-251-11

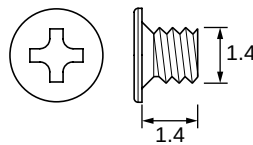


#152: M1.4 X 2.5
(Black)
4-116-473-11

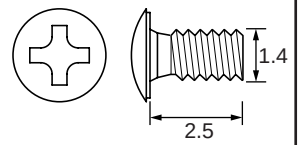


#153: M1.4 X 1.5
(Silver)
3-059-718-01

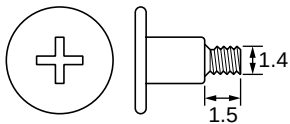

#154: M2.6 X 8.0
(Silver)
7-627-556-97

 

#155: M1.7 X 6.0 (Tapping)
(Black)
3-080-204-31

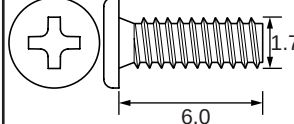

#156: M1.4 X 4.0
(Silver)
2-635-591-61

