


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY-1

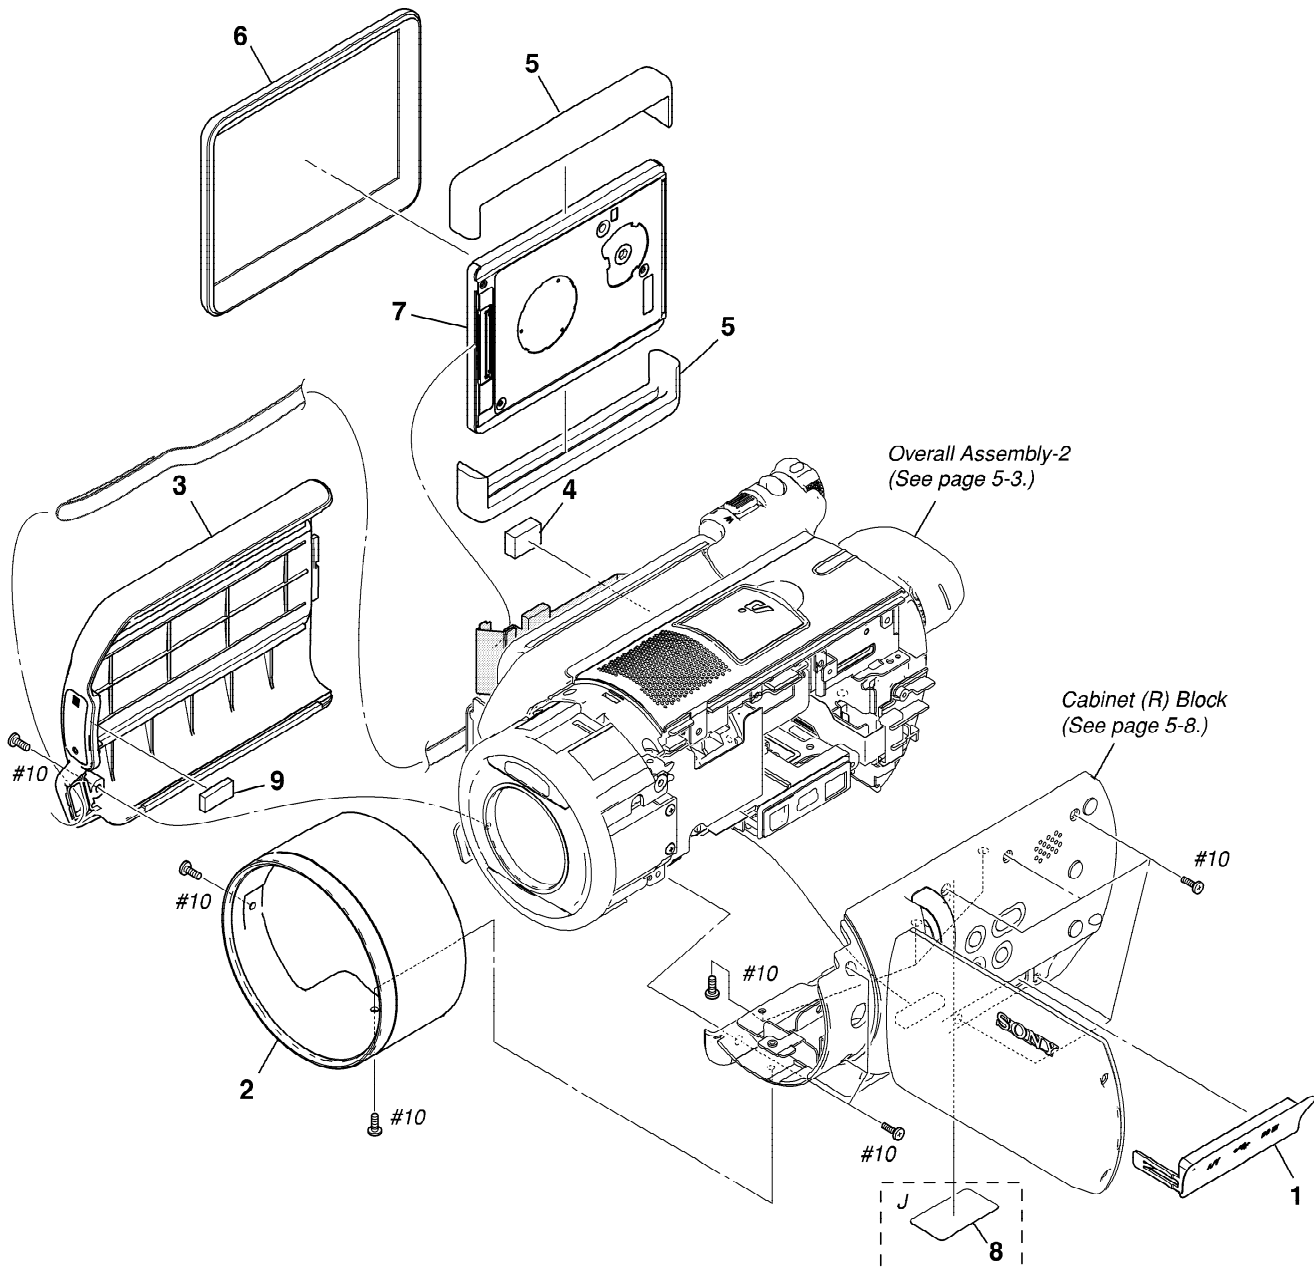

Ref. No.	Part No.	Description
1	X-2108-980-1	COVER (R) ASSY, JACK
2	2-673-774-01	RING, LENS
3	X-2108-967-1	LID ASSY, CABINET (L)
* 4	2-673-770-01	GASKET (D)
5	2-673-761-01	DAMPER, D


Ref. No.	Part No.	Description
6	2-673-762-01	LID, D
7	A-1184-016-A	HDD (MK3008GAL-30GB)(S) (SERVICE)
8	3-092-186-01	LABEL (S), TEMPERATURE CAUTION (J)
* 9	2-668-163-01	GASKET (A)
#10	2-599-475-31	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL ASSEMBLY-2

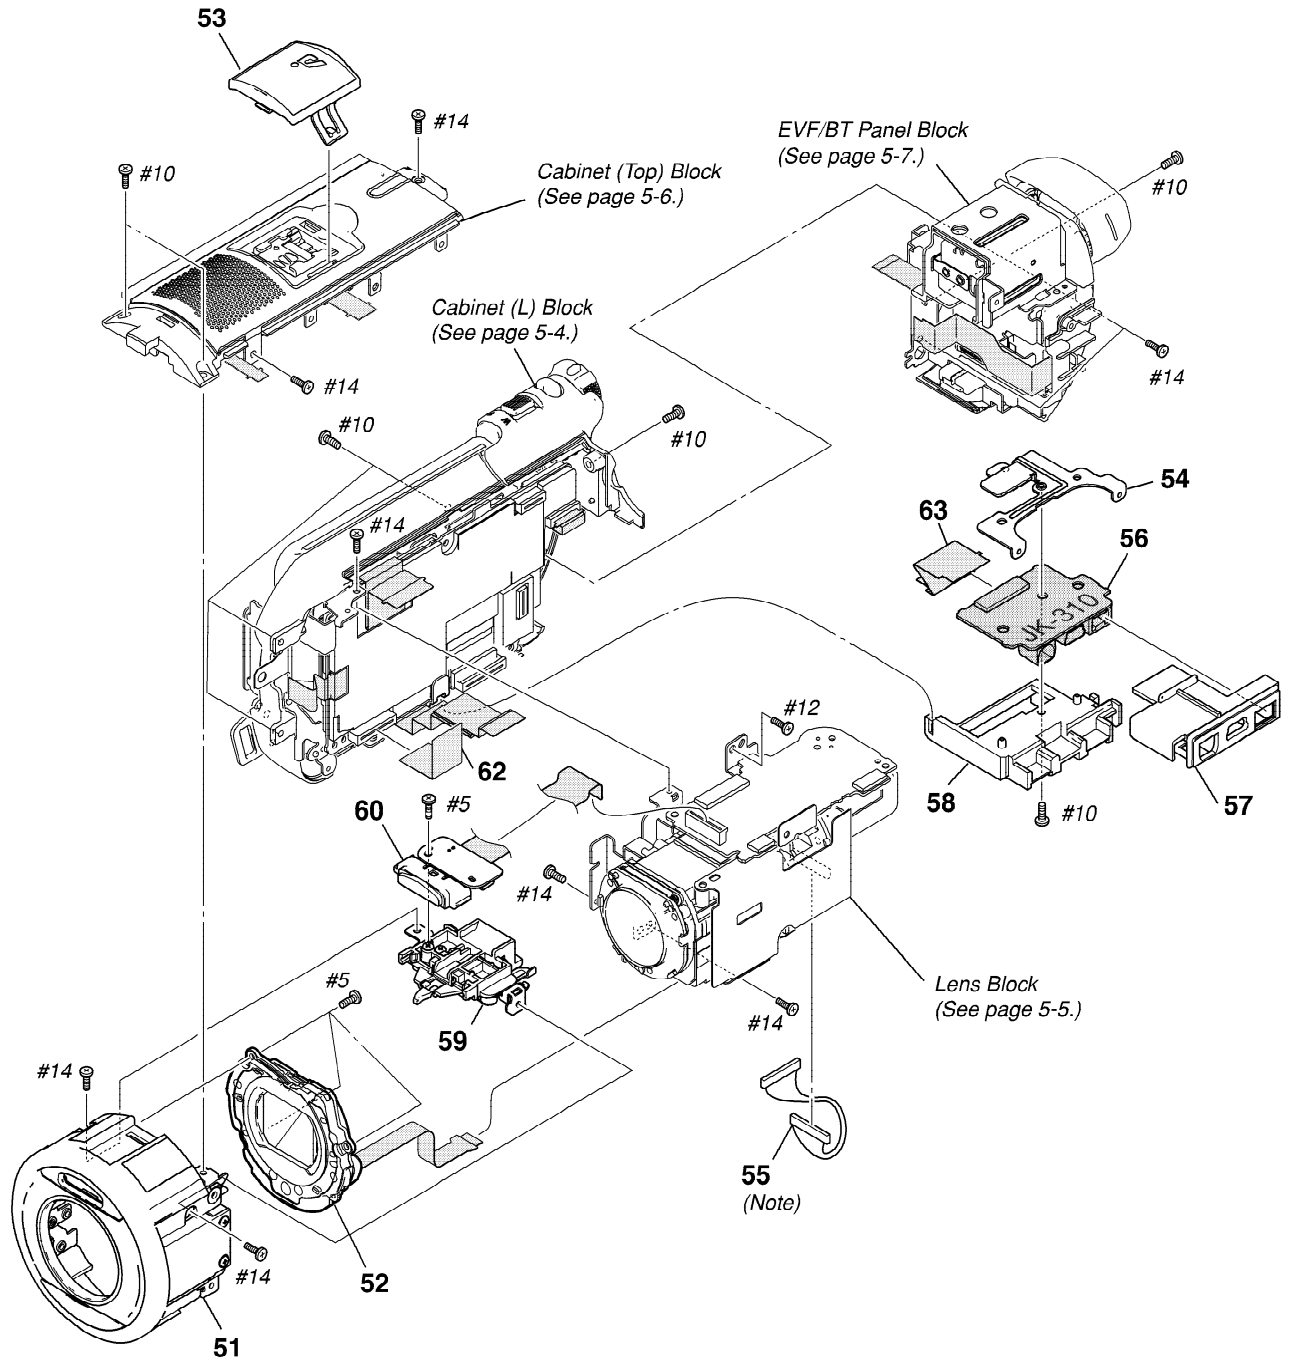

Note : ハーネス (CD-122) の交換時は2-1ページの“Note for disconnecting the harness (CD-122)”を参照してください。

Note : Refer to page 2-1 “Note for disconnecting the harness (CD-122)” when changing the harness (CD-122).

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
51	X-2108-971-1	CABINET (F) ASSY
52	1-787-398-11	MOTOR UNIT (LENS BARRIER)
53	X-2108-972-1	COVER ASSY, SHOE
* 54	2-673-787-01	FRAME, JK
* 55	1-964-390-11	HARNESS (CD-122) (Note)
56	A-1173-662-A	JK-310 BOARD, COMPLETE
* 57	2-673-788-01	HOLDER (F), JK
* 58	2-673-789-01	HOLDER (B), JK
59	X-2108-973-1	HOLDER ASSY, FLASH UNIT

Ref. No.	Part No.	Description
△ 60	1-479-514-21	FLASH UNIT (FL80400)
* 62	1-869-955-01	FP-437 FLEXIBLE BOARD
* 63	1-869-952-11	FP-434 FLEXIBLE BOARD
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. CABINET (L) BLOCK

ns: not supplied

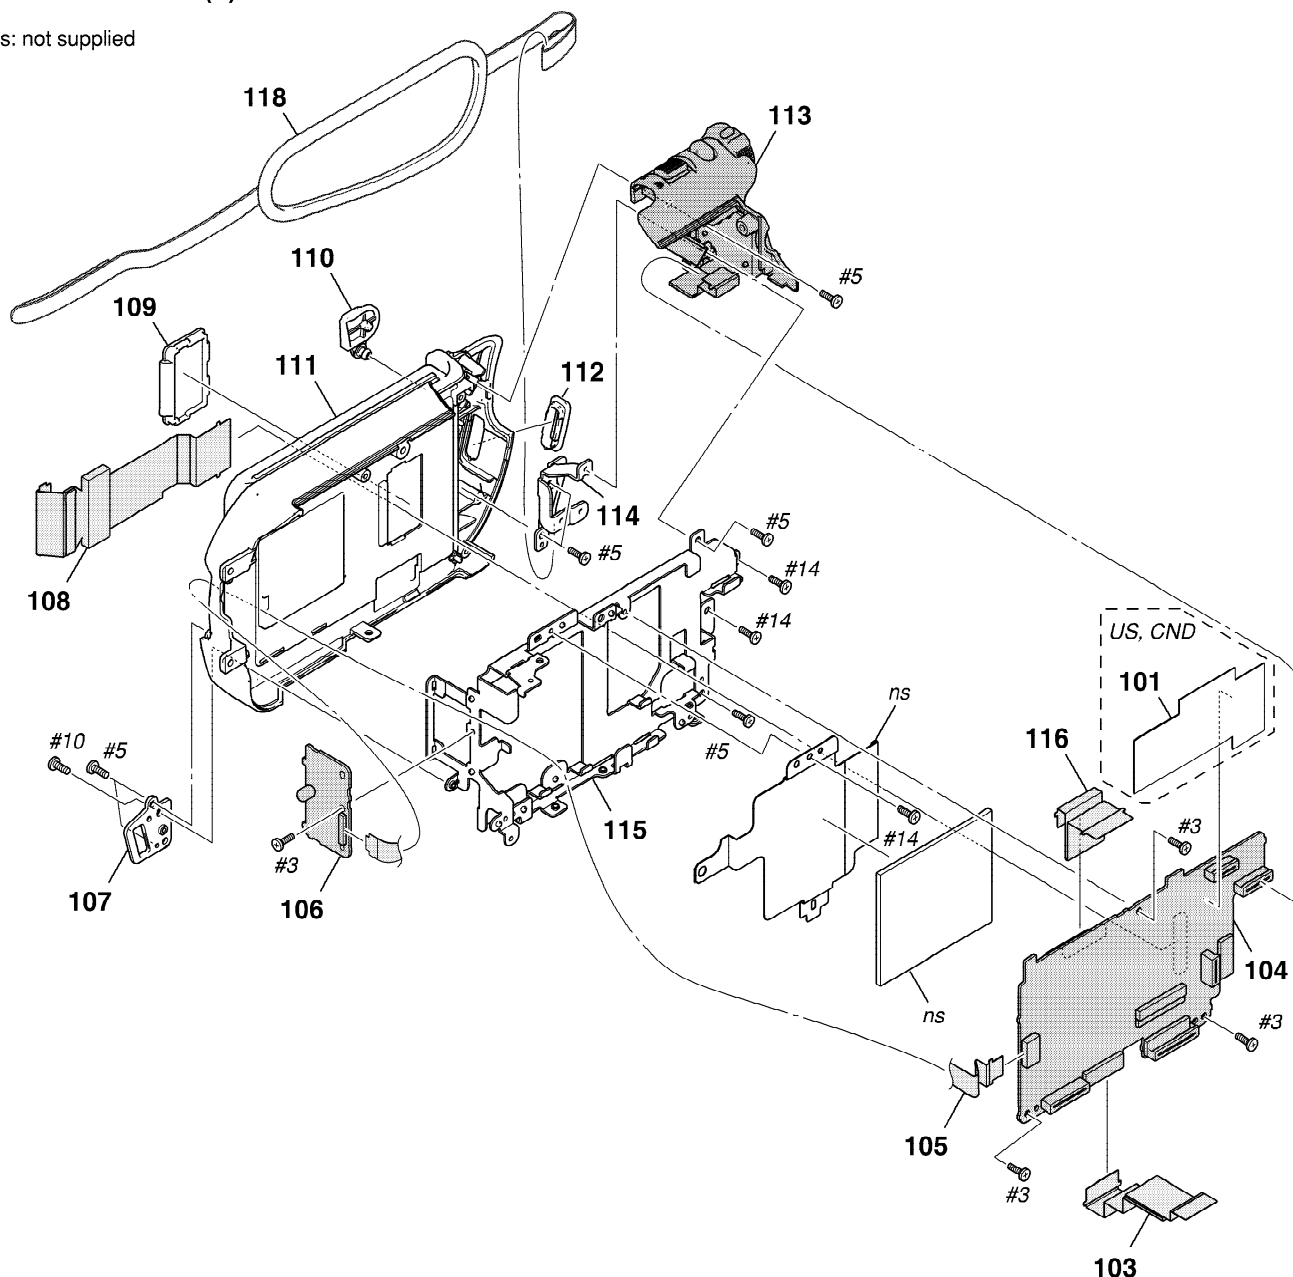

Ref. No.	Part No.	Description
* 101	2-672-346-01	LABEL, FUSE REPLACEMENT CAUTION (US, CND)
* 103	1-869-958-11	FP-440 FLEXIBLE BOARD
104	A-1176-204-A	VC-449 BOARD, COMPLETE (SERVICE) (SR100/SR100E)
104	A-1177-852-A	VC-449 BOARD, COMPLETE (SERVICE) (SR90E)
* 105	1-869-956-11	FP-438 FLEXIBLE BOARD
106	A-1173-661-A	IR-057 BOARD, COMPLETE
* 107	2-673-696-01	PLATE (F), GRIP
108	A-1173-667-A	FP-431 FLEXIBLE BOARD, COMPLETE
109	2-673-763-01	COVER (D), FPC
110	2-673-694-01	COVER (L), JK
111	2-673-693-01	CABINET (L) (J)


Ref. No.	Part No.	Description
111	2-673-693-11	CABINET (L) (EXCEPT J)
112	2-673-695-01	GUARD, BELT
113	1-479-666-11	SWITCH BLOCK CONTROL (PS80400) (J)
113	1-479-666-21	SWITCH BLOCK CONTROL (PS80400) (EXCEPT J)
* 114	2-673-697-01	PLATE (B), GRIP
* 115	2-673-766-01	FRAME, MAIN
* 116	1-869-953-11	FP-435 FLEXIBLE BOARD
118	2-664-928-21	BELT, GRIP
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-4. LENS BLOCK

ns: not supplied

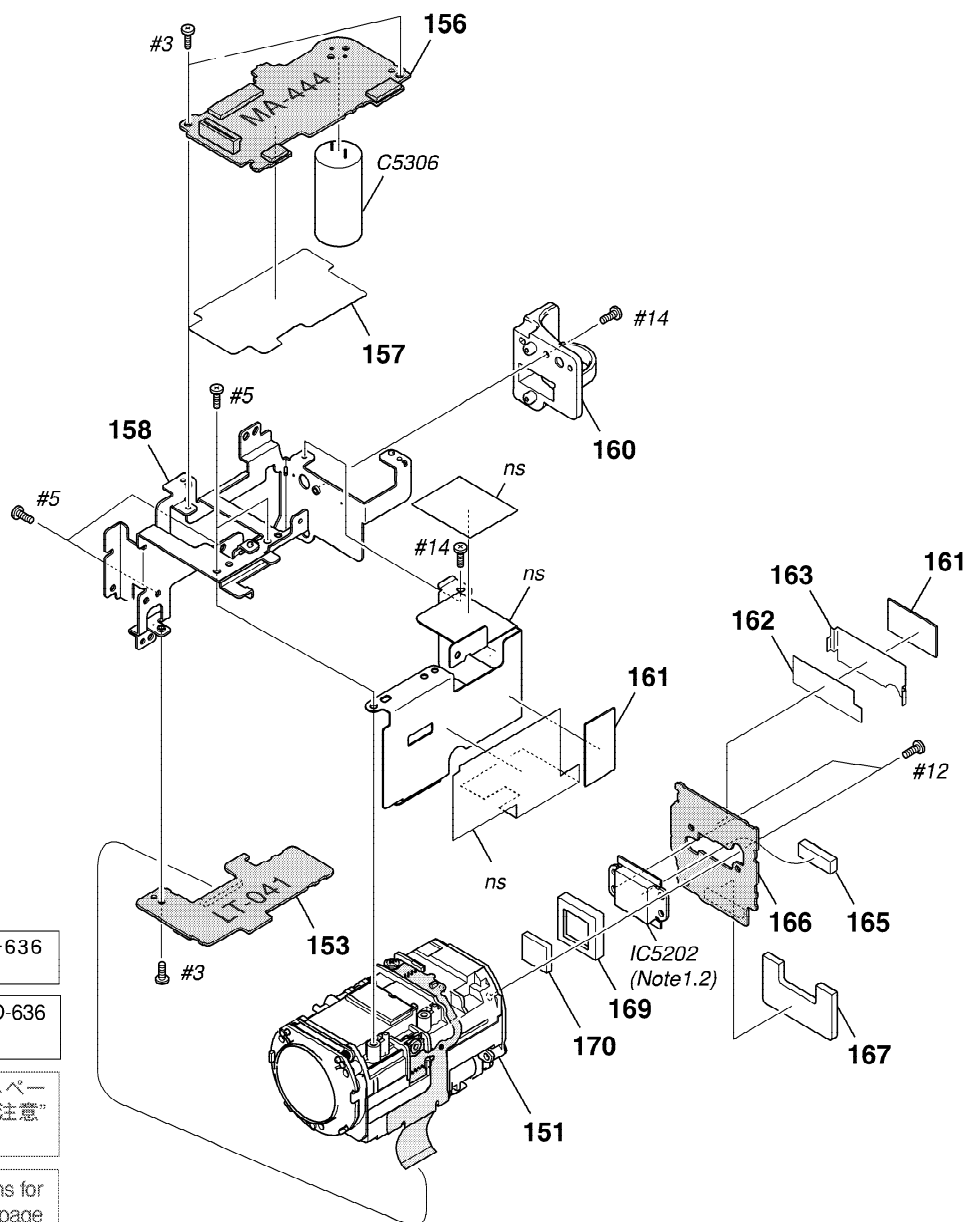

Note 1: IC5202はマウント済CD-636基板には含まれません。

Note 1: IC5202 is not included in CD-636 complete board.

Note 2: イメージャの交換時は4-4ページの“イメージャ交換時の注意”を必ずお読みください。

Note 2: Be sure to read “Precautions for Replacement of Imager” on page 4-3 when changing the imager.

• Refer to page 5-1 for mark △.


Ref. No.	Part No.	Description
151	8-848-792-01	DEVICE, LENS LSV-942A
153	A-1173-664-A	LT-041 BOARD, COMPLETE
156	A-1173-660-A	MA-444 BOARD, COMPLETE
* 157	2-673-769-01	SHEET, MA INSULATING
158	2-673-781-01	FRAME, LENS
* 160	2-673-785-01	HOLDER, CAPACITOR
* 161	2-677-926-01	SHEET (D), CCD RADIATION
* 162	2-678-539-01	SHEET (C), CCD RADIATION
* 163	2-674-491-01	CASE, TG SHIELD
* 165	2-673-783-01	SHEET (A), CCD RADIATION
166	A-1173-659-A	CD-636 BOARD, COMPLETE (SR100)

Ref. No.	Part No.	Description
166	A-1173-669-A	CD-636 BOARD, COMPLETE (SR90E/SR100E)
* 167	2-678-538-01	SHEET (B), CCD RADIATION
169	3-085-457-01	RUBBER (870), SEAL
170	1-758-992-11	OPTICAL FILTER BLOCK
△* C5306	1-112-939-11	CAP, ELECT 86uF 330V
IC5202	A-1089-147-A	CCD BLOCK ASSY (Note 1, 2)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. CABINET (TOP) BLOCK

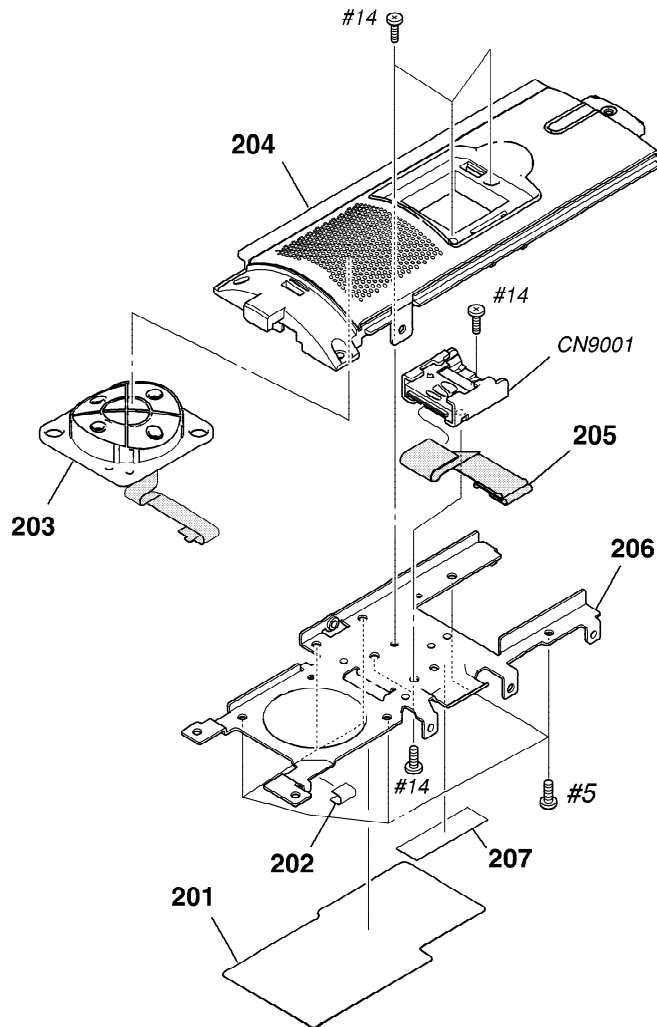


Ref. No.	Part No.	Description
* 201	2-673-776-01	SHEET (TOP), INSULATING
202	3-076-631-01	SHEET, PROTECTION
203	1-542-680-11	MICROPHONE UNIT
204	X-2108-970-1	CABINET (TOP) ASSY
* 205	1-869-954-11	FP-436 FLEXIBLE BOARD

Ref. No.	Part No.	Description
206	2-673-775-01	FRAME, SHOE
* 207	3-052-196-01	SHEET, LENS FLEXIBLE
CN9001	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-6. EVF/BT PANEL BLOCK

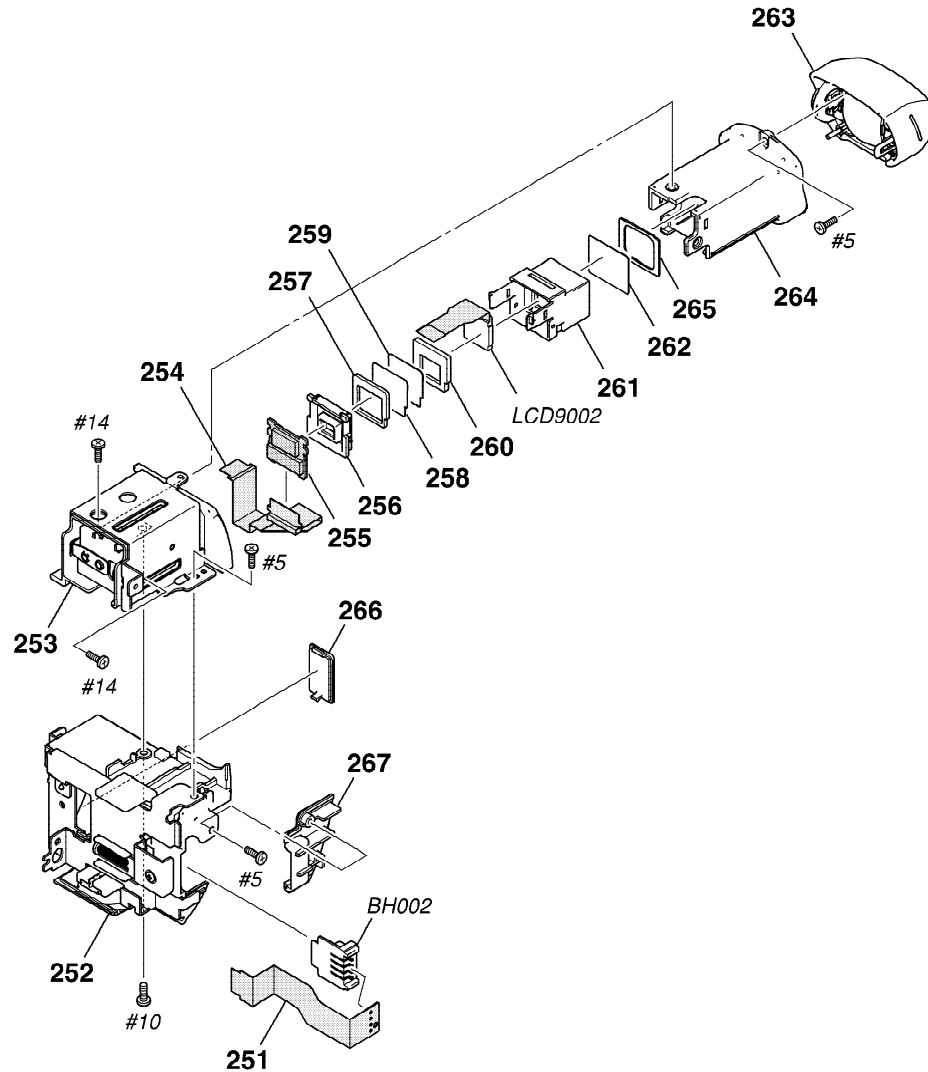

Ref. No.	Part No.	Description
* 251	1-869-951-11	FP-433 FLEXIBLE BOARD
252	X-2108-966-1	PANEL ASSY, BT
253	X-2108-969-1	BASE ASSY, VF SLIDE
* 254	1-869-959-11	FP-441 FLEXIBLE BOARD
255	A-1173-666-A	VF-176 BOARD, COMPLETE
256	2-664-672-01	GUIDE, LAMP
* 257	2-638-819-01	CUSHION, LCD
* 258	2-638-818-01	ILLUMINATOR
* 259	2-638-816-01	PLATE (TFT), DEFLECTION
260	2-664-671-01	SPACER, LCD
* 261	2-664-670-01	CABINET, INNER

Ref. No.	Part No.	Description
* 262	2-638-813-01	PLATE (CF), DEFLECTION
263	X-2108-968-1	EYE CUP ASSY
264	2-673-772-01	CABINET, VF
* 265	2-654-871-01	CUSHION (CF)
266	2-673-764-01	LID, CPC
* 267	2-673-765-01	RETAINER, BT TERMINAL
BH002	1-780-064-21	BATTERY TERMINAL BOARD
LCD9002	8-753-245-09	LCX059CKK-1
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. CABINET (R) BLOCK

ns: not supplied

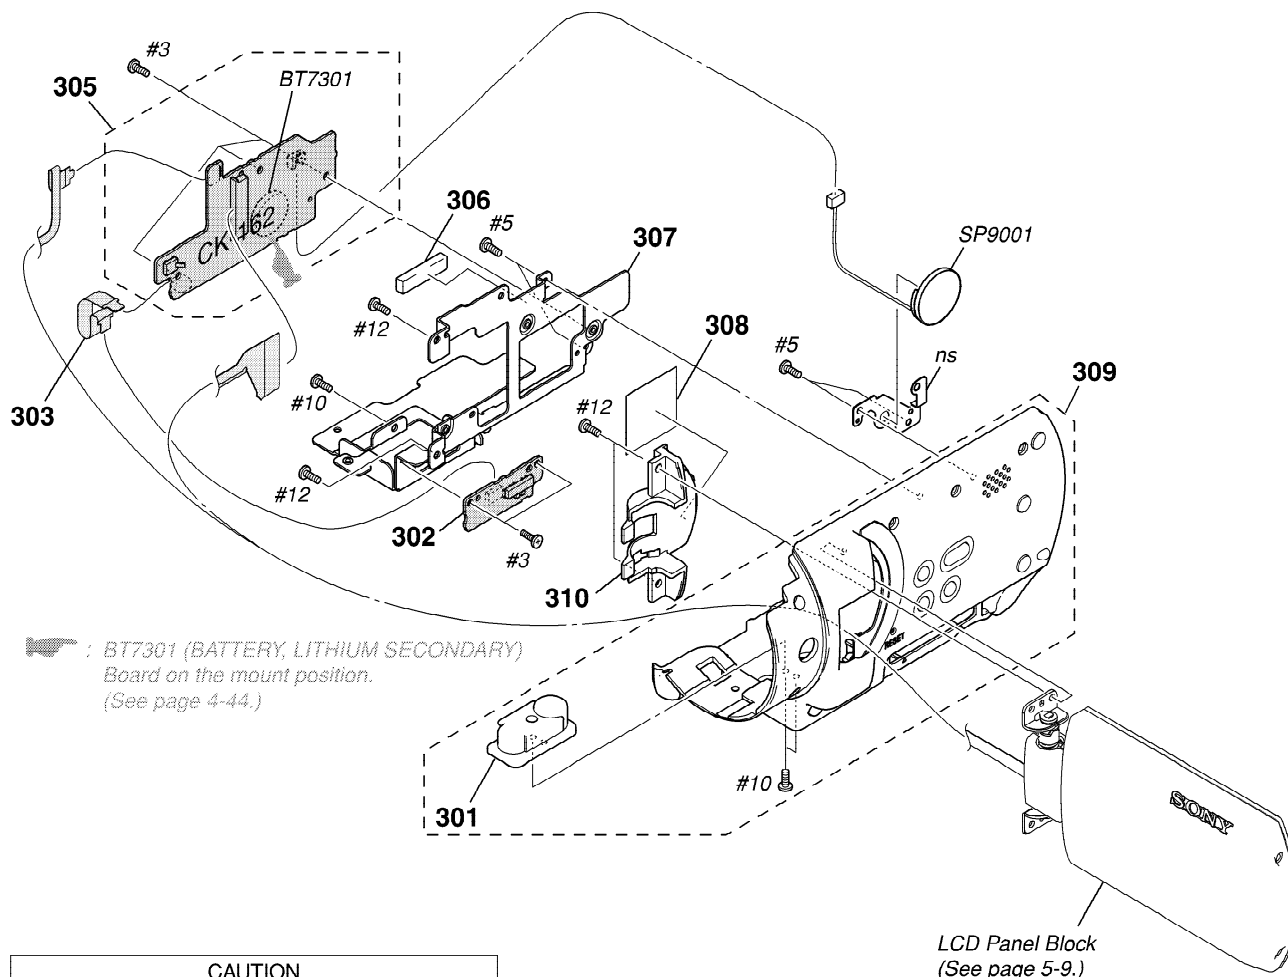

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
301	2-673-751-01	SCREW, TRIPOD
302	A-1173-665-A	NS-021 BOARD, COMPLETE
* 303	1-869-960-11	FP-442 FLEXIBLE BOARD
305	A-1173-663-A	CK-162 BOARD, COMPLETE
* 306	2-673-777-01	CUSHION (R)
* 307	2-673-779-01	FRAME, R
* 308	2-677-927-01	SHEET, BLIND INSULATING
309	X-2108-974-1	CABINET (R) ASSY (J) (J)
309	X-2108-975-1	CABINET (R) ASSY (E) (EXCEPT J)

Ref. No.	Part No.	Description
310	2-673-778-01	BLIND, HINGE
△ BT7301	1-756-128-11	BATTERY, LITHIUM (SECONDARY)
SP9001	1-825-262-41	LOUD SPEAKER (1.6CM)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-8. LCD BLOCK

ns: not supplied

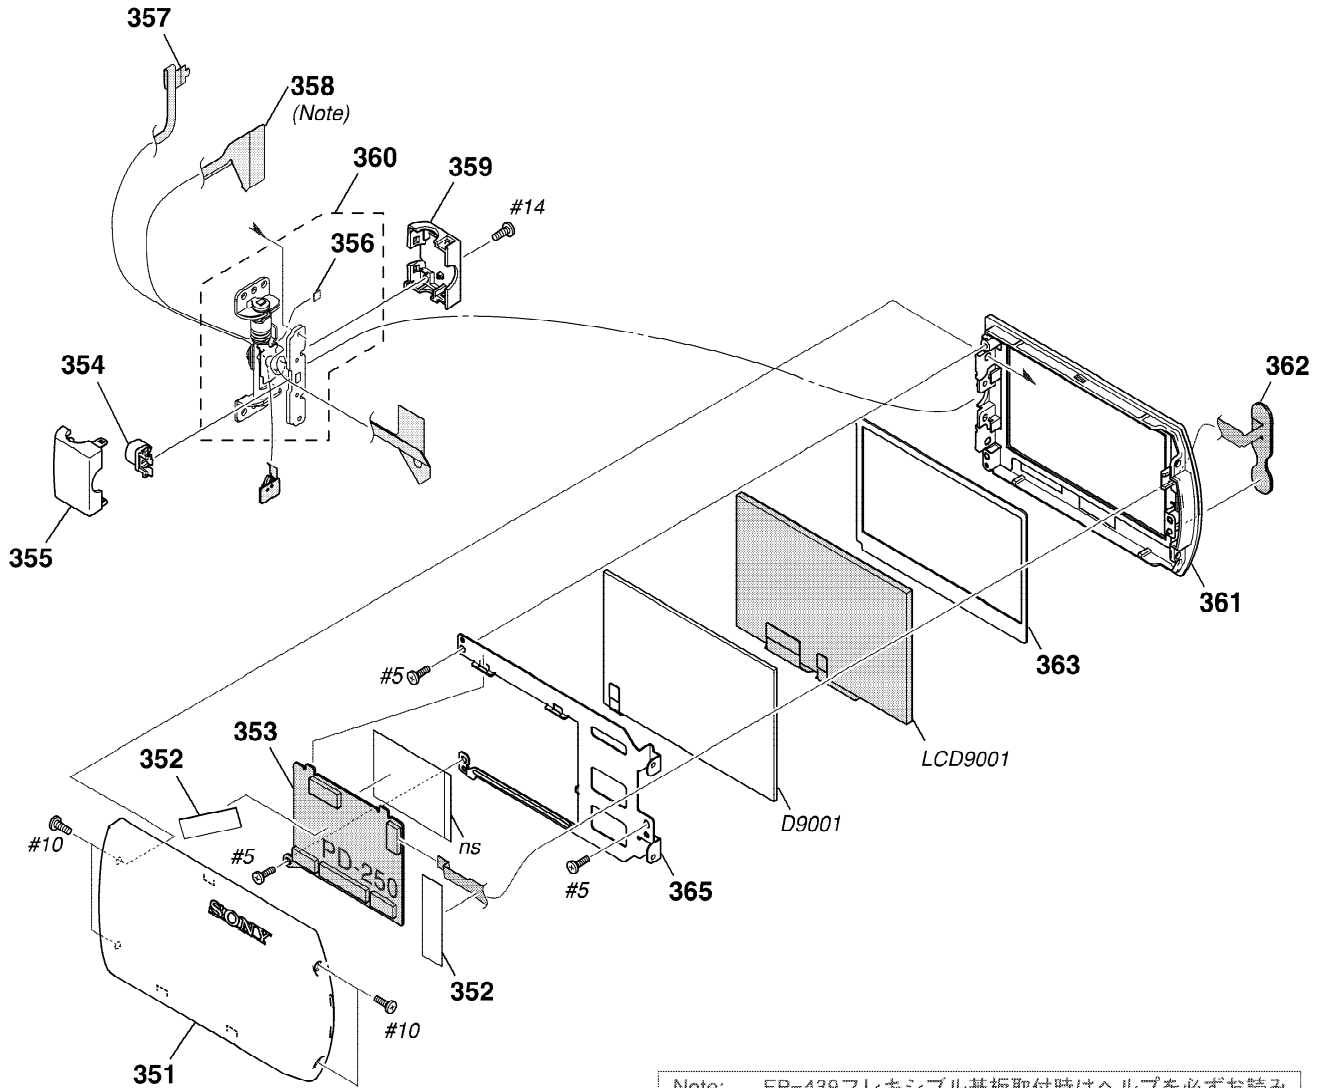

Note: FP-439フレキシブル基板取付時はヘルプを必ずお読みください。

Note: Be sure to read "HELP" when you install the FP-439 flexible board.

Ref. No.	Part No.	Description
351	X-2108-978-1	CABINET (C) ASSY (100), P (SR100/SR100E)
351	X-2109-265-1	CABINET (C) ASSY (90), P (SR90E)
* 352	3-052-196-01	SHEET, LENS FLEXIBLE
353	A-1104-091-A	PD-250 BOARD, COMPLETE
* 354	2-673-793-01	CLAMP (H), FPC
355	2-673-790-01	COVER (C), HINGE
356	2-649-300-01	SHEET, ADHESIVE
357	A-1173-668-A	FP-432 FLEXIBLE BOARD, COMPLETE
* 358	1-869-957-11	FP-439 FLEXIBLE BOARD (Note)
359	2-673-791-01	COVER (M), HINGE
360	X-2108-979-1	HINGE ASSY

Ref. No.	Part No.	Description
361	X-2108-976-1	CABINET (M) ASSY (J), P (J)
361	X-2108-977-1	CABINET (M) ASSY (E), P (EXCEPT J)
362	1-479-063-21	KEY BLOCK, CONTROL (SB9000)
* 363	2-673-792-01	CUSHION (LCD)
* 365	2-673-794-01	FRAME, P
D9001	1-478-929-21	BLOCK, LIGHT GUIDE PLATE (2.7)
LCD9001	A-1083-763-A	TP BLOCK ASSY (27STGU)
#5	3-080-204-01	SCREW, TAPPING, P2 (Black)
#10	2-599-475-31	SCREW (M1.7) (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)

Electrical parts list of the CD-636 board is not shown.
Page 5-10 is not shown.

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1173-663-A	CK-162 BOARD, COMPLETE *****
		< BATTERY >
△ BT7301	1-756-128-11	BATTERY, LITHIUM (SECONDARY)
		< CONNECTOR >
* CN7301	1-691-366-51	CONNECTOR, FFC/FPC (ZIF) 28P
* CN7302	1-817-554-51	CONNECTOR, FFC/FPC 6P
CN7303	1-779-327-51	CONNECTOR, FFC/FPC 6P
CN7304	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
* CN7305	1-819-934-51	CONNECTOR, FPC (ZIF) 39P
		< DIODE >
D7301	6-500-776-01	DIODE MAZW068H0LS0
D7302	6-500-776-01	DIODE MAZW068H0LS0
D7303	6-500-776-01	DIODE MAZW068H0LS0
D7304	8-719-083-91	DIODE EDZ TE61 6.8B
		< RESISTOR >
R7302	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R7303	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R7304	1-218-957-11	RES-CHIP 2.2K 5% 1/16W
R7305	1-218-960-11	RES-CHIP 3.9K 5% 1/16W
		< SWITCH >
S7301	1-771-138-82	SWITCH, KEY BOARD (RESET)
S7302	1-771-138-82	SWITCH, KEY BOARD (DISP/BATT INFO)
S7303	1-771-138-82	SWITCH, KEY BOARD (EASY)
S7304	1-786-148-11	SWITCH, PUSH (1 KEY) (PANEL OPEN/CLOSE)
S7305	1-771-138-82	SWITCH, KEY BOARD (WIDE SELECT)
S7306	1-771-138-82	SWITCH, KEY BOARD (DVD BURN)

	A-1173-667-A	FP-431 FLEXIBLE BOARD, COMPLETE *****
		< RESISTOR >
R001	1-218-929-11	RES-CHIP 10 5% 1/16W
R002	1-218-929-11	RES-CHIP 10 5% 1/16W
R003	1-218-929-11	RES-CHIP 10 5% 1/16W
R004	1-218-929-11	RES-CHIP 10 5% 1/16W
R005	1-218-929-11	RES-CHIP 10 5% 1/16W
R006	1-218-929-11	RES-CHIP 10 5% 1/16W
R007	1-218-929-11	RES-CHIP 10 5% 1/16W
R008	1-218-929-11	RES-CHIP 10 5% 1/16W
R009	1-218-929-11	RES-CHIP 10 5% 1/16W
R010	1-218-929-11	RES-CHIP 10 5% 1/16W
R011	1-218-929-11	RES-CHIP 10 5% 1/16W
R012	1-218-929-11	RES-CHIP 10 5% 1/16W
R013	1-218-929-11	RES-CHIP 10 5% 1/16W
R014	1-218-929-11	RES-CHIP 10 5% 1/16W
R015	1-218-929-11	RES-CHIP 10 5% 1/16W
R016	1-218-929-11	RES-CHIP 10 5% 1/16W

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
	A-1173-668-A	FP-432 FLEXIBLE BOARD, COMPLETE *****
		< SWITCH >
S001	1-786-680-21	SWITCH, DETECTION (SMD) (PANEL REVERSE DETECT)

		< BATTERY TERMINAL >
BH002	1-780-064-21	BATTERY TERMINAL BOARD

Electrical parts list of the IR-057 board is not shown.
Page 5-12 is not shown.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Ref. No.	Part No.	Description
	A-1173-662-A	JK-310 BOARD, COMPLETE *****

< CAPACITOR >

C7201	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C7202	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C7203	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
C7204	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V

< CONNECTOR >

* CN7201	1-817-910-51	CONNECTOR, FPC (ZIF) 45P
CN7202	1-794-962-11	CONNECTOR, SQUARE TYPE (USB 5P)
CN7203	1-815-794-13	CONNECTOR (MULTIPLE) (A/V)

< DIODE >

D7203	8-719-056-85	DIODE UDZ-TE-17-8.2B
-------	--------------	----------------------

< FERRITE BEAD >

FB7201	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB7202	1-414-760-21	FERRITE, EMI (SMD) (1608)
FB7203	1-500-444-11	FERRITE, EMI (SMD) (1608)
FB7204	1-500-444-11	FERRITE, EMI (SMD) (1608)
FB7205	1-500-444-11	FERRITE, EMI (SMD) (1608)

FB7206	1-500-444-11	FERRITE, EMI (SMD) (1608)
--------	--------------	---------------------------

< JACK >

J7201	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
-------	--------------	---------------------------------

< LINE FILTER >

LF7202	1-456-681-21	COIL, CHOKER
--------	--------------	--------------

< RESISTOR >

R7202	1-218-953-11	RES-CHIP	1K	5%	1/16W
R7203	1-218-990-81	SHORT CHIP	0		

< VARISTOR >

VD7201	1-801-923-11	VARISTOR, CHIP	(1608)
VD7202	1-801-923-11	VARISTOR, CHIP	(1608)
VD7203	1-801-923-11	VARISTOR, CHIP	(1608)
VD7204	1-803-974-21	VARISTOR, CHIP	(1608)
VD7205	1-803-974-21	VARISTOR, CHIP	(1608)

VD7206	1-803-974-21	VARISTOR, CHIP	(1608)
--------	--------------	----------------	--------

A-1173-664-A	LT-041 BOARD, COMPLETE *****
--------------	---------------------------------

< CONNECTOR >

* CN8001	1-817-555-51	CONNECTOR, FFC/FPC 8P
* CN8002	1-817-564-51	CONNECTOR, FPC (ZIF) 33P
* CN8003	1-819-934-51	CONNECTOR, FPC (ZIF) 39P

< DIODE >

D8001	6-500-776-01	DIODE MAZW068H0LS0
-------	--------------	--------------------

Electrical parts list of the MA-444 board is not shown.
Pages 5-14 and 5-15 are not shown.

Ref. No.	Part No.	Description
	A-1173-665-A	NS-021 BOARD, COMPLETE *****
		< CONNECTOR >
* CN8601	1-817-554-51	CONNECTOR, FFC/FPC 6P
		< DIODE >
D8602	6-500-776-01	DIODE MAZW068H0LS0
		< SWITCH >
S8601	1-771-138-82	SWITCH, KEY BOARD (BACK LIGHT)
S8602	1-771-731-21	SWITCH, SLIDE (NIGHTSHOT)
	A-1104-091-A	PD-250 BOARD, COMPLETE *****
		< CAPACITOR >
C7501	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C7502	1-164-939-11	CERAMIC CHIP 0.0022uF 10% 50V
C7503	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7504	1-127-895-91	TANTAL. CHIP 22uF 20% 4V
C7507	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C7509	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7510	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7511	1-164-739-11	CERAMIC CHIP 560PF 5% 50V
C7512	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C7513	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C7514	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C7515	1-137-700-11	TANTAL. CHIP 10uF 20% 6.3V
C7516	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C7517	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C7519	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C7520	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C7521	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C7522	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C7524	1-164-943-81	CERAMIC CHIP 0.01uF 10% 16V
C7525	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C7526	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
		< CONNECTOR >
CN7501	1-794-410-51	CONNECTOR, FPC (ZIF) 27P
* CN7502	1-794-322-51	CONNECTOR, FFC/FPC (ZIF) 6P
* CN7503	1-794-322-51	CONNECTOR, FFC/FPC (ZIF) 6P
* CN7505	1-785-905-51	CONNECTOR, FFC/FPC (ZIF) 24P
* CN7506	1-794-322-51	CONNECTOR, FFC/FPC (ZIF) 6P
		< DIODE >
D7502	8-719-074-67	DIODE EDZ-TE61-5.6B
		< FERRITE BEAD >
FB7501	1-414-760-21	FERRITE, EMI (SMD) (1608)
		< IC >
IC7501	8-753-229-95	IC CXM3006CER-T4

Ref. No.	Part No.	Description
		< COIL >
L7501	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L7502	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
L7503	1-400-588-11	INDUCTOR, LAMINATE CHIP 10uH
		< TRANSISTOR >
Q7501	8-729-427-67	TRANSISTOR XP421F-TXE
Q7502	8-729-427-37	TRANSISTOR XP411F-TXE
Q7507	6-550-119-01	TRANSISTOR DTC144EMT2L
Q7508	6-550-232-01	TRANSISTOR 2SA2029T2LQ/R
Q7509	8-729-041-23	TRANSISTOR NDS356AP
Q7513	8-729-042-26	TRANSISTOR 2SB1462J-QR (K8).SO
Q7514	8-729-054-48	TRANSISTOR UP04601008S0
Q7515	8-729-054-48	TRANSISTOR UP04601008S0
Q7516	8-729-037-61	TRANSISTOR UN9113J-(TX).SO
		< RESISTOR >
R7507	1-208-695-11	METAL CHIP 3.3K 0.5% 1/16W
R7508	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W
R7510	1-218-975-11	RES-CHIP 68K 5% 1/16W
R7512	1-218-949-11	RES-CHIP 470 5% 1/16W
R7514	1-208-934-11	METAL CHIP 91K 0.5% 1/16W
R7516	1-208-911-11	METAL CHIP 10K 0.5% 1/16W
R7523	1-218-969-11	RES-CHIP 22K 5% 1/16W
R7528	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7529	1-218-977-11	RES-CHIP 100K 5% 1/16W
R7530	1-218-978-11	RES-CHIP 120K 5% 1/16W
R7532	1-218-989-11	RES-CHIP 1M 5% 1/16W
R7537	1-218-969-11	RES-CHIP 22K 5% 1/16W
R7538	1-218-963-11	RES-CHIP 6.8K 5% 1/16W
R7539	1-218-950-11	RES-CHIP 560 5% 1/16W
R7540	1-218-975-11	RES-CHIP 68K 5% 1/16W
R7541	1-208-643-11	METAL CHIP 22 0.5% 1/16W
R7542	1-218-959-11	RES-CHIP 3.3K 5% 1/16W
R7543	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7545	1-218-955-11	RES-CHIP 1.5K 5% 1/16W
R7546	1-218-954-11	RES-CHIP 1.2K 5% 1/16W
R7551	1-218-953-11	RES-CHIP 1K 5% 1/16W
R7553	1-216-864-11	SHORT CHIP 0
		< COMPOSITION CIRCUIT BLOCK >
RB7501	1-234-369-21	RES, NETWORK 10 (1005X4)

Electrical parts list of the VC-449 board is not shown.
Pages 5-17 to 5-24 are not shown.

Ref. No.	Part No.	Description
	A-1173-666-A	VF-176 BOARD, COMPLETE

< CAPACITOR >

C5801	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5802	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C5803	1-165-908-11	CERAMIC CHIP	1uF	10%	10V

< CONNECTOR >

CN5801	1-818-046-51	CONNECTOR, FFC/FPC 20P
* CN5802	1-817-560-51	CONNECTOR, FPC (ZIP) 21P

< DIODE >

D5801	8-719-074-67	DIODE EDZ-TE61-5.6B
* D5802	6-501-325-01	DIODE NESW007T-T017 (EVF BACKLIGHT)


< RESISTOR >

R5801	1-218-969-11	RES-CHIP	22K	5%	1/16W
R5802	1-218-973-11	RES-CHIP	47K	5%	1/16W
R5803	1-216-841-11	METAL CHIP	47K	5%	1/10W
R5804	1-218-989-11	RES-CHIP	1M	5%	1/16W


• E MODEL

Checking supplied accessories.

to J MODEL

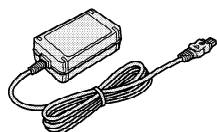


AC Adaptor
(AC-L200)
△ 1-479-285-12

 


Power Cord
△ 1-555-074-71 (AUS)
△ 1-782-476-41 (CH)
△ 1-783-374-22 (HK)
△ 1-790-107-51 (US, CND)
△ 1-792-549-31 (JE)
△ 1-823-947-51 (KR)
△ 1-824-910-31 (AEP, NE, E: PAL)
△ 1-827-269-22 (UK)
△ 1-830-518-31 (E: NTSC)



 Conversion (2P) Adaptor
△ 1-569-007-12 (E: NTSC, JE)



 Conversion (2P) Adaptor
△ 1-569-008-12 (HK)




USB Cable
1-831-369-21




A/V Connection Cable
1-831-553-11



 Rechargeable Battery Pack
NP-FP60
△ A-1144-873-A (US, CND)
△ A-1144-874-A
(EXCEPT US, CND, CH)
△ A-1144-875-A (CH)



 CD-ROM
"ImageMixer for HDD Camcorder"
2-673-613-01



Wireless Remote Commander
RMT-835
1-478-496-41

• Refer to page 5-1 for mark △.

• E MODEL

Checking supplied accessories.







to J MODEL

Other accessories

2-672-377-11	Camera Operating Guide (Read this first) (ENGLISH) (SR100: US, CND, E, JE)	2-672-704-11	Computer Application Guide (ENGLISH) (SR90E: AEP, UK/SR100: US, CND, E, JE/ SR100E: E, HK, AUS, JE)
2-672-377-21	Camera Operating Guide (Read this first) (FRENCH) (SR100: CND)	2-672-704-21	Computer Application Guide (FRENCH) (SR90E: AEP/SR100: CND)
2-672-377-31	Camera Operating Guide (Read this first) (SPANISH) (SR100: E, JE)	2-672-704-31	Computer Application Guide (GERMAN) (SR90E: AEP)
2-672-377-41	Camera Operating Guide (Read this first) (PORTUGUESE) (SR100: JE)	2-672-704-41	Computer Application Guide (DUTCH) (SR90E: AEP)
2-672-377-51	Camera Operating Guide (Read this first) (TRADITIONAL CHINESE) (SR100: E)	2-672-704-61	Computer Application Guide (KOREAN) (SR100: KR, JE)
2-672-377-61	Camera Operating Guide (Read this first) (KOREAN) (SR100: KR, JE)	2-672-704-71	Computer Application Guide (TRADITIONAL CHINESE) (SR100: E/SR100E: HK)
2-672-379-11	Camera Operating Guide (Read this first) (ENGLISH) (SR90E: AEP, UK/SR100E: E, HK, AUS, JE)	2-672-704-81	Computer Application Guide (ITALIAN) (SR90E: AEP)
2-672-379-21	Camera Operating Guide (Read this first) (FRENCH) (SR90E: AEP)	2-672-704-91	Computer Application Guide (GREEK) (SR90E: AEP)
2-672-379-31	Camera Operating Guide (Read this first) (GERMAN) (SR90E: AEP)	2-677-032-11	Computer Application Guide (SPANISH) (SR90E: AEP/SR100: E, JE)
2-672-379-41	Camera Operating Guide (Read this first) (DUTCH) (SR90E: AEP)	2-677-032-21	Computer Application Guide (PORTUGUESE) (SR90E: AEP/SR100: JE)
2-672-379-61	Camera Operating Guide (Read this first) (SPANISH) (SR90E: AEP)	2-677-032-31	Computer Application Guide (RUSSIAN) (SR100E: NE, JE)
2-672-379-71	Camera Operating Guide (Read this first) (PORTUGUESE) (SR90E: AEP)	2-677-032-41	Computer Application Guide (SWEDISH) (SR100E: NE)
2-672-379-81	Camera Operating Guide (Read this first) (ITALIAN) (SR90E: AEP)	2-677-032-51	Computer Application Guide (DANISH) (SR100E: NE)
2-672-379-91	Camera Operating Guide (Read this first) (GREEK) (SR90E: AEP)	2-677-032-61	Computer Application Guide (FINNISH) (SR100E: NE)
2-677-030-11	Camera Operating Guide (Read this first) (RUSSIAN) (SR100E: NE, JE)	2-677-032-71	Computer Application Guide (SIMPLIFIED CHINESE) (SR100E: E, CH, JE)
2-677-030-21	Camera Operating Guide (Read this first) (SWEDISH) (SR100E: NE)	2-677-033-21	Computer Application Guide (PERSIAN) (SR100E: E)
2-677-030-31	Camera Operating Guide (Read this first) (DANISH) (SR100E: NE)	2-677-033-31	Computer Application Guide (ARABIC) (SR100E: E)
2-677-030-41	Camera Operating Guide (Read this first) (FINNISH) (SR100E: NE)		
2-677-030-51	Camera Operating Guide (Read this first) (SIMPLIFIED CHINESE) (SR100E: E, CH, JE)		
2-677-030-91	Camera Operating Guide (Read this first) (TRADITIONAL CHINESE) (SR100E: HK)		
2-677-031-11	Camera Operating Guide (Read this first) (PERSIAN) (SR100E: E)		
2-677-031-21	Camera Operating Guide (Read this first) (ARABIC) (SR100E: E)		

• Refer to page 5-1 for mark .

     
● J MODEL
付属品

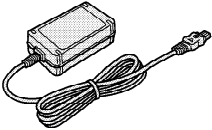		図面 番号	部品コード	部品名
AC アダプター (AC-L200) △ 1-479-285-12	電源コード △ 1-792-549-31	2-672-377-01		取扱説明書「カメラ編」 (はじめにお読みください)
		2-672-704-01		取扱説明書「パソコン編」
				
USB ケーブル 1-831-369-21	A/V 接続ケーブル 1-831-553-11			
				
リチャージャブル バッテリーパック (NP-FP60) △ A-1144-872-A	CD-ROM 「ImageMixer for HDD Camcorder」 2-673-613-01			
				
ワイヤレスリモコン RMT-835 1-478-496-31				


● △マークについては、5-1 ページを参照して下さい。

HARDWARE LIST (1/2)


#1: M1.7 X 2.5
(Black)
2-635-562-11

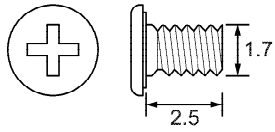


#2: M1.7 X 4.0
(Black)
2-635-562-31

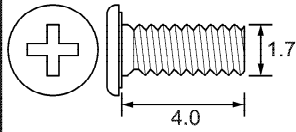


#3: M1.7 X 2.5
(Red)
2-660-401-01

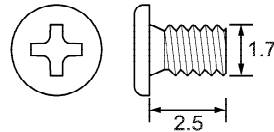


#4: M1.4 X 2.5 (Tapping)
(Dark Silver)
3-348-998-81

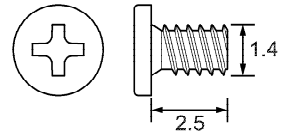


#5: M1.7 X 3.5 (Tapping)
(Black)
3-080-204-01

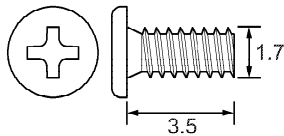


#6: M1.4 X 1.7
(Silver)
2-598-474-01

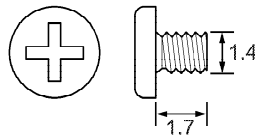


#7: M1.7 X 1.6
(Black)
7-627-552-18

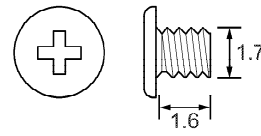


#8: M1.7 X 3.5 (Tapping)
(Silver)
3-078-890-01

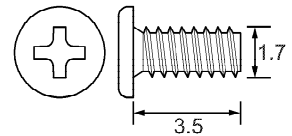


#9: M1.7 X 5.0 (Tapping)
(Silver)
3-078-890-21

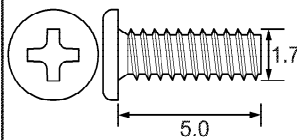


#10: M1.7 X 4.0
(Silver)
2-599-475-31

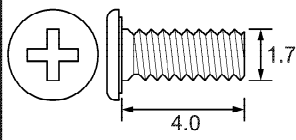


#11: M1.7 X 4.0 (Tapping)
(Silver)
3-078-890-11

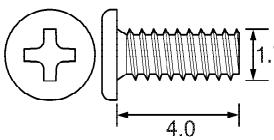


#12: M1.7 X 5.0 (Tapping)
(Black)
3-080-204-21

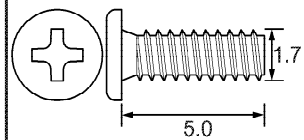


#13: M1.7 X 2.5 (Tapping)
(Silver)
3-085-397-01

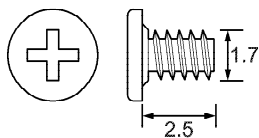


#14: M1.7 X 2.5
(Silver)
2-599-475-11

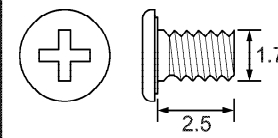


#15: M1.4 X 1.5
(Silver)
3-062-214-01

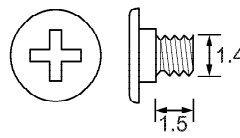


#16: M1.4 X 2.5
(Silver)
2-586-337-01

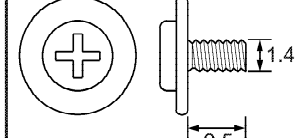


#17: M1.7 X 1.5
(Silver)
2-586-389-01

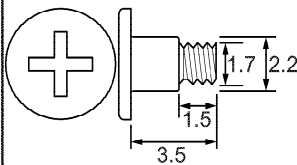


#18: M1.4 X 2.5
(Silver)
2-635-591-21

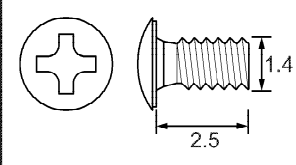

#19: M1.2 X 4.0 (Tapping)
(Red)
3-086-156-21

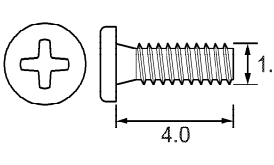


#20: M1.4 X 3.0
(Silver)
2-635-591-31

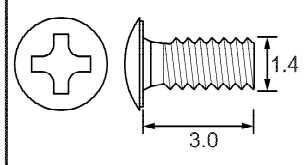


HARDWARE LIST (2/2)


#21: M1.4 X 3.0
(Black)
2-662-396-21

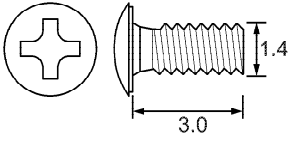


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

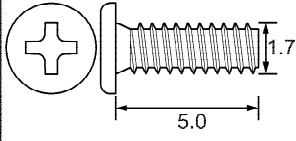

#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

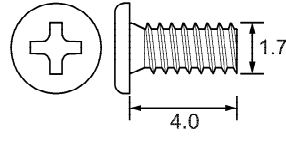

#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

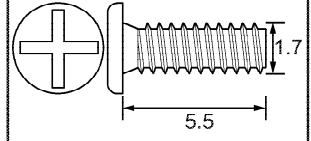

#25: M1.7 X 3.0
(Black)
2-635-562-21

