

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. BOTTOM CABINET SECTION

ns: not supplied

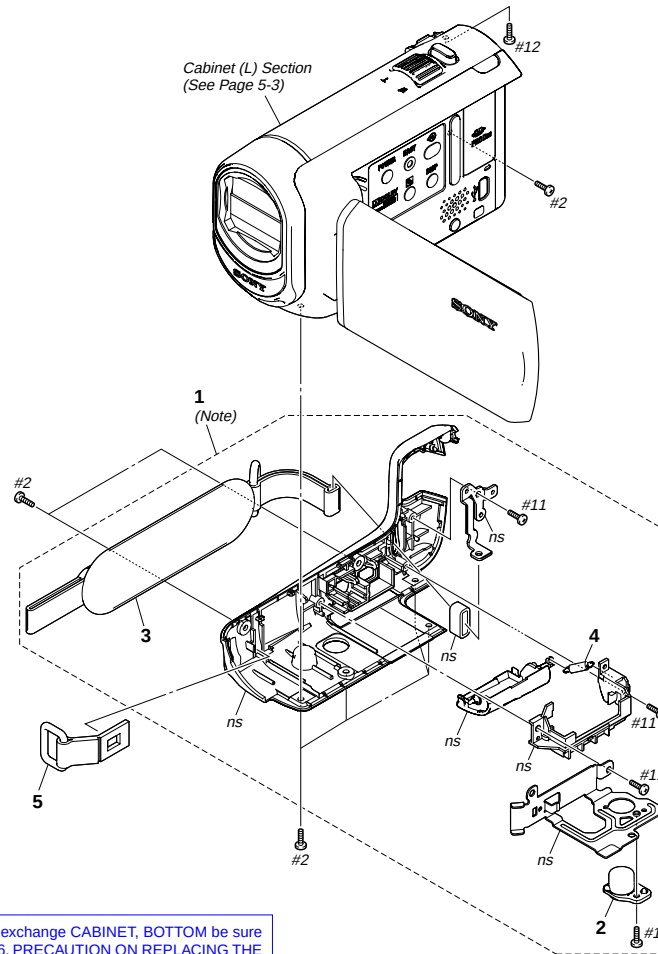

Note: When you exchange CABINET, BOTTOM be sure to read "1-6. PRECAUTION ON REPLACING THE BOTTOM CABINET" on page 1-3.

Note: ボトムキャビネット交換時は1-6ページの“1-6. ボトムキャビネット交換時の注意”を必ずお読みください。

Ref. No.	Part No.	Description
1	(Note)	CABINET ASSY, BOTTOM
2	3-283-643-01	SCREW, TRIPOD
3	4-129-424-11	BELT (09), GRIP
4	4-135-416-01	SPRING, TERMINAL COVER
5	4-132-105-01	BELT (FRONT), GRIP

Ref. No.	Part No.	Description
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. CABINET (L) SECTION

ns: not supplied

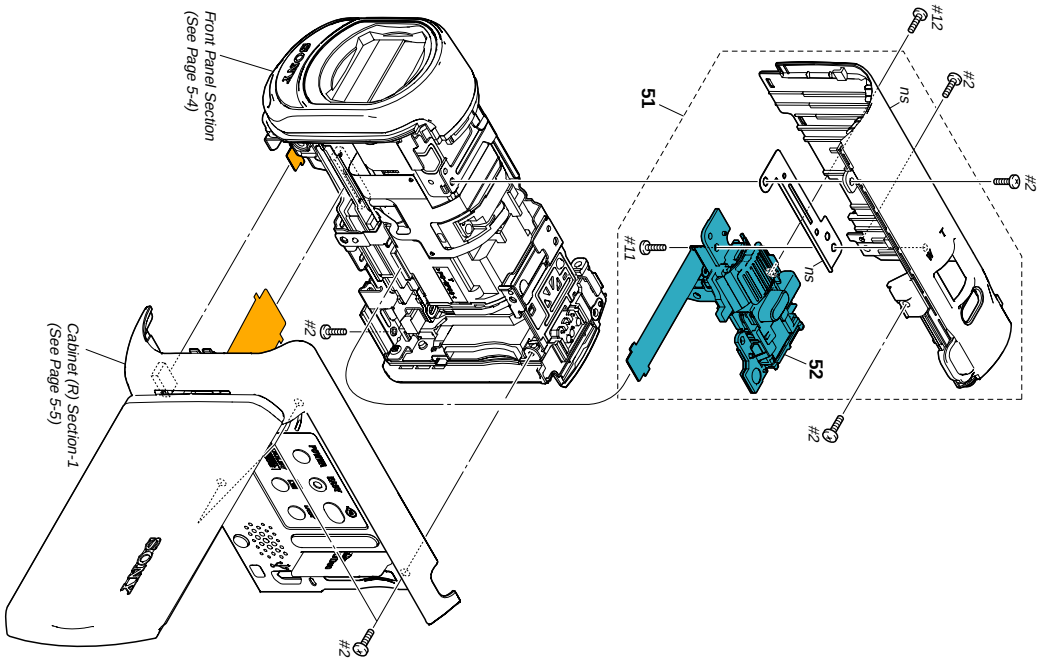

Ref.No.	PartNo.	Description	Ref.No.	PartNo.	Description
51	A-1701-473-A	CABINET (L (321S)) ASSY (SILVER: SX30E/SX31E/SX40/SX40E/SX41/SX41E)	52	1-487-119-11	POWER SWITCH BLOCK (PS32100)
51	A-1701-474-A	CABINET (L (321L)) ASSY (BLUE)	#2	2-635-562-31	SCREW (M1.7) (Black)
51	A-1701-475-A	CABINET (L (321R)) ASSY (RED)	#11	3-078-890-11	SCREW TAPPING (Silver)
51	A-1701-476-A	CABINET (L (322)) ASSY (SILVER: SX30E/SX60/SX60E)	#12	3-080-204-21	SCREW TAPPING P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. FRONT PANEL SECTION

ns: not supplied

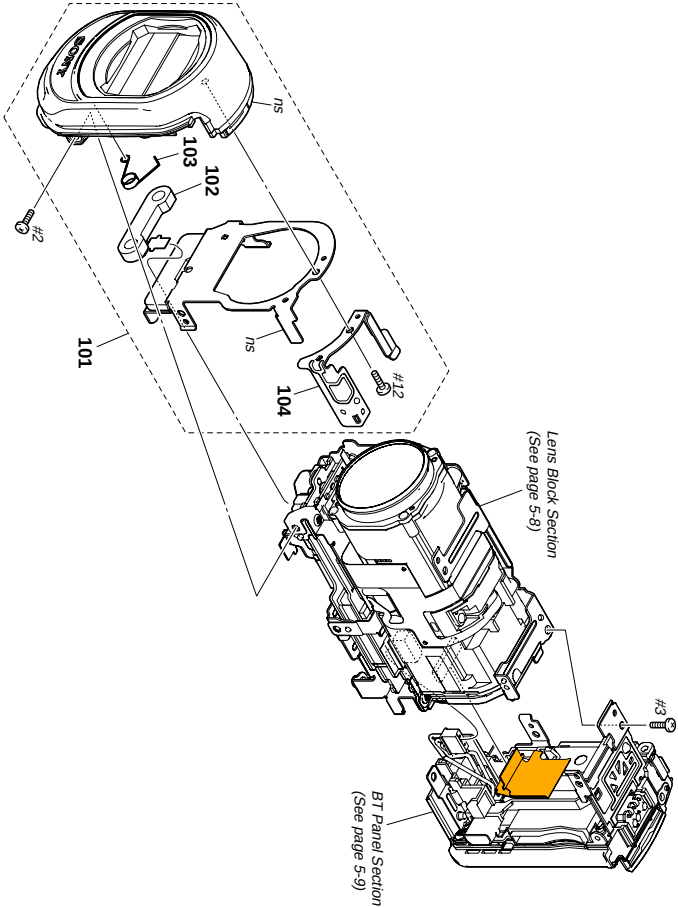

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	A-1701-458-A	CABINET (F (321 S)) ASSY (SILVER)	* 104	4-135-436-01	FRAME, F
101	A-1701-459-A	CABINET (F (321 L)) ASSY (BLUE)	#2	2-635-562-31	SCREW (M1.7) (Black)
101	A-1701-460-A	CABINET (F (321 R)) ASSY (RED)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
102	1-542-790-11	MICROPHONE UNIT	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
103	4-135-437-01	SPRING, REVERSE			

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-4. CABINET (R) SECTION-1

ns: not supplied

BT901 (BATTERY STORAGE: LITHIUM)
Board on the mount position.
(See page 4-33)

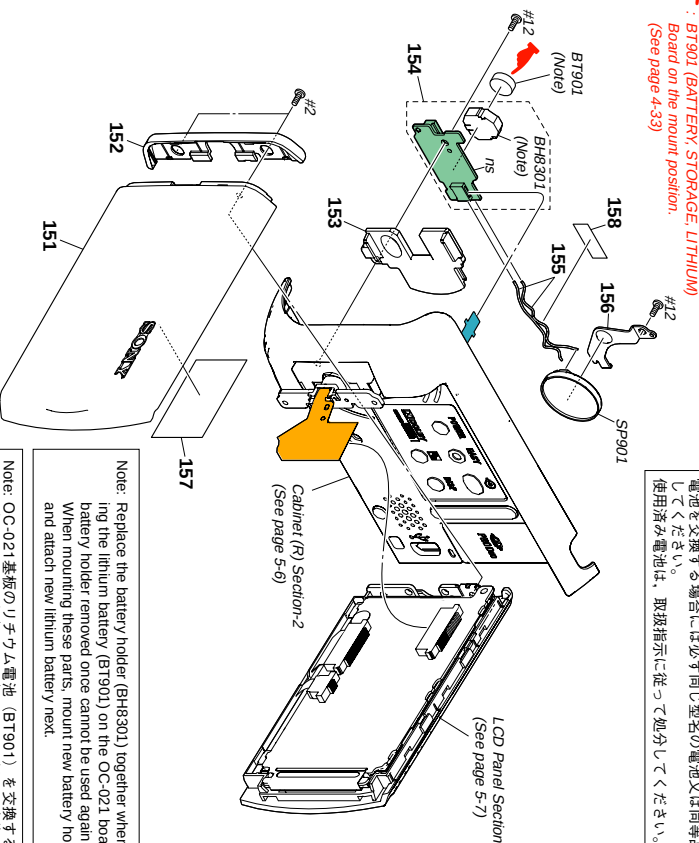

注意
電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

• Refer to page 5-1 for mark Δ.

Ref. No.	Part No.	Description
151	A-1701-381-A	CABINET (C (40S)) ASSY, P (SILVER: SX40/SX40E)
151	A-1701-382-A	CABINET (C (30S)) ASSY, P (SILVER: SX30E)
151	A-1701-383-A	CABINET (C (41S)) ASSY, P (SILVER: SX41/SX41E)
151	A-1701-384-A	CABINET (C (31S)) ASSY, P (SILVER: SX31E)
151	A-1701-385-A	CABINET (C (40L)) ASSY, P (BLUE: SX40/SX40E)
151	A-1701-386-A	CABINET (C (30L)) ASSY, P (BLUE: SX30E)
151	A-1701-387-A	CABINET (C (40R)) ASSY, P (RED: SX40/SX40E)
151	A-1701-388-A	CABINET (C (30R)) ASSY, P (RED: SX30E)
151	A-1701-389-A	CABINET (C (60DS)) ASSY, P (SILVER: SX60/SX60E)
151	A-1701-390-A	CABINET (C (60DS)) ASSY, P (SILVER: SX50E)
151	A-1707-282-A	CABINET (C (41L)) ASSY, P (BLUE: SX41)

Ref. No.	Part No.	Description
151	A-1707-283-A	CABINET (C (41R)) ASSY, P (RED: SX41)
152	4-135-405-01	ORNAMENT PANEL
153	4-135-409-01	BLIND, HINGE (SILVER)
153	4-135-409-11	BLIND, HINGE (BLUE, RED)
154	A-1701-066-A	OC-021 BOARD, COMPLETE
155	1-964-966-11	HARNESS (HN-024)
156	4-135-408-01	RETAINER, SPEAKER
* 157	4-143-417-01	SHEET, ELECTROSTATIC
* 158	4-143-307-01	SHEET, HARNESS RETAINER
Δ BH8301	1-756-615-61	HOLDER, BATTERY (Note)
Δ BT901	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
SP901	1-825-262-51	LOUD SPEAKER (1 6CM)
#2	2-635-562-31	SCREW (M1.7) (Black)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

Note: OC-021 基板のリチウム電池 (BT901) を交換する場合は、
リッチリホルダ (BH8301) も同時に新品に交換してください。
(一度使用したリッチリホルダは再使用できません)
部品取り付けの際は、先にリッチリホルダを取り付けてからリチウム電池を装着してください。

Note: Replace the battery holder (BH8301) together when replacing the lithium battery (BT901) on the OC-021 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Ver. 1.1 2009.02

The changed portions from
Ver. 1.0 are shown in blue.

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. CABINET (R) SECTION-2

ns: not supplied

Note 1: Put the marking side
together on the pos-
ition of figure when
you install the mag-
net.


Marking

Note 1: マグネットを取付け
る際は、マーキング
面を図の位置にあわ
せてください。


マーキング

CAUTION:
For the part of 205, cut SHEET ADHESIVE (2-649-300-01) into the desired length and use it.

CAUTION:
205番は、接着紙(2-649-300-01)を切って使用。

Note 2: Control switch block (SK32100) is pasted by the
adhesive sheet.

Note 2: 操作スイッチブロック (SK32100) は接着紙で
貼られています。


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
201	A-1701-338-A	CABINET (R (321S)) ASSY (SILVER: SX30E/ SX31E/SX40/SX40E/SX41 (EXCEPT J)/SX41E)	* 203	4-135-342-21	COVER (O), HINGE (RED)
201	A-1701-339-A	CABINET (R (321L)) ASSY (BLUE: SX30E/SX40/SX40E/SX41 (EXCEPT J))	203	4-135-343-31	COVER (O), HINGE (SILVER: SX30E/SX60/SX60E)
201	A-1701-340-A	CABINET (R (321R)) ASSY (RED: SX30E/SX40/SX40E/SX41 (EXCEPT J))	204	X-2345-713-1	HINGE ASSY
201	A-1701-346-A	CABINET (R (323)) ASSY (SILVER: SX50E/SX60/SX60E)	205	CAUTION	SHEET ADHESIVE, HINGE
201	A-1709-990-A	CABINET (R (321S)) ASSY (SILVER: SX41 (J))	206	1-471-504-11	MAGNET (ND5X3.5X2.4-B) (Note 1)
201	A-1709-991-A	CABINET (R (321L)) ASSY (BLUE: SX41 (J))	* 207	4-135-342-01	COVER (U), HINGE
201	A-1709-992-A	CABINET (R (321R)) ASSY (RED: SX41 (J))	208	1-487-133-11	SWITCH BLOCK, CONTROL (SK32100)
202	1-878-217-11	FP-1106 FLEXIBLE BOARD	208	1-487-133-21	SWITCH BLOCK, CONTROL (SK32100)
* 203	4-135-343-01	COVER (O), HINGE (SILVER: SX30E/SX31E/ SX40/SX40E/SX41/SX41E)	#1	2-635-562-11	SCREW (M1.7) (Black)
* 203	4-135-343-11	COVER (O), HINGE (BLUE)	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-1-6. LCD PANEL SECTION

ns: not supplied

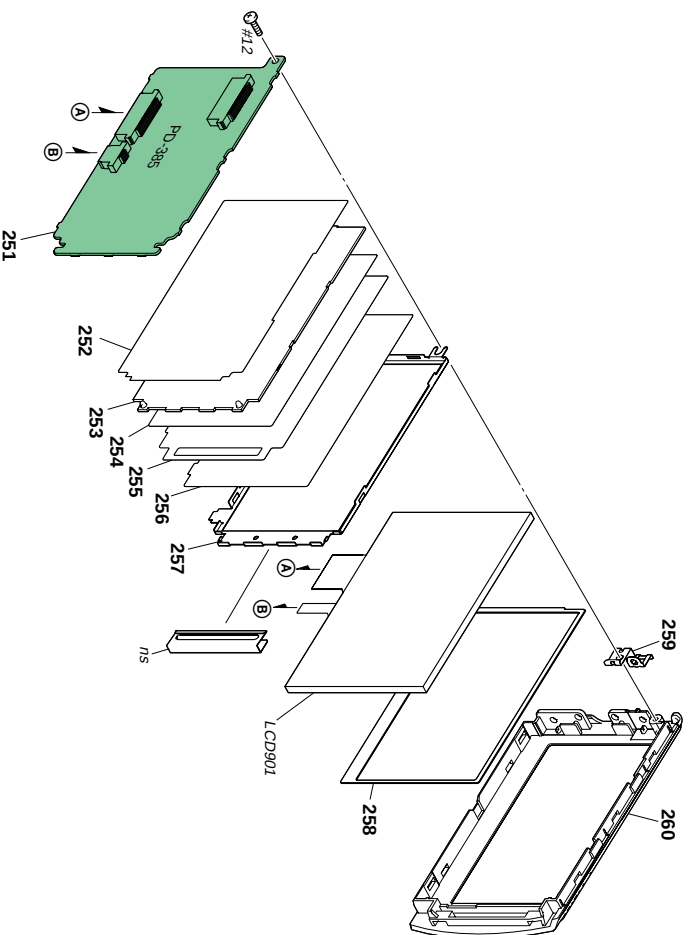

Ref. No.	Part No.	Description
251	A-1701-065-A	PD-385 BOARD, COMPLETE
252	2-694-515-01	REFLECTION SHEET (2.7)
253	2-666-801-11	LIGHT GUIDE (2.7)
254	2-694-514-01	DIFFUSION SHEET (2.7)
255	2-694-513-01	PRISM SHEET H (2.7)
256	2-694-512-01	PRISM SHEET V (2.7)

Ref. No.	Part No.	Description
257	2-694-516-01	FRONT FRAME (2.7)
258	4-135-407-01	CUSHION, TP
259	4-135-406-01	PLATE, P GROUND
260	4-135-404-01	CABINET (M), P
LDD901	A-1363-617-A	TP BLOCK ASSY (2/25MGB8T)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. LENS BLOCK SECTION

ns: not supplied

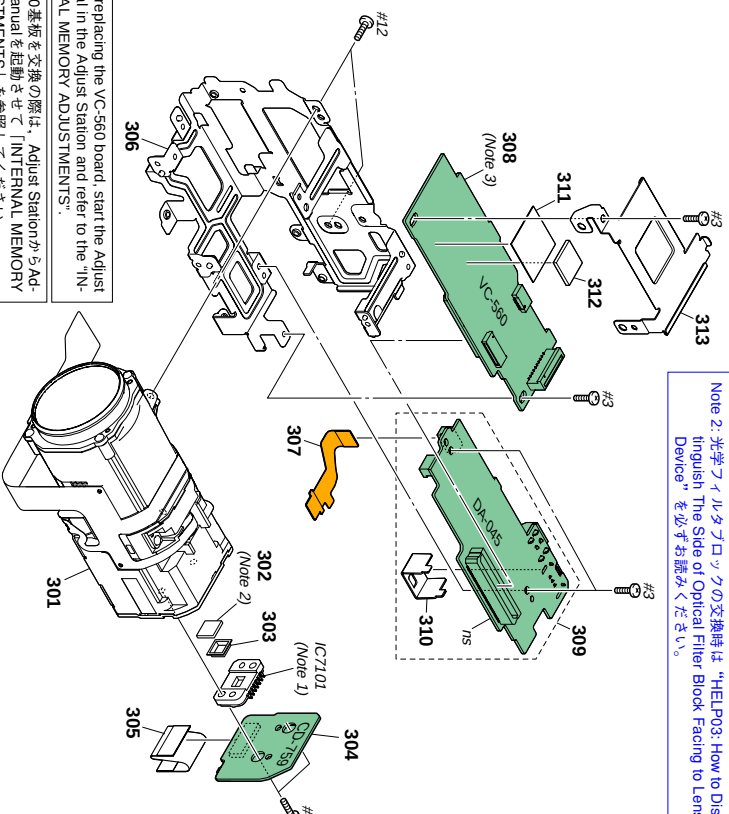

Note 3: When replacing the VC-560 board, start the Adjust Manual in the Adjust Station and refer to the "INTERNAL MEMORY ADJUSTMENTS".

Note 3: VC-560基板を交換の際は、「Adjust StationからAdjust Manualを起動させて「INTERNAL MEMORY ADJUSTMENTS」を参照してください。

Ref.No.	Part.No.	Description
301	1-788-861-11	OPTICAL UNIT (CK001)
302	1-788-870-11	OPTICAL FILTER BLOCK (Note 2)
303	3-878-748-01	RUBBER (1340), SEAL
304	A-1701-064-A	CD-759 BOARD, COMPLETE
305	1-834-809-11	CABLE, FLEXIBLE FLAT (FFC-338)
306	4-135-471-01	FRAME, LENS
307	1-978-219-11	FP-1108 FLEXIBLE BOARD
308	A-1706-238-A	VC-560 BOARD, COMPLETE (SERVICE)
308	(SX30E/SX40/SX40E)	
308	A-1706-239-A	VC-560 BOARD, COMPLETE (SERVICE)
308	(SX31E/SX41/SX41E)	
308	A-1706-240-A	VC-560 BOARD, COMPLETE (SERVICE)
308	(SX30E/SX60/SX60E)	
309	A-1706-904-A	DA-045 BOARD, COMPLETE (SERVICE)
309	(SX40/SX40E)	
309	A-1706-905-A	DA-045 BOARD, COMPLETE (SERVICE)
309	(SX30E)	

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note 1: イメージャの交換時は4-3ページの“イメージャ交換時の注意”を必ずお読みください。

Note 2: Be sure to read "HELP03: How to Distinguish The Side of Optical Filter Block Facing to Lens Device" when changing the optical filter block.

Note 2: 光学ファルタロウの交換時は“HELP03: How to Distinguish The Side of Optical Filter Block Facing to Lens Device”を必ずお読みください。


Ref.No.	Part.No.	Description
309	A-1707-381-A	DA-045 BOARD, COMPLETE (SERVICE)
309	(SX41/SX41E/SX60/SX60E)	
309	A-1707-383-A	DA-045 BOARD, COMPLETE (SERVICE)
309	(SX31E/SX30E)	
* 310	4-135-474-01	GUARD, DC
* 311	4-139-928-01	SHEET, SHIELD
* 312	4-135-473-01	SHEET, VC RADIATION
313	4-135-472-01	HEAD SINK, VC
IC7101	8-753-288-68	IC650MKF-H (CCD IMAGER)
IC7101	8-753-289-10	IC651MKF-H (CCD IMAGER) (SX40/SX41/SX60) (Note 1)
		(SX30E/SX31E/SX40E/SX41E/SX50E/SX60E) (Note 1)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-8. BT PANEL SECTION

ns: not supplied

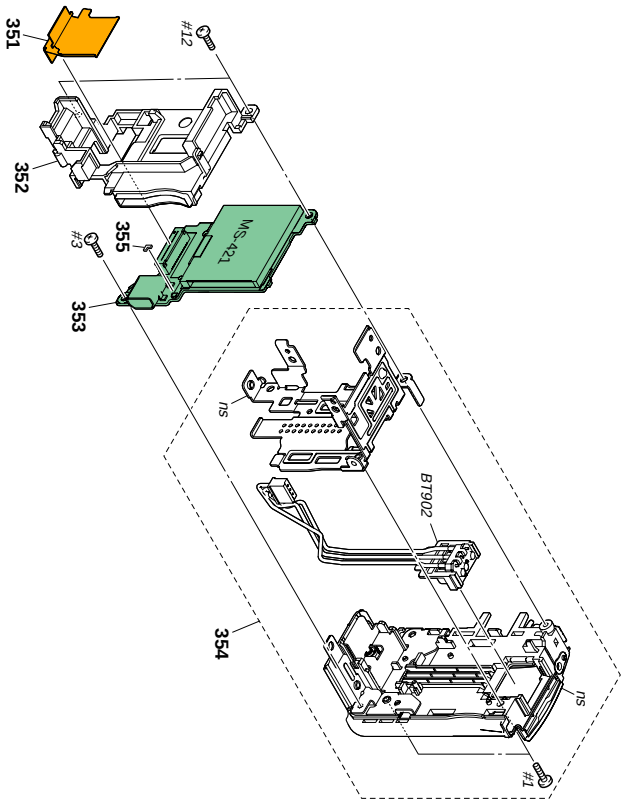

• Refer to page 5-1 for mark Δ.

Ref. No.	Part No.	Description
351	1-878-218-11	FP-1107 FLEXIBLE BOARD
* 352	4-135-475-01	HOLDER, MS
353	A-1701-067-A	MS-421 BOARD, COMPLETE
354	A-1701-480-A	PANEL ASSY, BT
* 355	4-140-784-01	CUSHION, MS TALLY

Ref. No.	Part No.	Description
Δ BT902	1-780-692-11	BATTERY CONNECTOR HARNESS
#1	2-635-562-11	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5-2. ELECTRICAL PARTS LIST

Ref.No.	PartNo.	Description
	A-1701-064-A	CD-759 BOARD, COMPLETE

(IC7101 is not included in CD-759 complete board.)		
< CAPACITOR >		
C7101	1-127-820-11	CERAMIC CHIP 4.7uF 10% 16V
C7103	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C7104	1-127-820-11	CERAMIC CHIP 4.7uF 10% 16V
C7105	1-164-854-11	CERAMIC CHIP 15PF 5% 50V
C7108	1-100-566-91	CERAMIC CHIP 0.1uF 10% 25V
< CONNECTOR >		
* CN7101	1-816-648-51	FFC/CONNECTOR, PPC (LH) 20P
< IC >		
IC7101	8-753-288-68	ICX650NKF-H (CCD IMAGER) (SX40/SX41/SX60) (Note)
IC7101	8-753-289-10	ICX651NKF-H (CCD IMAGER) (SX30E/SX31E/SX40E/SX41E/SX50E/SX60E) (Note)
< COIL >		
* L7101	1-481-425-21	INDUCTOR 10uH
< TRANSISTOR >		
* 07101	6-551-873-01	TRANSISTOR 2SC3931G0LS0
< RESISTOR >		
R7101	1-218-959-11	METAL CHIP 3.3K 5% 1/16W

Electrical parts list of the DA-045 board is not shown.
Pages from 5-11 to 5-12 are not shown.

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note: イメージャの交換時は4ページの“イメージャ交換時の注意”を必ずお読みください。

Ref.No. PartNo. Description
A-1701-067-A MS-421 BOARD, COMPLETE

< CONNECTOR >
* CN7301 1-819-778-61 CONNECTOR, PPC (ZIF) 33P
CN7302 1-822-425-11 CONNECTOR, USB (MINI AB) (USB)
CN7304 1-817-913-41 MEMORY STICK DUO CONNECTOR

< DIODE >
D7301 6-501-216-01 DIODE CL-271HR-C-TS (ACCESS)

< FERRITE BEAD >
FB7301 1-469-580-21 INDUCTOR, FERRITE BEAD (1005)
FB7302 1-469-580-21 INDUCTOR, FERRITE BEAD (1005)
FB7303 1-469-580-21 INDUCTOR, FERRITE BEAD (1005)
FB7304 1-469-580-21 INDUCTOR, FERRITE BEAD (1005)

< LINE FILTER >
LF7301 1-457-223-11 COMMON MODE CHOKO COIL

< RESISTOR >
R7303 1-218-947-11 METAL CHIP 330 5% 1/16W
R7304 1-218-942-11 METAL CHIP 120 5% 1/16W
R7305 1-218-942-11 METAL CHIP 120 5% 1/16W
R7306 1-218-942-11 METAL CHIP 120 5% 1/16W
R7307 1-218-942-11 METAL CHIP 120 5% 1/16W

A-1701-066-A OC-021 BOARD, COMPLETE

(B1901 (lithium battery) is not included in OC-021 complete board.)

< BATTERY HOLDER >
△ BH8301 1-756-615-61 HOLDER, BATTERY (Note)

< BATTERY >
△ B1901 1-756-134-12 BATTERY, STORAGE, LITHIUM (Note)

< CAPACITOR >
C8301 1-125-777-11 CERAMIC CHIP 0.1uF 10% 10V

< CONNECTOR >
* CN8301 1-779-329-51 FCC/CONNECTOR, PPC (LIF (NON-ZIF)) 10P
* CN8303 1-816-664-51 FCC/CONNECTOR, PPC (LIF) 6P

< RESISTOR >
R8301 1-218-967-11 METAL CHIP 2.2K 5% 1/16W
R8302 1-218-965-11 METAL CHIP 1.5K 5% 1/16W
R8303 1-218-964-11 METAL CHIP 1.2K 5% 1/16W

< SWITCH >

* S8301 1-786-914-31 SWITCH, TACTILE (RESET)

< SENSOR >

* SE8301 1-487-118-21 GMR SENSOR (PANEL OPEN/CLOSE DETECT)

△ Refer to page 5-1 for mark △.

Ref.No. PartNo. Description
< VARISTOR >

* VD8301 1-802-279-11 VARISTOR (SMD)
* VD8302 1-802-279-11 VARISTOR (SMD)
* VD8306 1-802-279-11 VARISTOR (SMD)
* VD8307 1-802-279-11 VARISTOR (SMD)

A-1701-065-A PD-385 BOARD, COMPLETE

< CAPACITOR >
C6202 1-100-581-81 CERAMIC CHIP 0.0047uF 10% 50V
C6203 1-165-908-11 CERAMIC CHIP 1uF 10% 10V
C6205 1-100-567-81 CERAMIC CHIP 0.01uF 10% 25V
C6206 1-100-567-81 CERAMIC CHIP 0.01uF 10% 25V
C6207 1-100-567-81 CERAMIC CHIP 0.01uF 10% 25V
C6210 1-165-989-11 CERAMIC CHIP 10uF 10% 6.3V
C6212 1-127-760-11 CERAMIC CHIP 4.7uF 10% 6.3V
C6216 1-127-760-11 CERAMIC CHIP 4.7uF 10% 6.3V
C6217 1-165-989-11 CERAMIC CHIP 10uF 10% 6.3V
C6218 1-125-777-11 CERAMIC CHIP 0.1uF 10% 10V

C6224 1-165-908-11 CERAMIC CHIP 1uF 10% 10V
C6225 1-100-567-81 CERAMIC CHIP 0.01uF 10% 25V
C6226 1-125-777-11 CERAMIC CHIP 0.1uF 10% 10V
C6231 1-125-777-11 CERAMIC CHIP 0.1uF 10% 10V
* C6232 1-100-741-81 CERAMIC CHIP 560PF 5% 50V
C6233 1-125-777-11 CERAMIC CHIP 0.1uF 10% 10V

< CONNECTOR >
CN6201 1-815-031-51 FCC/CONNECTOR, PPC (ZIF) 24P
* CN6204 1-818-069-61 CONNECTOR, FCC/PPC (ZIF) 6P
CN6205 1-815-031-51 FCC/CONNECTOR, PPC (ZIF) 24P

< DIODE >
* D6203 6-501-955-01 DIODE MAZS056G08S0
* D6205 6-501-476-01 DIODE NSSW008CT1071 (BACKLIGHT)
* D6206 6-501-476-01 DIODE NSSW008CT1071 (BACKLIGHT)
* D6207 6-501-476-01 DIODE NSSW008CT1071 (BACKLIGHT)

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換するには必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

Note: Replace the battery holder (BH8301) together when replacing the lithium battery (B1901) on the OC-021 board. (The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: OC-021基板のリチウム電池 (B1901) を交換する場合は、バッテリーホルダ (BH8301) も同時に新品に交換してください。
（一度使用したバッテリーホルダは再使用できません。）
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

Ref.No.	PartNo.	Description
< IC >		
* 106201	8-753-307-97	IC CXM3018R-T4
< COIL >		
* 1L6201	1-481-425-21	INDUCTOR 10uH
* 1L6202	1-481-425-21	INDUCTOR 10uH
< TRANSISTOR >		
06201	8-729-427-37	TRANSISTOR XP41 IF-TXE
06202	8-729-427-67	TRANSISTOR XP42 IF-TXE
* 06204	6-551-766-01	TRANSISTOR UMR32A3GUL-S0
06205	6-551-184-01	TRANSISTOR MCH6305-TL-E-S
< RESISTOR >		
R6204	1-218-975-11	METAL CHIP 68K 5% 1/16W
R6205	1-218-945-11	METAL CHIP 220 5% 1/16W
R6206	1-218-945-11	METAL CHIP 220 5% 1/16W
R6207	1-218-945-11	METAL CHIP 220 5% 1/16W
R6208	1-218-945-11	METAL CHIP 220 5% 1/16W
R6209	1-218-953-11	METAL CHIP 1K 5% 1/16W
R6210	1-208-935-11	METAL CHIP 100K 0.5% 1/16W
R6215	1-218-965-11	METAL CHIP 10K 5% 1/16W
R6217	1-218-977-11	METAL CHIP 100K 5% 1/16W
R6218	1-218-989-11	METAL CHIP 1M 5% 1/16W
< COMPOSITION CIRCUIT BLOCK >		
* RB621	1-200-016-21	RES. NETWORK 82 (1005X4)
< SENSOR >		
* SE6201	1-487-118-11	GMR SENSOR (PANEL REVERSE DETECT)
< VARISTOR >		
* VD6203	1-802-279-11	VARISTOR (SMD)
* VD6204	1-802-279-11	VARISTOR (SMD)
* VD6205	1-802-279-11	VARISTOR (SMD)
* VD6206	1-802-279-11	VARISTOR (SMD)

Electrical parts list of the VC-560 board is not shown.
Pages from 5-15 to 5-17 are not shown.

• EXCEPT J MODEL
Checking supplied accessories.

to J MODEL

Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.



AC Adaptor
(AC-L200C/JAC-L200D)
△ 1-487-150-21
(EXCEPT BR)



 
Power Cord
△ 1-789-952-71 (AR)
△ 1-832-124-41 (CH)
△ 1-832-169-41 (UK)
△ 1-833-892-41 (KR)
△ 1-834-482-31 (AEP, NE, E: PAL, E: NTSC (Latin America))
△ 1-834-484-31 (US, CND)
△ 1-834-852-11 (E: NTSC (Except Latin America))
△ 1-835-983-11 (AUS)



Conversion (2P) Adaptor
△ 1-569-007-12
(E: NTSC (Except Latin America))



Conversion (2P) Adaptor
△ 1-569-008-12
(E: NTSC (Latin America))



AV Connecting Cable
1-823-156-51



USB Cable
1-829-868-31



Rechargeable Battery Pack
NP-FH30
(Note)

• Refer to page 5-1 for mark △



Operating Guide

DCR-SX40/SX41/SX60

- 4-132-764-11 (ENGLISH, SPANISH) (US, CND, E, AR)
- 4-132-764-21 (FRENCH) (CND)
- 4-132-764-41 (TRADITIONAL CHINESE) (E)
- 4-132-764-51 (KOREAN) (KR)

DCR-SX30E/SX31E/SX40E/SX41E/SX50E/SX60E

- 4-132-765-11 (ENGLISH) (AEP, UK, E, AUS)
- 4-132-765-21 (FRENCH, GERMAN, ITALIAN, DUTCH) (AEP)
- 4-132-765-31 (SPANISH, PORTUGUESE, TURKISH, GREEK) (AEP)
- 4-132-765-41 (CZECH, HUNGARIAN, SLOVAK, POLISH) (AEP)
- 4-132-765-51 (SWEDISH, DANISH, FINNISH, ROMANIAN) (AEP)
- 4-132-765-61 (RUSSIAN, UKRAINIAN) (NE)
- 4-132-765-71 (SIMPLIFIED CHINESE) (E, CH)
- 4-134-120-11 (ENGLISH) (E)
- 4-134-120-21 (ARABIC, PERSIAN) (E)



CD-ROM

"Handycam Application Software"
(PMB® Software, including PMB Guide)
"Handycam Handbook" (PDF)
4-132-757-02



Handycam Handbook (PDF)

The CD-ROM supplied contains all of language version of the Handycam Handbook (PDF) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.

• (Only for destination Japanese model)
日本国内については日本語のみが印刷での部品供給可能です。

DCR-SX41

DCR-SX40E/SX41E/SX60E

- 4-132-760-01 (JAPANESE)
- 4-132-760-11 (ENGLISH)
- 4-132-760-21 (FRENCH)
- 4-132-760-31 (SPANISH)
- 4-132-760-41 (PORTUGUESE)
- 4-132-760-51 (TRADITIONAL CHINESE)
- 4-132-760-61 (KOREAN)
- 4-132-761-11 (ENGLISH)
- 4-132-761-21 (FRENCH)
- 4-132-761-31 (GERMAN)
- 4-132-761-41 (ITALIAN)
- 4-132-761-51 (DUTCH)
- 4-132-761-61 (SPANISH)
- 4-132-761-71 (PORTUGUESE)
- 4-132-761-81 (TURKISH)
- 4-132-761-91 (GREEK)
- 4-132-762-11 (CZECH)
- 4-132-762-21 (HUNGARIAN)
- 4-132-762-31 (SLOVAK)
- 4-132-762-41 (POLISH)
- 4-132-762-51 (SWEDISH)
- 4-132-762-61 (DANISH)
- 4-132-762-71 (FINNISH)
- 4-132-762-81 (ROMANIAN)
- 4-132-762-91 (RUSSIAN)
- 4-132-763-11 (UKRAINIAN)
- 4-132-763-21 (SIMPLIFIED CHINESE)
- 4-132-763-31 (ARABIC)
- 4-132-763-41 (PERSIAN)
- 4-132-763-51 (MALAY)
- 4-132-763-61 (INDONESIAN)
- 4-132-763-71 (THAI)

● J MODEL
付属品

Note：当商品はアクセサリーとして同梱されておりますが
サービスマン用補修部品としては準備しておりません。



 
ACアダプター
(AC-L200C/AC-L200D)
△ 1-487-150-21




電源コード
△ 1-836-251-11




取扱説明書
4-132-764-01 (日本語)




AV接続ケーブル
1-823-156-51

 

USBケーブル
1-829-868-31

 

 CD-ROM
「Handycam Application Software」
「Picture Motion Browser」(ソフトウェア)
「PMB」(「PMBガイド」を含むソフトウェア)
「ハンドカムハンドブック」(PDF)
4-132-757-02



リチャージャルバッテリー
パック NP-FH30
(Note)



 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
ハンドカムハンドブック (PDF)

印刷用のハンドカム ハンドブック (PDF) は
全ての言語が付属品のCD-ROMに含まれています。
・印刷物は付属されておりません。
必要な場合は下記商品番号にて注文となります。





















4-132-760-01 (日本語)

● △マークについては、5-1ページを参照して下さい。





















HARDWARE LIST (1/8)

#1: M1.7 X 2.5 (Black) 2-635-562-11 	#2: M1.7 X 4.0 (Black) 2-635-562-31 	#3: M1.7 X 2.5 (Red) 2-660-401-01 	#4: M1.4 X 2.5 (Trapping) (Dark Silver) 3-348-998-81 
#5: M1.7 X 3.5 (Trapping) (Black) 3-080-204-01 	#6: M1.4 X 1.7 (Silver) 2-598-474-01 	#7: M1.7 X 1.6 (Black) 7-627-552-18 	#8: M1.7 X 3.5 (Trapping) (Silver) 3-078-890-01 
#9: M1.7 X 5.0 (Trapping) (Silver) 3-085-890-21 	#10: M1.7 X 4.0 (Silver) 2-599-475-31 	#11: M1.7 X 4.0 (Trapping) (Silver) 3-078-890-11 	#12: M1.7 X 5.0 (Trapping) (Black) 3-080-204-21 
#13: M1.7 X 2.5 (Trapping) (Silver) 3-085-397-01 	#14: M1.7 X 2.5 (Silver) 2-599-475-11 	#15: M1.4 X 1.5 (Silver) 3-062-214-01 	#16: M1.4 X 2.5 (Silver) 2-586-337-01 
#17: M1.7 X 1.5 (Silver) 2-586-389-01 	#18: M1.4 X 2.5 (Silver) 2-535-591-21 	#19: M1.2 X 4.0 (Trapping) (Red) 3-086-156-21 	#20: M1.4 X 3.0 (Silver) 2-635-591-31 



















HARDWARE LIST (2/8)

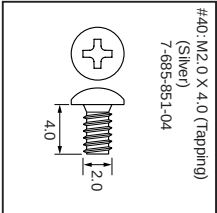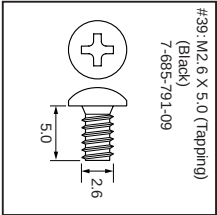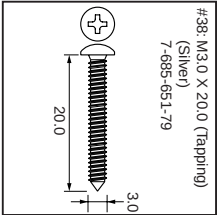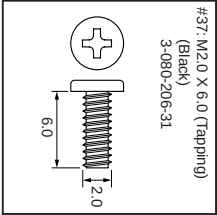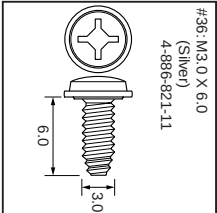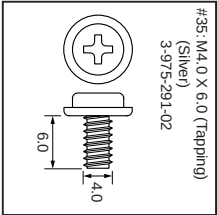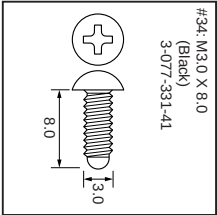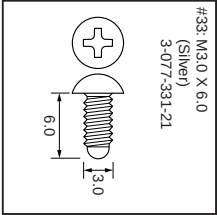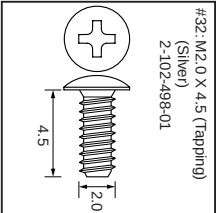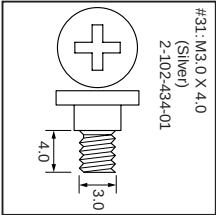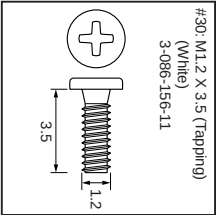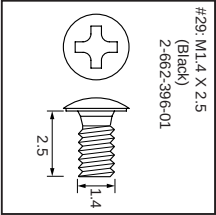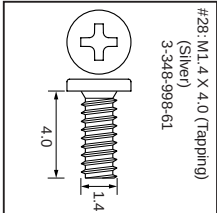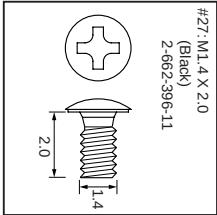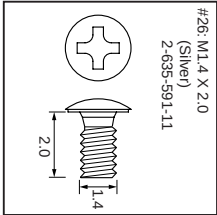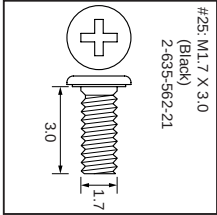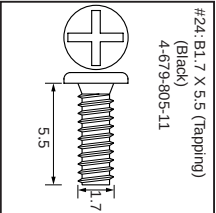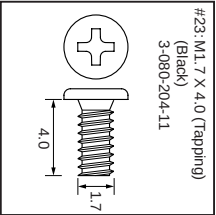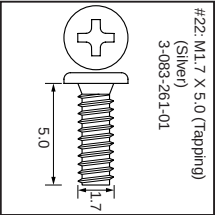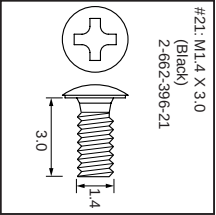





















HARDWARE LIST (3/8)
                    
#41: M3.0 X 8.0 (Tapping) (Silver) 3-065-748-01 	#42: M2.0 X 4.0 (Tapping) (Silver) 7-628-253-00 	#43: M1.7 X 4.0 (Red) 2-660-401-31 	#44: M1.7 X 3.0 (Tapping) (Silver) 3-078-890-61 
#45: M1.4 X 2.5 (Silver) 2-587-151-01 	#46: M1.7 X 3.0 (Red) 2-660-401-11 	#47: M1.4 X 3.0 (Tapping) (Silver) 2-665-774-01 	#48: M1.7 X 2.5 (Silver) 3-973-497-91 
#49: M2.0 X 4.0 (Black) 2-630-005-31 	#50: M2.0 X 3.0 (Red) 2-891-494-11 	#51: M2.0 X 2.5 (Silver) 3-073-686-01 	#52: M2.0 X 4.0 (Tapping) (Black) 3-080-206-11 
#53: M2.0 X 5.0 (Tapping) (Black) 3-080-206-21 	#54: M1.75 X 6.0 (Tapping) (Black) 3-318-203-11 	#55: M2.0 X 4.0 (Silver) 2-655-582-11 	#56: M2.0 X 3.5 (Silver) 3-067-187-11 
#57: M1.7 X 4.0 (Black) 7-627-852-18 	#58: M2.0 X 6.0 (Tapping) (Silver) 3-719-408-11 	#59: M2.0 X 5.0 (Tapping) (Silver) 3-080-205-21 	#60: M2.6 X 5.0 (Black) 3-061-062-11 





















HARDWARE LIST (4/8)

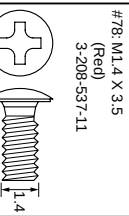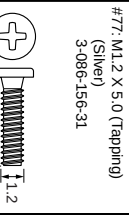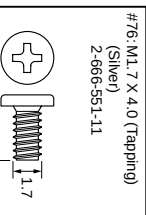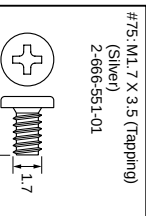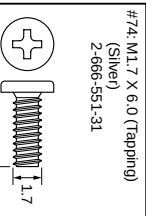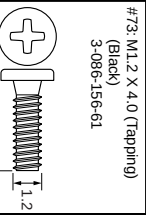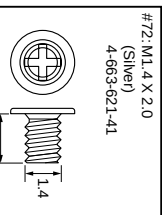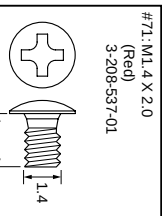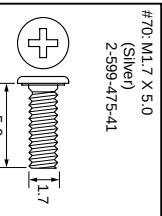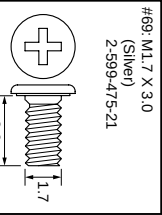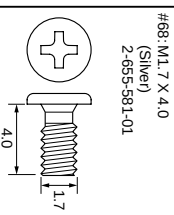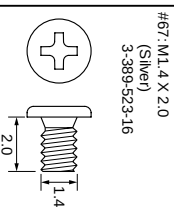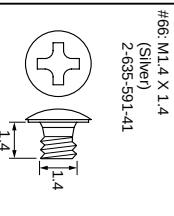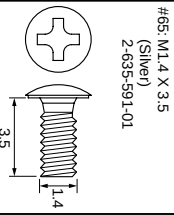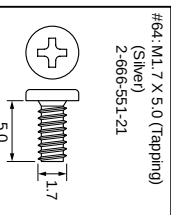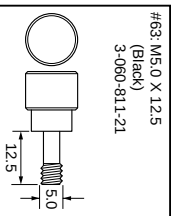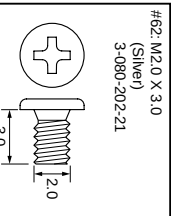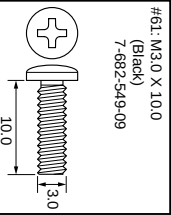





















HARDWARE LIST (5/8)

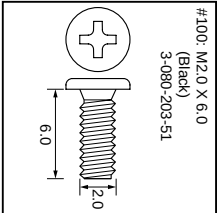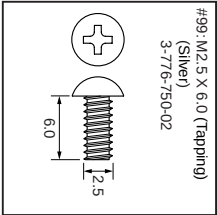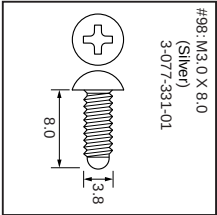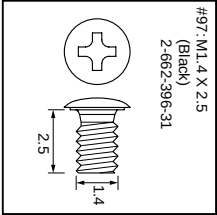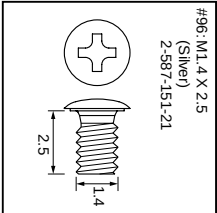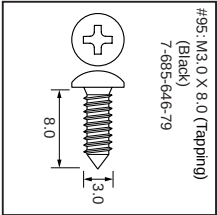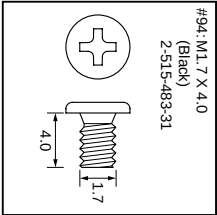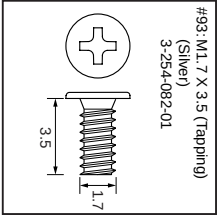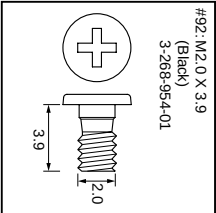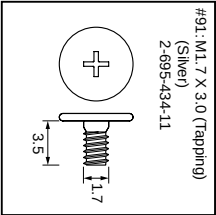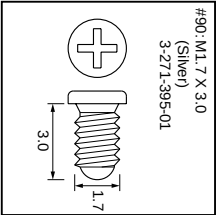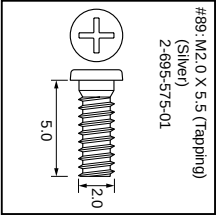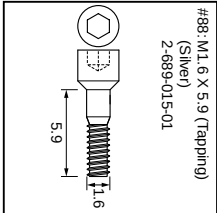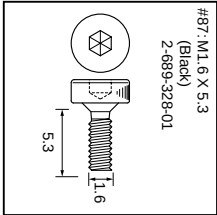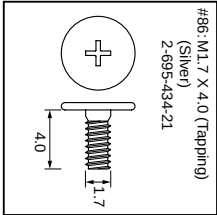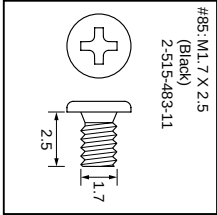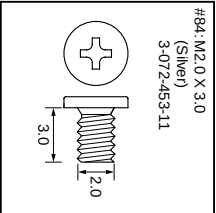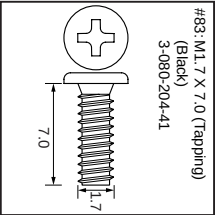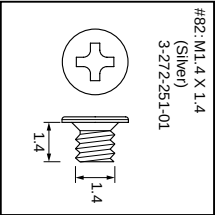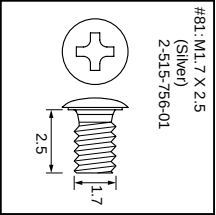




















HARDWARE LIST (6/8)
                    
#101: M2.0 X 5.0 (Silver) 7-621-555-39 	#102: M2.6 X 8.0 (Black) 7-621-284-30 	#103: M2.6 X 10.0 (Silver) 7-685-794-09 	#104: M3.0 X 8.0 (Black) 7-682-548-09 
#105: M2.0 X 4.0 (Red) 2-891-494-31 	#106: M2.0 X 6.0 (Black) 3-713-786-11 	#107: M2.0 X 5.0 (Black) 3-032-750-01 	#108: M1.7 X 3.0 (Tapping) (Black) 2-695-430-01 
#109: M1.7 X 3.0 (Black) 2-515-483-21 	#110: M2.0 X 3.0 (Black) 2-630-005-21 	#111: M1.7 X 4.0 (Tapping) (Silver) 2-887-124-01 	#112: M1.4 X 5.0 (Black) 2-178-410-11 
#113: M1.7 X 5.0 (Black) 2-635-562-41 	#114: M2.0 X 5.5 (Tapping) (Silver) 2-698-464-01 	#115: M1.4 X 3.5 (Tapping) (Silver) 3-348-998-51 	#116: M2.0 X 3.5 (Tapping) (Silver) 2-695-435-01 
#117: M1.7 X 4.5 (Tapping) (Silver) 2-695-429-31 	#118: M1.4 X 2.0 (Black) 2-655-580-01 	#119: M2.6 X 5.0 (Black) 7-627-556-58 	#120: M2.6 X 6.0 (Silver) 7-621-770-67 

                    HARDWARE LIST (7/8)

#121: M2.0 X 4.0 (Tapping) (Silver) 3-080-205-11 	#122: M3.0 X 6.0 (Black) 7-682-547-09 	#123: M4.0 X 8.0 (Black) 7-682-561-09 	#124: M1.7 X 2.0 (Silver) 2-599-475-01 
#125: M1.4 X 3.0 (Black) 3-291-847-01 	#126: M2.9 X 3.5 (Black) 3-292-616-01 	#127: M3.0 X 25.0 (Black) 7-682-654-09 	#128: M4.0 X 12.0 (Black) 3-452-472-01 
#129: M3.0 X 12.0 (Black) 7-682-550-09 	#130: M2.0 X 4.5 (Tapping) (Silver) 3-732-817-11 	#131: M4.0 X 12.0 (Silver) 3-452-471-01 	#132: M2.6 X 6.0 (Black) 4-673-655-01 
#133: M3.0 X 6.0 (Black) 3-452-484-01 	#134: M2.6 X 7.0 (Black) 3-299-572-01 	#135: M2.0 X 2.5 (Black) 7-627-553-28 	#136: M1.4 X 4.0 (Tapping) (Black) 3-065-509-11 
#137: M1.7 X 3.0 (Black) 3-090-976-62 	#138: M1.4 X 3.5 (Silver) 4-104-078-01 	#139: M1.4 X 2.0 (Silver) 2-655-579-01 	#140: M1.7 X 2.0 (Black) 2-635-562-01 

HARDWARE LIST (8/8)

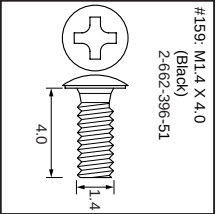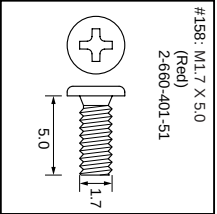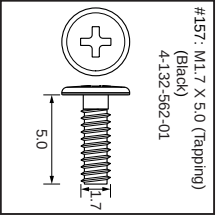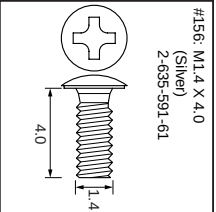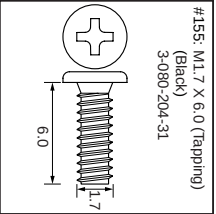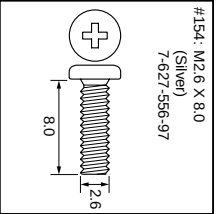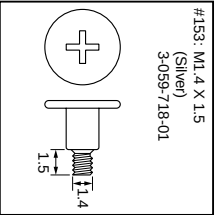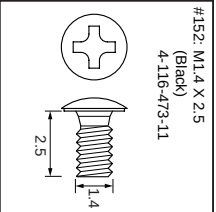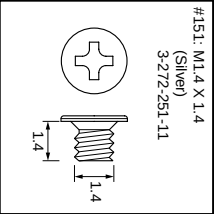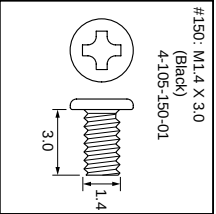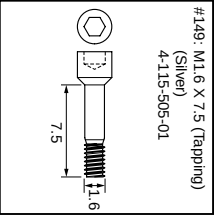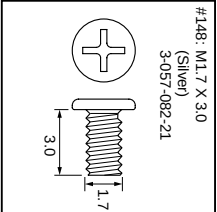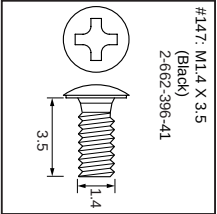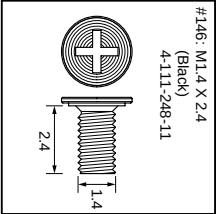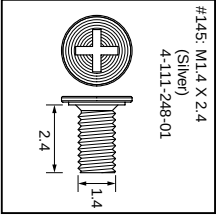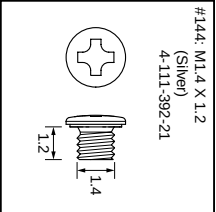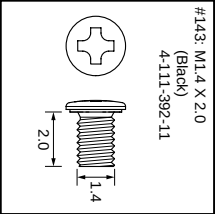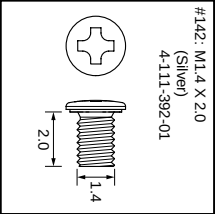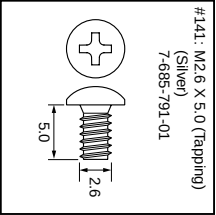

Reverse

985266932.pdf

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2009.02	Official Release	—	—
1.1	2009.02	Revised-1 (A1 DI08-344)	• Correction of Block Diagram • Correction of Exploded View S.M. revised: Page 3-3 , Page 5-6	Yes