


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. CABINET (UPPER) SECTION

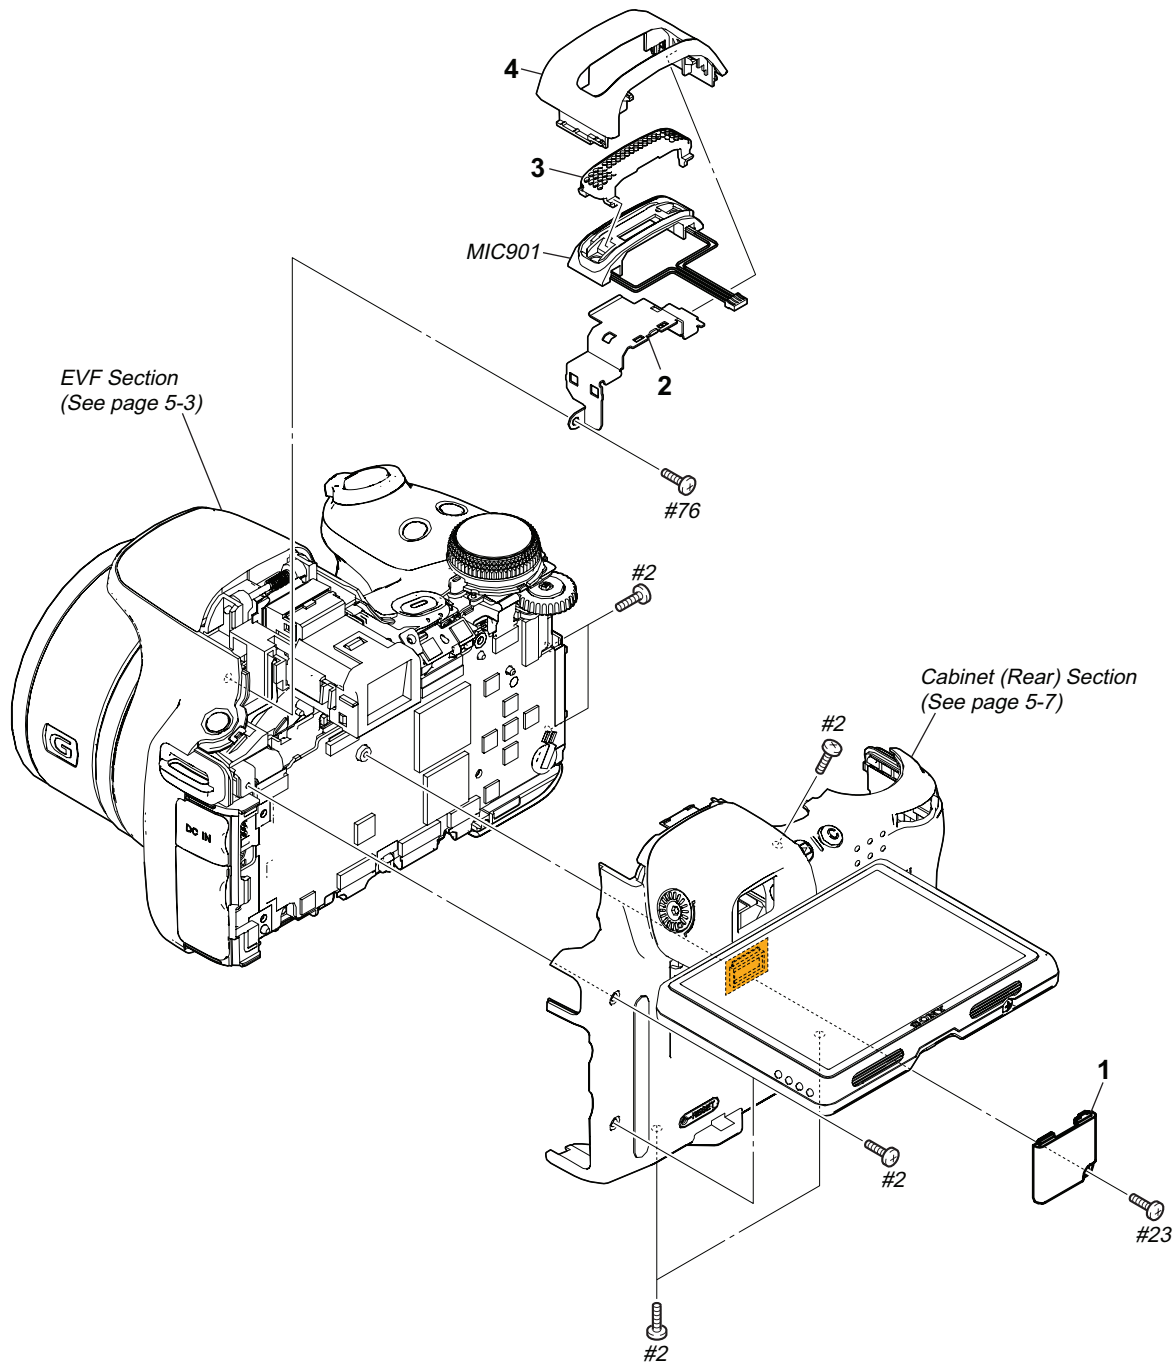

Ref. No.	Part No.	Description
1	4-142-440-01	DRIVING, SY MECHANICAL
* 2	4-142-452-01	PLATE (MIC), GROUND
3	4-142-451-01	GRILLE, MICROPHONE
4	4-142-446-01	CABINET (UPPER)
MIC901	1-542-800-11	MICROPHONE UNIT (STEREO)


Ref. No.	Part No.	Description
#2	2-635-562-31	SCREW (M1.7) (Black)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)
#76	2-666-551-11	SCREW, TAPPING, P2 (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. EVF SECTION

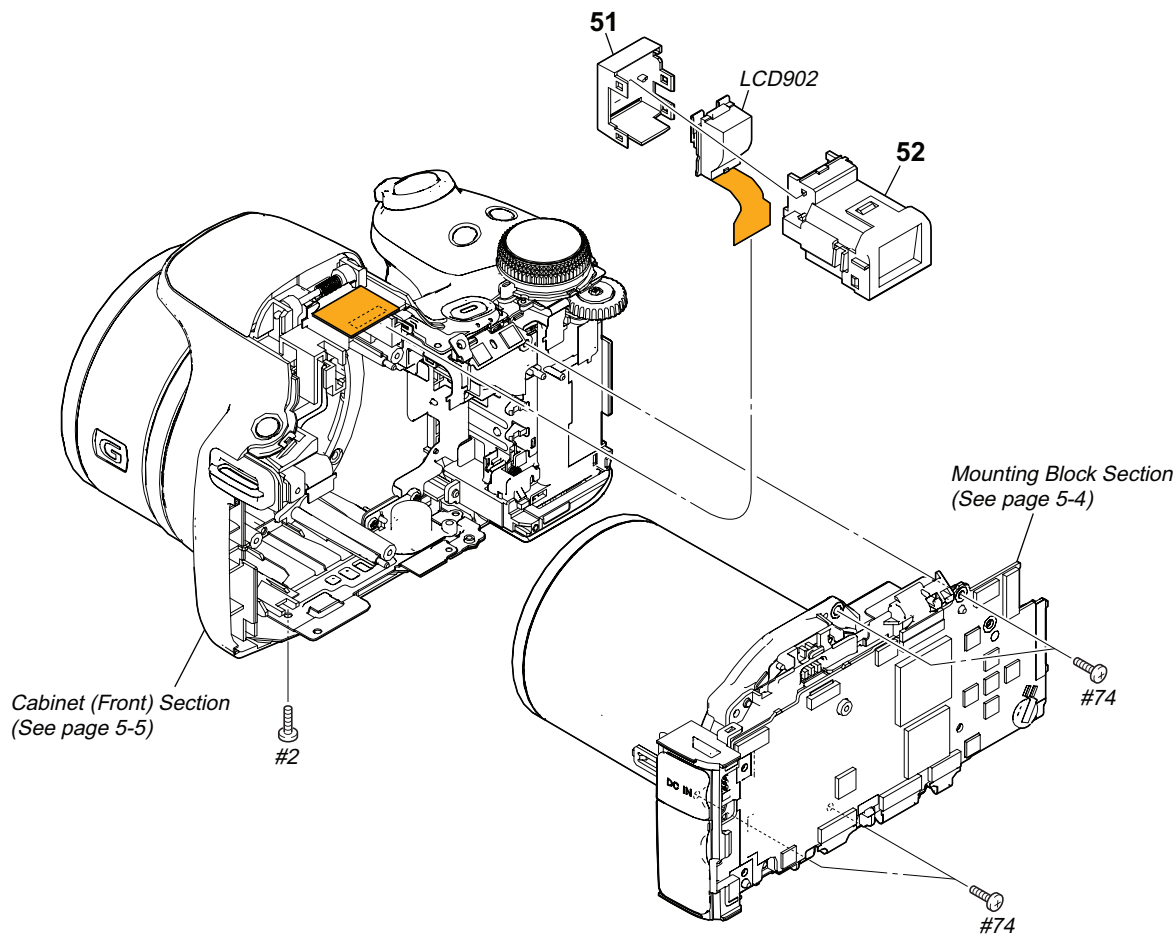

Ref. No.	Part No.	Description
51	4-142-469-01	RETAINER, MODULE
52	X-2190-274-1	VF ASSY (470)
LCD902	1-802-033-12	LCD MODULE

Ref. No.	Part No.	Description
#2	2-635-562-31	SCREW (M1.7) (Black)
#74	2-666-551-31	SCREW, TAPPING, P2 (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. MOUNTING BLOCK SECTION

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.


Note: イメージャの交換時は4-3ページの“イメージャ交換時の注意”を必ずお読みください。

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

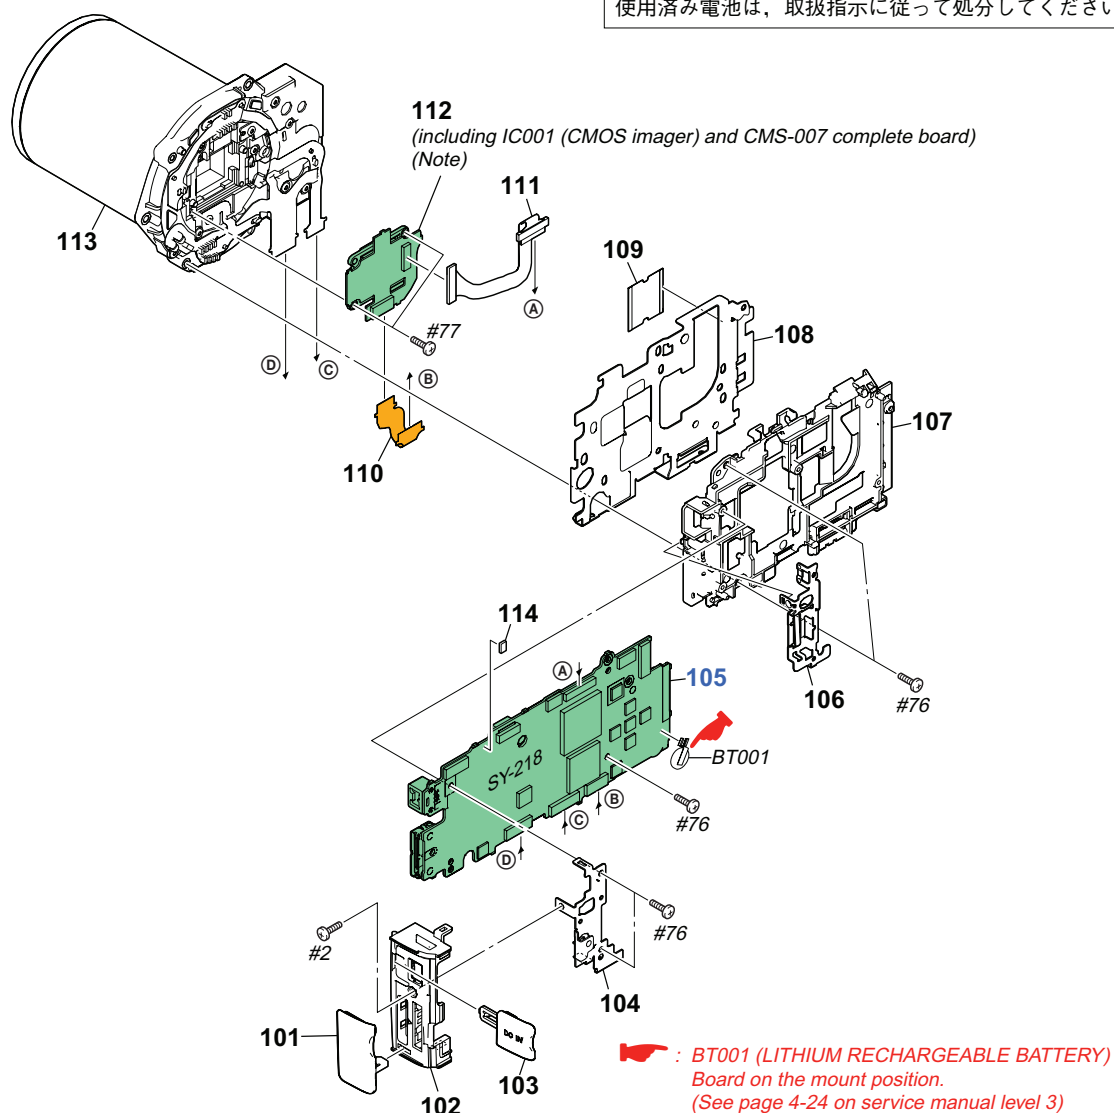

• Refer to page 5-1 for mark ▲.

Ref. No.	Part No.	Description
101	4-142-438-01	COVER (MULTI)
102	4-142-429-01	GUIDE, JK COVER
103	4-142-437-01	COVER (DC)
* 104	4-142-432-01	PLATE (MULTI), FIXED
105	A-1705-721-A	SY-218 BOARD, COMPLETE (SERVICE)
* 106	4-142-433-01	PLATE (MULTI), GROUND
* 107	4-142-430-01	HOLDER, LENS
* 108	4-142-431-01	HEAT SINK, SY
* 109	4-142-434-01	SHEET (LENS HOLDER)
110	1-879-478-11	FP-094 FLEXIBLE BOARD

Ref. No.	Part No.	Description
111	1-966-557-11	HARNESS (HN-084)
112	A-1727-691-A	CMOS BLOCK ASSY (SERVICE) (Including IC001 (CMOS imager) and CMS-007 complete board) (Note)
113	A-1710-163-A	LENS BLOCK ASSY (SERVICE USE)
* 114	4-147-462-01	GASKET (RE)
▲ BT001	1-756-813-11	LITHIUM RECHARGEABLE BATTERY
#2	2-635-562-31	SCREW (M1.7) (Black)
#76	2-666-551-11	SCREW, TAPPING, P2 (Silver)
#77	3-086-156-31	SCREW B1.2 (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. CABINET (FRONT) SECTION

ns: not supplied

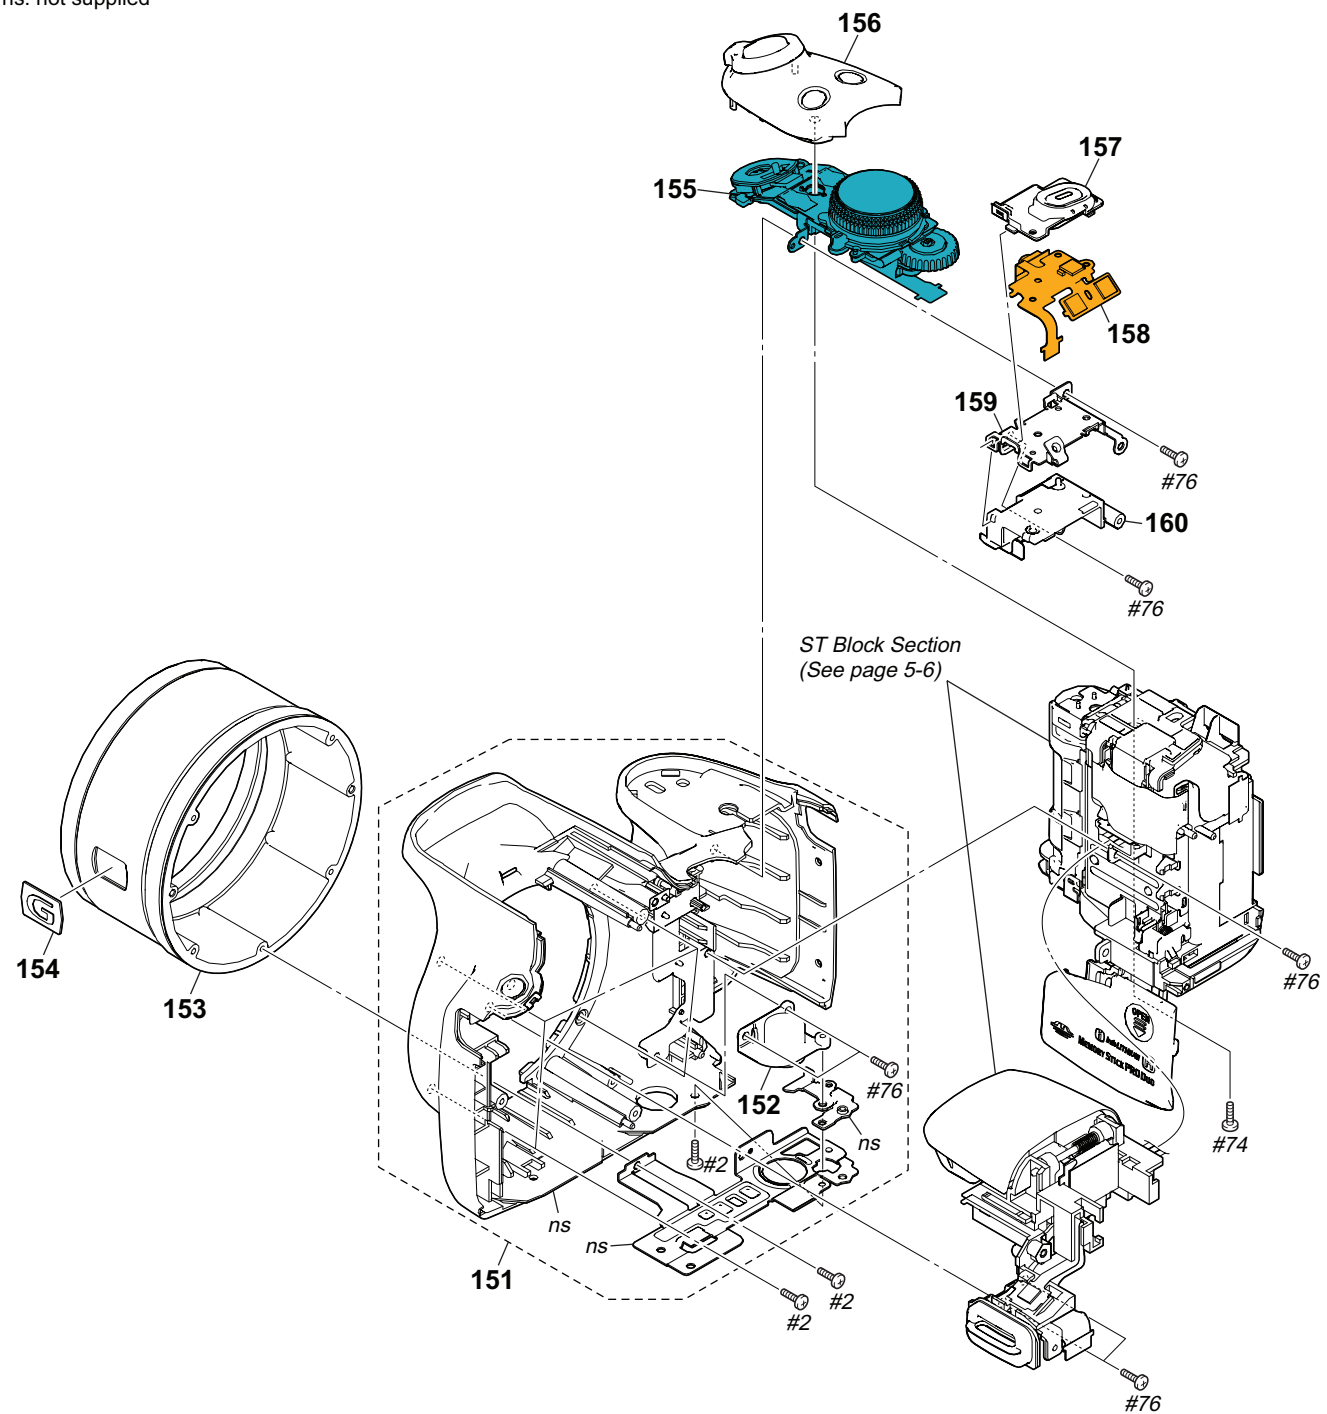

Ref. No.	Part No.	Description
151	X-2348-896-1	CABINET (FRONT) ASSY
152	3-106-766-01	SCREW, TRIPOD
153	4-142-496-01	RING (B), LENS
154	4-142-497-01	EMBLEM, G
155	1-487-154-11	SWITCH BLOCK, CONTROL (SW61450)
156	X-2348-895-1	RELEASE ASSY
157	X-2348-894-1	BUTTON ASSY, POWER


Ref. No.	Part No.	Description
158	A-1705-727-A	LE-044 FLEXIBLE BOARD, COMPLETE
* 159	4-142-484-01	PLATE (POWER), GROUND
* 160	4-142-483-01	RETAINER, AF
#2	2-635-562-31	SCREW (M1.7) (Black)
#74	2-666-551-31	SCREW, TAPPING, P2 (Silver)
#76	2-666-551-11	SCREW, TAPPING, P2 (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. ST BLOCK SECTION

ns: not supplied

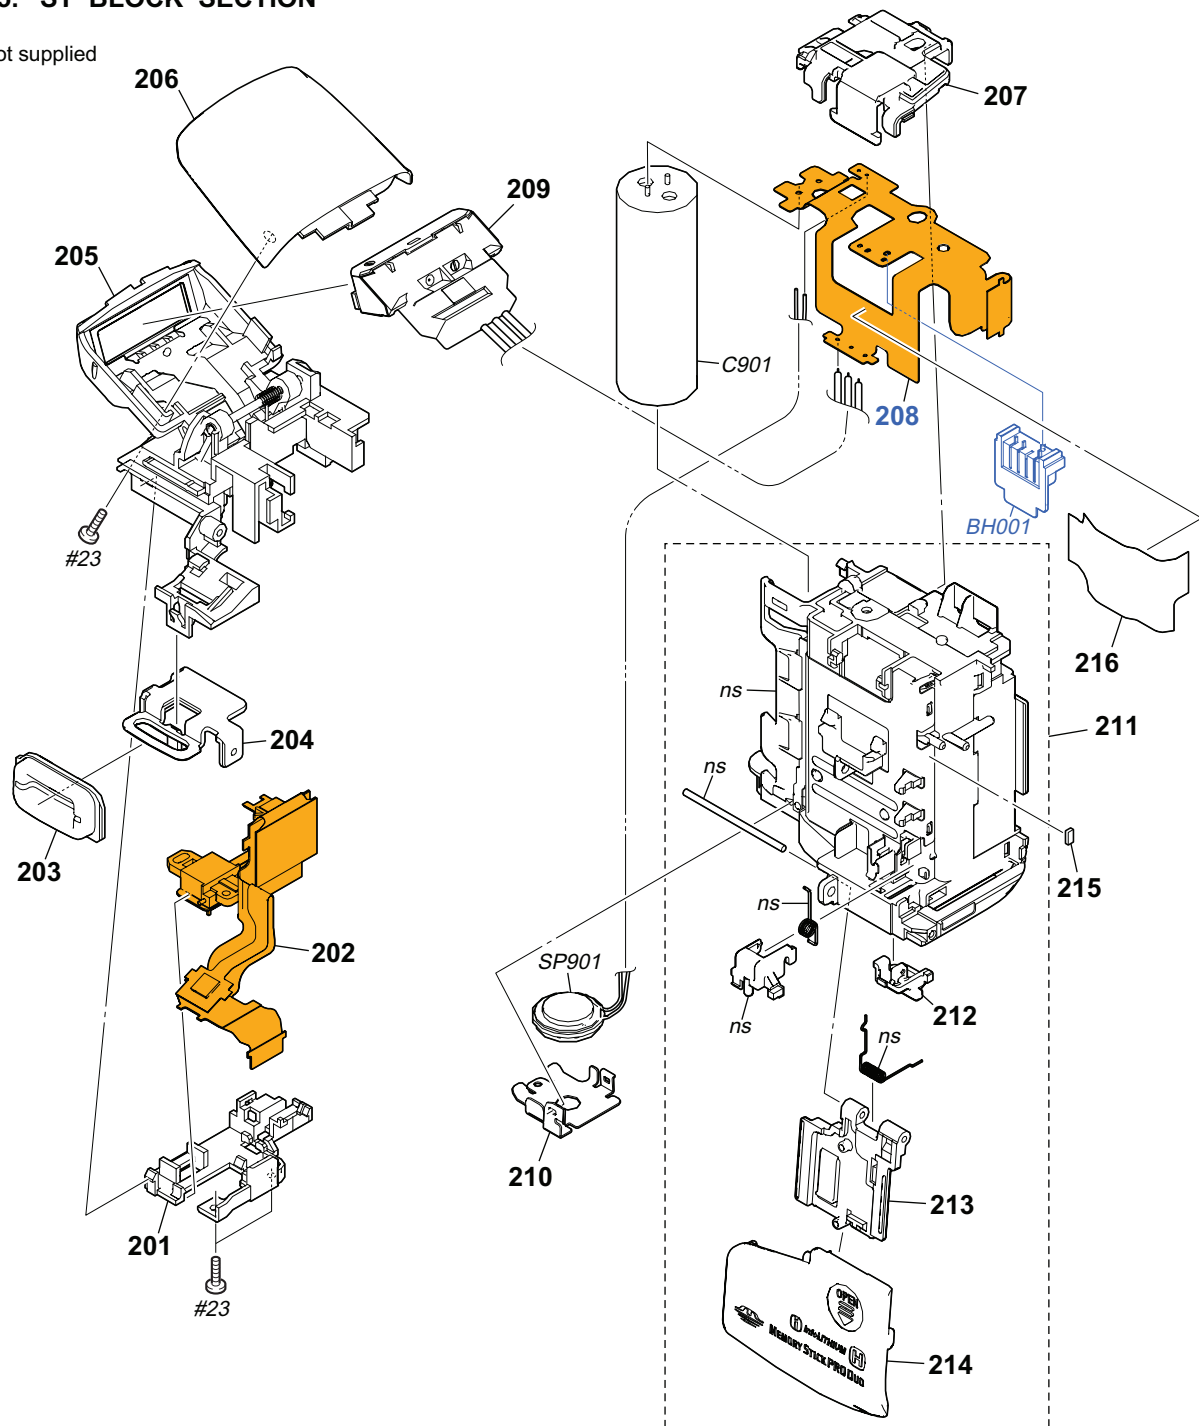

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 201	4-142-472-01	HOLDER, PL
202	A-1705-726-A	PL-003 FLEXIBLE BOARD, COMPLETE
* 203	4-142-436-01	FRAME (R), STRAP
* 204	4-142-435-01	SHEET METAL (R), STRAP
205	X-2348-893-1	BASE ASSY, ST
206	4-142-473-01	COVER, ST
* 207	4-141-669-01	COVER, BT TERMINAL
208	A-1705-725-A	ST-209 FLEXIBLE BOARD, COMPLETE
△ 209	1-487-161-11	FLASH UNIT
* 210	4-141-668-01	COVER, SP

Ref. No.	Part No.	Description
211	X-2348-780-1	BTH ASSY
* 212	4-141-665-01	CLAW, BT LOCK
* 213	4-141-660-01	BT HINGE
* 214	4-141-661-01	LID, BT
215	4-142-529-01	GASKET (BTH)
216	4-143-049-01	SHEET (ST FLEXIBLE)
△ BH001	1-780-064-21	BATTERY TERMINAL BOARD
△ C901	1-116-047-11	ELECT 265uF 315V
SP901	1-825-945-61	LOUDSPEAKER (1.3CM)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (REAR) SECTION

ns: not supplied

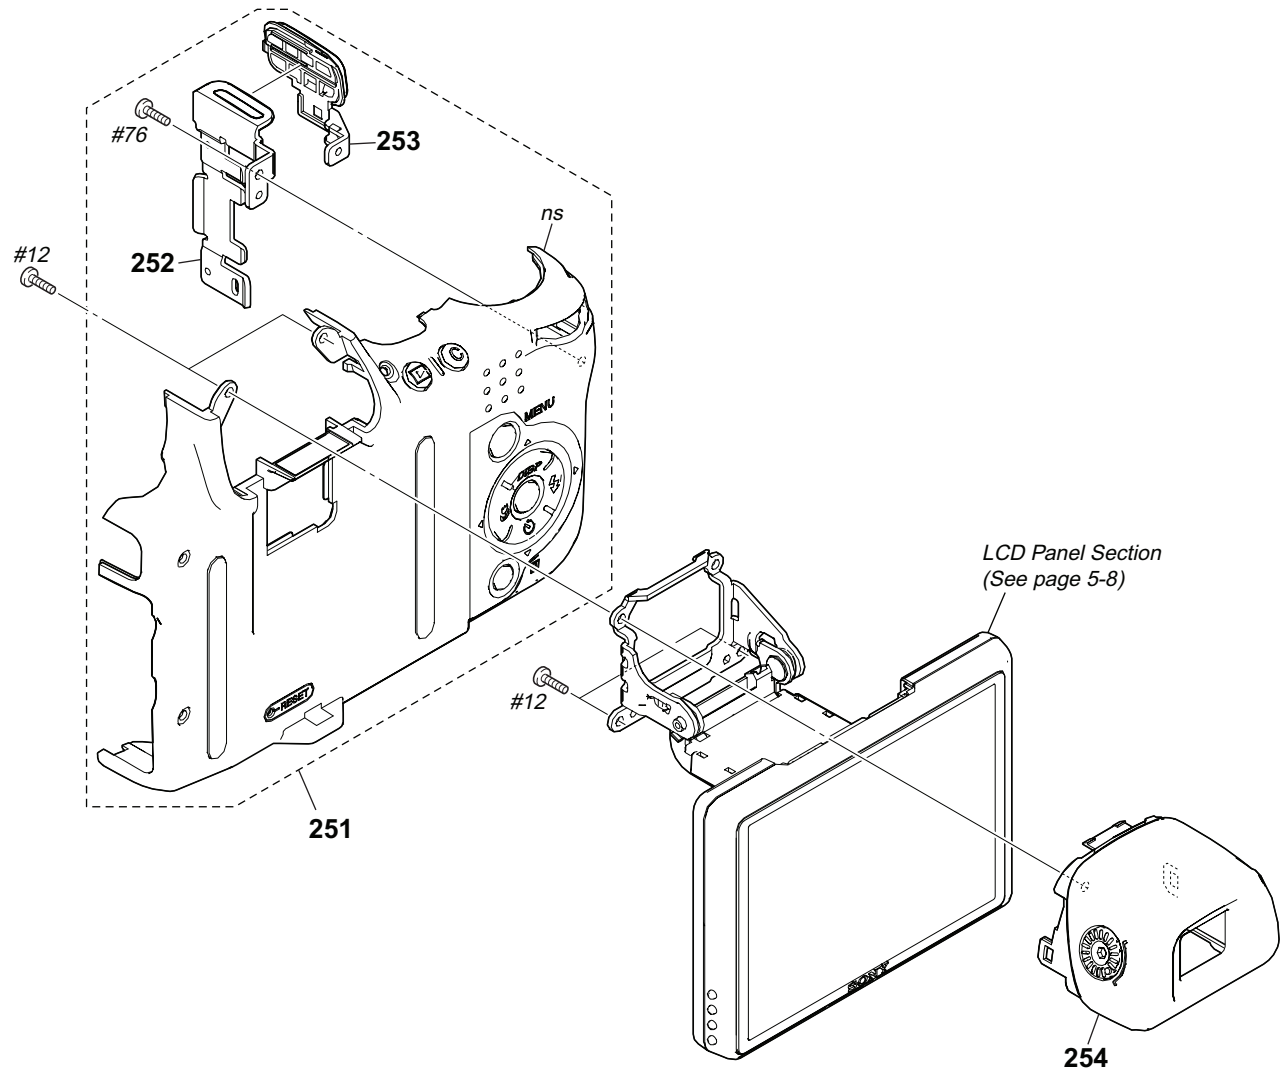

Ref. No.	Part No.	Description
251	X-2348-898-1	CABINET (REAR) ASSY
* 252	4-142-517-01	SHEET METAL (L), STRAP
* 253	4-142-518-01	FRAME (L), STRAP
254	X-2348-897-1	EYE CUP ASSY


Ref. No.	Part No.	Description
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#76	2-666-551-11	SCREW, TAPPING, P2 (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. LCD PANEL SECTION

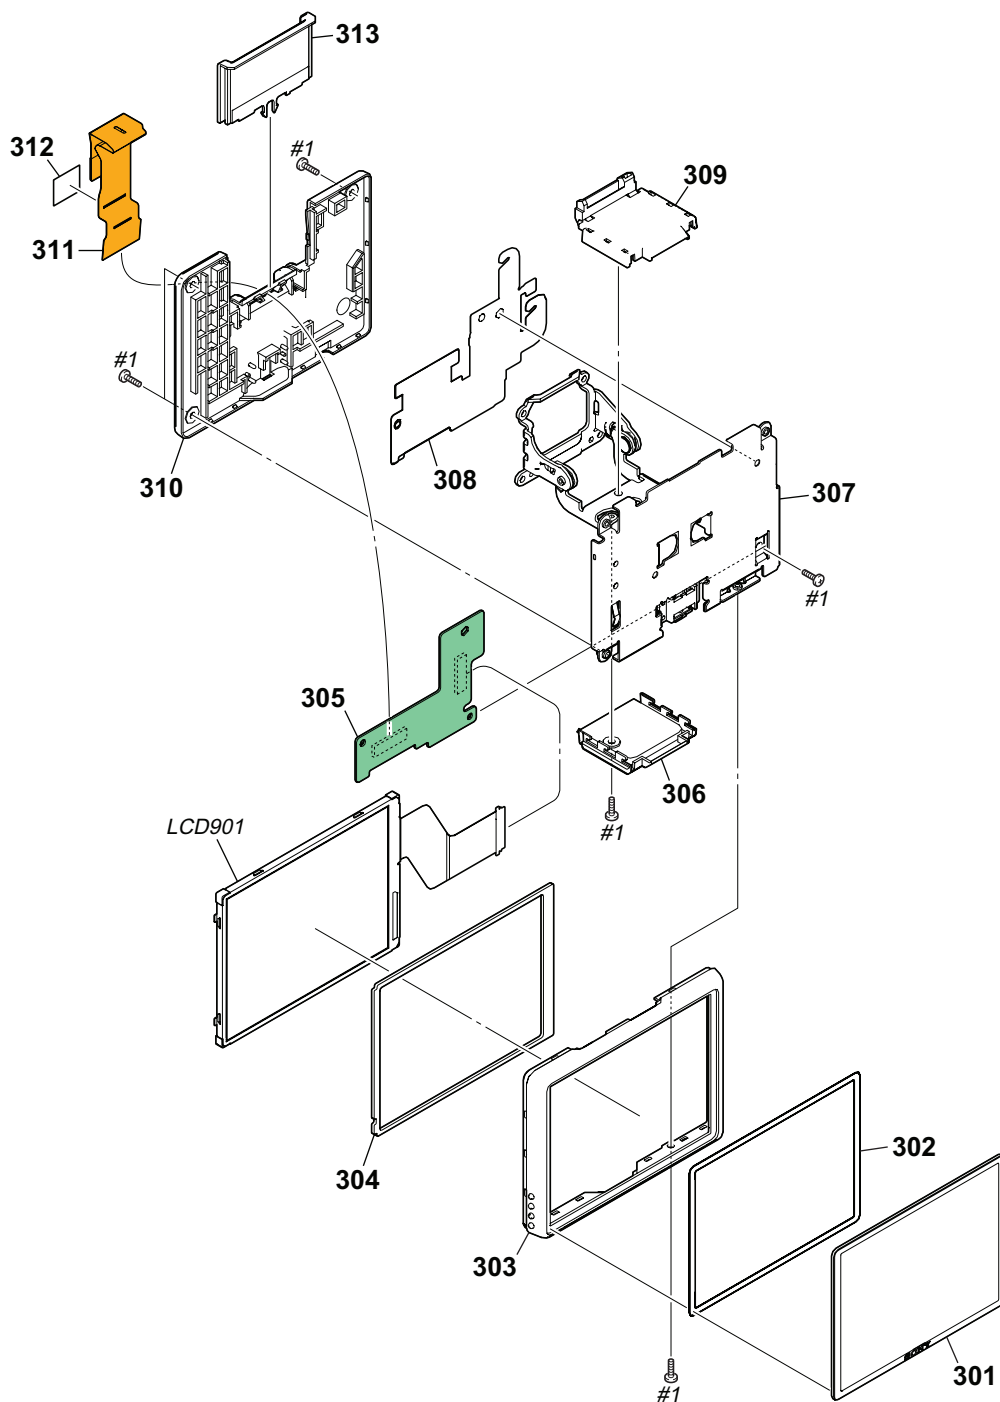

Ref. No.	Part No.	Description
301	4-142-459-01	WINDOW (61450), LCD
302	4-142-454-01	SHEET LCD WINDOW ADHESIVE
303	4-142-453-01	CABINET (M), P
304	4-142-458-01	CUSHION (LCD)
305	A-1705-724-A	PD-380 BOARD, COMPLETE
306	4-142-457-01	COVER (C), HINGE
307	X-2348-890-1	HINGE ASSY
308	4-142-455-01	INSULATING SHEET, CK

Ref. No.	Part No.	Description
309	X-2348-891-1	COVER (M) ASSY, HINGE
310	X-2348-892-1	CABINET (C) ASSY, P
311	A-1705-728-A	FP-095 FLEXIBLE BOARD, COMPLETE
* 312	3-213-424-01	SHEET, FLEXIBLE SLIDER
313	4-142-456-01	PLATE, BLIND
LCD901	1-802-831-11	LCD MODULE (LMS300GC05)
#1	2-635-562-11	SCREW (M1.7) (Black)

Electrical parts list of the CMS-007 board is not shown.
Page 5-9 is not shown.

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1705-728-A	FP-095 FLEXIBLE BOARD, COMPLETE *****
		< CONNECTOR >
CN002	1-778-596-21	CONNECTOR, BOARD TO BOARD 30P
	A-1705-727-A	LE-044 FLEXIBLE BOARD, COMPLETE *****
		< DIODE >
D001	6-500-594-01	DIODE CL-196SYG-CD-T (POWER)
* D002	6-501-861-01	DIODE CL-360S-TD4-X-TL (SELF-TIMER, SMILE SHUTTER, AF ILLUMINATOR)
		< SWITCH >
* S001	1-786-914-31	SWITCH, TACTILE (ON/OFF)
* S002	1-786-914-31	SWITCH, TACTILE (C)
* S003	1-786-914-31	SWITCH, TACTILE (▶)
	A-1705-724-A	PD-380 BOARD, COMPLETE *****
		< CAPACITOR >
* C001	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V
C002	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C003	1-112-021-91	CERAMIC CHIP 2.2uF 20% 16V
C004	1-125-889-11	CERAMIC CHIP 2.2uF 10% 10V
C005	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C006	1-125-889-11	CERAMIC CHIP 2.2uF 10% 10V
* C007	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V
* C008	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V
C009	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
* C011	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V
C012	1-112-021-91	CERAMIC CHIP 2.2uF 20% 16V
C013	1-112-021-91	CERAMIC CHIP 2.2uF 20% 16V
C014	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C015	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
		< CONNECTOR >
* CN001	1-816-959-51	FFC/FPC CONNECTOR (ZIF) 28P
* CN002	1-821-202-81	CONNECTOR, FPC (ZIF) 45P
		< DIODE >
D001	6-501-568-01	DIODE RB521CS-30T2R
D002	6-501-568-01	DIODE RB521CS-30T2R
D003	6-501-568-01	DIODE RB521CS-30T2R
		< RESISTOR >
R002	1-218-974-11	METAL CHIP 56K 5% 1/16W
R003	1-218-977-11	METAL CHIP 100K 5% 1/16W
R004	1-218-953-11	METAL CHIP 1K 5% 1/16W

Ref. No.	Part No.	Description
	A-1705-726-A	PL-003 FLEXIBLE BOARD, COMPLETE *****
		< CAPACITOR >
C001	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C004	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C005	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C006	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
		< CONNECTOR >
* CN003	1-816-649-51	FFC/CONNECTOR, FPC (LIF) 22P
		< DIODE >
D001	8-719-069-29	DIODE RB520S-30FJTE61
		< IC >
* IC001	6-708-464-01	IC R1114Q251D-TR-FA
		< PLUNGER >
* RY001	1-455-056-11	SOLENOID, PLUNGER
		< SWITCH >
S001	1-786-180-31	SWITCH, PUSH (1KEY) (STROBE POP-UP DETECT)
* S002	1-786-914-31	SWITCH, TACTILE (FINDER/LCD)
	A-1705-725-A	ST-209 FLEXIBLE BOARD, COMPLETE *****
		< CAPACITOR >
C001	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
* C002	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V
C003	1-164-933-11	CERAMIC CHIP 220PF 10% 50V
C004	1-164-850-11	CERAMIC CHIP 10PF 0.5PF 50V
C006	1-165-875-11	CERAMIC CHIP 10uF 10% 10V
		< DIODE >
D001	6-500-619-01	DIODE RB520S-40TE61
△ D002	6-501-096-01	DIODE CRF02 (TE85R)
		< FUSE >
△ F001	1-576-751-11	FUSE (5A/32V)
		< IC >
* IC001	6-712-975-01	IC BD4215NUV-E2
		< COIL >
* L001	1-400-820-11	INDUCTOR 2.2uH
		< TRANSISTOR >
△ * Q001	6-552-144-01	TR TIG052TS-TL-E

• Refer to page 5-1 for mark △.

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
< RESISTOR >		
R001	1-216-829-11	METAL CHIP 4.7K 5% 1/10W
R002	1-218-941-11	METAL CHIP 100 5% 1/16W
R003	1-218-989-11	METAL CHIP 1M 5% 1/16W


< TRANSFORMER >

△* T001 1-445-491-21 D.C.-D.C.CONVERTER TRANSFORMER

Electrical parts list of the SY-218 board is not shown.
Pages from 5-12 to 5-16 are not shown.


Checking supplied accessories.

Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.

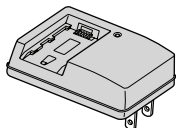

Battery Charger
BC-VH1

 △ 1-487-152-11 (J)



Battery Charger
BC-VH1

△ 1-487-152-21 (US, CND, JE)
△ 1-487-152-31 (EXCEPT US, CND, JE, J)



Instruction Manual

4-132-058-01 (JAPANESE) (J)
4-132-058-11 (ENGLISH) (CND, AEP, UK, E, HK, AUS, JE)
4-132-058-21 (FRENCH, ITALIAN) (CND, AEP)
4-132-058-31 (SPANISH, PORTUGUESE) (AEP, E, AR, JE)
4-132-058-41 (GERMAN, DUTCH) (AEP)
4-132-058-51 (TRADITIONAL CHINESE, SIMPLIFIED CHINESE) (E, HK, JE)
4-132-058-61 (RUSSIAN, UKRAINIAN) (AEP)
4-132-058-71 (ARABIC, PERSIAN) (E)
4-132-058-81 (KOREAN) (KR, JE)
4-132-058-91 (POLISH, CZECH) (AEP)
4-132-059-11 (HUNGARIAN, SLOVAK) (AEP)
4-132-059-21 (SWEDISH, FINNISH) (AEP)
4-132-059-31 (NORWEGIAN, DANISH) (AEP)
4-132-059-41 (CROATIAN, ROMANIAN) (AEP)
4-132-059-51 (TURKISH, GREEK) (AEP)
4-132-059-61 (ENGLISH, SPANISH) (US)
4-132-059-71 (SIMPLIFIED CHINESE) (CH)
4-132-059-81 (MALAY, INDONESIAN) (E)
4-132-059-91 (THAI) (E)



Power Cord (Mains Lead)
(EXCEPT J)

 
△ 1-783-952-71 (AR)
△ 1-832-121-41 (CH)
△ 1-832-169-41 (UK, HK)
△ 1-833-892-41 (KR)
△ 1-834-482-31 (AEP, E)
△ 1-834-484-31 (US, CND)
△ 1-835-983-11 (AUS)
△ 1-836-251-11 (JE)




Conversion (2P) Adaptor
△ 1-569-007-12 (JE)



Conversion (2P) Adaptor
△ 1-569-008-12 (E (EXCEPT Middle East))



 USB, A/V Cable for
Multi-use Terminal
1-836-364-11



Rechargeable Battery Pack
NP-FH50
(Note)



 
Cyber-shot Handbook (PDF)

The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Cyber-shot Handbook.pdf) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.

- (Only for destination Japanese model)

日本国内については日本語のみが印刷での部品供給可能です。



Shoulder Strap
2-629-892-11



 
HDMI Adaptor
1-822-552-11



Lens Cap
X-2177-459-1



Lens Cap Strap
3-979-194-41























CD-ROM
(Cyber-shot application software/
"Cyber-shot Handbook"/
"Cyber-shot Step-up Guide")
4-132-051-01

4-132-054-01 (JAPANESE)	* 4-132-055-61 (CZECH)
* 4-132-054-11 (ENGLISH)	* 4-132-055-71 (HUNGARIAN)
* 4-132-054-21 (FRENCH)	* 4-132-055-81 (SLOVAK)
* 4-132-054-31 (ITALIAN)	* 4-132-055-91 (SWEDISH)
* 4-132-054-41 (SPANISH)	* 4-132-056-11 (FINNISH)
* 4-132-054-51 (PORTUGUESE)	* 4-132-056-21 (NORWEGIAN)
* 4-132-054-61 (GERMAN)	* 4-132-056-31 (DANISH)
* 4-132-054-71 (DUTCH)	* 4-132-056-41 (THAI)
* 4-132-054-81 (TRADITIONAL CHINESE)	* 4-132-056-51 (MALAY)
* 4-132-054-91 (SIMPLIFIED CHINESE)	* 4-132-056-61 (TURKISH)
* 4-132-055-11 (RUSSIAN)	* 4-132-056-71 (GREEK)
* 4-132-055-21 (ARABIC)	* 4-132-056-81 (UKRAINIAN)
* 4-132-055-31 (PERSIAN)	* 4-132-056-91 (CROATIAN)
* 4-132-055-41 (KOREAN)	* 4-132-057-11 (ROMANIAN)
* 4-132-055-51 (POLISH)	* 4-132-057-21 (INDONESIAN)


• Refer to page 5-1 for mark △.

HARDWARE LIST (1/9)

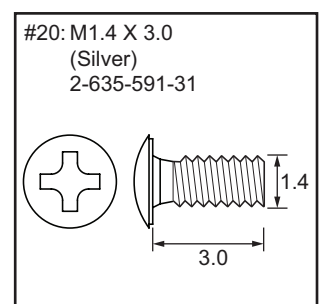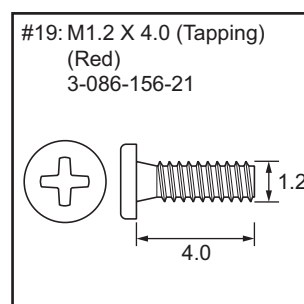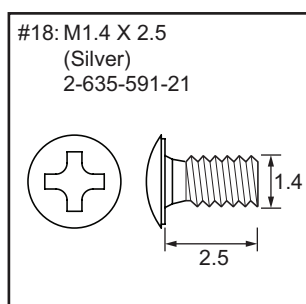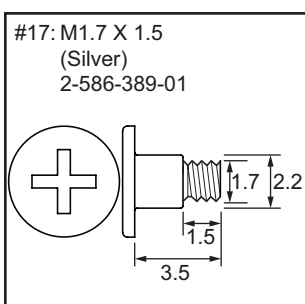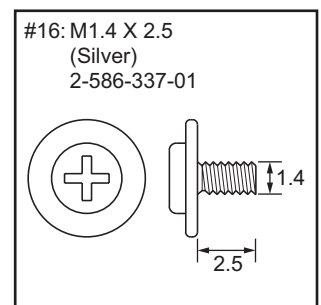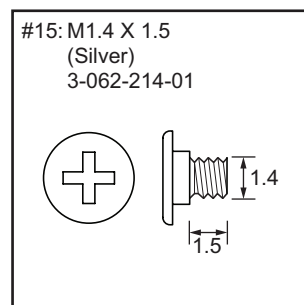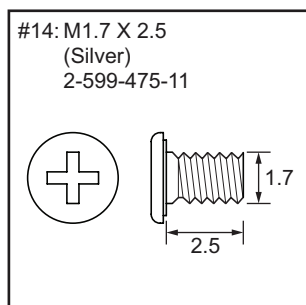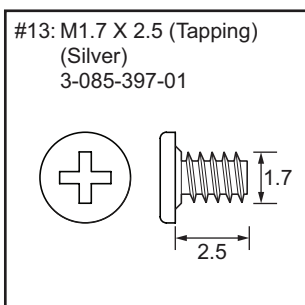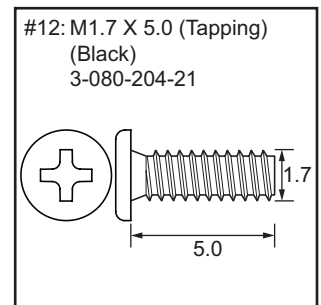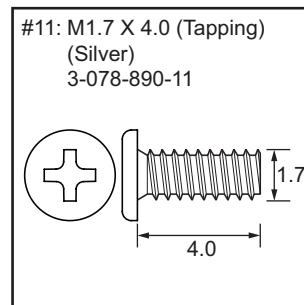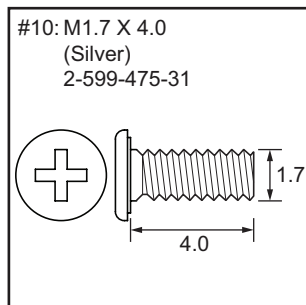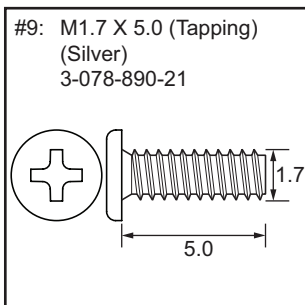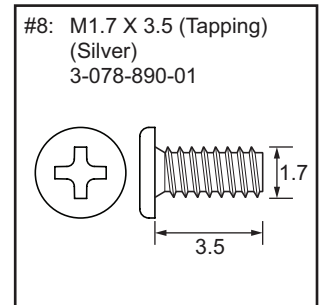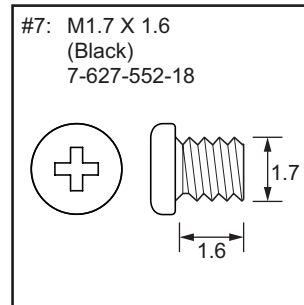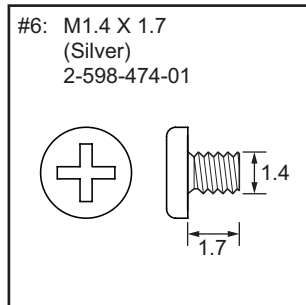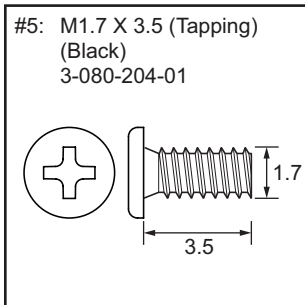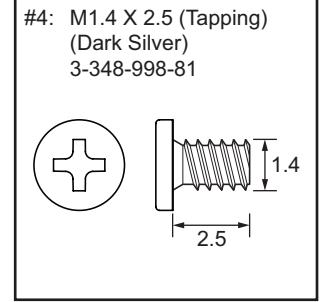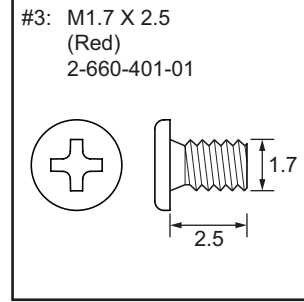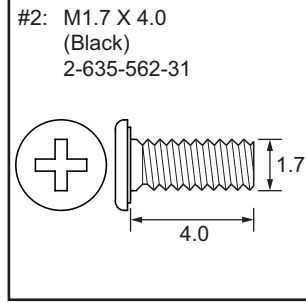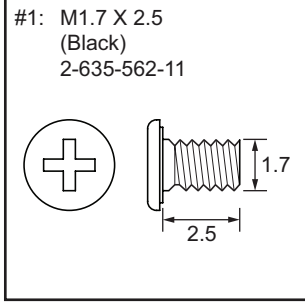


HARDWARE LIST (2/9)


#21: M1.4 X 3.0
(Black)
2-662-396-21

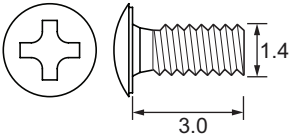


#22: M1.7 X 5.0 (Tapping)
(Silver)
3-083-261-01

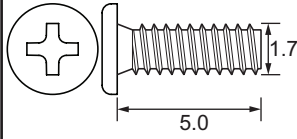


#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

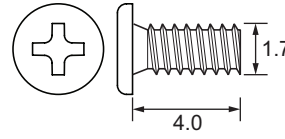


#24: B1.7 X 5.5 (Tapping)
(Black)
4-679-805-11

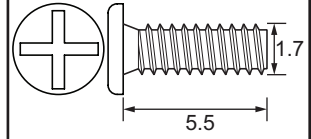


#25: M1.7 X 3.0
(Black)
2-635-562-21

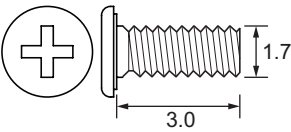


#26: M1.4 X 2.0
(Silver)
2-635-591-11

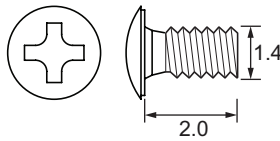


#27: M1.4 X 2.0
(Black)
2-662-396-11

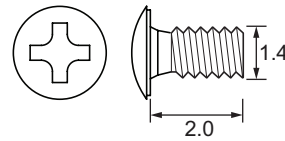


#28: M1.4 X 4.0 (Tapping)
(Silver)
3-348-998-61

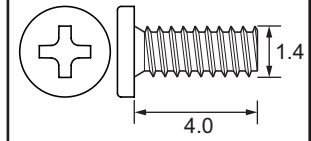


#29: M1.4 X 2.5
(Black)
2-662-396-01

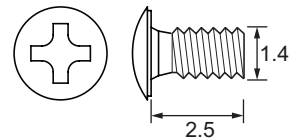


#30: M1.2 X 3.5 (Tapping)
(White)
3-086-156-11

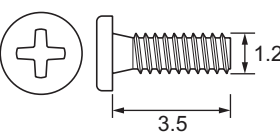


#31: M3.0 X 4.0
(Silver)
2-102-434-01

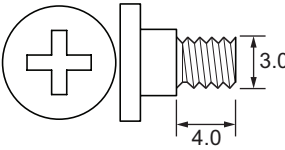


#32: M2.0 X 4.5 (Tapping)
(Silver)
2-102-498-01

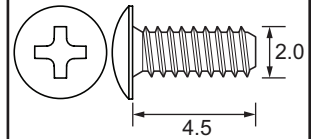


#33: M3.0 X 6.0
(Silver)
3-077-331-21

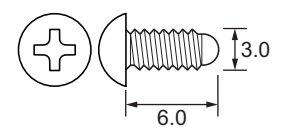


#34: M3.0 X 8.0
(Black)
3-077-331-41

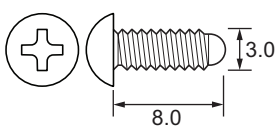


#35: M4.0 X 6.0 (Tapping)
(Silver)
3-975-291-02

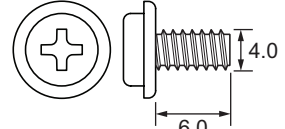


#36: M3.0 X 6.0
(Silver)
4-886-821-11

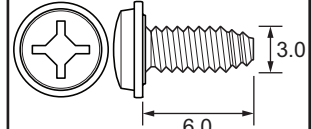


#37: M2.0 X 6.0 (Tapping)
(Black)
3-080-206-31

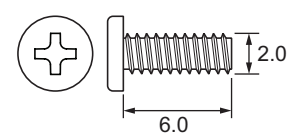


#38: M3.0 X 20.0 (Tapping)
(Silver)
7-685-651-79

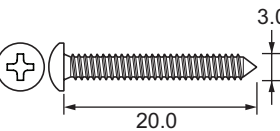





















#39: M2.6 X 5.0 (Tapping)
(Black)
7-685-791-09

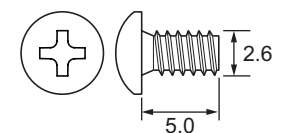

#40: M2.0 X 4.0 (Tapping)
(Silver)
7-685-851-04

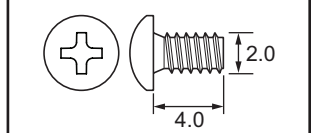


HARDWARE LIST (3/9)

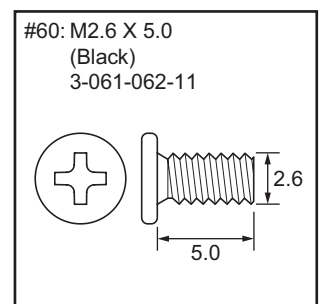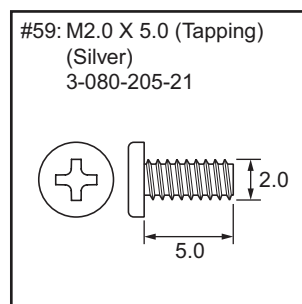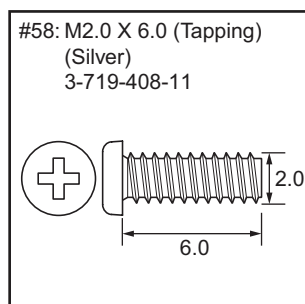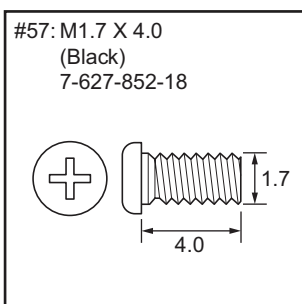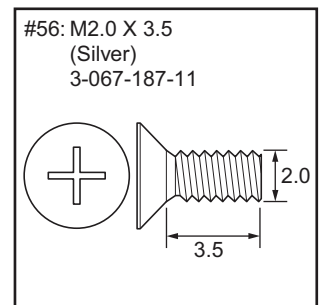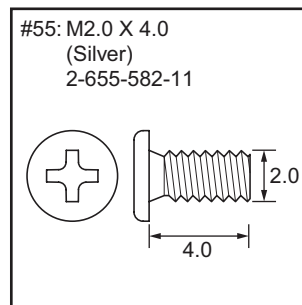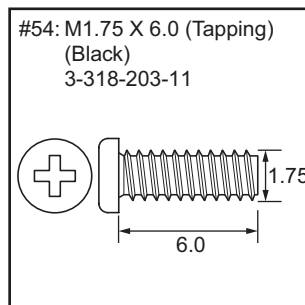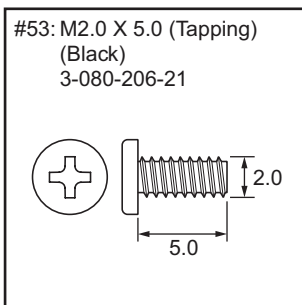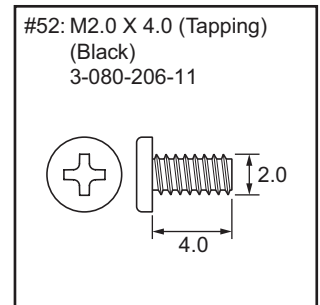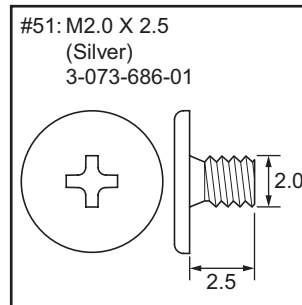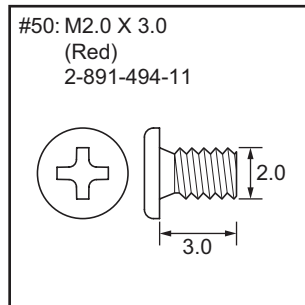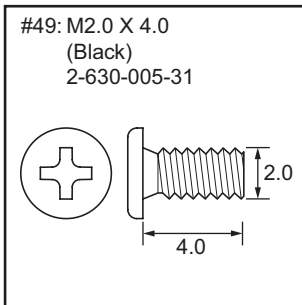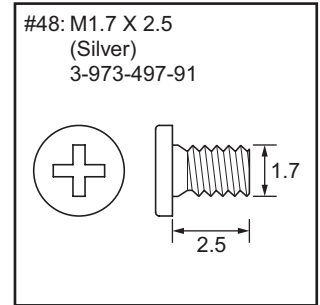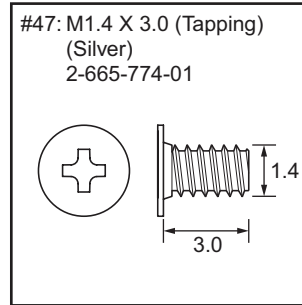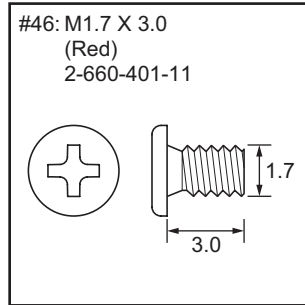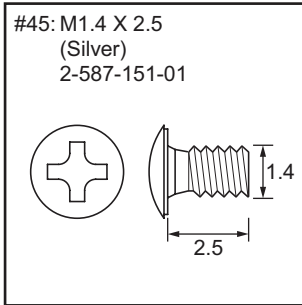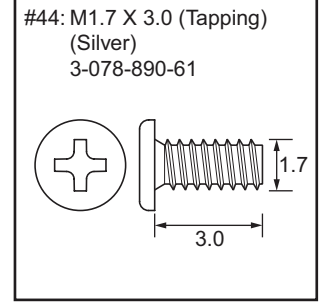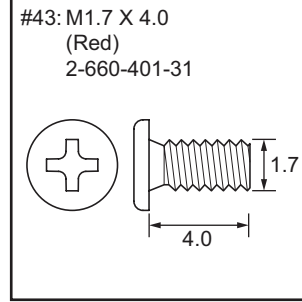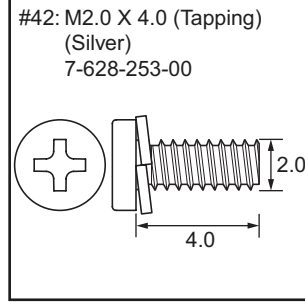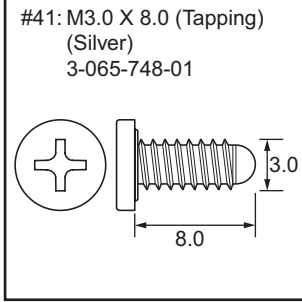


HARDWARE LIST (4/9)


#61: M3.0 X 10.0
(Black)
7-682-549-09

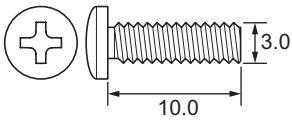


#62: M2.0 X 3.0
(Silver)
3-080-202-21

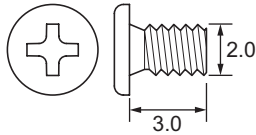


#63: M5.0 X 12.5
(Black)
3-060-811-21

 


#64: M1.7 X 5.0 (Tapping)
(Silver)
2-666-551-21

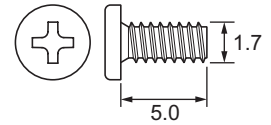


#65: M1.4 X 3.5
(Silver)
2-635-591-01

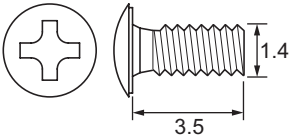


#66: M1.4 X 1.4
(Silver)
2-635-591-41

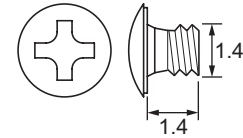


#67: M1.4 X 2.0
(Silver)
3-389-523-16

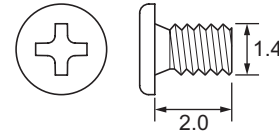


#68: M1.7 X 4.0
(Silver)
2-655-581-01

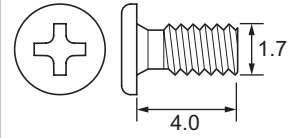


#69: M1.7 X 3.0
(Silver)
2-599-475-21

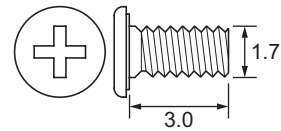


#70: M1.7 X 5.0
(Silver)
2-599-475-41

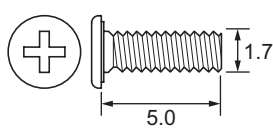


#71: M1.4 X 2.0
(Red)
3-208-537-01

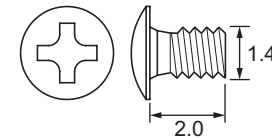


#72: M1.4 X 2.0
(Silver)
4-663-621-41

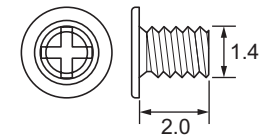


#73: M1.2 X 4.0 (Tapping)
(Black)
3-086-156-61

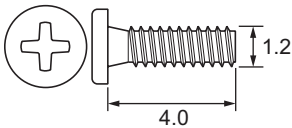


#74: M1.7 X 6.0 (Tapping)
(Silver)
2-666-551-31

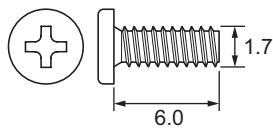


#75: M1.7 X 3.5 (Tapping)
(Silver)
2-666-551-01

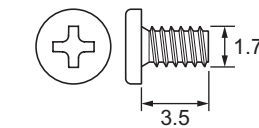


#76: M1.7 X 4.0 (Tapping)
(Silver)
2-666-551-11

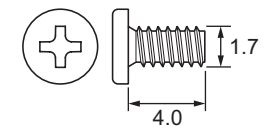


#77: M1.2 X 5.0 (Tapping)
(Silver)
3-086-156-31

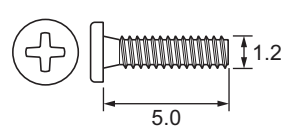


#78: M1.4 X 3.5
(Red)
3-208-537-11

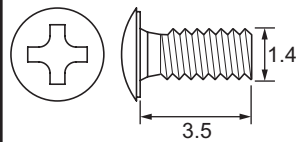

#79: M1.4 X 2.0
(Silver)
2-587-151-11

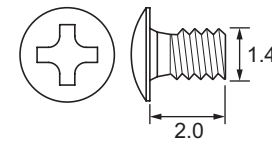


#80: M1.4 X 2.0
(Black)
3-279-411-01

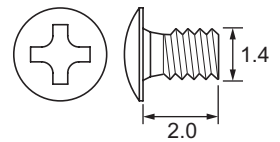


HARDWARE LIST (5/9)


#81: M1.7 X 2.5
(Silver)
2-515-756-01

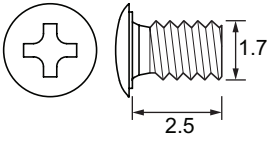


#82: M1.4 X 1.4
(Silver)
3-272-251-01

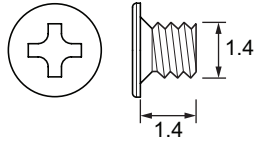


#83: M1.7 X 7.0 (Tapping)
(Black)
3-080-204-41

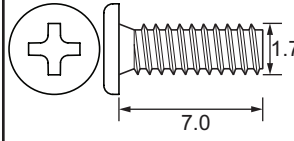


#84: M2.0 X 3.0
(Silver)
3-072-453-11

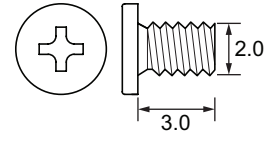


#85: M1.7 X 2.5
(Black)
2-515-483-11

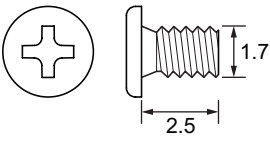


#86: M1.7 X 4.0 (Tapping)
(Silver)
2-695-434-21

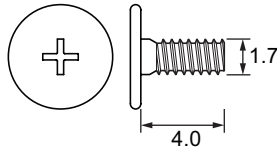


#87: M1.6 X 5.3
(Black)
2-689-328-01

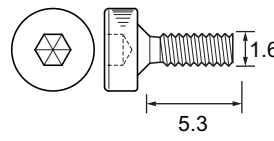


#88: M1.6 X 5.9 (Tapping)
(Silver)
2-689-015-01

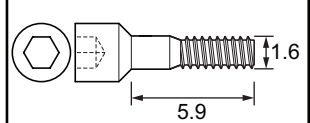


#89: M2.0 X 5.5 (Tapping)
(Silver)
2-695-575-01

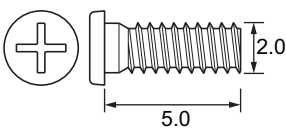


#90: M1.7 X 3.0
(Silver)
3-271-395-01

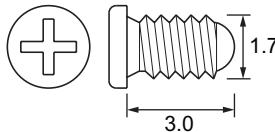


#91: M1.7 X 3.0 (Tapping)
(Silver)
2-695-434-11

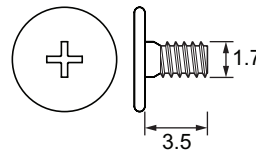


#92: M2.0 X 3.9
(Black)
3-268-954-01

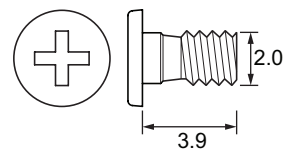


#93: M1.7 X 3.5 (Tapping)
(Silver)
3-254-082-01

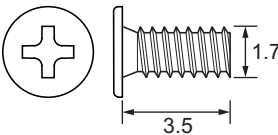


#94: M1.7 X 4.0
(Black)
2-515-483-31

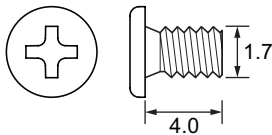


#95: M3.0 X 8.0 (Tapping)
(Black)
7-685-646-79

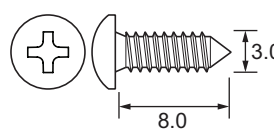


#96: M1.4 X 2.5
(Silver)
2-587-151-21

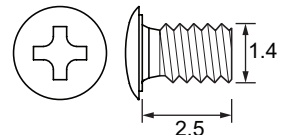


#97: M1.4 X 2.5
(Black)
2-662-396-31

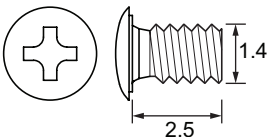


#98: M3.0 X 8.0
(Silver)
3-077-331-01

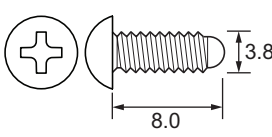

#99: M2.5 X 6.0 (Tapping)
(Silver)
3-776-750-02

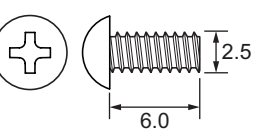


#100: M2.0 X 6.0
(Black)
3-080-203-51

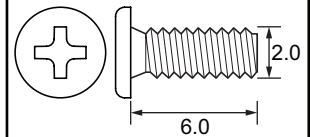


HARDWARE LIST (6/9)


#101: M2.0 X 5.0
(Silver)
7-621-555-39

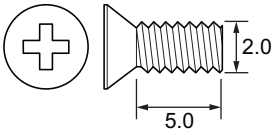


#102: M2.6 X 8.0
(Black)
7-621-284-30

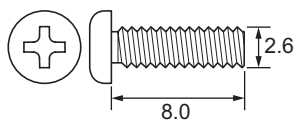


#103: M2.6 X 10.0
(Silver)
7-685-794-09

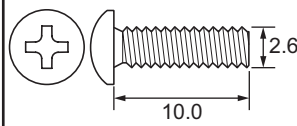


#104: M3.0 X 8.0
(Black)
7-682-548-09

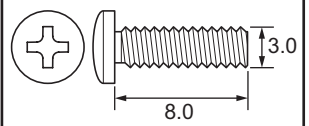


#105: M2.0 X 4.0
(Red)
2-891-494-31

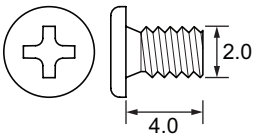


#106: M2.0 X 6.0
(Black)
3-713-786-11

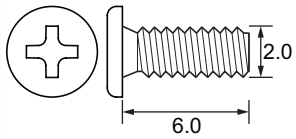


#107: M2.0 X 5.0
(Silver)
3-032-750-01

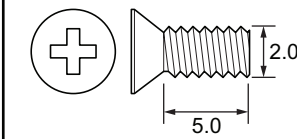


#108: M1.7 X 3.0 (Tapping)
(Black)
2-695-430-01

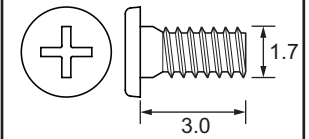


#109: M1.7 X 3.0
(Black)
2-515-483-21

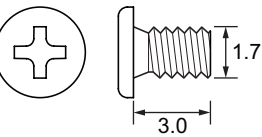


#110: M2.0 X 3.0
(Black)
2-630-005-21

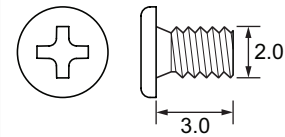


#111: M1.7 X 4.0 (Tapping)
(Black)
2-887-124-01

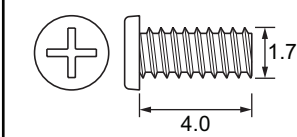


#112: M1.4 X 5.0
(Black)
2-178-410-11

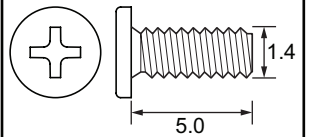


#113: M1.7 X 5.0
(Black)
2-635-562-41

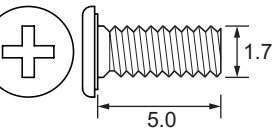


#114: M2.0 X 5.5 (Tapping)
(Silver)
2-698-464-01

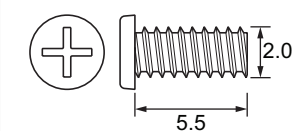


#115: M1.4 X 3.5 (Tapping)
(Silver)
3-348-998-51

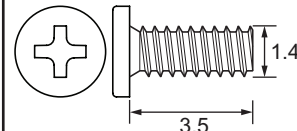


#116: M2.0 X 3.5 (Tapping)
(Silver)
2-695-435-01

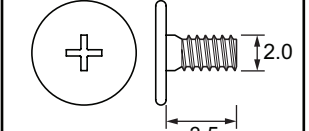


#117: M1.7 X 4.5 (Tapping)
(Silver)
2-695-429-31

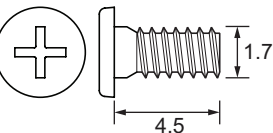


#118: M1.4 X 2.0
(Black)
2-655-580-01

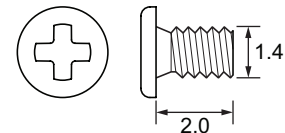

#119: M2.6 X 5.0
(Black)
7-627-556-58

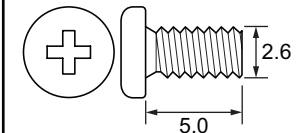


#120: M2.6 X 6.0
(Silver)
7-621-770-67

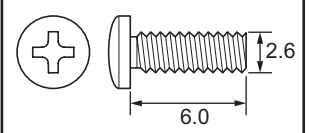


HARDWARE LIST (7/9)


#121: M2.0 X 4.0 (Tapping)
(Silver)
3-080-205-11

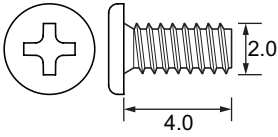


#122: M3.0 X 6.0
(Black)
7-682-547-09

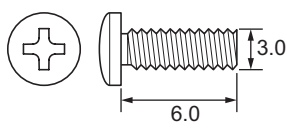


#123: M4.0 X 8.0
(Black)
7-682-561-09

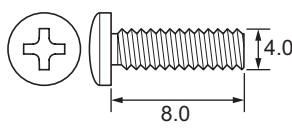


#124: M1.7 X 2.0
(Silver)
2-599-475-01

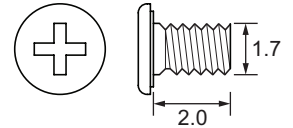


#125: M1.4 X 3.0
(Black)
3-291-847-01

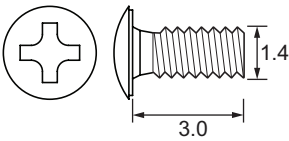


#126: M2.9 X 3.5
(Black)
3-292-616-01

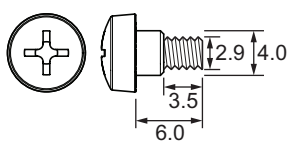


#127: M3.0 X 25.0
(Black)
7-682-654-09

 


#128: M4.0 X 12.0
(Black)
3-452-472-01

 


#129: M3.0 X 12.0
(Black)
7-682-550-09

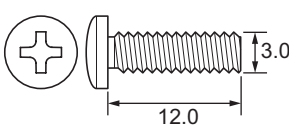


#130: M2.0 X 4.5 (Tapping)
(Silver)
3-732-817-11

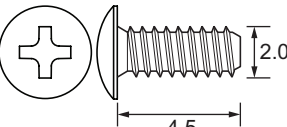


#131: M4.0 X 12.0
(Silver)
3-452-471-01

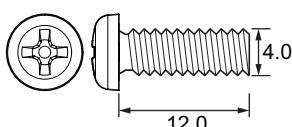


#132: M2.6 X 6.0
(Black)
4-673-655-01

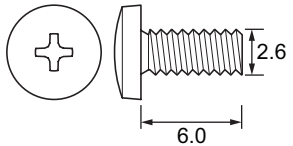


#133: M3.0 X 6.0
(Black)
3-452-484-01

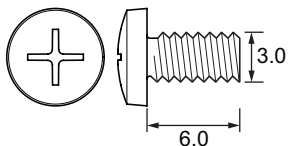


#134: M2.6 X 7.0
(Black)
3-299-572-01

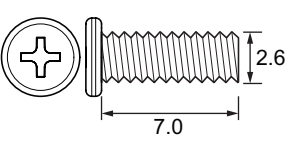


#135: M2.0 X 2.5
(Black)
7-627-553-28

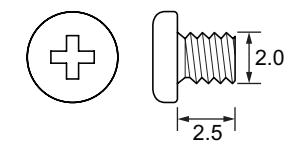


#136: M1.4 X 4.0 (Tapping)
(Black)
3-065-509-11

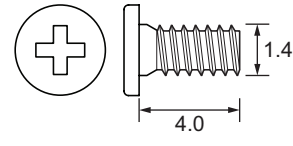


#137: M1.7 X 3.0
(Black)
3-090-976-62

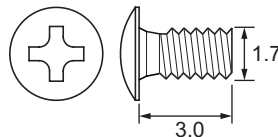


#138: M1.4 X 3.5
(Silver)
4-104-078-01

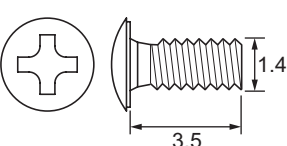

#139: M1.4 X 2.0
(Silver)
2-655-579-01

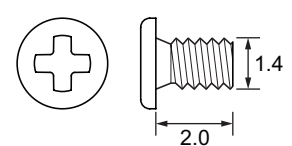


#140: M1.7 X 2.0
(Black)
2-635-562-01

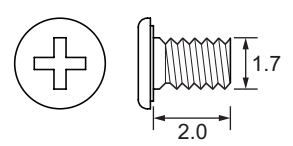


HARDWARE LIST (8/9)


#141: M2.6 X 5.0 (Tapping)
(Silver)
7-685-791-01

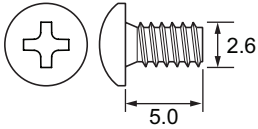


#142: M1.4 X 2.0
(Silver)
4-111-392-01

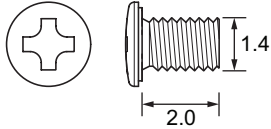


#143: M1.4 X 2.0
(Black)
4-111-392-11

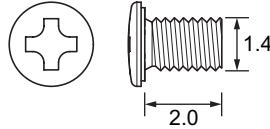


#144: M1.4 X 1.2
(Silver)
4-111-392-21

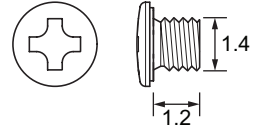


#145: M1.4 X 2.4
(Silver)
4-111-248-01

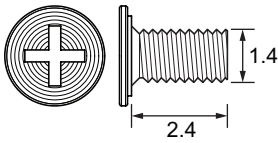


#146: M1.4 X 2.4
(Black)
4-111-248-11

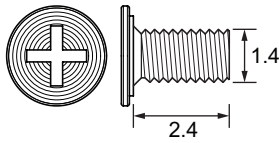


#147: M1.4 X 3.5
(Black)
2-662-396-41

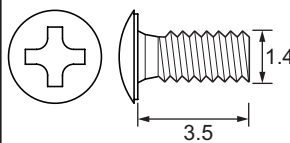


#148: M1.7 X 3.0
(Silver)
3-057-082-21

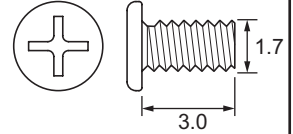


#149: M1.6 X 7.5 (Tapping)
(Silver)
4-115-505-01

 


#150: M1.4 X 3.0
(Black)
4-105-150-01

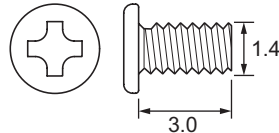


#151: M1.4 X 1.4
(Silver)
3-272-251-11

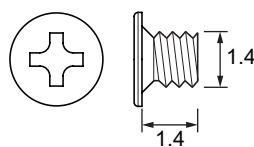


#152: M1.4 X 2.5
(Black)
4-116-473-11

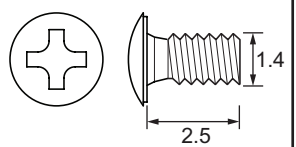


#153: M1.4 X 1.5
(Silver)
3-059-718-01

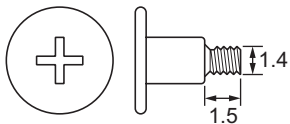


#154: M2.6 X 8.0
(Silver)
7-627-556-97

 


#155: M1.7 X 6.0 (Tapping)
(Black)
3-080-204-31

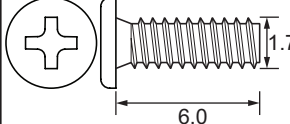


#156: M1.4 X 4.0
(Silver)
2-635-591-61

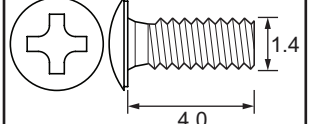


#157: M1.7 X 5.0 (Tapping)
(Black)
4-132-562-01

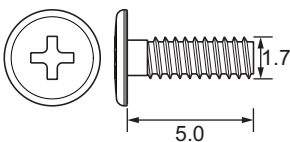


#158: M1.7 X 5.0
(Red)
2-660-401-51

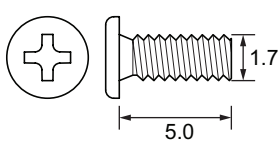


#159: M1.4 X 4.0
(Black)
2-662-396-51

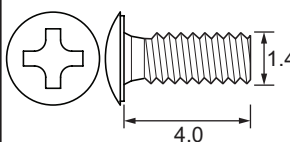

#160: M1.4 X 3.0
(Silver)
4-139-851-01

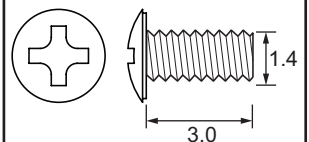

HARDWARE LIST (9/9)

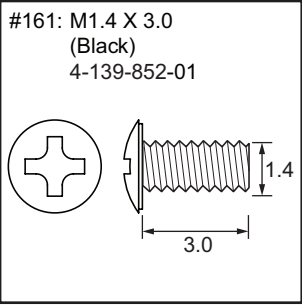

*: S.M. revised only top cover.

DSC-HX1_L2