


2-1-1. OVERALL SECTION



1. Remove to numerical order (**1** to **7**) in the left figure

- ### Bottom View

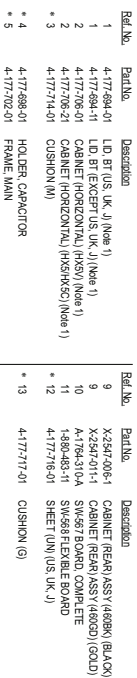

Bottom View




Left View



	#665 M.A.X.3.5 (Silver) 2-665-591-01
	#177 M.A.X.3.5 (Black) 2-662-396-41
	#177 M.A.X.2.5 (Red) 3-205-531-21

 Note 1: When replacing this part be careful whether a LOGO is existed or not.



Note 1: 交換時にロゴの有無
注意してください。



Screw's Ref. No. (Parts Color.)	Cabinet's Color
------------------------------------	-----------------




**THE COMBINATION OF
CABINET'S COLOR AND SCREW**

The screw pointed is different according to the cabinet's color.
For the combination of cabinet's color and screw, please refer to Table 2-1.

2-1-2. TOP SECTION


ns: not supplied

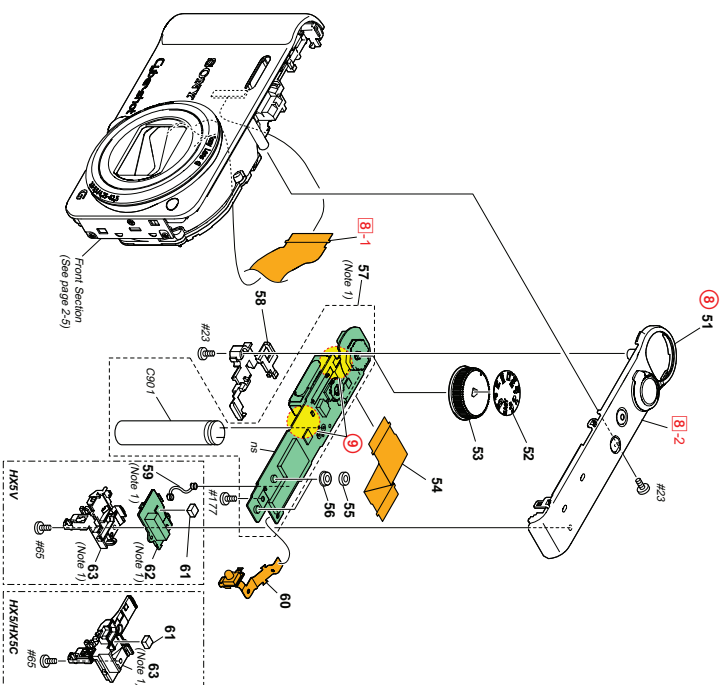

DISASSEMBLY

1. Remove to numerical order (**8** to **9**) in the left figure.


⑧ Disconnect Flexible board (8-1) → #23 X 1 → Slide top section (8-2)

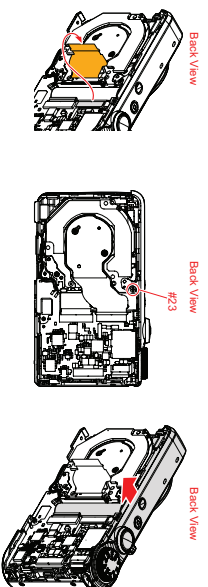

DISCHARGING OF THE CHARGING CAPACITOR

ストロボ用充電コンデンサの放電

Screw

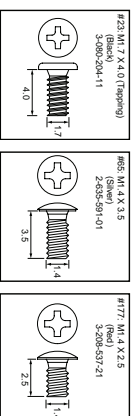


Note

Table 1			
Model Information Table			
Model	DSC-CHX5	DSC-CHX9C	DSC-CHX5V
FL-09S Board (A-176x-317x-A)	○	○	×
FL-09S Board (A-177x-686-A)	×	×	×
Cosmos cable	×	×	×
AT-03S Board	×	×	○
AF Holder	×	○	×
AF Holder (NA)	○	○	×

The changed portions from Ver. 1.0 are shown in blue.

2-1-3. FRONT SECTION

ns: not supplied

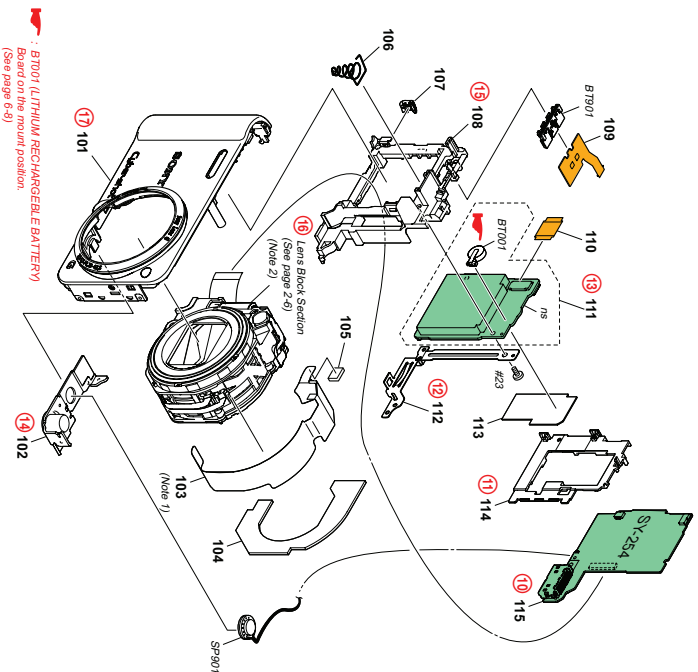


Ref. No.	Description	Ref. No.	Description
101	X-247-004-1 CABINET (F/PONT) ASSY (HOBK) (BLACK)	110	1-689-481 MS-3 FLEXIBLE BOARD
102	X-254-001-1 CABINET (F/PONT) ASSY (HOBK) (GOLD)	111	A-1794-31-A MS-3 BOARD, COMPLETE
* 102	4-177-001-01 SCREW, R/END	* 112	A-1776-000-1 PLATE MOUNTED
103	4-17238-01 SHEET (1/8")	113	4-181-003-01 SHEET (S2)
104	4-17718-01 CUSHION (FIB)	* 114	4-177-000-01 PLATE ST P/CKED
105	4-17239-01 CUSHION (K)	115	A-1773-89-A SY24 BOARD, COMPLETE (SERVICE)
106	4-17263-01 SPRING (BUSH) SCREW		


Ref. No.	Part No.	Description
110	1-860-481-11	MS-36 FLEXIBLE BOARD
111	A-1764-31-3A	MS-1764 BOARD COMPLETE
* 112	4-177-899-01	PLATE, MULTIFRIED
* 113	4-181-033-01	SHEET (SZ)
* 114	4-177-700-01	PLATE, SV FIXED
115	A-1773-889-A	SV-254 BOARD, COMPLETE (SERVICE)

DISASSEMBLY

1. Remove to numerical order ((10) to (17)) in the left figure

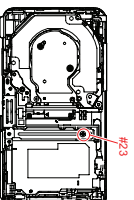

⑫ #23 X 1

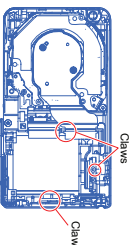

15

Screw

#23: M1.7 X 4.0 (Tapping)
(Black)
3-080-204-11

Note

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Dispose of used batteries according to the instructions.

Note 1: Refer to "Assembly-1: Precaution During of attachment Sheet (K)" when replacing this part.

Note 2: Refer to "Assembly-2: Precaution During of Lens block" when replacing this part.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Note 1: 組立時は“Assembly-1:Precaution During of attachment Sheet (K)”を参照してください。

Note 2: 組立時は“Assembly-2: Precaution During of attachment Lens block”を参照してください。

2.2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1784-31-6A	AF-129 FLEXIBLE BOARD, COMPLETE

		< DIODE >
* D101	6-501-981-01	DIODE Q-380S-10A-X-1L

A-17784-31-4A	AT-039 BOARD, COMPLETE (HXV)

(All mounted parts are not applied, but they are included in AT-039 complete board.)	

1-880-482-11	BT-059 FLEXIBLE BOARD

(BT-1901 is not included in BT-059 flexible board.)	

	< BATTERY TERMINAL BOARD >
Δ BT-1901	1-1780-379-11 TERMINAL BOARD, BATTERY
	(BT-1901 is not included in BT-059 flexible board.)

A-17784-31-3A	MS-438 BOARD, COMPLETE

	< BATTERY >
Δ BT-1001	1-1756-813-11 LITHIUM RECHARGEABLE BATTERY
	< CAPACITOR >
* C203	1-114-532-11 CERAMIC CHIP 0.1μF 10% 16V
* C205	1-114-532-11 CERAMIC CHIP 0.1μF 10% 16V
	< CONNECTOR >

CN202	1-622-337-21 CARD CONNECTOR
* CN203	1-617-828-61 CONNECTOR, FPC (21P) 25P
	< RESISTOR >
R201	1-218-945-11 METAL CHIP 220 5% 1/16W

1-680-481-11	MS-438 FLEXIBLE BOARD

A-17784-31-0A	SW-567 BOARD, COMPLETE

	< CONNECTOR >
* CN201	1-621-857-51 CONNECTOR, FPC (16P) (NON-ZIF)

Ref. No.	Part No.	Description
		< RESISTOR >
R015	1-218-957-11	METAL CHIP 2.2K 5% 1/16W
R016	1-218-957-11	METAL CHIP 2.2K 5% 1/16W
		< COMPOSITION CIRCUIT BLOCK >
R801	1-234-378-11	RES. NETWORK 2.2K (1005X)
		< SWITCH >

S001	1-178-914-31	SWITCH, TACTILE
S002	1-178-914-31	SWITCH, TACTILE
S003	1-178-914-31	SWITCH, TACTILE
S004	1-178-914-31	SWITCH, TACTILE
S005	1-178-914-31	SWITCH, TACTILE
S006	1-178-914-31	SWITCH, TACTILE
S007	1-178-914-31	SWITCH, TACTILE
S008	1-178-914-31	SWITCH, TACTILE
S009	1-178-914-31	SWITCH, TACTILE
		< THERMISTOR >
TH-001	1-605-194-21	THERMISTOR, NTC (SMD)

1-680-483-11	SW-568 FLEXIBLE BOARD

	< BATTERY >
1-680-484-11	RL-099 FLEXIBLE BOARD

Caution
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意
電池の交換は、正しく行わないと爆発する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。


Please refer to LEVEL 3 about the ELECTRICAL PARTS LIST of CD-704 (flexible board, RL-099 board or ST-529 board).
CD-704 (flexible board, RL-099 board) is a 5V 2.5A power supply board.
ELECTRICAL PARTS LIST is provided. LEVEL 3 is referred to below.

AF-129	AT-039	BT-059	MS-436	MS-438	SW-567	SW-568	RL-099
--------	--------	--------	--------	--------	--------	--------	--------

3. ASSEMBLY

3-1. ASSEMBLY


Assembly-1: Precaution During of attachment Sheet (K).

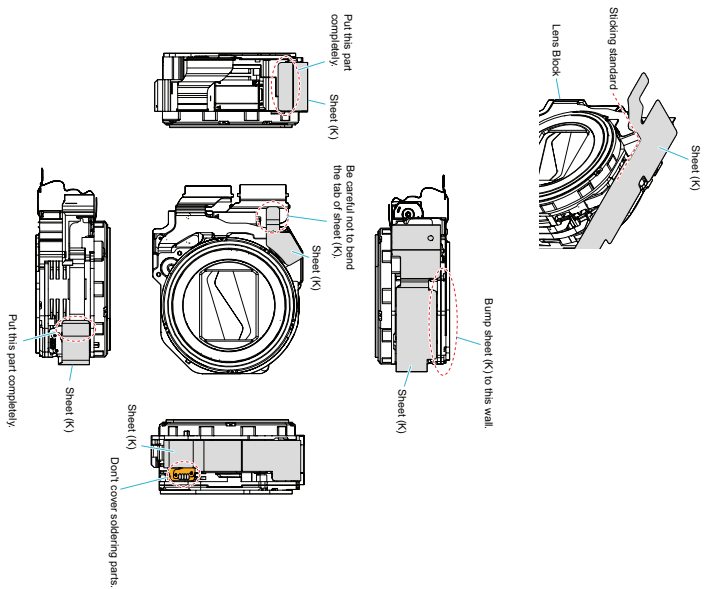

Assembly-2: Precaution During of attachment

Lens block.


Don't bend the Tab of the Sheet (K), when install the lens block.

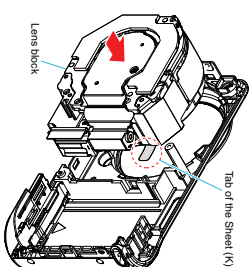

Don't caught the Tab of the Sheet (K) on the BTH.


Tab of the Sheet (K)

BTH

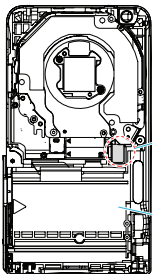

Assembly-3: Check the claw of the Ground Plate

is completely caught.

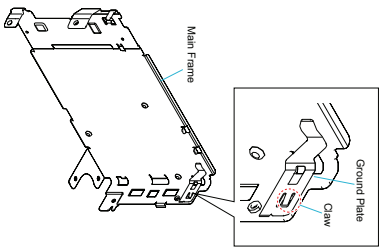

Assembly-4: Precaution During of attachment
Filermask and Optical Filter Block.

