


2-1-1. OVERALL SECTION

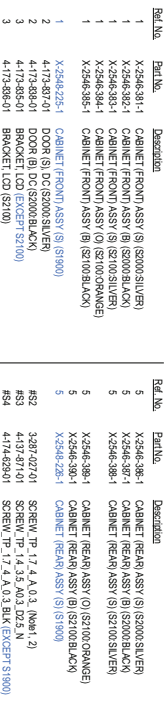

1. Remove to numerical order(**to**) in the left figure

- BT Lid Open () → #S3 X 1

-
- Back View
- #53

Note1: Please refer to "THE COMBINATION OF CABINET'S COLOR AND SCREW (S2000)" on page 2-1 about the combination cabinet's color and screw.

Noted: Please refer to "THE COMBINATION OF CABINET'S COLOR AND SCREW (S2100)" on page 2-1 about the combination cabinet's color and screw.

The changed portions from Ver. 1.0 are shown in blue.

ns: not supplied



Ref. No.	Part No.	Description
57	1486-372-11	BULZER, PIEZOELECTRIC
58	4173-839-01	DOOR (S), DC (82100SILVER)
59	4173-940-01	DOOR (S), DC (82100ORANGE)
56	4173-940-01	DOOR (B), DC (82100BLAU)
55	4173-944-01	DOOR (B), DC (82100BLAU)
Δ F1	14576-363-11	FUSE, MICRO (1005 TYPE) (1A30V)
Δ F2	14576-913-31	FUSE, MICRO (1608 TYPE) (1A60V)
#51	3488-871-01	SCREW, TP, 1.4, 3.0, A2-D=2.5
#53	4173-871-01	SCREW, TP, 1.3, 3.0, A2 D=2.5

1. Remove to numerical order (**6** to **11**) in the left figure

- Front View
- #S5
- Top View



⑧ #S1 X 2


 Right view

Note: Refer to "Assembly-1" when you assemble Routing harness of Main Frame Sub Assy.

Ver:1.1 2010.03
The changed portions from
Ver:1.0 are shown in blue.

2-1-3. LENS SECTION

ns: not supplied

 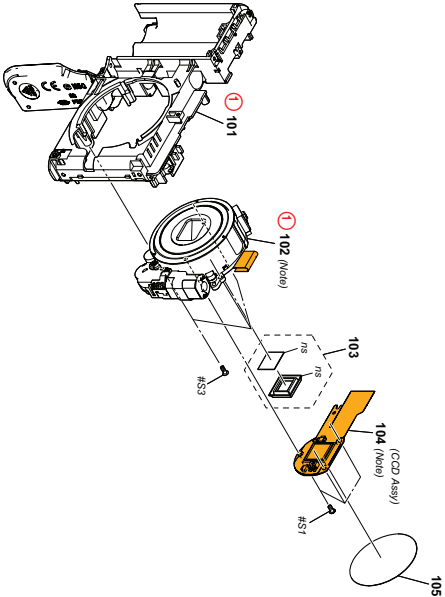


Part No.	Description	Part No.	Description
101	X-2546-93-1 FRAME SUB ASSY (S) MAIN (S2000 SILVER)	103	4-151-71201 FILTER ASSY, LOW PASS
101	X-2546-94-1 FRAME SUB ASSY (B) MAIN (S2000 BLACK)	104	A-1759-88-4 CCD BLOCK ASSY (EXCEPT S2100) (New)
101	X-2546-95-1 FRAME SUB ASSY (C) MAIN (S2100 CRANED)	104	A-1759-88-4 CCD BLOCK ASSY (S2100) (New)
101	X-2546-96-1 FRAME SUB ASSY (C) MAIN (S2100 CRANED)	105	4-173-94501 SHEET, CCD W/LAR
101	X-2546-97-1 FRAME SUB ASSY (B) MAIN (S2100 BLACK)		

DISASSEMBLY

1. Remove to numerical order (1) to (2) in the left figure.

1 #S3 X 3



Note

Note: Be careful about the Lens Block Assy.

