


5. REPAIR PARTS LIST

5-1. EXPLODED VIEWS

DISASSEMBLY

HARDWARE LIST

5-1-1. LCD SECTION

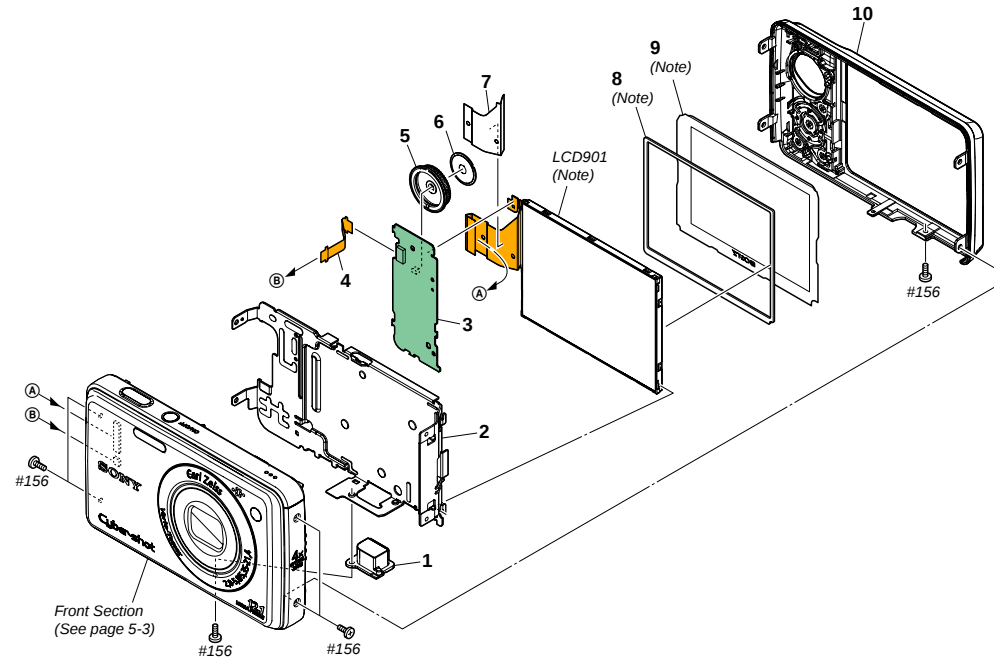

Note : Refer to "HELP01" when you install LCD cushion (060) and LCD window (060).

Ref. No.	Part No.	Description
1	3-289-757-01	SCREW, TRIPD
* 2	4-128-364-01	FRAME (060), LCD
3	A-1552-398-A	SW-543 BOARD, COMPLETE
4	1-877-752-11	FPC-007 FLEXIBLE BOARD
5	4-128-367-01	DIAL (060), MODE
6	4-128-368-01	PLATE (060), MODE
7	4-128-373-01	SHEET (060), LCD RADIATION
8	4-128-361-01	CUSHION (060), LCD (Note)
9	4-128-370-01	WINDOW (060), LCD (Note)


Ref. No.	Part No.	Description
10	X-2342-811-1	CABINET (REAR (060SL)) ASSY (W210:SILVER)
10	X-2342-812-1	CABINET (REAR (060BK)) ASSY (W210:BLACK)
10	X-2342-813-1	CABINET (REAR (060PK)) ASSY (W210:PINK)
10	X-2342-814-1	CABINET (REAR (060GR)) ASSY (W210:GREEN)
10	X-2342-878-1	CABINET (REAR (070BK)) ASSY (W215)
LCD901	1-802-585-11	LCD MODULE (LS027A3DC01) (Note)
#156	2-635-591-61	SCREW (M1.4), NEW TRUSTAR P2 (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. FRONT SECTION

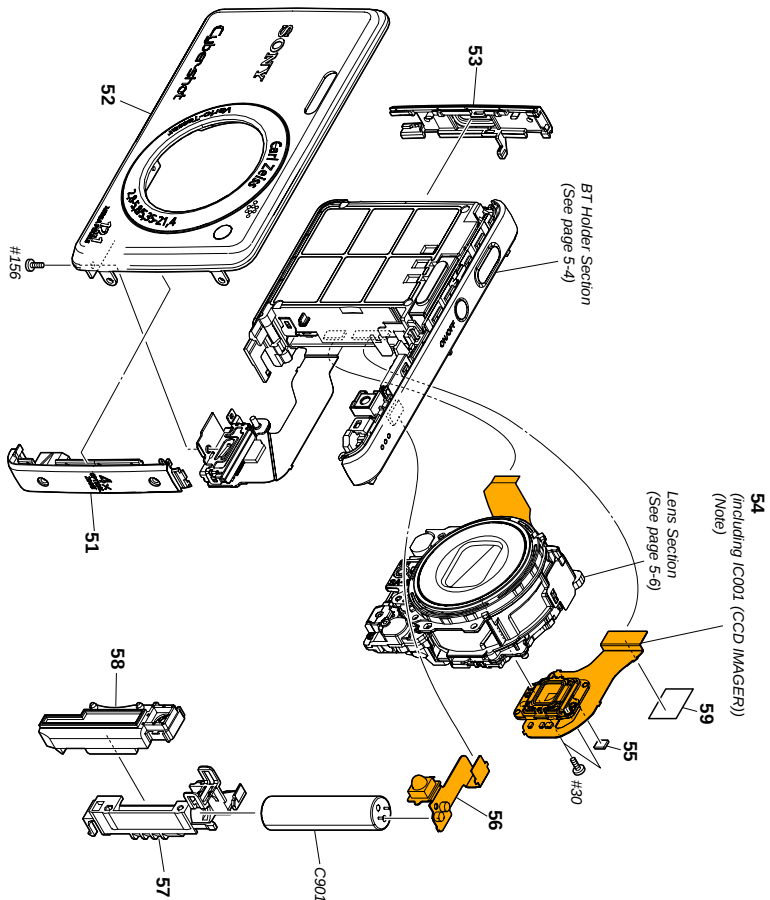

• Refer to page 5-1 for mark Δ.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
51	4-128-372-01	CABINET (R) (060), SIDE	* 55	3-289-764-01	GASKET (280)
52	X-2342-820-1	CABINET (FRONT (060SL)) ASSY	56	A-1582-638-A	AF-120 FLEXIBLE BOARD, COMPLETE
52	X-2342-821-1	CABINET (FRONT (060BK)) ASSY (W210:SILVER)	* 57	4-128-366-01	HOLDER (R) (060), CAPACITOR
52	X-2342-822-1	CABINET (FRONT (060PK)) ASSY (W210:BLACK/W215)	* 58	4-128-365-01	HOLDER (F) (060), CAPACITOR
52	X-2342-823-1	CABINET (FRONT (060GR)) ASSY (W210:PINK)	59	4-141-041-01	TAPE (K)
53	4-128-371-01	CABINET (L) (060), SIDE	Δ C901	1-114-606-21	CAP. ELECT
54	A-1582-405-A	CD-754 FLEXIBLE BOARD, COMPLETE (including IC001 (CCD IMAGER)) (Note)	#30	3-086-156-11	SCREW B1.2 (White)
			#156	2-535-591-61	SCREW (M1.4), NEW TRUSTAR P2 (Silver)

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-2.


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. BT HOLDER SECTION

ns: not supplied

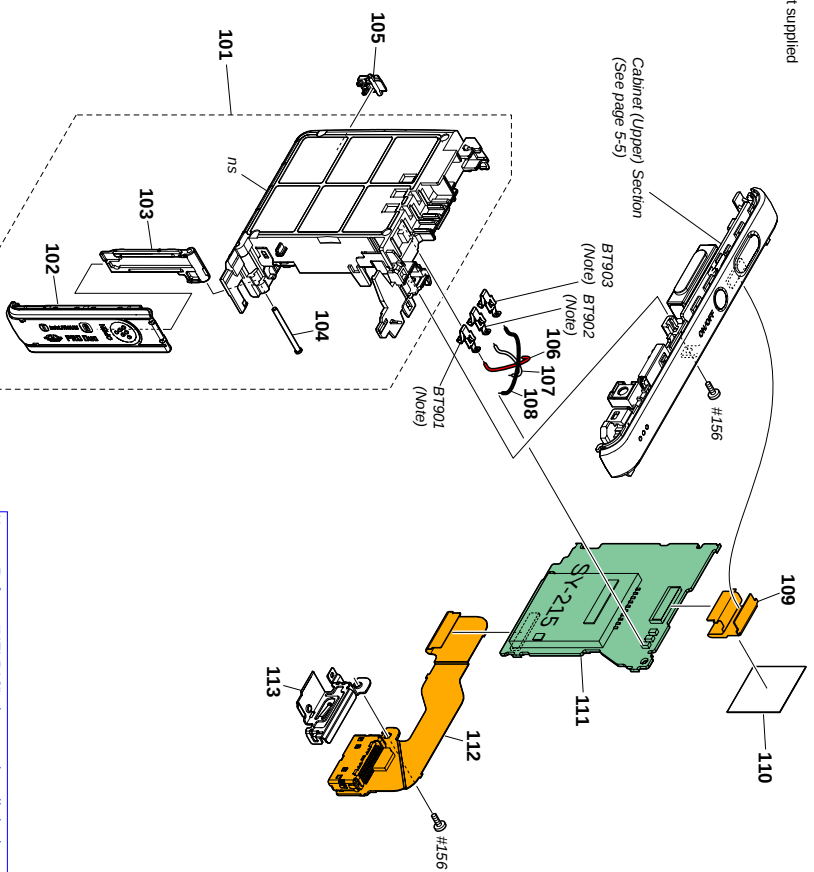

• Refer to page 5-1 for mark Δ.

Ref. No.	Part No.	Description
101	X-2342-805-1	HOLDER (060SL) ASSY, BT (W210: SILVER)
101	X-2342-806-1	HOLDER (060BK) ASSY, BT (W210: BLACK)
101	X-2342-807-1	HOLDER (060PK) ASSY, BT (W210: PINK) (W215)
101	X-2342-808-1	HOLDER (060GR) ASSY, BT (W210: GREEN)
102	4-128-309-01	LID (060), BT (W210: SILVER)
102	4-128-309-11	LID (060), BT (W210: BLACK/W215)
102	4-128-309-21	LID (060), BT (W210: PINK)
103	4-128-309-31	LID (060), BT (W210: GREEN)
104	4-128-310-01	PLATE (060), BT HINGE
104	3-288-273-01	SHAFT, BT
105	4-130-696-01	LID (060) (MU), DC


Note : Refer to "HELP10" when you install the battery terminal board.

Ref. No.	Part No.	Description
106	1-965-766-11	HARNESS (HN-067) (Red)
107	1-965-767-11	HARNESS (HN-068) (White)
108	1-965-768-11	HARNESS (HN-069) (Black)
109	1-877-751-11	PPC-006 FLEXIBLE BOARD
110	4-128-374-01	TAPE (N4)
111	A-1701-715-A	SY-215 BOARD, COMPLETE (SERVICE)
112	A-1562-406-A	MC-198 FLEXIBLE BOARD, COMPLETE
* 113	4-128-363-01	PLATE (060), MULTI FXED
Δ, BT901	1-780-456-21	TERMINAL BOARD, BATTERY (Note)
Δ, BT902	1-780-456-21	TERMINAL BOARD, BATTERY (Note)
Δ, BT903	1-780-456-21	TERMINAL BOARD, BATTERY (Note)
#156	2-635-591-61	SCREW (M1 4), NEW TRUSTAR P2 (Silver)

5. REPAIR PARTS LIST

5-1-4. CABINET (UPPER) SECTION

ns: not supplied

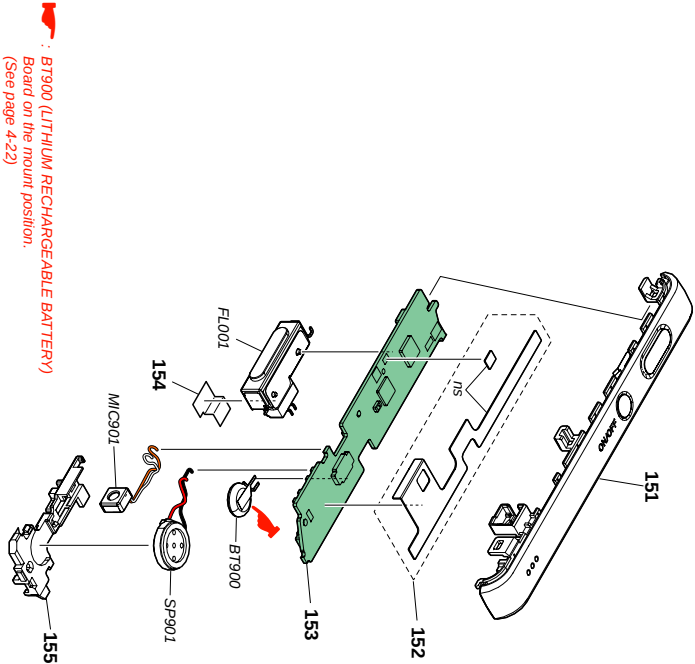

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

• Refer to page 5-1 for mark Δ.


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
151	X-2342-819-1	CABINET (UPPER (060)) ASSY	Δ BT900	1-756-710-12	LITHIUM RECHARGEABLE BATTERY
152	4-128-376-01	SHEET (060), RI INSULATING	Δ FL001	1-487-204-11	FLASH UNIT
153	A-1552-399-A	ST-207 BOARD, COMPLETE	MIC901	1-542-721-31	MICROPHONE BLOCK
154	4-128-375-01	SHEET (060), ST INSULATING	SP901	1-826-403-61	LOUDSPEAKER (1.0CM)
* 155	4-128-382-01	HOLDER (060), SP			

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-5. LENS SECTION

ns: not supplied

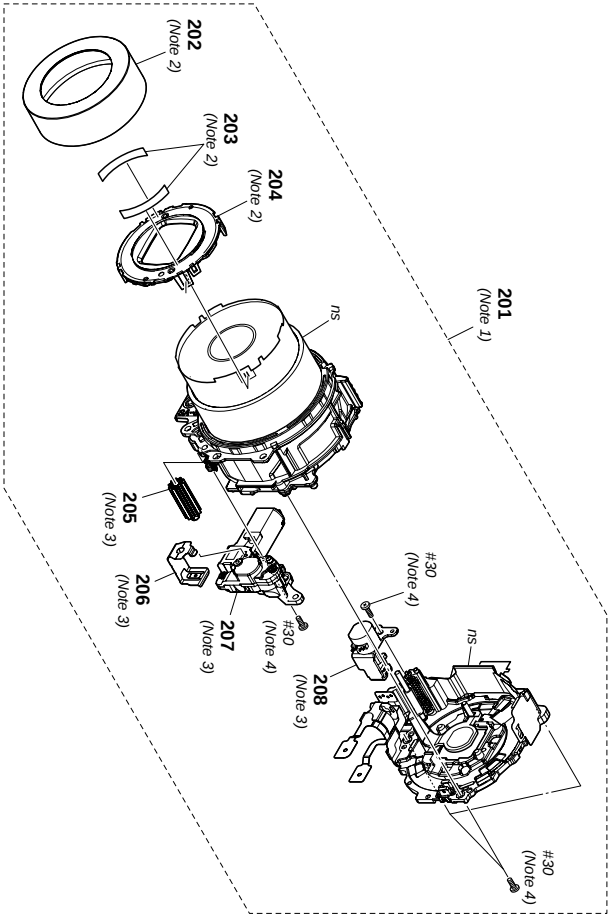

Note 1: Refer to "2-3. Precautions when Holding the Lens Block" on page 2-6 when detach or replace the lens block.

Note 2: Refer to "2-4. Barrier Assy Replacing Method" on page 2-7 when replace the barrier assy.

Note 3: Refer to "2-5. Lens Motor Replacing Method" on page 2-8 when replace the zoom gear block or the optical stepping motor.

Note 4: Tightening torque = 0.049 ± 0.01 N•m (0.5 ± 0.1 kgf•cm)

Ref. No.	Part No.	Description
201	8-848-853-01	DEVICE, LENS LSY-1250D (Note 1)
202	3-266-546-24	RING A (S), ORNAMENTAL (Note 2)
203	2-691-890-01	TAPE, BARRIER (Note 2)
204	A-1629-600-A	BARRIER ASSY (Note 2)
205	X-2187-865-1	GEAR (S), MARUTO (Note 3)

Ref. No.	Part No.	Description
206	3-266-545-01	PLATE SPRING, FG (Note 3)
207	1-480-381-11	GEAR BLOCK, ZOOM (1250) (Note 3)
208	1-787-672-11	STEPPING MOTOR, OPTICAL (F1250) (Note 3)
#30	3-086-156-11	SCREW B1.2 (White) (Note 4)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
A-1552-639-A AF-120 FLEXIBLE BOARD, COMPLETE		

(C901 is not included in AF-120 flexible complete board.)		
< CAPACITOR >		
Δ C901	1-114-606-21	CAP. ELECT. 62uF 99% 315V
< DIODE >		
* D001	6-501-861-01	DIODE CL-360S-TD4-X-TL (AF ILLUMINATOR/SELF-TIMER)
A-1552-405-A CD-754 FLEXIBLE BOARD, COMPLETE (Note)		

(IC001 (CCD IMAGER) is not supplied, but this is included in CD-754 flexible complete board.)		
< CAPACITOR >		
* C005	1-114-582-11	CERAMIC CHIP 0.1uF 10% 16V
* C006	1-114-582-11	CERAMIC CHIP 0.1uF 10% 16V
* C008	1-114-582-11	CERAMIC CHIP 0.1uF 10% 18V
* C009	1-114-582-11	CERAMIC CHIP 0.1uF 10% 16V
< IC >		
IC001	(Not supplied)	ICX667SOH-13 (CCD IMAGER) (Note)
(IC001 is supplied including in CD-754 flexible complete board.)		
A-1552-406-A MC-198 FLEXIBLE BOARD, COMPLETE		

(C901 is not supplied, but this is included in MC-198 flexible complete board.)		
< CONNECTOR >		
CN001	(Not supplied)	MULTI CONNECTOR (REC) 46P
(CN001 is supplied including in MC-198 flexible complete board.)		
< LINE FILTER >		
LF001	1-457-223-11	COMMON MODE CHOKE COIL
A-1552-389-A ST-207 BOARD, COMPLETE		

(B7900, FL001, MC9301 and SP901 are not included in ST-207 complete board.)		
< BATTERY >		
Δ B7900	1-756-710-12	LITHIUM RECHARGEABLE BATTERY
< CAPACITOR >		
* C002	1-112-746-11	CERAMIC CHIP 4.7uF 10% 6.3V
C003	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
Δ C005	1-100-758-11	CERAMIC CHIP 0.047uF 10% 250V
C006	1-164-850-11	CERAMIC CHIP 10PF 0.5% 50V
< CONNECTOR >		
* CN001	1-821-868-51	CONNECTOR, PFC (LIF (NON-ZIF))
CN002	1-816-643-51	FFC/FCF CONNECTOR (LIF) 10P

Ref. No.	Part No.	Description
< DIODE >		
Δ D003	6-501-096-01	DIODE CRF02 (TE88R)
D101	6-500-594-01	DIODE CL-196SYG-CD-1 (POWER)
< FLASH >		
Δ FL001	1-487-204-11	FLASH UNIT
< IC >		
* IC001	6-712-975-01	IC BD4215NUV-E2
< COIL >		
* L001	1-400-820-11	INDUCTOR 22uH
< MICROPHONE >		
MIC901	1-542-721-31	MICROPHONE BLOCK
< TRANSISTOR >		
Δ* T001	6-552-038-01	TRANSISTOR GT86134
< RESISTOR >		
Δ R003	1-216-121-11	METAL CHIP 1M 5% 1/10W
R004	1-218-989-11	METAL CHIP 1M 5% 1/16W
R005	1-218-941-11	METAL CHIP 100 5% 1/16W
R101	1-218-935-11	METAL CHIP 33 5% 1/16W
< SWITCH >		
S101	1-786-819-22	TACTILE SWITCH (SHUTTER)
* S102	1-786-914-31	SWITCH, TACTILE (ON/OFF)
< SPEAKER >		
SP901	1-826-403-61	LOUDSPEAKER (1.0CM)
< TRANSFORMER >		
Δ* T001	1-445-491-21	D.C.-D.C. CONVERTER TRANSFORMER

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Dispose of used batteries according to the instructions.

Note: Be sure to read "Precautions for Replacement of Integer" on page 4-2.

Ref. No.	Part No.	Description
	A-1552-398-A	SW-543 BOARD, COMPLETE

	(S010 is not supplied, but this is included in SW-543 complete board.)	
	< CONNECTOR >	
* CN001	1-820-634-51	CONNECTOR, PFC (LIF (NON-ZIF))
	< COMPOSITION CIRCUIT BLOCK >	
RB001	1-234-376-11	RES. NETWORK 2.2K (1005X4)
RB002	1-234-376-11	RES. NETWORK 2.2K (1005X4)
RB003	1-234-376-11	RES. NETWORK 2.2K (1005X4)
RB004	1-234-376-11	RES. NETWORK 2.2K (1005X4)
	< SWITCH >	
* S001	1-786-914-31	SWITCH, TACTILE (MENU)
* S002	1-786-914-31	SWITCH, TACTILE (HOME)
* S003	1-786-914-31	SWITCH, TACTILE (W (ZOOM))
* S004	1-786-914-31	SWITCH, TACTILE (▶ (MACRO))
* S005	1-786-914-31	SWITCH, TACTILE (▼ (SELF-TIMER))
* S006	1-786-914-31	SWITCH, TACTILE (▲ (DISP))
* S007	1-786-914-31	SWITCH, TACTILE (● (SET))
* S008	1-786-914-31	SWITCH, TACTILE (T (ZOOM))
* S009	1-786-914-31	SWITCH, TACTILE (▶ (FLASH))
S010	(Not supplied)	SWITCH, ROTARY (MODE DIAL)
	(S010 is supplied including in SW-543 complete board.)	
* S012	1-786-914-31	SWITCH, TACTILE (PLAYBACK)

Electrical parts list of the SY-215 board is not shown.
Pages 5-9 to 5-12 are not shown.

Ver. 1.1 2009.02
The changed portions from
Ver. 1.0 are shown in blue.

Checking supplied accessories.

Note 1. This item is supplied with the unit as an accessory, but is not prepared as a service part.



 
Battery charger
(BC-CSGD/BC-CSGE)
△ 1-487-142-21 (US, CND)



Rechargeable battery pack
(NP-BG1)
(Note 1)



Battery case
(Note 1)



USB, AV cable for
multi-use terminal
1-836-364-11



Battery charger
(BC-CSGD/BC-CSGE)
△ 1-487-142-51 (EXCEPT US, CND)



Wrist strap
2-050-981-01



Conversion (P) Adaptor
△ 1-589-006-12
(E (EXCEPT Middle East))



Power cord (main lead)
(EXCEPT US, CND, BR)
△ 1-783-952-71 (AR)
△ 1-832-121-41 (CH)
△ 1-832-169-41 (UK)
△ 1-833-992-41 (KR)
△ 1-834-482-31 (AEP, E)
△ 1-835-983-11 (AUS)



Instruction Manual

4-123-773-11 (ENGLISH) (CND, AEP, UK, E, AUS)
4-123-773-21 (FRENCH, ITALIAN) (CND, AEP)
4-123-773-31 (SPANISH, PORTUGUESE) (AEP, E, AR)
4-123-773-41 (GERMAN, DUTCH) (AEP)
4-123-773-51 (TRADITIONAL CHINESE, SIMPLIFIED CHINESE) (E)
4-123-773-61 (RUSSIAN, UKRAINIAN) (AEP)
4-123-773-71 (ARABIC, PERSIAN) (E)
4-123-773-81 (KOREAN) (KR, JE)
4-123-773-91 (JAPANESE) (JEP)
4-123-774-11 (HUNGARIAN, SLOVAK) (AEP)
4-123-774-21 (SWEDISH, FINNISH) (AEP)
4-123-774-31 (NORWEGIAN, DANISH) (AEP)
4-123-774-41 (MALAY) (E)
4-123-774-51 (TURKISH, GREEK) (AEP)
4-123-774-61 (ENGLISH, SPANISH) (US)
4-123-774-71 (SIMPLIFIED CHINESE) (CH)



Soft carrying case
(DSC-W215 only)
4-134-792-01



CD-ROM
(Cyber-shot application software /
Cyber-shot Handbook /
Cyber-shot Step-up Guide)
4-123-769-01



Cyber-shot Handbook (PDF)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Cyber-shot Handbook.pdf) for printing.
• The printed matter is not supplied. If required, please order it with the part number below.
• **(Only for destination Japanese model)**

“ t m n o x w u , n p v … d p b t i





















4-123-770-01 (JAPANESE)
* 4-123-770-11 (ENGLISH)
* 4-123-770-21 (FRENCH)
* 4-123-770-31 (ITALIAN)
* 4-123-770-41 (SPANISH)
* 4-123-770-51 (PORTUGUESE)
* 4-123-770-61 (GERMAN)
* 4-123-770-71 (DUTCH)
* 4-123-770-81 (TRADITIONAL CHINESE)
* 4-123-770-91 (SIMPLIFIED CHINESE)
* 4-123-771-11 (RUSSIAN)
* 4-123-771-21 (ARABIC)
* 4-123-771-31 (PERSIAN)
* 4-123-771-41 (KOREAN)
* 4-123-771-51 (POLISH)
* 4-123-771-61 (CZECH)
* 4-123-771-71 (HUNGARIAN)
* 4-123-771-81 (SLOVAK)
* 4-123-771-91 (SWEDISH)
* 4-123-772-11 (FINNISH)
* 4-123-772-21 (NORWEGIAN)
* 4-123-772-31 (DANISH)
* 4-123-772-41 (THAI)
* 4-123-772-51 (MALAY)
* 4-123-772-61 (TURKISH)
* 4-123-772-71 (GREEK)
* 4-123-772-81 (UKRAINIAN)

• Refer to page 5-1 for mark △














HARDWARE LIST (1/8)

#1: M1.7 X 2.5 (Black) 2-635-562-11 	#2: M1.7 X 4.0 (Black) 2-635-562-31 	#3: M1.7 X 2.5 (Red) 2-660-401-01 	#4: M1.4 X 2.5 (Trapping) (Dark Silver) 3-348-998-81 
#5: M1.7 X 3.5 (Trapping) (Black) 3-080-204-01 	#6: M1.4 X 1.7 (Silver) 2-598-474-01 	#7: M1.7 X 1.6 (Black) 7-627-552-18 	#8: M1.7 X 3.5 (Trapping) (Silver) 3-078-890-01 
#9: M1.7 X 5.0 (Trapping) (Silver) 3-085-397-01 	#10: M1.7 X 4.0 (Silver) 2-599-475-31 	#11: M1.7 X 4.0 (Trapping) (Silver) 3-078-890-11 	#12: M1.7 X 5.0 (Trapping) (Black) 3-080-204-21 
#13: M1.7 X 2.5 (Trapping) (Silver) 3-085-397-01 	#14: M1.7 X 2.5 (Silver) 2-599-475-11 	#15: M1.4 X 1.5 (Silver) 3-062-214-01 	#16: M1.4 X 2.5 (Silver) 2-586-337-01 
#17: M1.7 X 1.5 (Silver) 2-586-389-01 	#18: M1.4 X 2.5 (Silver) 2-535-591-21 	#19: M1.2 X 4.0 (Trapping) (Red) 3-086-156-21 	#20: M1.4 X 3.0 (Silver) 2-635-591-31 



















HARDWARE LIST (2/8)

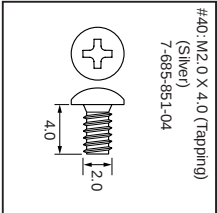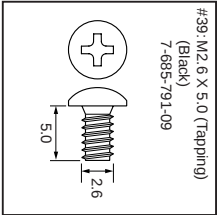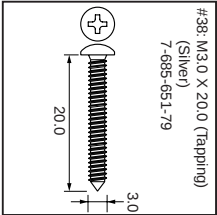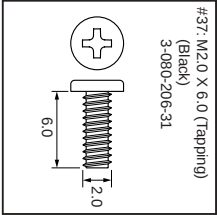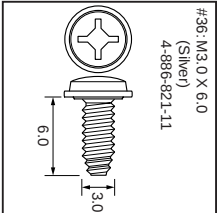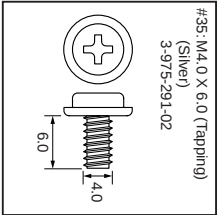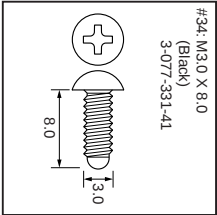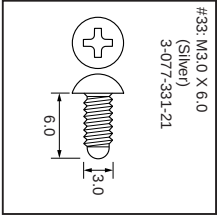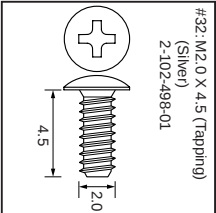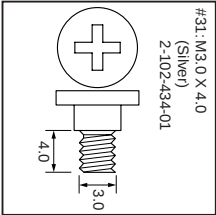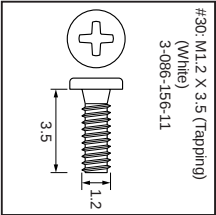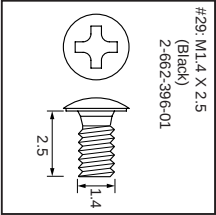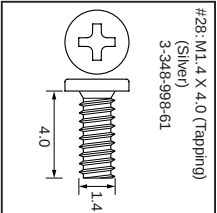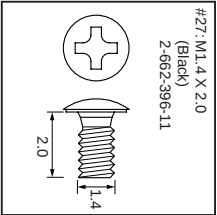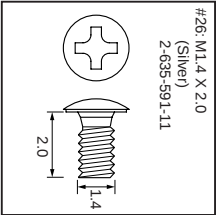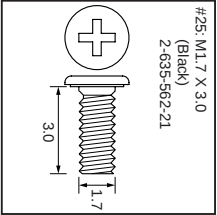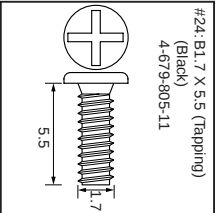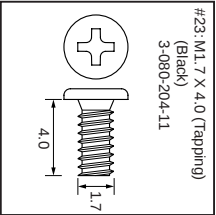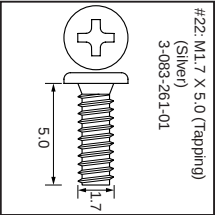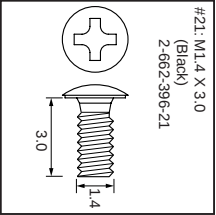





















HARDWARE LIST (3/8)
             
#41: M3.0 X 8.0 (Tapping) (Silver) 3-065-748-01 	#42: M2.0 X 4.0 (Tapping) (Silver) 7-628-253-00 	#43: M1.7 X 4.0 (Red) 2-660-401-31 	#44: M1.7 X 3.0 (Tapping) (Silver) 3-078-890-61 
#45: M1.4 X 2.5 (Silver) 2-587-151-01 	#46: M1.7 X 3.0 (Red) 2-660-401-11 	#47: M1.4 X 3.0 (Tapping) (Silver) 2-665-774-01 	#48: M1.7 X 2.5 (Silver) 3-973-497-91 
#49: M2.0 X 4.0 (Black) 2-630-005-31 	#50: M2.0 X 3.0 (Red) 2-891-494-11 	#51: M2.0 X 2.5 (Silver) 3-073-686-01 	#52: M2.0 X 4.0 (Tapping) (Black) 3-080-206-11 
#53: M2.0 X 5.0 (Tapping) (Black) 3-080-206-21 	#54: M1.75 X 6.0 (Tapping) (Black) 3-318-203-11 	#55: M2.0 X 4.0 (Silver) 2-655-582-11 	#56: M2.0 X 3.5 (Silver) 3-067-187-11 
#57: M1.7 X 4.0 (Black) 7-627-852-18 	#58: M2.0 X 6.0 (Tapping) (Silver) 3-719-408-11 	#59: M2.0 X 5.0 (Tapping) (Silver) 3-080-205-21 	#60: M2.6 X 5.0 (Black) 3-061-062-11 





















HARDWARE LIST (4/8)

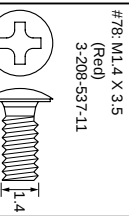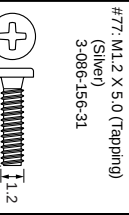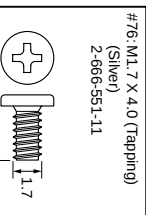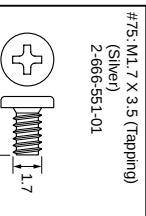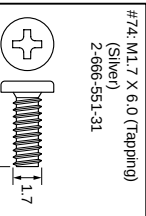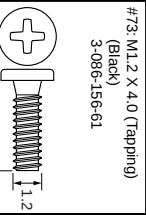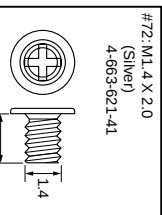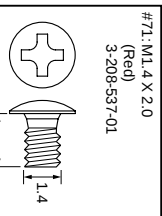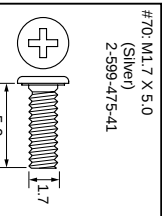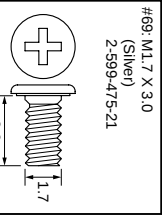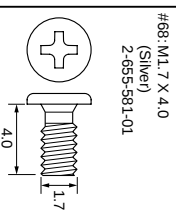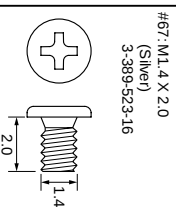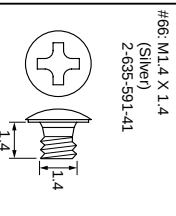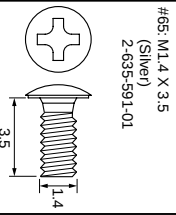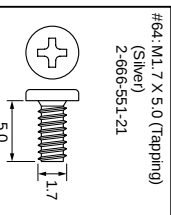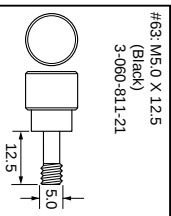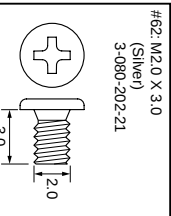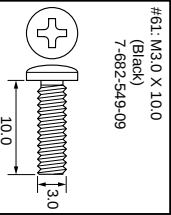





















HARDWARE LIST (5/8)

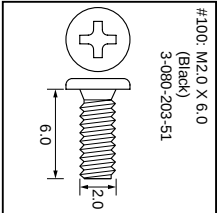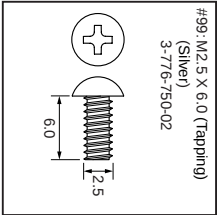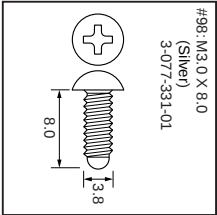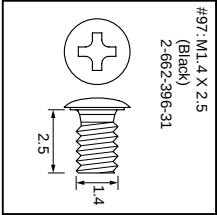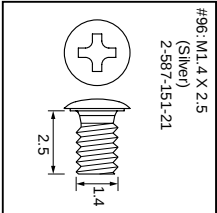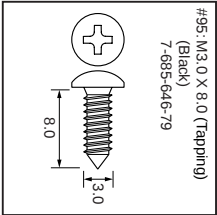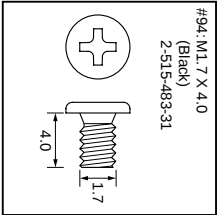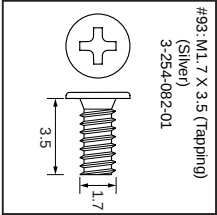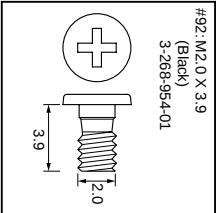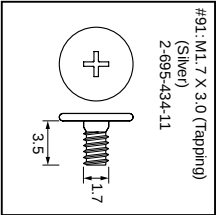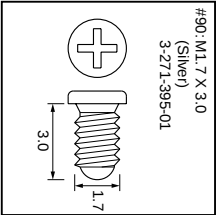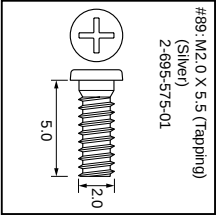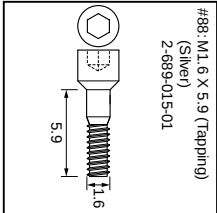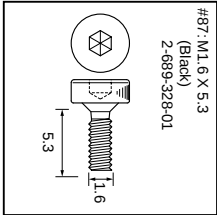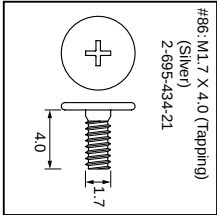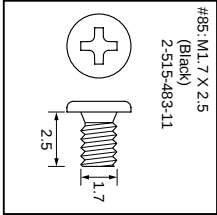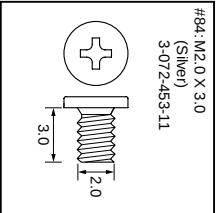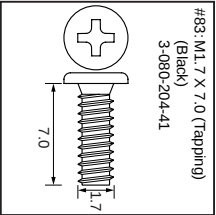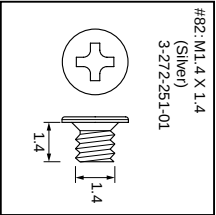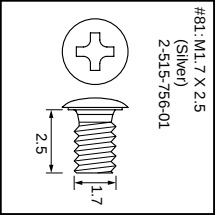

HARDWARE LIST (6/8)

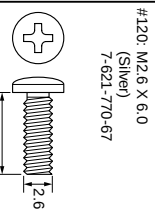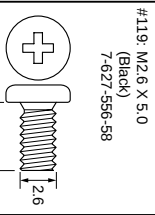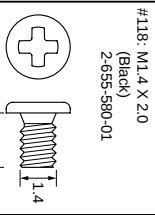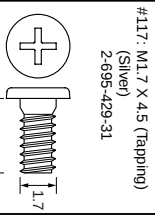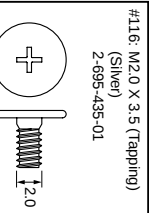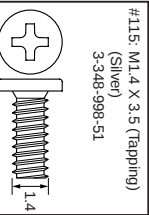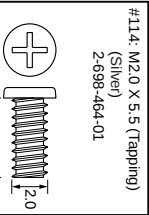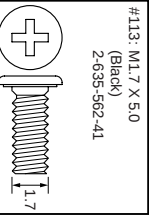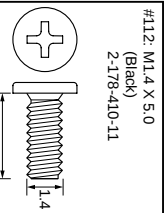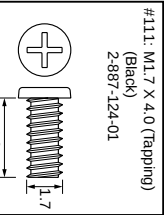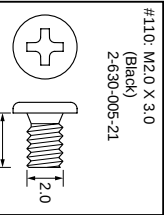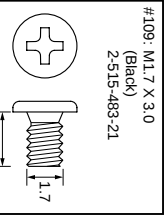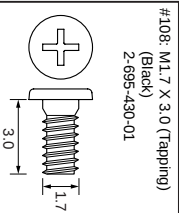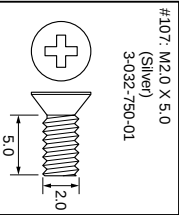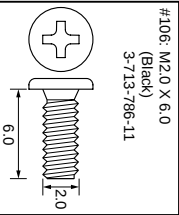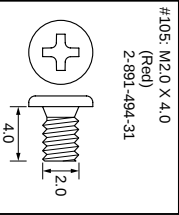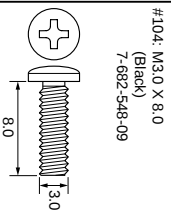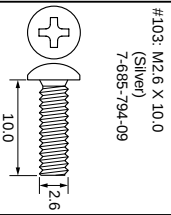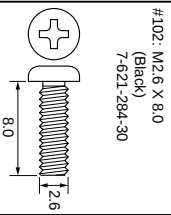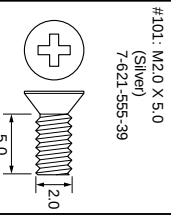


HARDWARE LIST (7/8)

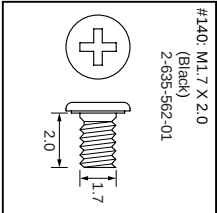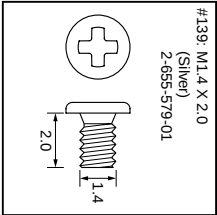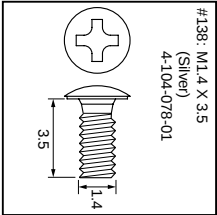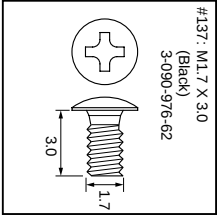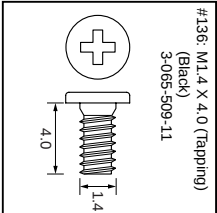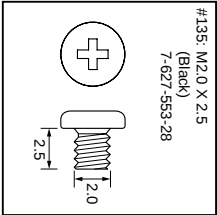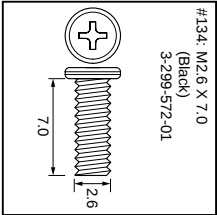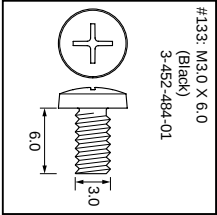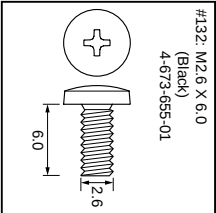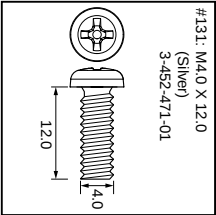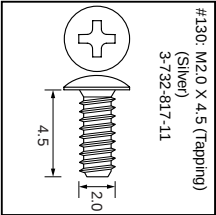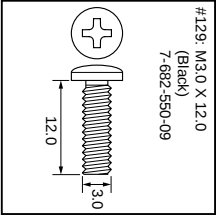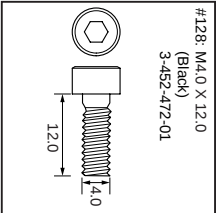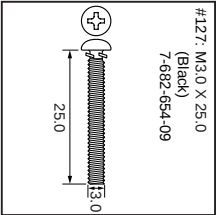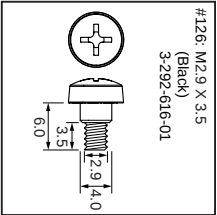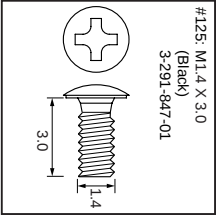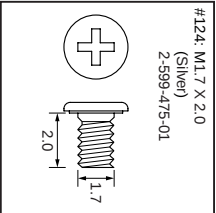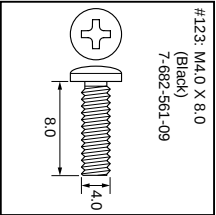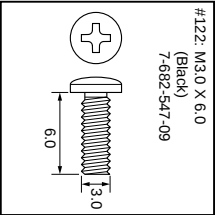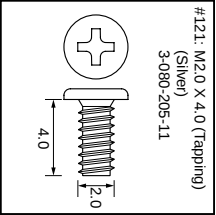


HARDWARE LIST (8/8)


#141: M2.6 X 5.0 (Tapping)
(Silver)
7-685-791-01

 


#142: M1.4 X 2.0
(Silver)
4-111-392-01

 


#143: M1.4 X 2.0
(Black)
4-111-392-11

 


#144: M1.4 X 1.2
(Silver)
4-111-392-21

 


#145: M1.4 X 2.4
(Silver)
4-111-248-01

 


#146: M1.4 X 2.4
(Black)
4-111-248-11

 


#147: M1.4 X 3.5
(Black)
2-662-396-41

 


#148: M1.7 X 3.0
(Silver)
3-057-082-21

 


#149: M1.6 X 7.5 (Tapping)
(Silver)
4-115-505-01

 


#150: M1.4 X 3.0
(Black)
4-105-150-01

 


#151: M1.4 X 1.4
(Silver)
3-272-251-11

 


#152: M1.4 X 2.5
(Black)
4-116-473-11

 


#153: M1.4 X 1.5
(Silver)
3-059-718-01

 


#154: M2.6 X 8.0
(Silver)
7-627-556-97

 

#155: M1.7 X 6.0 (Tapping)
(Black)
3-080-204-31

 

#156: M1.4 X 4.0
(Silver)
2-635-591-61

 

Reverse

985263532.pdf

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2008.12	Official Release	—	—
1.1	2009.02	Revised-1	• Revision of DISASSEMBLY • Revision of supplied accessories S. M. Revised: Page 2-11, 5-13	Yes