


2-1-2. MAIN SECTION

ns: not supplied

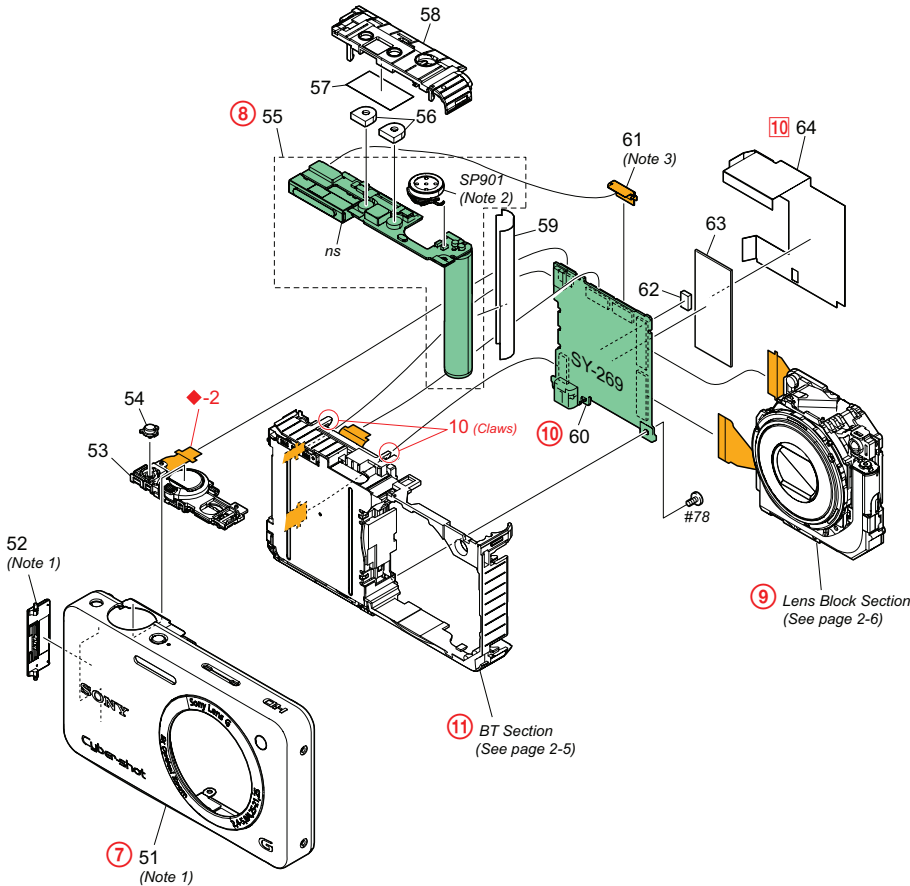

Ref. No.	Part No.	Description
51	X-2548-762-1	CABINET(FRONT) ASSY(350)(SILVER) (Note 1)
51	X-2548-763-1	(FRONT) ASSY (350) (BLACK) (Note 1)
51	X-2548-764-1	(FRONT) ASSY (350) (BROWN) (Note 1)
51	X-2548-765-1	(FRONT) ASSY (350) (VIOLET) (Note 1)
51	X-2549-184-1	CABINET(FRONT) ASSY(350)(GOLD) (Note 1)
52	4-195-646-01	LID (350), HDMI (SILVER) (Note 1)
52	4-195-646-11	LID (350), HDMI (BLACK) (Note 1)
52	4-195-646-21	LID (350), HDMI (BROWN) (Note 1)
52	4-195-646-31	LID (350), HDMI (VIOLET) (Note 1)
52	4-195-646-41	LID (350), HDMI (GOLD) (Note 1)
53	X-2548-758-1	RELEASE ASSY (350) (SILVER)
53	X-2548-759-1	RELEASE ASSY (350) (BLACK)
53	X-2548-760-1	RELEASE ASSY (350) (BROWN)
53	X-2548-761-1	RELEASE ASSY (350) (VIOLET)
53	X-2549-180-1	RELEASE ASSY (350) (GOLD)


Ref. No.	Part No.	Description
* 54	4-195-609-01	CAP (350) (SILVER)
* 54	4-195-609-11	CAP (350) (BLACK)
* 54	4-195-609-31	CAP (350) (BROWN, VIOLET)
* 54	4-195-609-41	CAP (350) (GOLD)
55	A-1792-908-A	ST-236 BOARD, COMPLETE (SERVICE)
* 56	4-195-656-01	RUBBER (350), MICROPHONE
* 57	4-258-377-01	SHEET (350), MICROPHONE BLIND
58	4-195-655-01	CABINET (UPPER (350)), INNER
* 59	4-195-660-01	SHEET (350), PROTECTION
60	A-1786-549-A	SY-269 BOARD, COMPLETE (SERVICE)
61	1-881-849-11	FP-1254 FLEXIBLE BOARD (Note 3)
* 62	4-258-378-01	SPACER (350), SY
* 63	4-258-383-01	SHEET (350), SY HEAT INSULATING
* 64	4-195-657-01	INSULATING SHEET (350), SY
SP901	1-826-403-61	LOUDSPEAKER (1.0CM) (Note 2)
#78	3-208-537-11	0+Z M1.4X2 NEW TORASUTA

DISASSEMBLY

1. Remove to numerical order (7 to 11) in the left figure.
2. The meaning of the sign in left figure is as follows. Be careful when it removes
◆-X: Flexible Board

10 SY insulating sheet (350) (10)

Screw

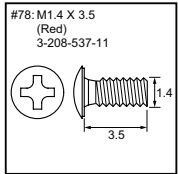


Note

- Note 1: Refer to "Assembly-2: Installation Caution of Cabinet (Front) Assy (350)".
- Note 1: "Assembly-2: Installation Caution of Cabinet (Front) Assy (350)"を参照してください。
- Note 2: Refer to "Assembly-3: Installation Cautions of Speaker Harnesses".
- Note 2: "Assembly-3: Assembly-1: Installation Cautions of Speaker Harnesses"を参照してください。
- Note 3: Refer to "Assembly-5: Installation Caution of FP-1247 Flexible Board and FP-1254 Flexible Board".
- Note 3: "Assembly-5: Assembly-1: Installation Caution of FP-1247 Flexible Board and FP-1254 Flexible Board" を参照してください。

2-1-3. BT SECTION


ns: not supplied

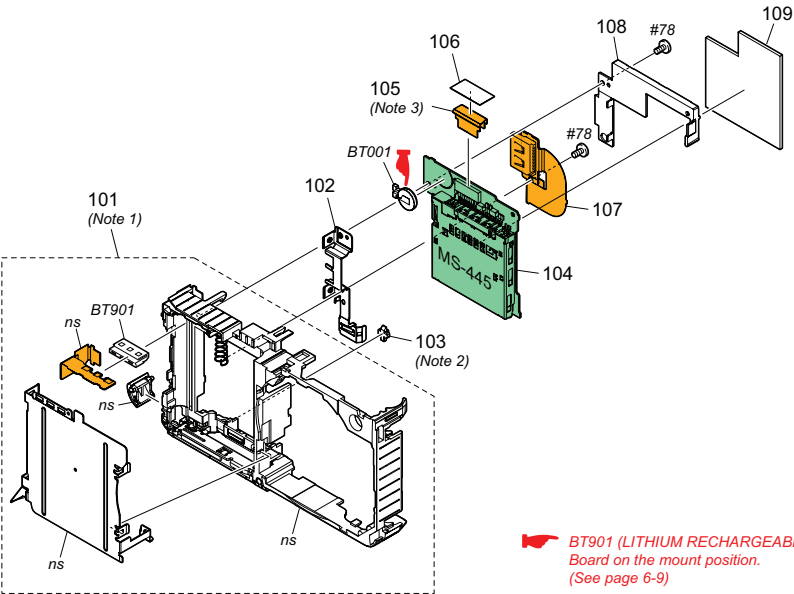

Ref.No.	Part No.	Description
101	X-2548-769-1	HOLDERASSY (350)(SILVER), BT (SILVER: CND, AEP, E, HK, KR, AUS, JE) (Note 1)
101	X-2548-770-1	HOLDERASSY (350)(BLACK), BT (BLACK: CND, AEP, E, HK, KR, AUS, JE) (Note 1)
101	X-2548-771-1	HOLDERASSY (350)(BROWN), BT (BROWN: AEP, E, HK, KR) (Note 1)
101	X-2548-772-1	HOLDERASSY (350)(VIOLET), BT (VIOLET: CND, AEP, E, HK, KR) (Note 1)
101	X-2549-185-1	HOLDERASSY (350)(GOLD), BT (GOLD: AEP, E, HK, KR) (Note 1)
101	X-2549-377-1	HOLDERASSY (GOLD) (JET), BT (GOLD: J, CH) (Note 1)
101	X-2549-378-1	HOLDERASSY (BLACK) (JET), BT (BLACK: US, UK, J, CH) (Note 1)
101	X-2549-379-1	HOLDERASSY (BROWN) (JET), BT (BROWN: US, UK, J, CH) (Note 1)
101	X-2549-380-1	HOLDERASSY (VIOLET) (JET), BT (VIOLET: US, UK, J, CH) (Note 1)
101	X-2549-381-1	HOLDERASSY (SILVER) (JET), BT (SILVER: US, UK, J, CH) (Note 1)

Ref.No.	Part No.	Description
* 102	4-195-647-01	PLATE (350), CONNECTOR
* 103	4-195-648-01	LIGHT (350), MS GUIDE (Note 2)
104	A-1784-409-A	MS-445 BOARD, COMPLETE
105	1-881-709-11	FP-1247 FLEXIBLE BOARD (Note 3)
* 106	4-258-385-01	SHEET (350), ELECTROSTATIC
107	A-1784-412-A	HC-015 FLEXIBLE BOARD, COMPLETE
* 108	4-195-659-01	PROP (350), SY
* 109	4-195-900-01	SHEET (SY (350)), THERMAL
△ BT001	1-756-710-12	LITHIUM RECHARGEABLE BATTERY (MS614)
△* BT901	1-780-826-11	TERMINAL BOARD, BATTERY
#78	3-208-537-11	0+Z M1.4X2 NEW TORASUTA


Screw

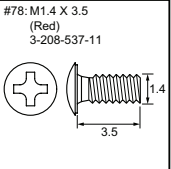

Note

Caution 1
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

Note 1: There are two types of this part, with TransferJet logo or without TransferJet logo. When replacing this part, be careful whether a LOGO is existed or not.

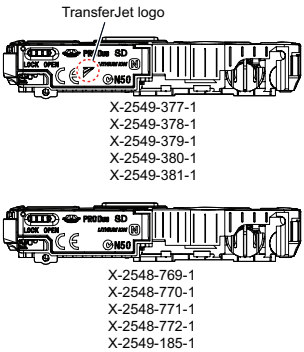

Note 2: Refer to "Assembly-4: Installation Caution of MS Guide Light (350)".

Note 2: "Assembly-4: Installation Caution of MS Guide Light (350)"を参照してください。


Note 3: Refer to "Assembly-5: Installation Caution of FP-1247 Flexible Board and FP-1254 Flexible Board".

Note 3: "Assembly-5: Assembly-1: Installation Caution of FP-1247 Flexible Board and FP-1254 Flexible Board"を参照してください。

注意-1


電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

Note 1: この部品にはロゴ付きとロゴ無し2種類のタイプがあります。
交換時にはロゴの有無に注意してください。

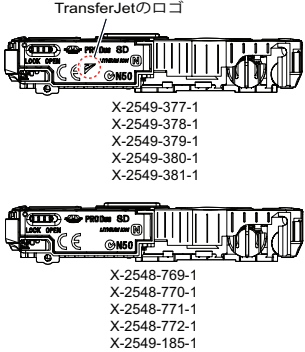

2-1-4. LENS BLOCK SECTION

ns: not supplied

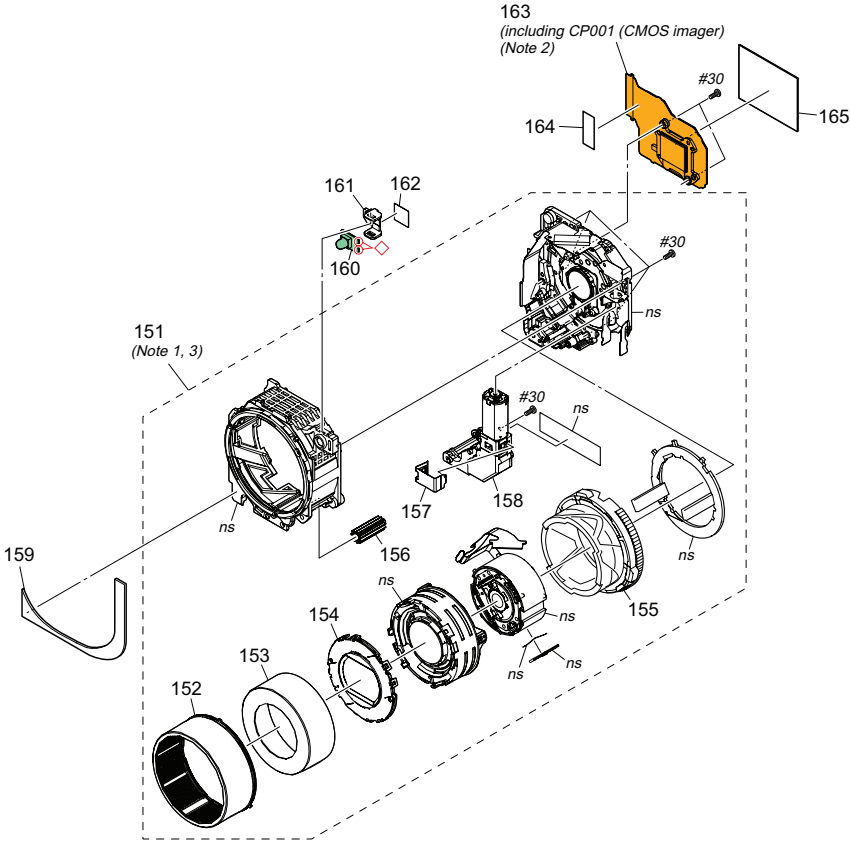

Ref. No.	Part No.	Description
151	1-856-111-11	OPTICAL UNIT (BE0053) (BROWN) (Note 1, 3)
151	1-856-111-21	OPTICAL UNIT (BE0054) (VIOLET) (Note 1, 3)
151	1-856-111-41	OPTICS UNIT (BE0051B) (SILVER) (Note 1, 3)
151	1-856-111-31	OPTICS UNIT (BE005B) (BLACK) (Note 1, 3)
151	1-856-111-51	OPTICS UNIT (BE0052B) (GOLD) (Note 1, 3)

152	X-2515-294-1	TUBE (A_) ASSY (BE005) (BLACK)
152	X-2515-307-1	TUBE (A_) ASSY (BE0051) (SILVER)
152	X-2515-308-1	TUBE (A_) ASSY (BE0052) (GOLD)
152	X-2548-391-1	TUBE (A_) ASSY (BE0053) (BROWN)
152	X-2548-392-1	TUBE (A_) ASSY (BE0054) (VIOLET)

153	4-160-888-01	RING (A (BE005)), ORNAMENTAL (BLACK)
153	4-160-888-11	RING (A (BE0051)), ORNAMENTAL (SILVER)
153	4-160-888-21	RING (A (BE0052)), ORNAMENTAL (GOLD)
153	4-160-888-31	RING (A (BE0053)), ORNAMENTAL (BROWN)
153	4-160-888-41	RING (A (BE0054)), ORNAMENTAL (VIOLET)

154	X-2515-293-1	BARRIER ASSY (BE005) (BLACK)
154	X-2515-338-1	BARRIER ASSY (BE0051) (SILVER)
154	X-2515-339-1	BARRIER ASSY (BE0052) (GOLD)
154	X-2548-389-1	BARRIER ASSY (BE0053) (BROWN)
154	X-2548-390-1	BARRIER ASSY (BE0054) (VIOLET)

Ref. No.	Part No.	Description
155	4-160-889-01	TUBE (BE005), CAM
156	4-160-886-01	GEAR (BE005), NARUTO
157	4-160-887-01	SPRING (BE005), FG LEAF
158	1-487-600-21	MOTER GEAR BLOCK C, ZOOM (BE005)
159	4-195-662-01	CUSHION (350), ABSORBENT

160	A-1736-246-A	AF-135 BOARD, COMPLETE
* 161	4-147-319-01	HOLDER, AF
162	4-168-196-01	INSULATING SHEET (670), AF
163	A-1784-410-A	CD-794 FLEXIBLE BOARD, COMPLETE

(including CP001 (CMOS imager)) (Note 2)

* 164	4-258-386-01	SHEET (350), CD ELECTROSTATIC
-------	--------------	-------------------------------


* 165	4-195-899-01	SHEET (CD (350)), THERMAL
-------	--------------	---------------------------

#30	3-086-156-11	SCREW B1.2
-----	--------------	------------

DISASSEMBLY

1. The meaning of the sign in left figure is as follows. Be careful when it removes
◇-X: Solder

Screw

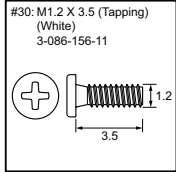

Note

Note1: Refer to the following each item when you exchange parts of Lens Block.
1-7. Ornamental Ring A or Barrier Assy Replacing Method (page 1-7)
1-8. Zoom Gear Block Replacing Method (page 1-7)
1-9. Tube (A) or Cam Tube Replacing Method (page 1-8)
1-10. Final Inspection (page 1-12)

Note1: レンズブロックの各部品を交換する際は、下記の各項目を参照してください。
1-7. Ornamental Ring A or Barrier Assy Replacing Method (1-7ページ)
1-8. Zoom Gear Block Replacing Method (1-7ページ)
1-9. Tube (A) or Cam Tube Replacing Method (1-8ページ)
1-10. Final Inspection (1-12ページ)


Note2: Be sure to read "Precautions for Replacement of Imager" on page 6-1.

Note2: イメージャの交換時は6-1ページの"イメージャ交換時の注意"を必ずお読みください。


Note 3:

PRECAUTIONS WHEN HOLDING THE LENS BLOCK

- Hold the Lens Block at the center of both sides.

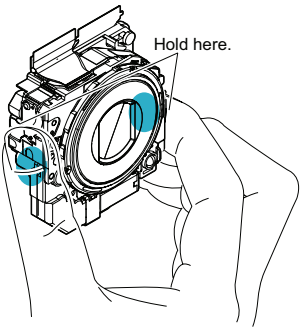

- Do not hold the following part.

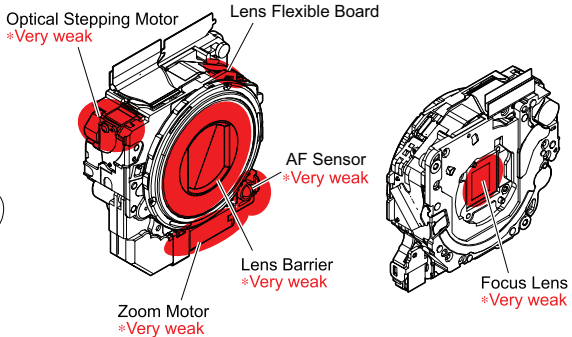

Checking supplied accessories.

Note: This item is supplied with the unit as an accessory, but is not prepared as a service part.



Battery charger
(BC-CSN/BC-CSNB)
△ 1-487-523-21 (US, CND)
△ 1-487-523-31 (CH)
△ 1-487-523-51 (J)
△ 1-487-523-61
(EXCEPT US, CND, J, CH)



 
Rechargeable battery pack
(NP-BN1)
(Note)



Power cord (mains lead)
(EXCEPT US, CND, J, CH)
△ 1-837-421-11 (UK, E (Saudi), HK)
△ 1-837-422-11 (JE)
△ 1-837-427-11 (AEP, E (EXCEPT Saudi))
△ 1-837-428-11 (KR)
△ 1-837-429-11 (AUS)



Wrist strap
2-050-981-01 (Gray) (SILVER, GOLD)
2-050-981-11 (Black) (BLACK, BROWN, VIOLET)



USB, A/V cable for
multi-use terminal
1-837-299-21



CD-ROM
(Cyber-shot application software /
"Cyber-shot Handbook")
4-194-686-01



Conversion (2P) Adaptor
△ 1-569-007-12 (JE)



Conversion (2P) Adaptor
△ 1-569-008-33 (E: NTSC)



Instruction Manual
(Only for destination Japanese model)
日本語、英語、韓国語、中国語のみ部品供給可能です。

4-194-691-01 (JAPANESE)
4-194-691-11 (SIMPLIFIED CHINESE)
4-194-692-11 (ENGLISH)
* 4-194-692-21 (ENGLISH, SPANISH)
* 4-194-692-31 (ENGLISH, FRENCH)
* 4-194-692-41 (ENGLISH, RUSSIAN, UKRAINIAN)
* 4-194-692-51 (ENGLISH, FRENCH, ITALIAN, SPANISH,
PORTUGUESE, GERMAN, DUTCH, TURKISH, GREEK,
POLISH, CZECH, HUNGARIAN, SLOVAK, SWEDISH,
FINNISH, NORWEGIAN, DANISH, CROATIAN, ROMANIAN)
* 4-194-692-61 (ENGLISH, TRADITIONAL CHINESE,
SIMPLIFIED CHINESE, MALAY, INDONESIAN, THAI,
ARABIC, PERSIAN)
* 4-194-692-71 (ENGLISH, SPANISH, PORTUGUESE, TRADITIONAL CHINESE)
* 4-194-692-81 (ENGLISH, TRADITIONAL CHINESE,
SIMPLIFIED CHINESE, INDONESIAN, ARABIC,
PERSIAN)
* 4-194-692-91 (ENGLISH, SPANISH, PORTUGUESE,
TRADITIONAL CHINESE, SIMPLIFIED CHINESE, KOREAN)
* 4-194-693-11 (ENGLISH, TRADITIONAL CHINESE, SIMPLIFIED CHINESE)
4-194-693-21 (KOREAN)
* 4-207-060-11 (ENGLISH, ARABIC, PERSIAN)



Cyber-shot Handbook (PDF)

The CD-ROM supplied contains all of language version of the Instruction Manual in pdf (Cyber-shot Handbook.pdf) for printing.

- The printed matter is not supplied. If required, please order it with the part number below.
- (Only for destination Japanese model)
日本国内については日本語のみが印刷での部品供給可能です。

4-194-687-01 (JAPANESE)	4-194-688-61 (CZECH)
* 4-194-687-11 (ENGLISH)	* 4-194-688-71 (HUNGARIAN)
* 4-194-687-21 (FRENCH)	* 4-194-688-81 (SLOVAK)
* 4-194-687-31 (ITALIAN)	* 4-194-688-91 (SWEDISH)
* 4-194-687-41 (SPANISH)	* 4-194-689-11 (FINNISH)
* 4-194-687-51 (PORTUGUESE)	* 4-194-689-21 (NORWEGIAN)
* 4-194-687-61 (GERMAN)	* 4-194-689-31 (DANISH)
* 4-194-687-71 (DUTCH)	* 4-194-689-41 (THAI)
* 4-194-687-81 (TRADITIONAL CHINESE)	* 4-194-689-51 (MALAY)
* 4-194-687-91 (SIMPLIFIED CHINESE)	* 4-194-689-61 (TURKISH)
* 4-194-688-11 (RUSSIAN)	* 4-194-689-71 (GREEK)
* 4-194-688-21 (ARABIC)	* 4-194-689-81 (UKRAINIAN)
* 4-194-688-31 (PERSIAN)	* 4-194-689-91 (CROATIAN)
* 4-194-688-41 (KOREAN)	* 4-194-690-11 (ROMANIAN)
* 4-194-688-51 (POLISH)	* 4-194-690-21 (INDONESIAN)

DSC-WX5/WX5C_L2

2-7

2-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1736-246-A	AF-135 BOARD, COMPLETE *****
(All mounted parts are not supplied, but they are included in AF-135 COMPLETE BOARD.)		
	1-880-126-11	BT-065 FLEXIBLE BOARD *****
(BT901 is not included in BT-065 flexible board.)		
< BATTERY TERMINAL BOARD >		
△ * BT901	1-780-826-11	TERMINAL BOARD, BATTERY
	A-1784-412-A	HC-015 FLEXIBLE BOARD, COMPLETE *****
< CONNECTOR >		
CN001	1-821-166-21	HDMI CONNECTOR
	A-1784-409-A	MS-445 BOARD, COMPLETE *****
△ BT001	1-756-710-12	LITHIUM RECHAGEBLE BATTERY (MS614)
< CAPACITOR >		
* C003	1-112-716-11	CERAMIC CHIP 0.1uF 10% 6.3V
* C005	1-112-716-11	CERAMIC CHIP 0.1uF 10% 6.3V
< CONNECTOR >		
* CN001	1-817-828-81	CONNECTOR, FPC (ZIF) 25P
CN002	1-822-837-21	CARD CONNECTOR
< FERRITE BEAD >		
FB001	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB002	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB003	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB004	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB005	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB006	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
< RESISTOR >		
R002	1-218-945-11	METAL CHIP 220 5% 1/16W
< THERMISTOR >		
TH001	1-805-194-21	THERMISTOR, NTC (SMD)

Ref. No.	Part No.	Description
	X-2548-758-1	RELEASE ASSY (350) (SILVER)
	X-2548-759-1	RELEASE ASSY (350) (BLACK)
	X-2548-760-1	RELEASE ASSY (350) (BROWN)
	X-2548-761-1	RELEASE ASSY (350) (VIOLET)
	X-2549-180-1	RELEASE ASSY (350) (GOLD)
	(Not supplied)	RL-104 FLEXIBLE BOARD, COMPLETE *****
(RL-104 FLEXIBLE COMPLETE BOARD is not supplied, but this is included in RELEASE ASSY.)		
	A-1792-908-A	ST-236 BOARD, COMPLETE (SERVICE) *****
(C901 and FLASH UNIT are not supplied, but this is included in ST-236 COMPLETE BOARD.)		
SP901	1-826-403-61	LOUDSPEAKER (1.0CM)
△	(Not supplied)	FLASH UNIT
< CAPACITOR >		
C001	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C002	1-100-611-91	CERAMIC CHIP 22uF 20% 6.3V
△ * C006	1-116-456-11	CERAMIC CHIP 0.047uF 10% 350V
△ * C007	1-116-752-21	CERAMIC CHIP 0.01uF 10% 350V
△ C901	(Not supplied)	ELECT 72uF 99% 315V
< CONNECTOR >		
* CN001	1-842-269-11	CONNECTOR, FPC (ZIF) 23P
< DIODE >		
△ * D002	6-503-237-01	DIODE RKH0160AKU
△ * D003	6-503-001-01	DIODE RR255M-400FJTR
< IC >		
* IC001	6-715-742-01	IC R2J20071CNS
< COIL >		
* L001	1-400-820-11	INDUCTOR 2.2uH
< MICROPHONE >		
MIC101	1-542-777-11	MICROPHONE
MIC102	1-542-777-11	MICROPHONE
< TRANSISTOR >		
△ * Q001	6-552-460-01	TRANSISTOR RJP4006AGE
< RESISTOR >		
R003	1-218-938-11	METAL CHIP 56 5% 1/16W
△ R004	1-216-121-11	METAL CHIP 1M 5% 1/10W
△ R005	1-216-097-11	METAL CHIP 100K 5% 1/10W
R008	1-208-890-11	METAL CHIP 1.3K 0.5% 1/16W
R009	1-218-871-11	METAL CHIP 10K 0.5% 1/10W
R010	1-218-965-11	METAL CHIP 10K 5% 1/16W
< TRANSFORMER >		
△ * T001	1-445-775-11	D.C.-D.C.CONVERTER TRANSFORMER

1-881-709-11 FP-1247 FLEXIBLE BOARD

1-881-849-11 FP-1254 FLEXIBLE BOARD

Caution
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.


注意
電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

Please refer to LEVEL 3 about the ELECTRICAL PARTS LIST of CD-794 flexible board and SY-269 board.


CD-794フレキシブル基板またはSY-269基板のELECTRICAL PARTS LISTについては、LEVEL3を参照して下さい。

3. ASSEMBLY

Assembly-1: Attaching Method of LCD Cushion (350), LCD Window (350)

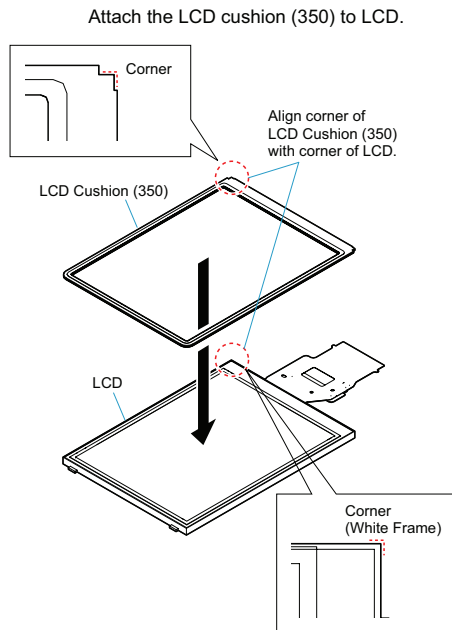


After installing the cabinet (rear) assy, attach the LCD window (350).

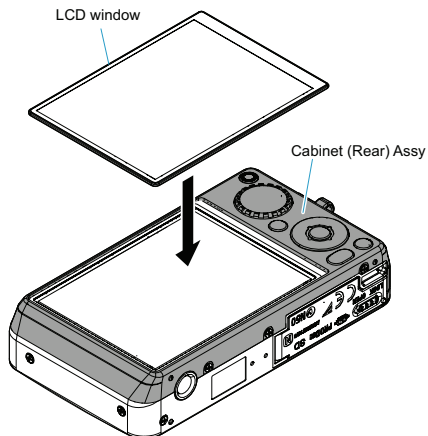


Assembly-2: Installation Caution of Cabinet (Front) Assy (350)

Be sure install the cabinet (front) assy (350) to the main body, after install the HDMI lid (350) to the cabinet (front) assy.

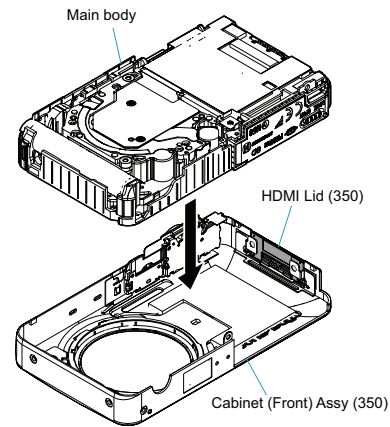


Assembly-3: Installation Cautions of Speaker Harnesses

Solder each lead according to the color (Red, Black) as shown in the figure.

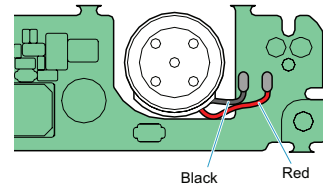


Pass the speaker harnesses through the claw of the inner cabinet (upper(350)).

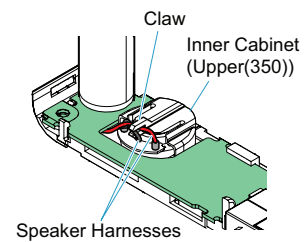


Assembly-4: Installation Caution of MS Guide Light (350)

Direction of installation of the MS guide light (350).

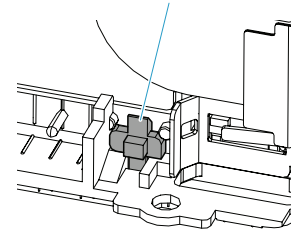

Assembly-5: Installation Caution of FP-1247 Flexible Board and FP-1254 Flexible Board

Direction of installation of the FP-1247 Flexible Board.

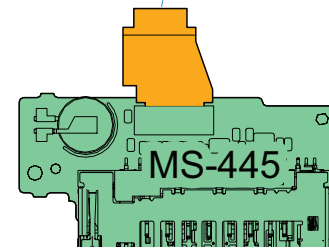

Direction of installation of the FP-1254 Flexible Board.

