


5. REPAIR PARTS LIST

DISASSEMBLY

5-1. EXPLODED VIEWS

5-1-1. OVERALL ASSEMBLY

ns: not supplied

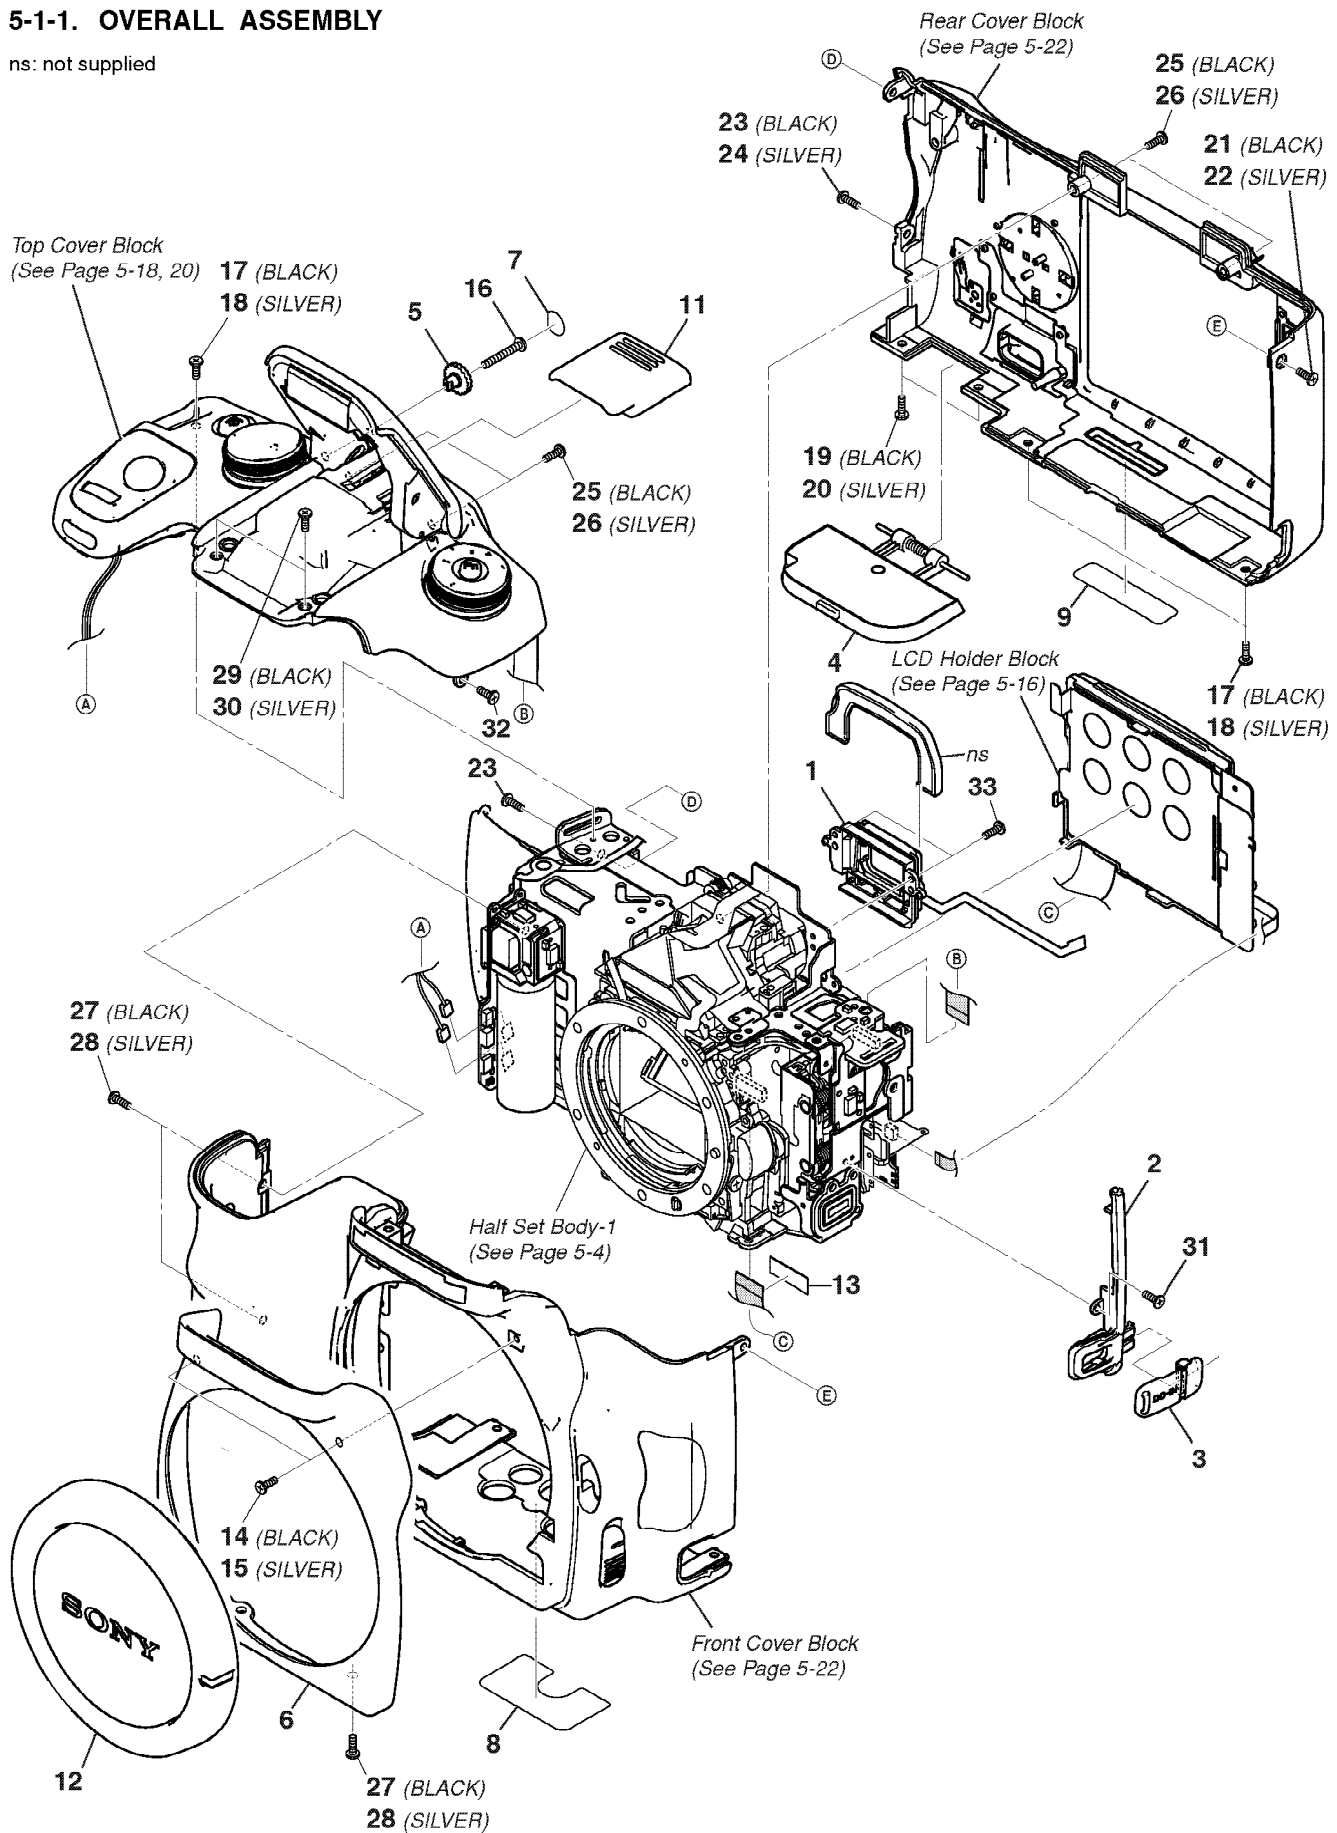

5. REPAIR PARTS LIST


DISASSEMBLY

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	A-1196-101-A	FRAME UNIT, EYE PIECE	17	2-695-425-01	SCREW (M1.6) (Black)
2	2-688-194-01	COVER, L DECORATION (BLACK)	18	2-695-424-01	SCREW (M1.6) (Silver)
2	2-688-194-11	COVER, L DECORATION (SILVER)	19	2-695-430-21	SCREW (T1.7), HEAD PAN TAPPING (Black)
3	2-688-186-01	LID, DC JACK (BLACK)	20	2-695-431-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
3	2-688-186-11	LID, DC JACK (SILVER)	21	2-695-425-11	SCREW (M1.6) (Black)
4	A-1196-106-A	COVER UNIT, BATTERY (BLACK)	22	2-695-424-11	SCREW (M1.6) (Silver)
4	A-1196-107-A	COVER UNIT, BATTERY (SILVER)	23	2-695-430-31	SCREW (T1.7), HEAD PAN TAPPING (Black)
5	2-688-857-01	KNOB, DIOPTER ADJUST	24	2-695-431-21	SCREW (T1.7), HEAD PAN TAPPING (Silver)
6	2-688-188-01	COVER, FRONT DECORATION (BLACK)	25	2-695-425-21	SCREW (M1.6) (Black)
6	2-688-188-11	COVER, FRONT DECORATION (SILVER)	26	2-695-424-21	SCREW (M1.6) (Silver)
7	2-689-006-01	LABEL, DIOPTER ADJUST	27	2-695-430-11	SCREW (T1.7), HEAD PAN TAPPING (Black)
8	2-684-655-01	LABEL, MODEL NUMBER	28	2-695-431-01	SCREW (T1.7), HEAD PAN TAPPING (Silver)
9	2-688-296-01	LABEL, MAIN CAUTION	29	2-695-430-51	SCREW (T1.7), HEAD PAN TAPPING (Black)
11	2-688-767-01	SHOE UNIT, ACCESSORY (BLACK)	30	2-695-431-41	SCREW (T1.7), HEAD PAN TAPPING (Silver)
11	2-688-767-11	SHOE UNIT, ACCESSORY (SILVER)	31	2-695-423-21	SCREW (M1.6) (Silver)
12	2-688-728-01	CAP, BODY	32	2-695-423-41	SCREW (M1.6) (Silver)
13	2-889-024-01	FPC STICKING TAPE	33	2-695-420-01	SCREW (M1.6), +P1 MAIN PAN (Silver)
14	2-688-297-01	SCREW, DECORATION (Black)			
15	2-688-297-11	SCREW, DECORATION (Silver)			
16	2-695-436-01	SCREW (T1.4X7), +P1 PAN TAPPING (Silver)			

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-2. HALF SET BODY-1

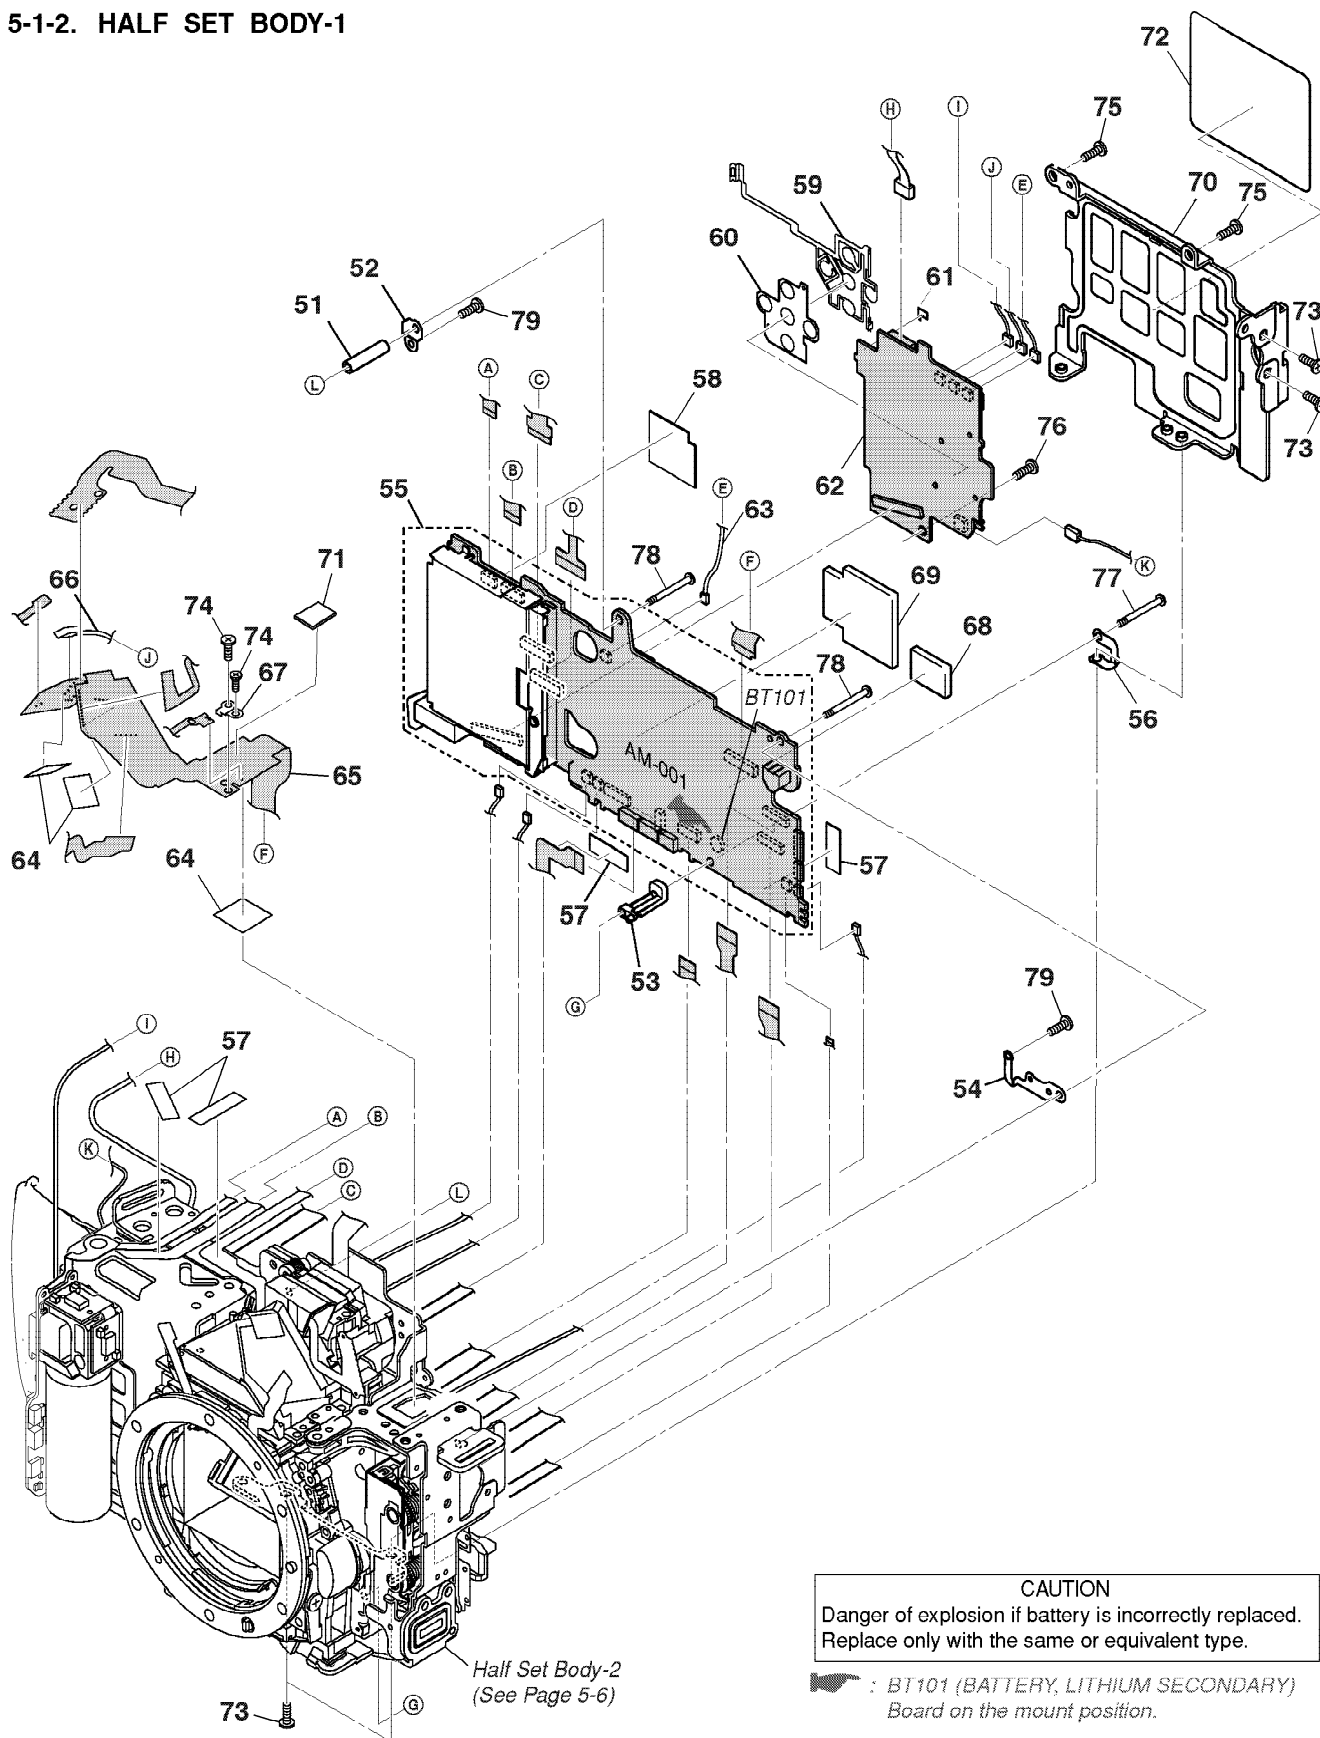

5. REPAIR PARTS LIST

DISASSEMBLY


- Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
51	2-693-423-01	SHAFT, PC BOARD HOLDING	66	1-964-901-11	HARNESS (BL-001)
52	2-688-796-01	LUG (1), CCD CHASSIS	67	2-688-372-01	PLATE, I/O FLEXIBLE LUG
53	2-689-186-01	TABLE (B), PC BOARD HOLDING	68	2-688-373-01	SHEET1 (S), HEAT TRANSMISSION
54	2-688-797-01	LUG (2), CCD CHASSIS	69	2-688-374-01	SHEET2 (L), HEAT TRANSMISSION
55	A-1183-654-A	AM-001 BOARD, COMPLETE	70	2-688-135-01	CHASSIS, MAIN
56	2-688-799-01	PLATE, MAIN PC BOARD LUG	71	2-693-338-01	TAPE, FN PLATE SUPPORT
57	2-889-024-01	FPC STICKING TAPE	72	2-688-851-01	SHEET (B), FUSE
58	2-693-339-01	SHEET, FCP CONNECT ELEPREVENTION	73	2-695-427-01	SCREW (M2) (Silver)
59	2-688-772-01	RETAINER, CROSS BUTTON	74	2-695-421-01	SCREW (M2), +P1 MAIN PAN (Silver)
60	2-688-378-01	SHEET, CROSS KEY (SW)	75	2-695-421-11	SCREW (M2), +P1 MAIN PAN (Silver)
61	2-693-346-01	TAPE, ACCESS LIGHT LEAK	76	2-695-432-01	SCREW (T1.7), HEAD PAN TAPPING (Silver)
△ 62	A-1196-245-A	POWER UNIT	77	2-689-188-01	SCREW (B), PC BOARD HOLDING (Silver)
63	1-964-884-11	HARNESS (MO-001)	78	2-689-187-01	SCREW (A), PC BOARD HOLDING (Silver)
64	2-689-363-01	TAPE, TOP COVER FLEXIBLE FIXED	79	2-695-423-01	SCREW (M1.6) (Silver)
65	1-870-962-11	FP-528 FLEXIBLE BOARD	△ BT101	1-756-566-11	BATTERY, LITHIUM SECONDARY

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

5-1-3. HALF SET BODY-2

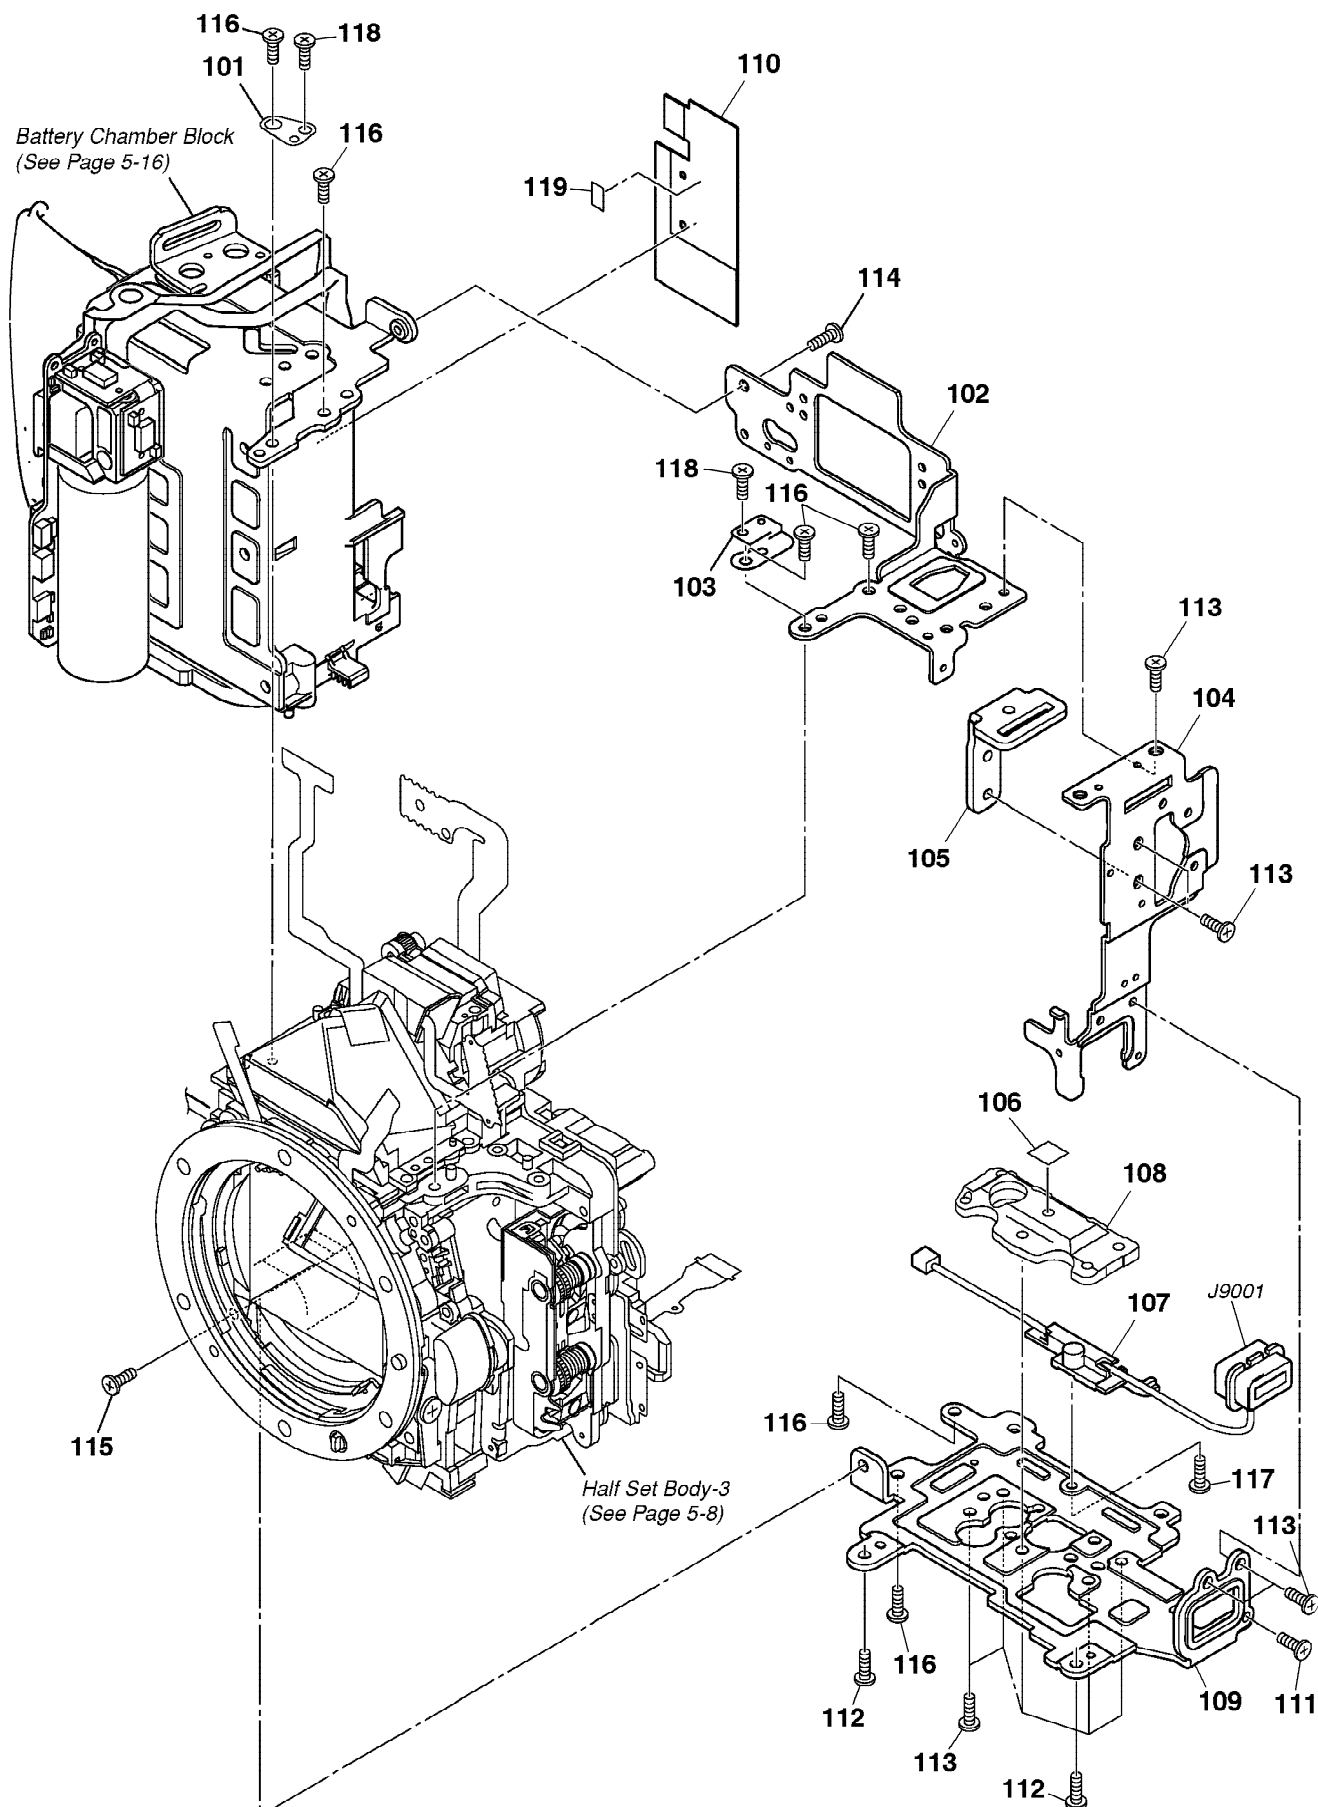

5. REPAIR PARTS LIST

DISASSEMBLY

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
101	2-689-389-01	PLATE (1), PENTA PROTECTION LUG
102	2-688-681-01	CHASSIS (L), SUB
103	2-688-854-01	PLATE (2), PENTA PROTECTION LUG
104	2-688-200-01	PLATE, EYELET REINFORCEMENT
105	2-688-204-01	EYELET, LEFT
106	2-699-378-01	TAPE, TRIPOD
107	2-688-379-01	HOLDER, WIRE ARRANGEMENT
108	2-688-201-01	SCREW, TRIPOD
109	2-688-199-01	CHASSIS, BOTTOM
110	2-688-786-01	SHEET, CCD FLEXIBLE RETAINER


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
111	2-695-423-31	SCREW (M1.6) (Silver)
112	2-695-427-01	SCREW (M2) (Silver)
113	2-695-421-01	SCREW (M2), +P1 MAIN PAN (Silver)
114	2-695-421-11	SCREW (M2), +P1 MAIN PAN (Silver)
115	2-695-433-11	SCREW (T2), HEAD PAN TAPPING (Silver)
116	2-695-433-01	SCREW (T2), HEAD PAN TAPPING (Silver)
117	2-695-429-31	SCREW (T1.7), HEAD PAN TAPPING (Silver)
118	2-695-429-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
119	2-689-362-01	TAPE, AF MODULE FLEXIBLE FIXED
J9001	1-820-344-11	JACK, DC

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-4. HALF SET BODY-3

Note: Refer to HELP for the method of cleaning the OLPF.

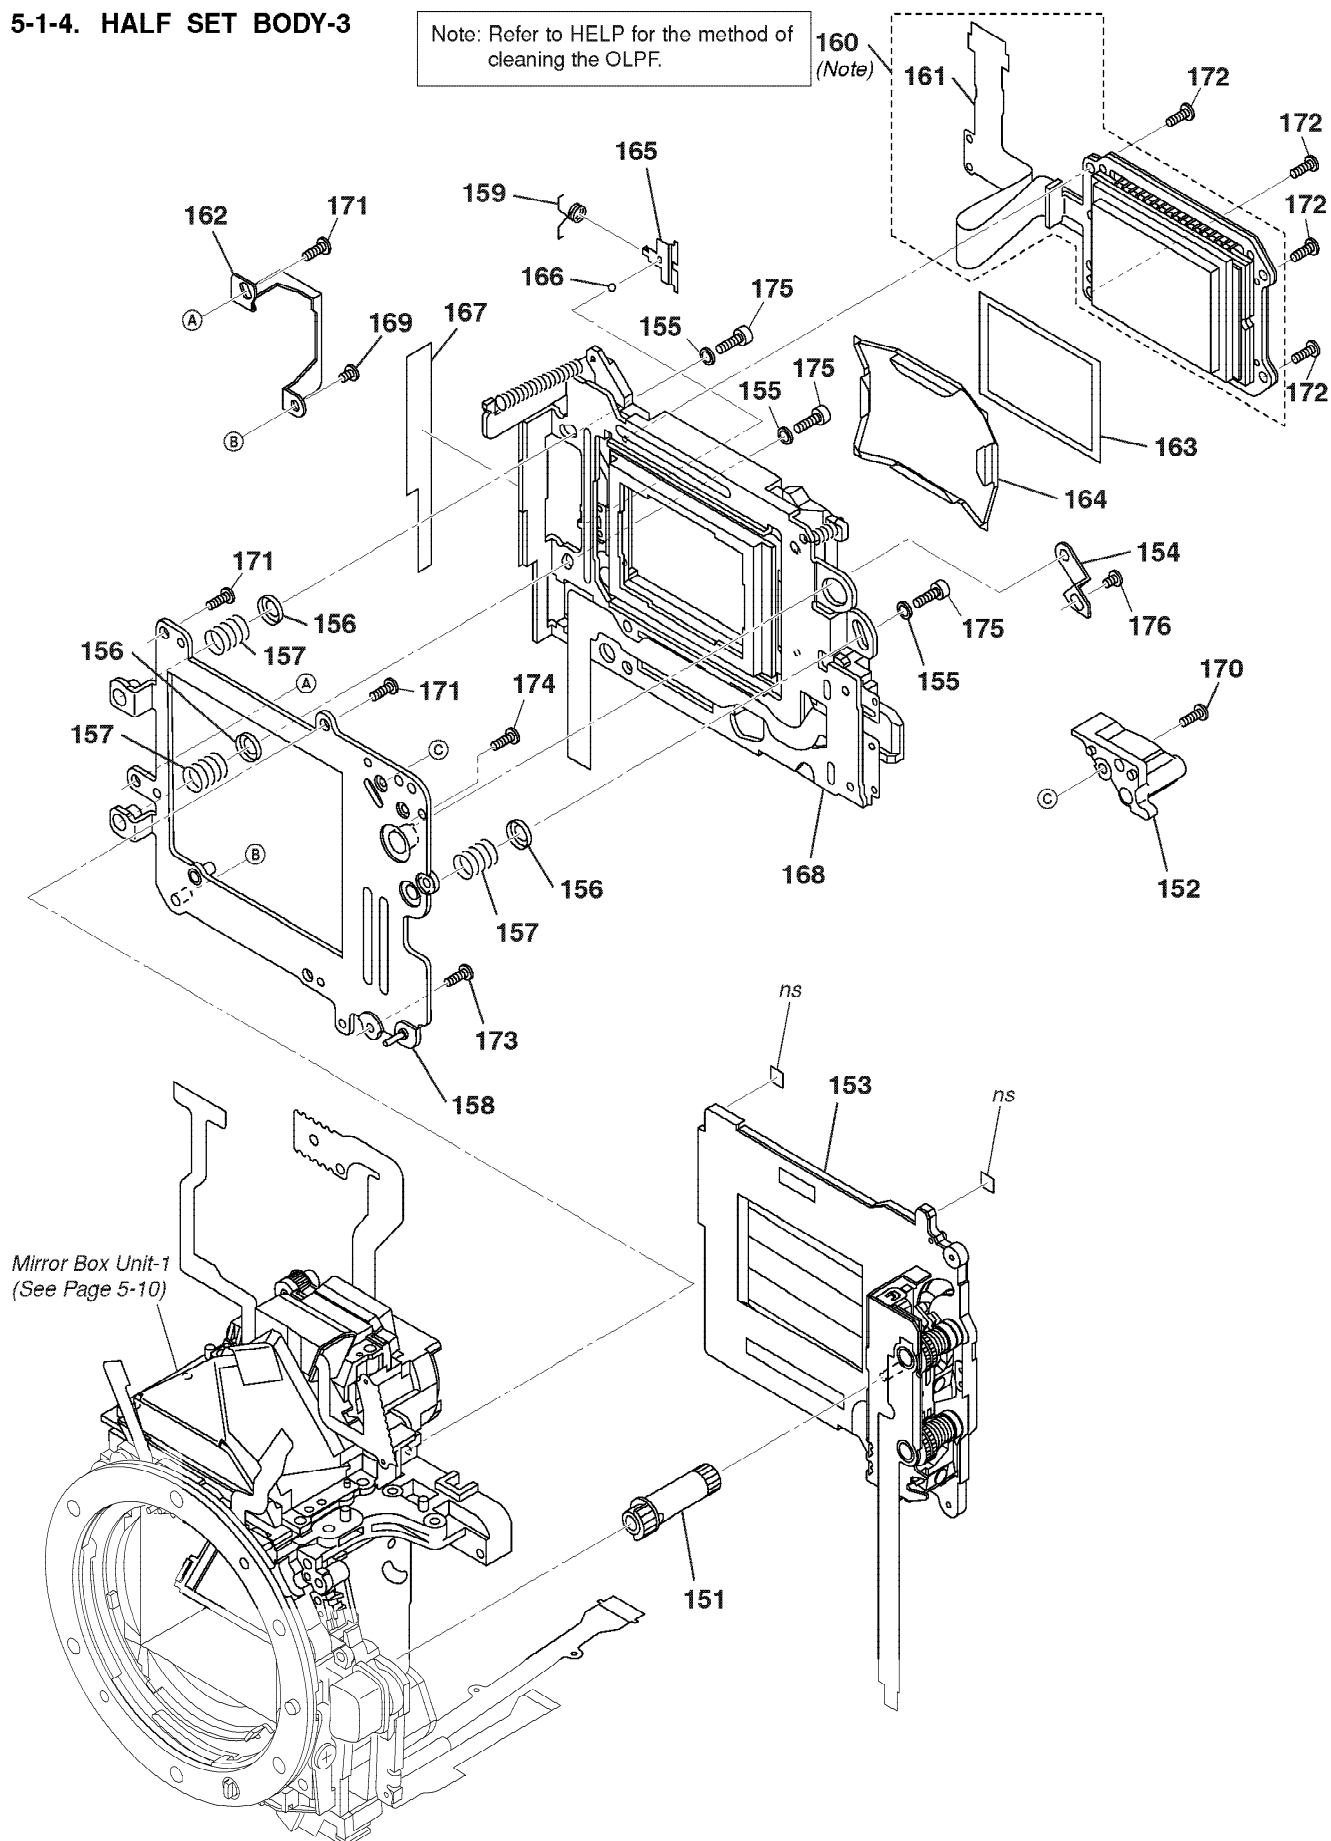

5. REPAIR PARTS LIST

DISASSEMBLY


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
151	2-689-182-01	GEAR, SHUTTER CHARGE	165	2-689-073-01	RETAINER, BALL
152	2-689-185-01	TABLE (A), PC BOARD HOLDING	166	2-695-356-01	BALL, BEARING
153	2-693-345-01	SHUTTER	167	2-689-357-01	INSULATING SHEET, ANTI SHAKE
154	2-689-330-01	STOPPER, ECCENTRIC PIN	168	A-1196-100-A	SLIDER UNIT
155	2-695-354-01	WASHER	169	2-695-423-21	SCREW (M1.6) (Silver)
156	2-689-331-01	WASHER, AO ADJUSTMENT SHAFT	170	2-695-423-41	SCREW (M1.6) (Silver)
157	2-693-427-01	ADJUSTMENT (SP), CCD AO	171	2-695-433-11	SCREW (T2), HEAD PAN TAPPING (Silver)
158	A-1204-883-A	CHASSIS UNIT, CCD	172	2-695-429-31	SCREW (T1.7), HEAD PAN TAPPING (Silver)
159	2-693-422-01	TENSION (SP-C), SLIDER	173	2-695-423-51	SCREW (M1.6) (Silver)
160	A-1196-229-A	CCD UNIT	174	2-695-429-61	SCREW (T1.7), HEAD PAN TAPPING (Silver)
161	A-1197-323-A	MOUNT, CCD CONECTING	175	2-689-328-01	SCREW, CCD AO ADJUSTMENT (Silver)
162	2-688-847-01	PLATE, SLIDER STOP	176	2-695-423-11	SCREW (M1.6) (Silver)
163	2-689-329-01	SHEET, LOW PASS FILTER MASK			
164	2-688-377-01	PLATE, LOW PASS RETAINER			

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-5. MIRROR BOX UNIT-1

ns: not supplied

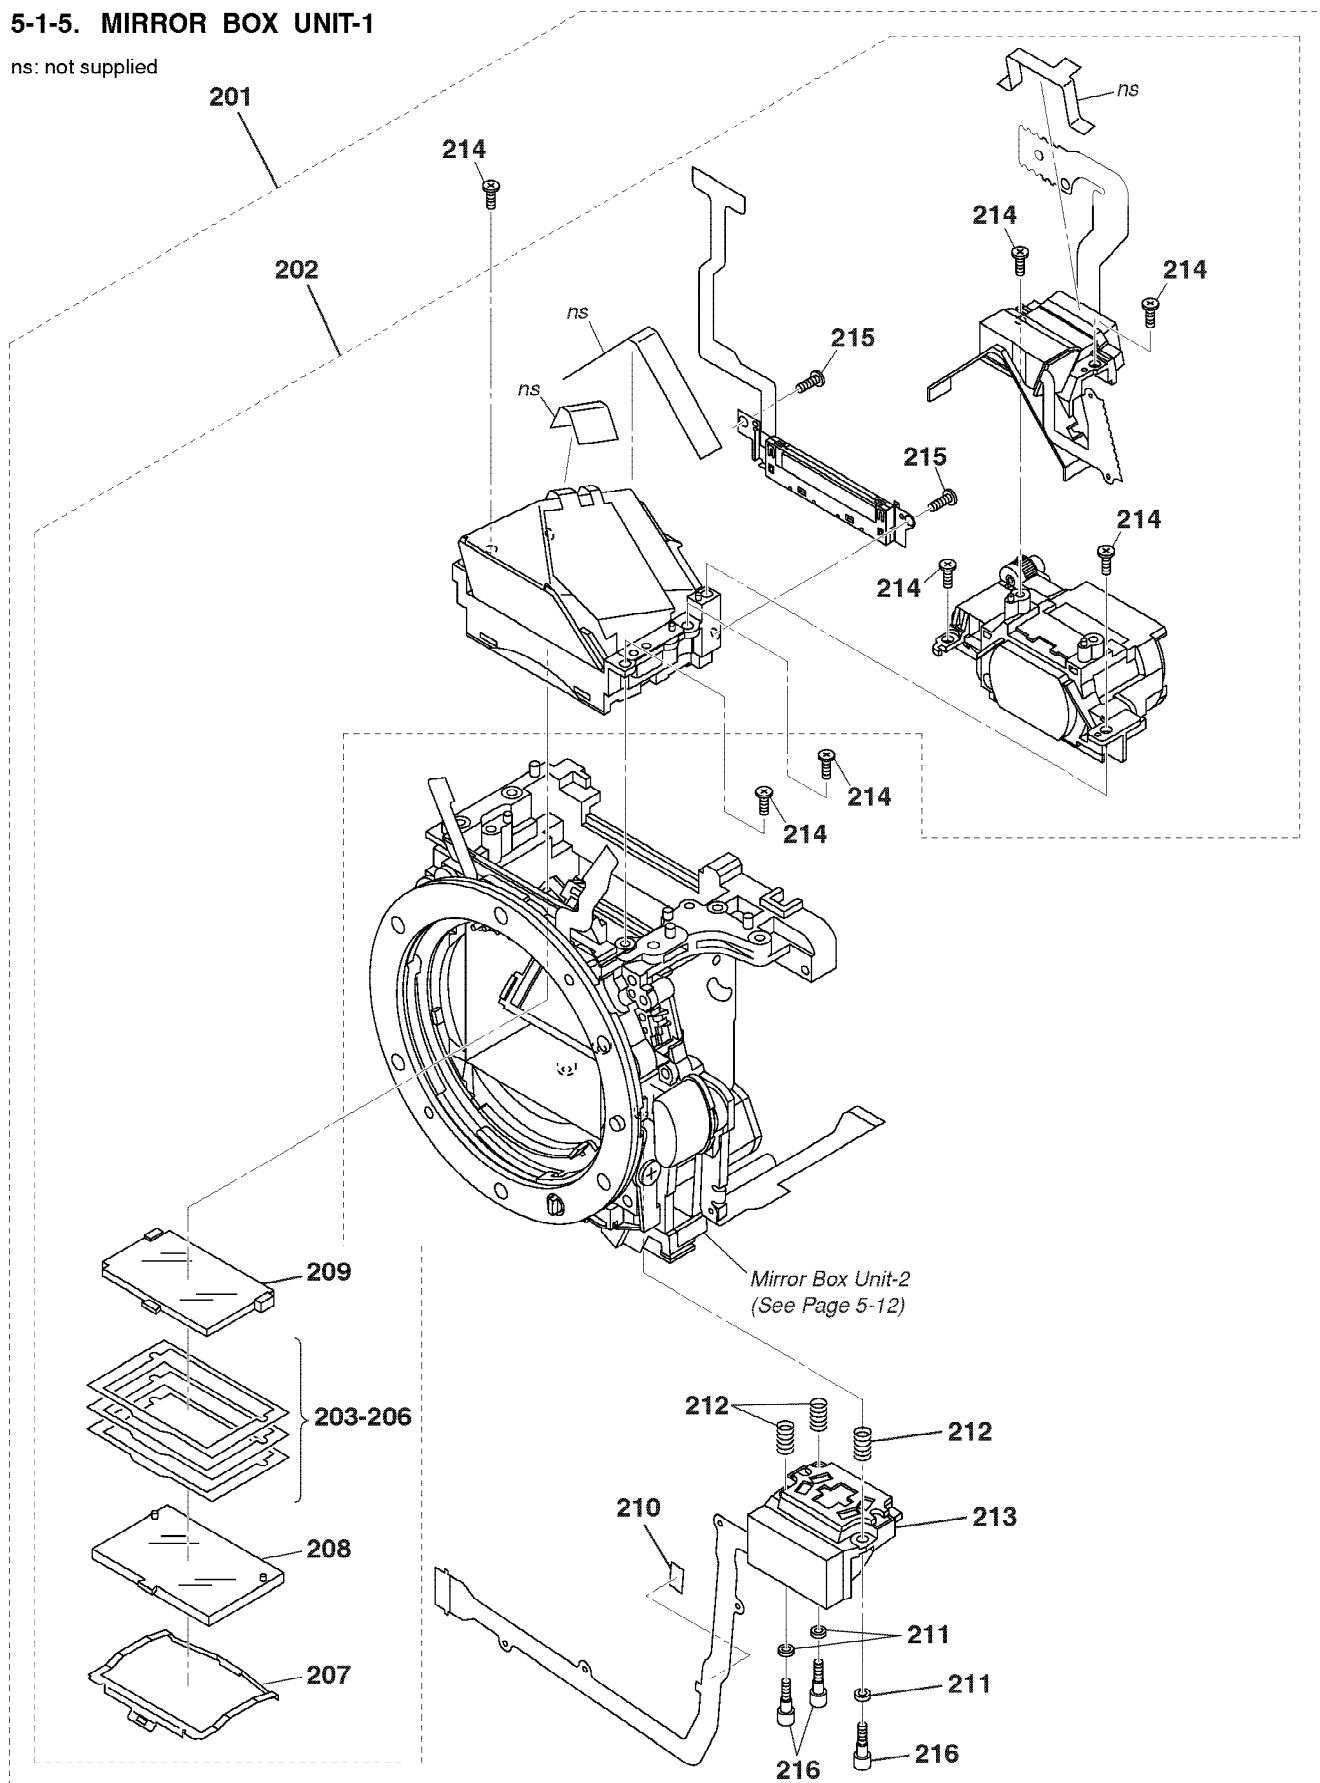

5. REPAIR PARTS LIST


DISASSEMBLY

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
201	A-1196-094-A	BOX UNIT, MIRROR	210	2-689-362-01	TAPE, AF MODULE FLEXIBLE FIXED
202	A-1196-099-A	PENTA UNIT	211	2-688-865-01	WASHER, S ADJUSTMENT
203	2-689-369-01	SPACER (A), VB	212	2-693-420-01	SP, S ADJUSTMENT
204	2-689-370-01	SPACER (B), VB	213	A-1209-702-A	AF MODULE UNIT
205	2-689-371-01	SPACER (C), VB	214	2-695-429-31	SCREW (T1.7), HEAD PAN TAPPING (Silver)
206	2-689-372-01	SPACER (D), VB	215	2-695-429-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
207	2-689-179-01	RETAINER (SP), FOCUS PLATE	216	2-689-015-01	SCREW, S ADJUSTMENT (Silver)
208	2-689-420-01	PLATE, FORCUS			
209	2-688-376-01	SCREEN, SI			

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-6. MIRROR BOX UNIT-2

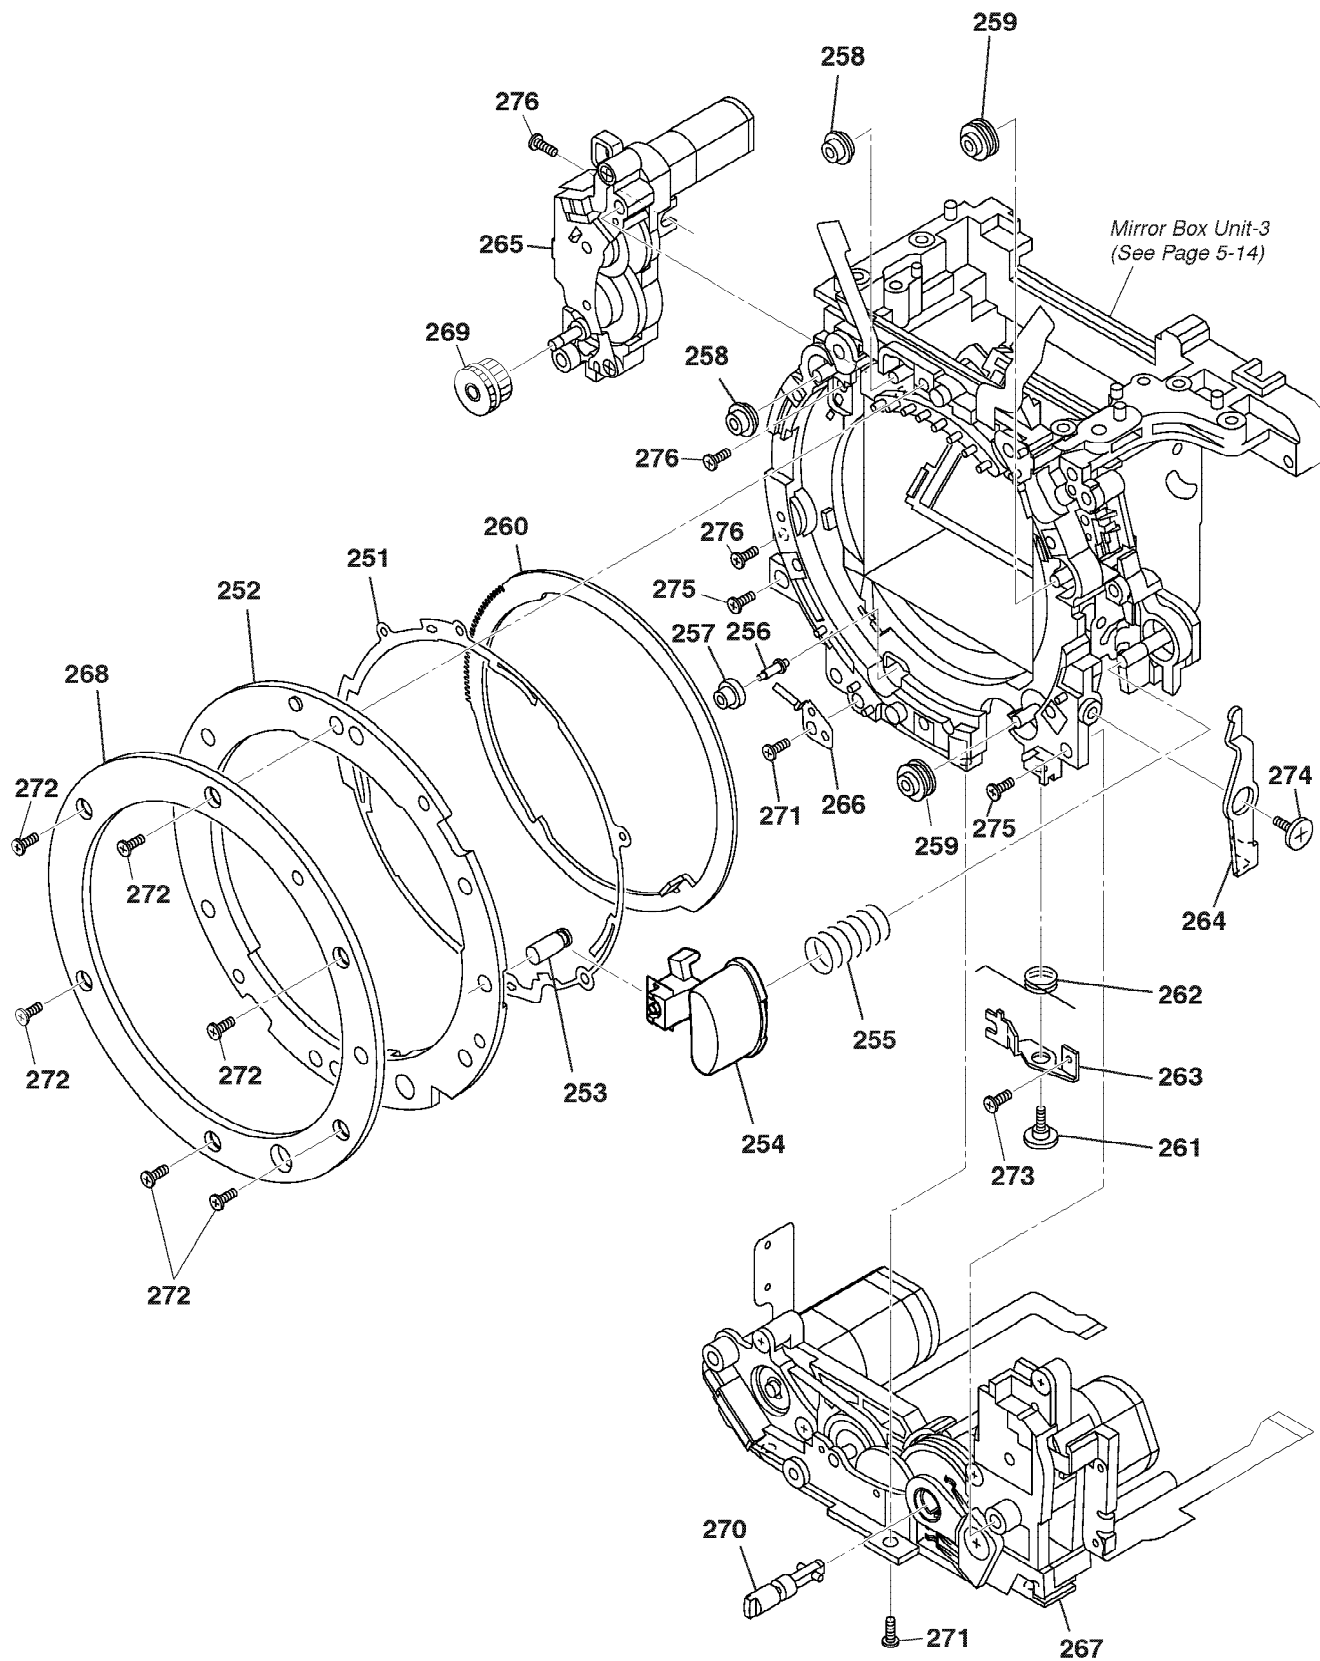

5. REPAIR PARTS LIST

DISASSEMBLY

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
251	2-689-198-01	RING (SP)
252	2-688-792-01	SPACER, MOUNT
253	2-693-421-01	PIN, LENS LOCK
254	2-688-679-01	BUTTON, LENS LOCK
255	2-693-419-01	LOCK (SP), LENS
256	2-693-426-01	SHAFT, RING ROLLER (C)
257	2-689-315-01	ROLLER (C), RING
258	2-689-314-01	ROLLER (B), RING
259	2-689-313-01	ROLLER (A), RING
260	2-689-312-01	RING, IRIS
261	2-689-289-01	SHAFT, COUPLER LEVER
262	2-693-417-01	TENSION (SP), COUPLER LEVER
263	2-689-288-01	LEVER, COUPLER
264	2-689-290-01	LEVER, COUPLER JOINT


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
265	A-1196-097-A	APERTURE UNIT
266	2-689-301-01	PLATE (2), MOUNT LUG
267	A-1196-096-A	CHANGE UNIT, AF
268	2-689-021-01	MOUNT (TOP), H
269	2-689-306-01	GEAR, IRIS JOINT
270	A-1204-882-A	COUPLER UNIT, AF
271	2-695-429-31	SCREW (T1.7), HEAD PAN TAPPING (Silver)
272	2-695-575-01	SCREW (T2), +P1 PAN TAPPING (Silver)
273	2-689-291-01	SCREW, COUPLER LEVER ADJUSTMENT (Silver)
274	2-695-434-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
275	2-689-181-01	SCREW, AF CHARGE PLATE (Silver)
276	2-695-429-41	SCREW (T1.7), HEAD PAN TAPPING (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-7. MIRROR BOX UNIT-3

ns: not supplied

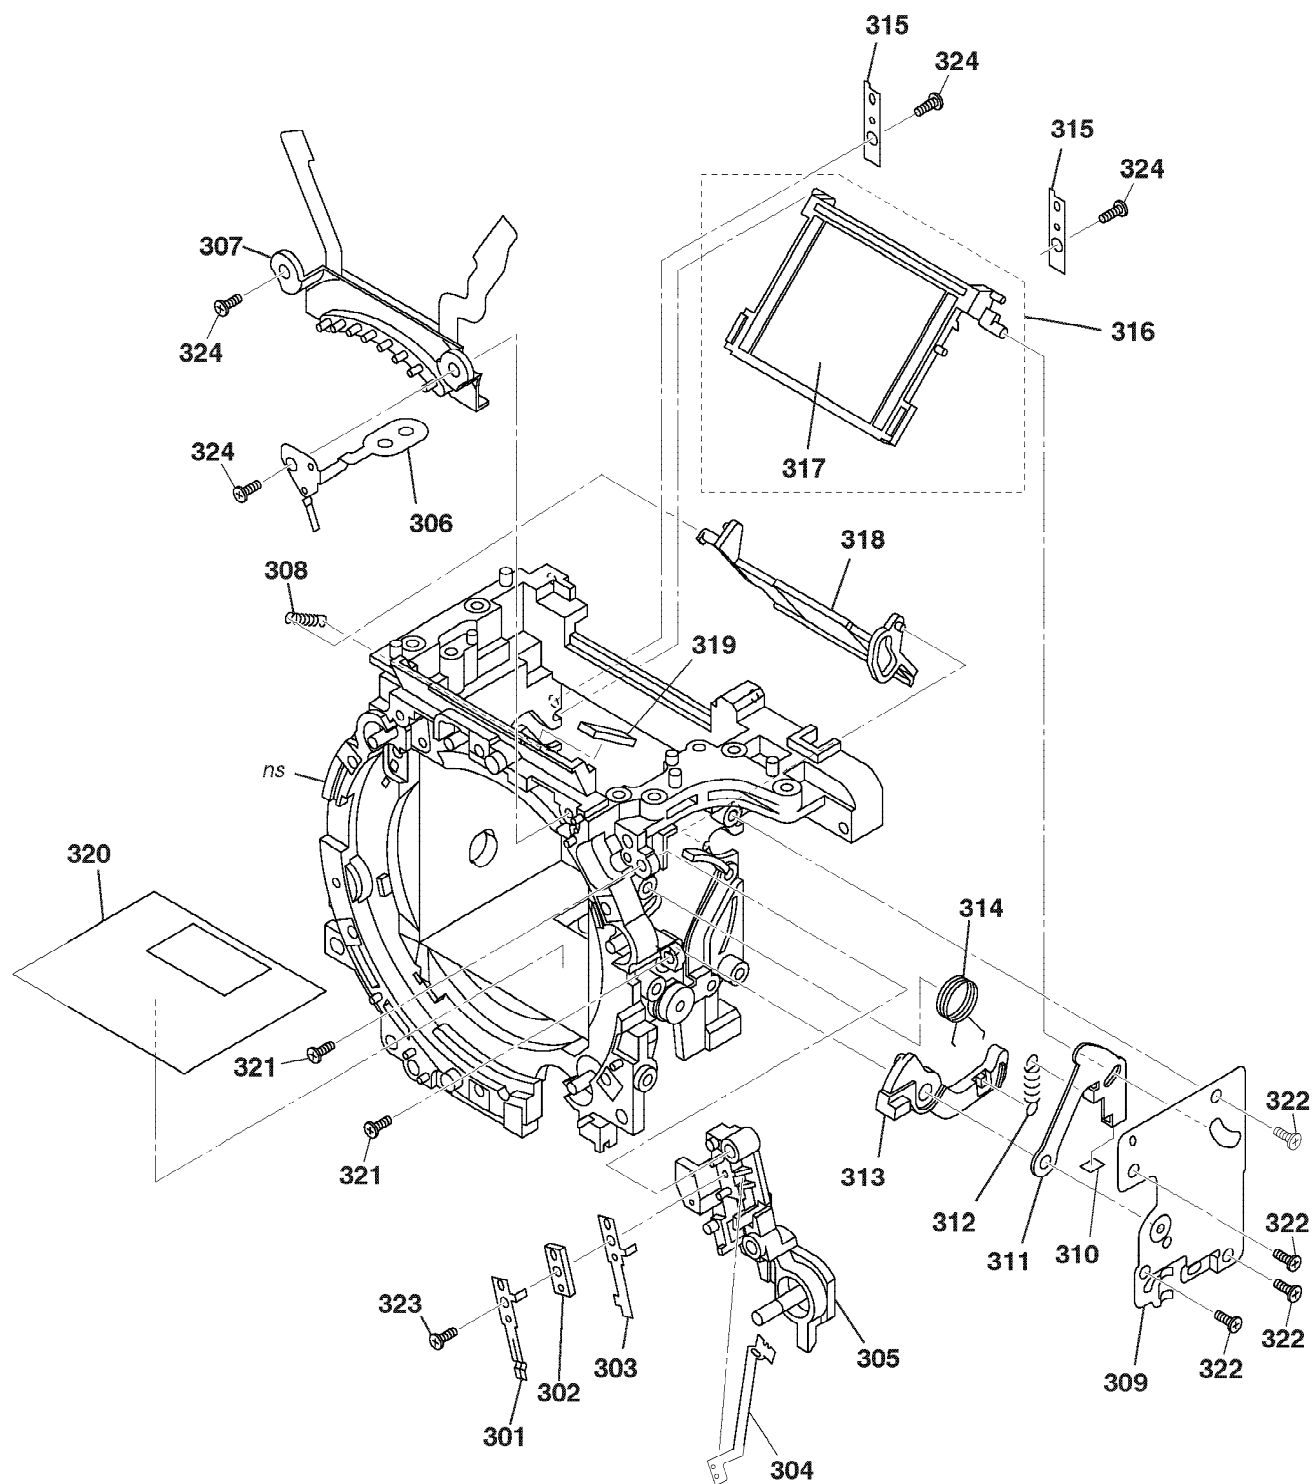

5. REPAIR PARTS LIST

DISASSEMBLY


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
301	2-689-292-01	DETECT CONTACT (A), SLLK
302	2-689-008-01	SPACER, SLLK DETECT CONTACT
303	2-689-293-01	DETECT CONTACT (B), SLLK
304	1-870-959-11	FP-525 BOARD
305	2-689-294-01	PLATE, LENS LOCK BUTTON HOLDING
306	2-689-300-01	PLATE (1), MOUNT LUG
307	A-1204-881-A	HOLDER UNIT, BL CONTACT
308	2-693-431-01	FUNCTION (SP), SUB MIRROR
309	2-689-405-01	PLATE, MIRROR DRIVING
310	2-688-375-01	CUSHION, DRIVING LEVER
311	2-689-400-01	LEVER, MAIN MIRROR DRIVING
312	2-693-429-01	CHARGE (SP), MIRROR OVER
313	2-689-399-01	LEVER, MIRROR DRIVING

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
314	2-693-430-01	DRIVING (SP), MIRROR
315	2-689-404-01	RETAINER, MAIN MIRROR HOLDER
316	A-1196-095-A	HOLDER UNIT, MAIN MIRROR
317	2-693-433-01	MIRROR, MAIN
318	A-1204-880-A	HOLDER UNIT, SUB MIRROR
319	2-688-859-01	CUSHION (A), SUB MIRROR (SP)
320	2-693-432-01	SHEET, FLARE PREVENTION
321	2-695-429-31	SCREW (T1.7), HEAD PAN TAPPING (Silver)
322	2-695-429-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
323	2-695-428-01	SCREW (T1.4), HEAD PAN TAPPING (Silver)
324	2-695-439-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
325	2-695-439-01	SCREW (T1.7), HEAD PAN TAPPING (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-8. BATTERY CHAMBER/LCD HOLDER BLOCK

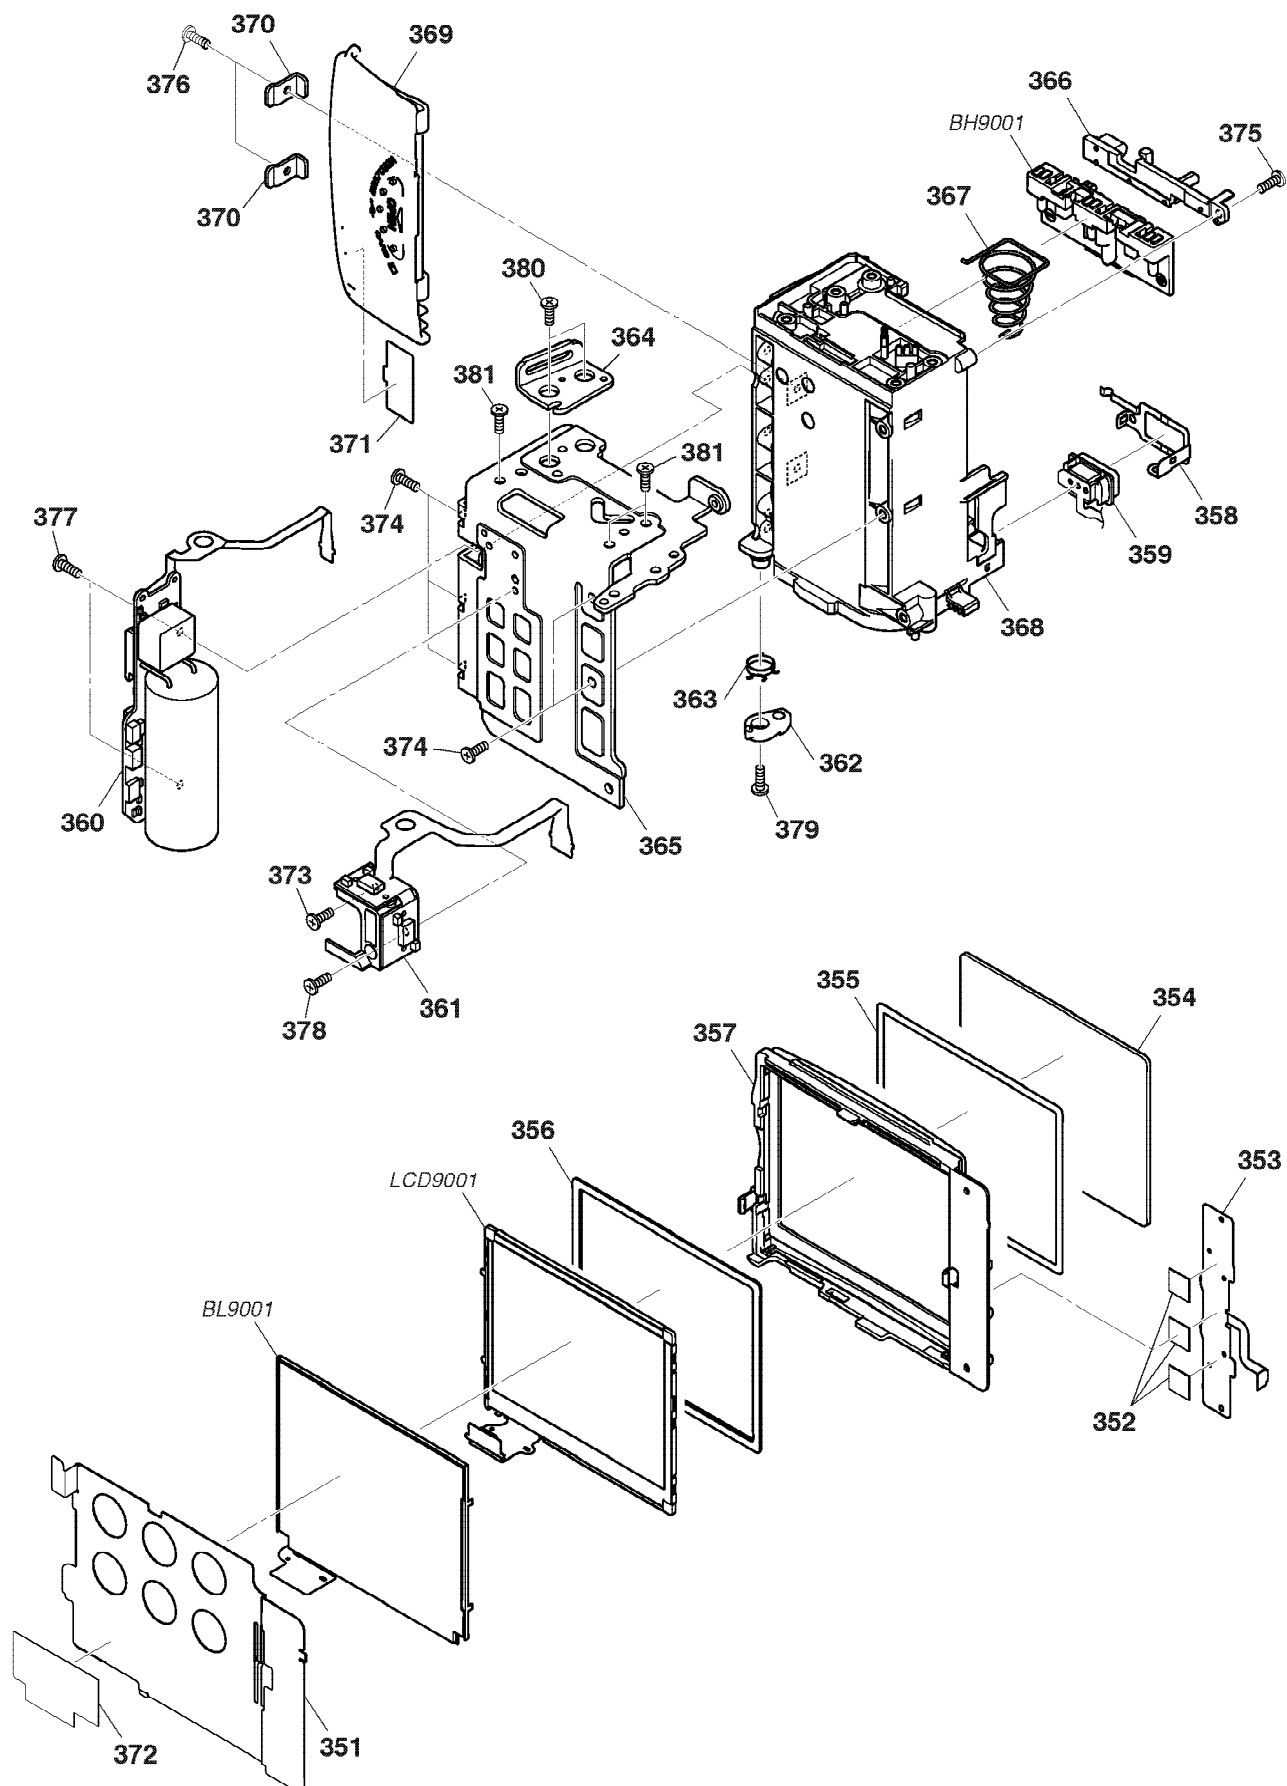

5. REPAIR PARTS LIST

DISASSEMBLY

- Refer to page 5-1 for mark △.


Ref. No.	Part No.	Description
351	2-688-132-01	PLATE, LCD GND
352	2-689-360-01	TAPE, PREVIEW BUTTON FCP FIXED
353	1-870-963-11	FP-529 FLEXIBLE BOARD
354	2-688-291-01	WINDOW, LCD
355	2-688-292-01	SHEET, LCD WINDOW
356	2-688-131-01	CUSHION, LCD
357	2-688-126-01	HOLDER, LCD (BLACK)
357	2-688-126-11	HOLDER, LCD (SILVER)
358	2-688-785-01	PLATE, POWER (GND)
359	A-1204-884-A	REMOTE UNIT
△ 360	A-1196-231-A	CAPACITOR UNIT, MAIN
361	A-1196-230-A	GYRO UNIT
362	2-688-127-01	CLAW, BATTERY LOCK
363	2-688-128-01	TENSION (SP), BATTERY LOCK CLAW
364	2-688-203-01	EYELET, GRIP
365	2-688-198-01	CHASSIS (G), SUB
366	2-688-202-01	HOLDER, TERMINAL BOARD
367	3-969-380-01	SPRING, BATTERY
368	2-688-193-01	CHAMBER, BATTERY

Ref. No.	Part No.	Description
369	A-1196-115-A	COVER UNIT, CF CARD (BLACK)
369	A-1196-116-A	COVER UNIT, CF CARD (SILVER)
370	2-688-191-01	MOUNTING (CF), HINGE SHAFT
371	2-688-383-01	SHEET, CF CARD (INDICATION)
372	2-889-132-01	SHEET (BACK LCD LIGHT REC TAPE)
373	2-695-423-41	SCREW (M1.6) (Silver)
374	2-695-433-01	SCREW (T2), HEAD PAN TAPPING (Silver)
375	2-695-429-31	SCREW (T1.7), HEAD PAN TAPPING (Silver)
376	2-695-429-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
377	2-695-429-21	SCREW (T1.7), HEAD PAN TAPPING (Silver)
378	2-695-423-61	SCREW (M1.6) (Silver)
379	2-695-434-21	SCREW (T1.7), HEAD PAN TAPPING (Silver)
380	2-695-435-01	SCREW (T2), HEAD PAN TAPPING (Silver)
381	2-695-574-01	SCREW (T2), +P1 PAN TAPPING (Silver)
BH9001	1-694-796-51	TERMINAL BOARD, BATTERY
BL9001	1-479-694-11	BLOCK LIGHT GUIDE PLATE (2.5)
LCD9001	8-753-269-78	ACX542AKA-1

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-9. TOP COVER BLOCK-1

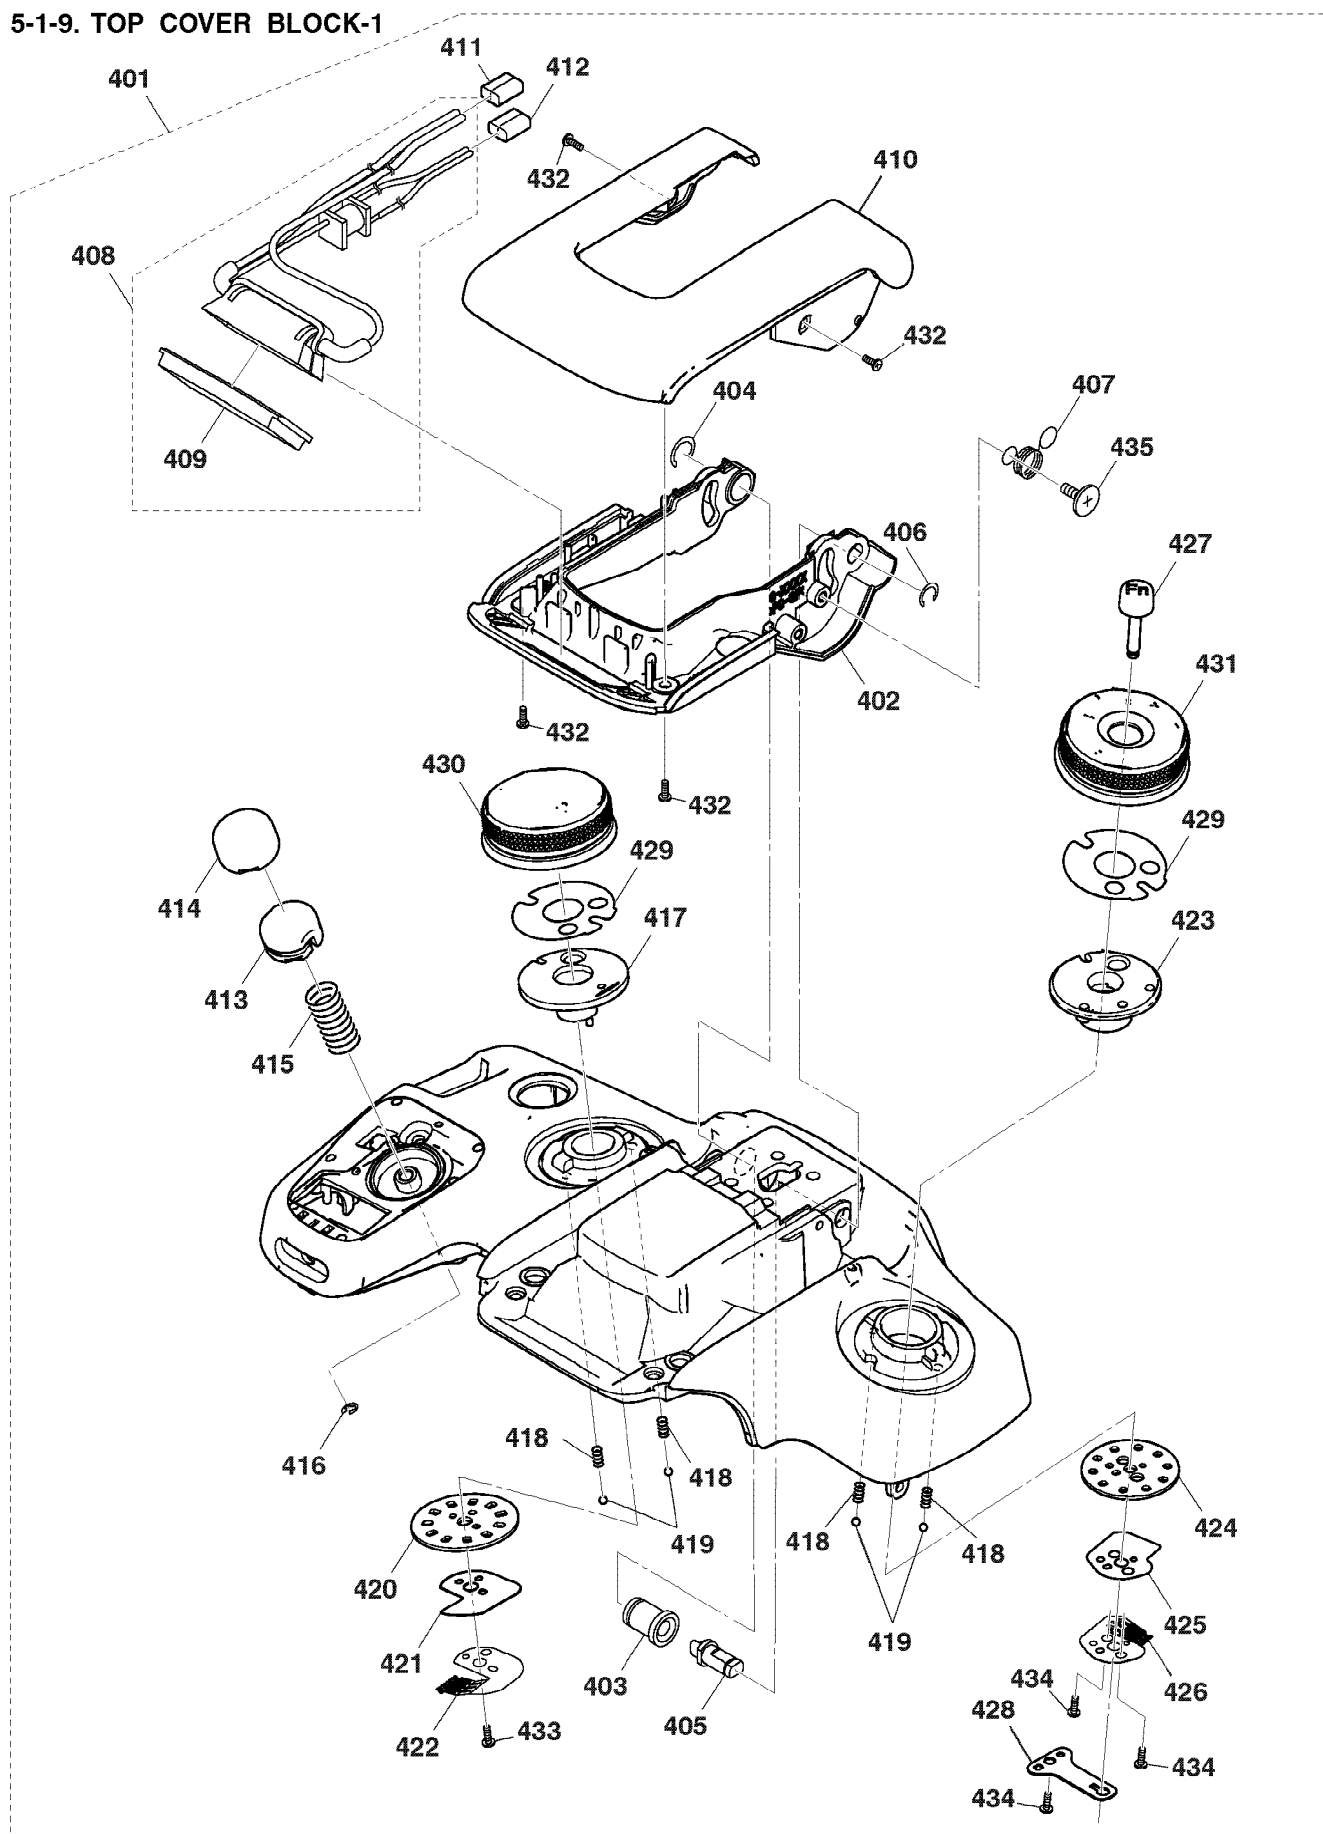

5. REPAIR PARTS LIST

DISASSEMBLY

- Refer to page 5-1 for mark Δ .


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
401	A-1196-102-A	COVER UNIT, UPPER (BLACK)	419	2-695-356-11	BALL, BEARING
401	A-1196-103-A	COVER UNIT, UPPER (SILVER)	420	2-688-118-01	PLATE, MODE DIAL CLICK
402	2-687-032-01	CASE, FLASH BOTTOM	421	2-688-284-01	INSULATING SHEET, MODE DIAL
403	2-693-418-01	SHAFT (L), ROTARY	422	2-689-189-01	DETECT CONTACT, MODE DIAL
404	2-689-004-01	PLATE, SHAFT (L) RETAINER			
405	2-689-297-01	SHAFT (R), ROTARY	423	2-688-123-01	DIAL, FN
406	2-689-005-01	PLATE, SHAFT (R) RETAINER	424	2-688-124-01	PLATE, FN DIAL CLICK
407	2-693-425-01	ACTION (SP), F SNAP	425	2-688-288-01	INSULATING SHEET, FN DIAL
Δ 408	A-1196-110-A	REFLECTIONS UNIT	426	2-688-285-01	DETECT CONTACT, FN DIAL
409	2-689-295-01	PANEL, LUMINOUS	427	2-688-125-11	BUTTON, FN (SILVER)
410	A-1196-111-A	CASE (UPPER) UNIT, FLASH (BLACK)	427	2-688-125-01	BUTTON, FN (BLACK)
410	A-1196-112-A	CASE (UPPER) UNIT (S), FLASH (SILVER)	428	2-688-287-01	BUTTON (SP), FN
411	1-820-649-11	XE CONNECTER HOLDER INSERT (RED)	429	2-688-286-01	TAPE, FN DIAL SCALE
412	1-820-649-21	TRG CONNECTER HOLDER INSERT (YELLOW)	430	2-688-134-01	DECORATION, MODE DIAL (BLACK)
413	2-688-120-01	BUTTON, RELEASE	430	2-688-134-11	DECORATION, MODE DIAL (SILVER)
414	2-688-380-01	CAP, RELEASE BUTTON (BLACK)	431	2-688-133-01	DECORATION, FN DIAL (BLACK)
414	2-688-380-11	CAP, RELEASE BUTTON (SILVER)	431	2-688-133-11	DECORATION, FN DIAL (SILVER)
415	2-693-424-01	BUTTON (SP), RELEASE	432	2-695-430-31	SCREW (T1.7), HEAD PAN TAPPING (Black)
416	2-695-355-01	RING, E	433	2-695-433-01	SCREW (T2), HEAD PAN TAPPING (Silver)
417	2-688-117-01	DIAL, MODE	434	2-695-429-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
418	2-693-416-01	CLICK (SP), FN DIAL	435	2-689-298-01	SCREW, SNAP SUPPORT (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-10. TOP COVER BLOCK-2

ns: not supplied

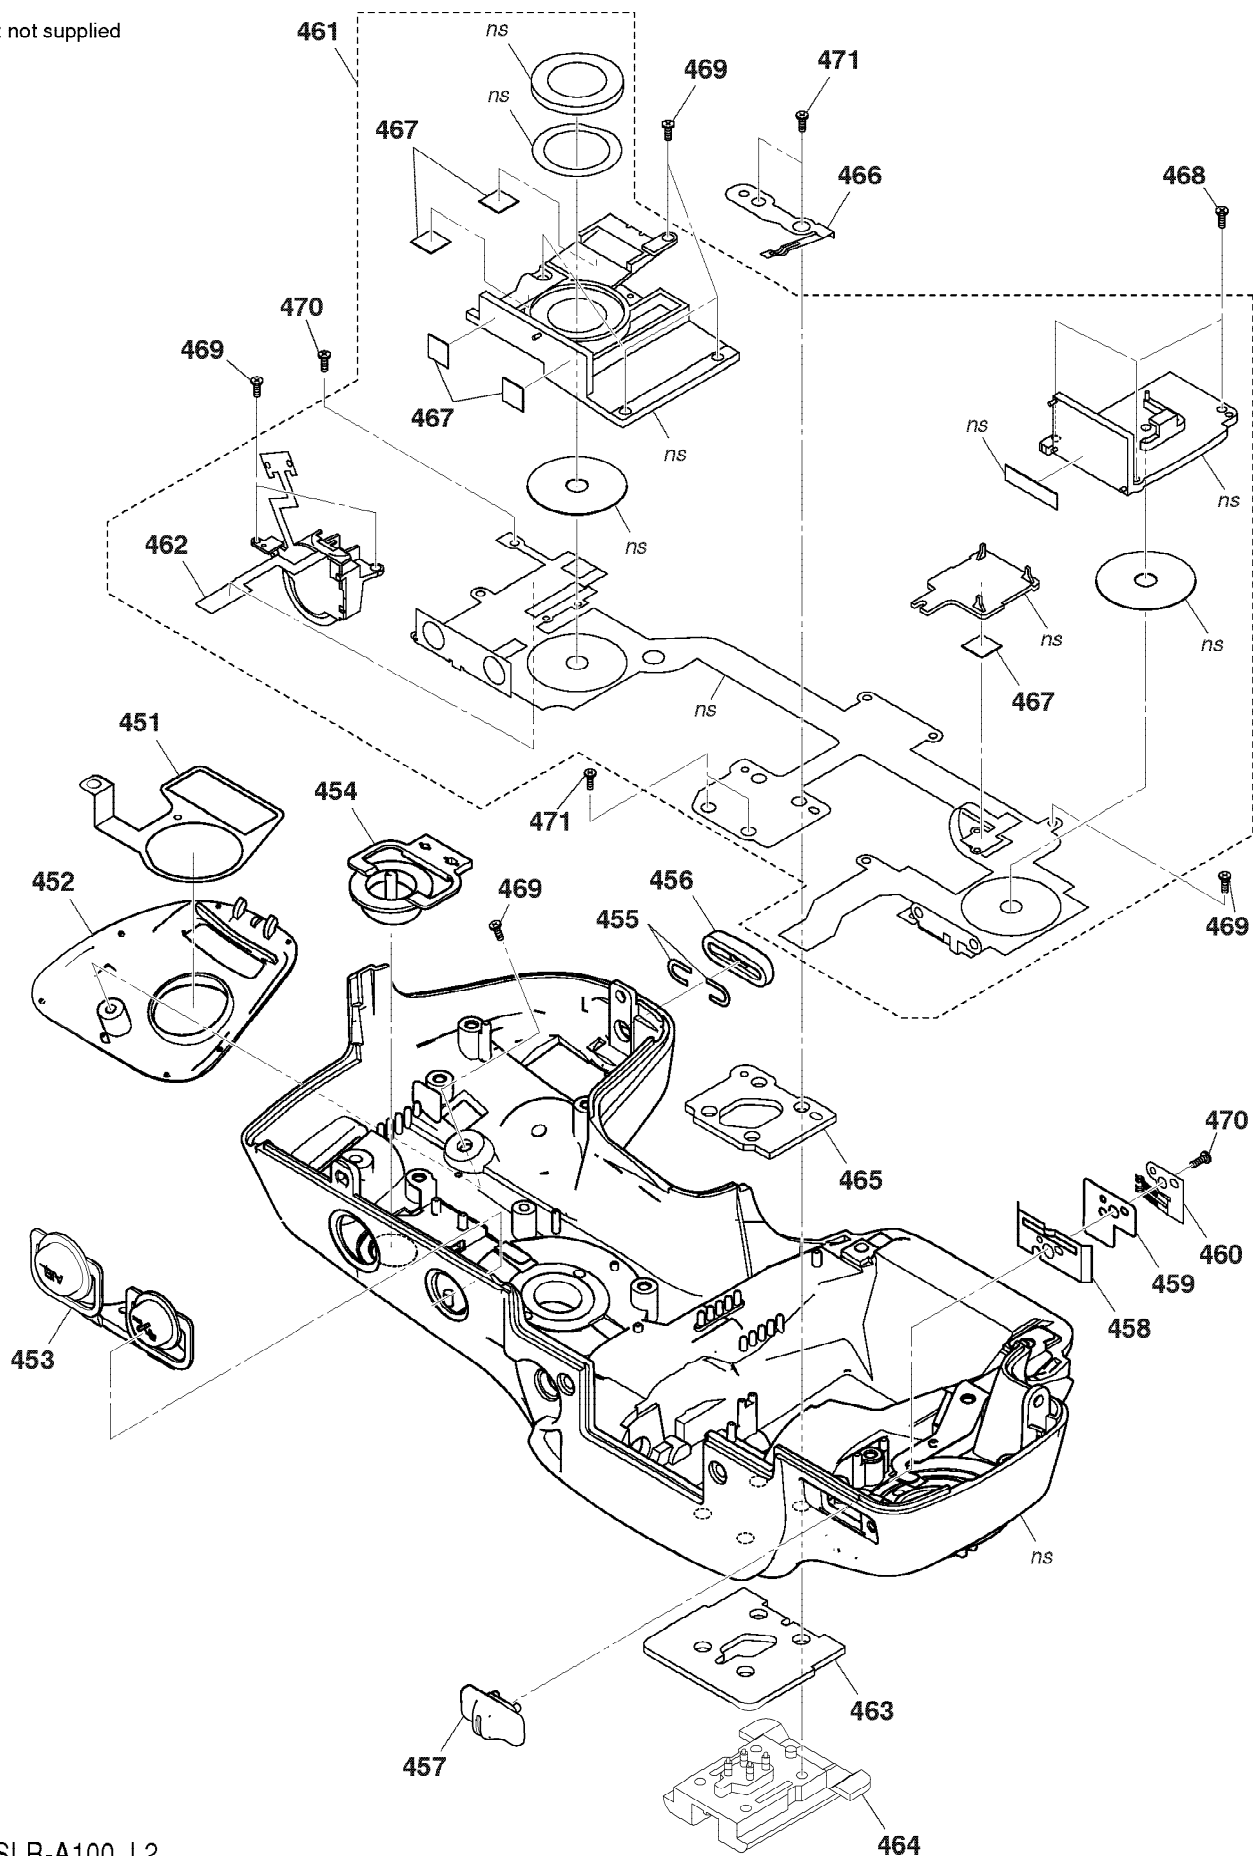

5. REPAIR PARTS LIST

DISASSEMBLY



<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
451	2-688-777-01	PLATE (E), TOP ELECTROSTATIC
452	2-688-676-01	COVER, RELEASE (BLACK)
452	2-688-676-11	COVER, RELEASE (SILVER)
453	2-688-119-01	BUTTON, AEL+/- (BLACK)
453	2-688-119-11	BUTTON, AEL+/- (SILVER)
454	2-688-122-01	BUTTON, DRIVE MODE (BLACK)
454	2-688-122-11	BUTTON, DRIVE MODE (SILVER)
455	2-688-289-01	TAPE, SELF WINDOW
456	2-688-129-01	WINDOW, SELF
457	2-688-121-01	KNOB, MAIN SW (BLACK)
457	2-688-121-11	KNOB, MAIN SW (SILVER)
458	2-689-190-01	PLATE, MAIN SW KNOB CLICK
459	2-688-381-01	INSULATING SHEET, MAIN SW

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
460	2-689-191-01	DETECT CONTACT, MAIN SW KNOB
461	A-1196-113-A	PLATE UNIT, UPPER COVER BASE
462	A-1196-114-A	HOLDER UNIT, FRONT DIAL
463	2-689-299-01	PLATE, SHOE PAVING
464	A-1198-056-A	SHOE UNIT, ACCESSORY
465	2-688-116-01	PLATE, SHOE MOUNTING
466	2-688-290-01	DETECT CONTACT, PU
467	2-689-360-01	TAPE, PREVIEW BUTTON FCP FIXED
468	2-695-429-11	SCREW (T1.7), HEAD PAN TAPPING (Silver)
469	2-695-429-21	SCREW (T1.7), HEAD PAN TAPPING (Silver)
470	2-695-429-01	SCREW (T1.7), HEAD PAN TAPPING (Silver)
471	2-695-574-11	SCREW (T2), +P1 PAN TAPPING (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

5-1-11. FRONT/REAR COVER BLOCK

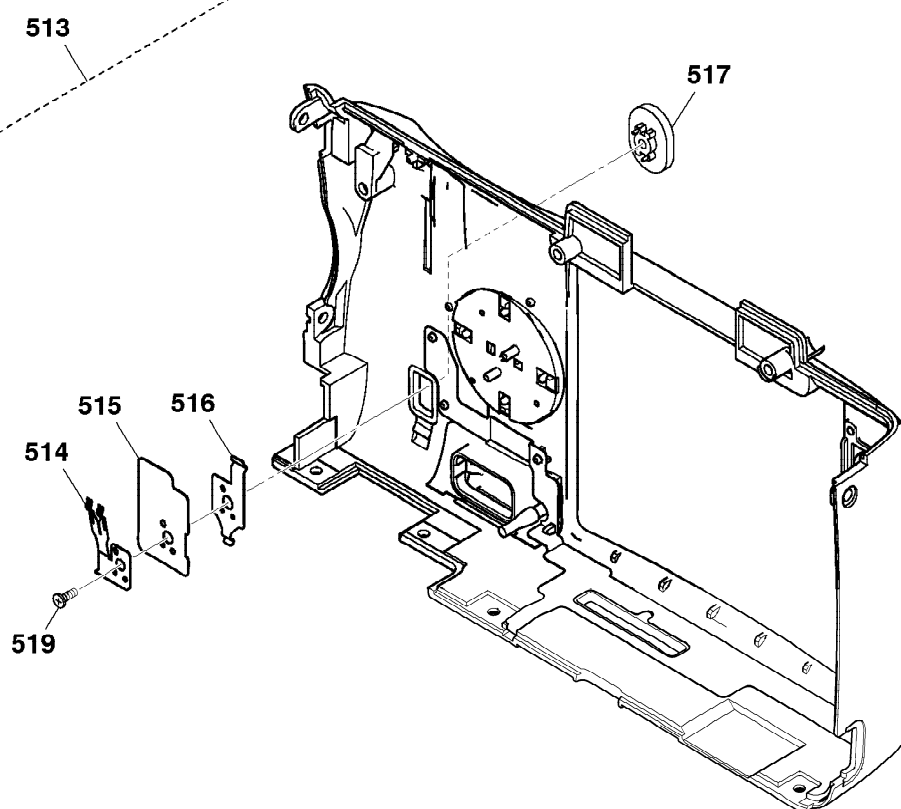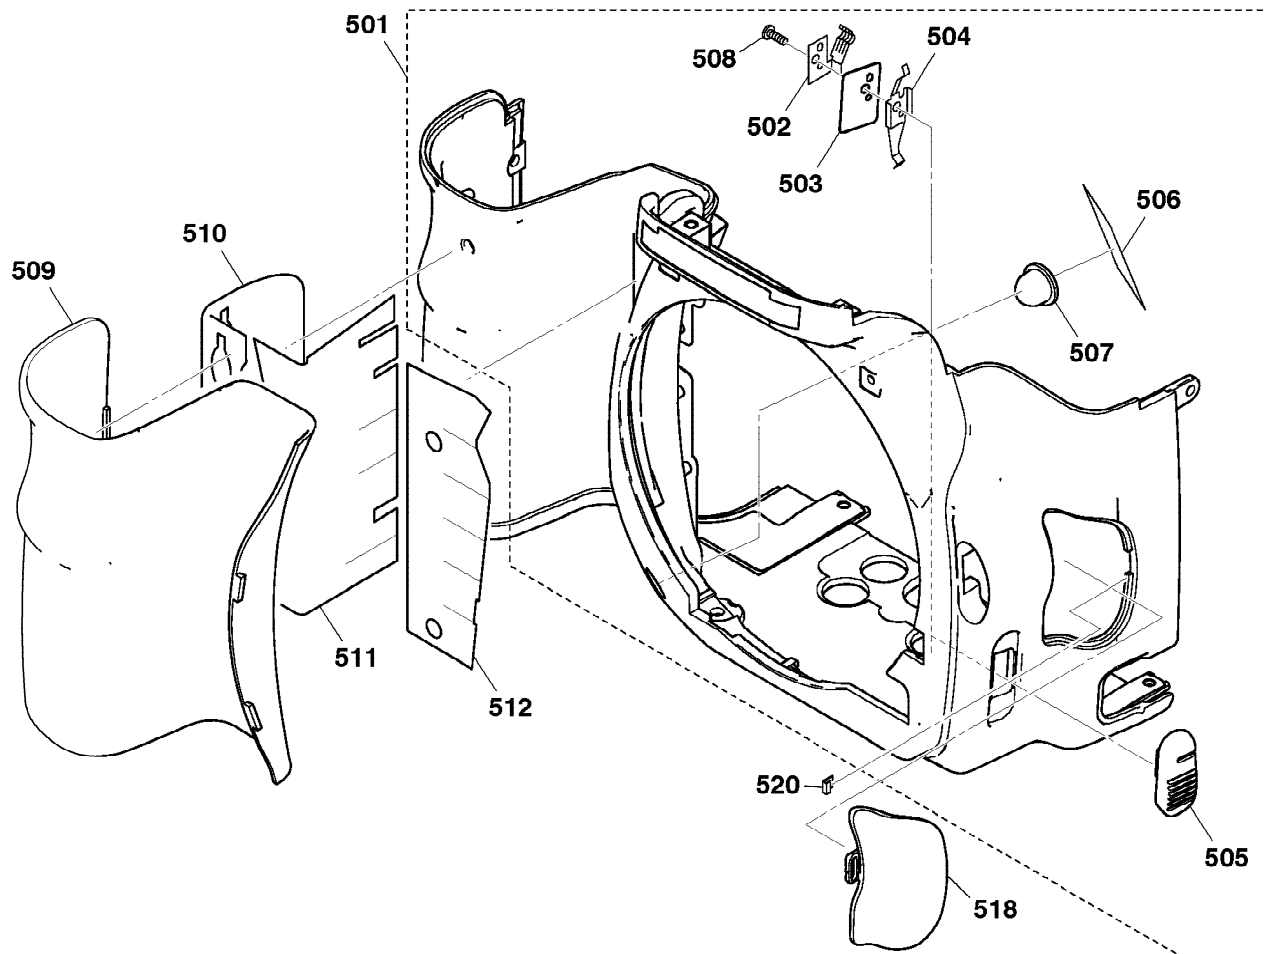

5. REPAIR PARTS LIST


DISASSEMBLY

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
501	A-1196-104-A	COVER UNIT, FRONT (BLACK)
501	A-1196-105-A	COVER UNIT, FRONT (SILVER)
502	2-689-193-01	DETECT CONTACT, AF/M CHANGE
503	2-688-295-01	INSULATING SHEET, AF/M
504	2-689-194-01	PLATE, AF/M KNOB CLICK
505	2-688-192-01	KNOB, AF/M SELECTION (BLACK)
505	2-688-192-11	KNOB, AF/M SELECTION (SILVER)
506	2-693-428-01	TAPE, PV BUTTON ATTACH
507	2-688-195-01	BUTTON, PREVIEW (BLACK)
507	2-688-195-11	BUTTON, PREVIEW (SILVER)
508	2-695-437-01	SCREW (T1.4), +P2 TAPPING (Silver)
509	2-688-187-01	RUBBER, GRIP (BLACK)
509	2-688-187-11	RUBBER, GRIP (SILVER)
510	2-688-196-01	TAPE (A), RUBBERGRIP DOUBLE SIDE

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>
511	2-693-334-01	TAPE (C), RUBBERGRIP DOUBLE SIDE
512	2-688-197-01	TAPE (B), RUBBERGRIP DOUBLE SIDE
513	A-1196-108-A	COVER UNIT, REAR (BLACK)
513	A-1196-109-A	COVER UNIT, REAR (SILVER)
514	2-688-294-01	DETECT CONTACT, ANTI SHAKE (SW)
515	2-688-130-01	INSULATING SHEET, AS (SW)
516	2-688-293-01	PLATE, ANTI SHAKE (SW) CLICK
517	2-688-382-01	KNOB, ANTI SHAKE (SW) (BLACK)
517	2-688-382-11	KNOB, ANTI SHAKE (SW) (SILVER)
518	2-688-189-01	COVER, LL SOKKAN ADJUSTMENT (BLACK)
518	2-688-189-11	COVER, LL SOKKAN ADJUSTMENT (SILVER)
519	2-695-429-01	SCREW (T1.7), HEAD PAN TAPPING (Silver)
520	2-889-023-01	TAPE, LL COVER

Electrical parts list of the AM-001 board is not shown.
Page 5-24 to 5-28 are not shown.

 Checking supplied accessories.



Battery Charger
(BC-VM10)
▲ 1-479-742-21 (US, CND)
▲ 1-479-742-31 (Except US, CND)



 
Power Cord
▲ 1-555-074-71 (AUS)
▲ 1-782-476-41 (CH)
▲ 1-783-374-22 (HK)
▲ 1-790-107-51 (US, CND)
▲ 1-792-549-31 (JE, J)
▲ 1-823-947-51 (KR)
▲ 1-824-910-31 (AEP, E)
▲ 1-827-269-22 (UK)
▲ 1-830-518-31 (TW)




Rechargeable Battery Pack
(NP-FM55H)
(not supplied)




Memory Stick Duo Adaptor for
Compact Flash Slot (AD-MSCF1)
1-797-601-11



USB Cable
1-833-062-11

 

Video Cable
1-833-063-11

 


Shoulder Strap with
Eye Piece Cover and
Remote Commander Clip
2-688-782-01



Body Cap
(ALC-B55)
(Attached on the camera)
2-688-728-01



 Accessory Shoe Cap
(Attached on the camera)
2-688-767-01 (BLACK)
2-688-767-11 (SILVER)



CD-ROM
(α100 Application Software)
2-683-121-01



Conversion (2P) Adaptor
▲ 1-569-007-12 (JE)




Conversion (2P) Adaptor
▲ 1-569-008-12 (E)

Other accessories

- 2-681-186-01 INSTRUCTION (Read This First) (JAPANESE) (J)
2-681-186-11 INSTRUCTION (Read This First) (ENGLISH)
(EXCEPT CH, KR, J)
2-681-186-21 INSTRUCTION (Read This First) (FRENCH, ITALIAN)
(CND, AEP)
2-681-186-31 INSTRUCTION (Read This First)
(SPANISH, PORTUGUESE) (AEP, E, JE)
2-681-186-41 INSTRUCTION (Read This First) (GERMAN, DUTCH)
(AEP)
2-681-186-51 INSTRUCTION (Read This First)
(TRADITIONAL CHINESE, SIMPLIFIED CHINESE)
(E, HK, CH, TW, JE)
2-681-186-61 INSTRUCTION (Read This First) (RUSSIAN) (AEP)
2-681-186-71 INSTRUCTION (Read This First) (ARABIC, PERSIAN) (E)
2-681-186-81 INSTRUCTION (Read This First) (KOREAN) (KR, JE)
2-689-105-11 INSTRUCTION (Read This First) (HUNGARIAN, SLOVAK,
SWEDISH, FINNISH) (AEP)
2-689-105-21 INSTRUCTION (Read This First) (POLISH, CZECH,
NORWEGIAN, DANISH) (AEP)
2-681-187-01 INSTRUCTION (User's Guide/Troubleshooting)
(JAPANESE) (J)
2-681-187-11 INSTRUCTION (User's Guide/Troubleshooting)
(ENGLISH) (EXCEPT CH, KR, J)
2-681-187-21 INSTRUCTION (User's Guide/Troubleshooting)
(FRENCH, ITALIAN) (CND, AEP)
2-681-187-31 INSTRUCTION (User's Guide/Troubleshooting)
(SPANISH, PORTUGUESE) (AEP, E, JE)
2-681-187-41 INSTRUCTION (User's Guide/Troubleshooting)
(GERMAN, DUTCH) (AEP)
2-681-187-51 INSTRUCTION (User's Guide/Troubleshooting)
(TRADITIONAL CHINESE, SIMPLIFIED CHINESE)
(E, HK, CH, TW, JE)
2-681-187-61 INSTRUCTION (User's Guide/Troubleshooting)
(RUSSIAN) (AEP)
2-681-187-71 INSTRUCTION (User's Guide/Troubleshooting)
(ARABIC, PERSIAN) (E)
2-681-187-81 INSTRUCTION (User's Guide/Troubleshooting)
(KOREAN)(KR, JE)

• Refer to the cover for mark ▲.

[Description of main button functions on toolbar of the Adobe Acrobat Reader Ver5.0 (for Windows)]

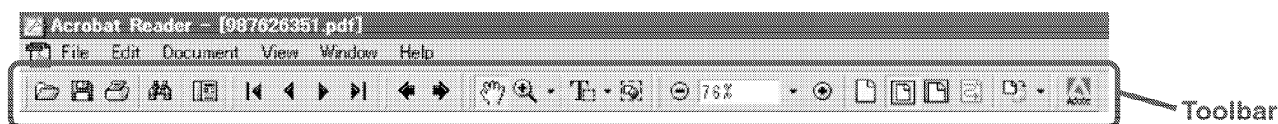

Printing a text

1. Click the Print button .
2. Specify a printer, print range, number of copies, and other options, and then click [OK].

Application of printing:


To set a range to be printed within a page, select the graphic selection tool  and drag on the page to enclose a range to be printed, and then click the Print button.

Finding a text

1. Click the Find button .
2. Enter a character string to be found into a text box, and click the [Find]. (Specify the find options as necessary)

Application to the Service Manual:

To execute "find" from current page toward the previous pages, select the check box "Find Backwards" and then click the "Find".

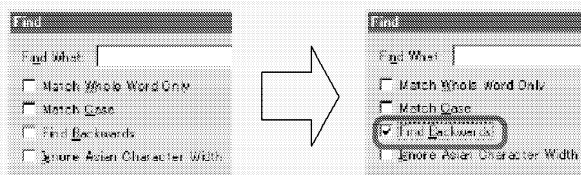

3. Open the find dialog box again, and click the [Find Again] and you can find the matched character strings displayed next. (Character strings entered previously are displayed as they are in the text box.)

Application to the Service Manual:

The parts on the drawing pages (block diagrams, circuit diagrams, printed circuit boards) and parts list pages in a text can be found using this find function. For example, find a Ref. No. of IC on the block diagram, and click the [Find Again] continuously, so that you can move to the Ref. No. of IC on the circuit diagram or printed circuit board diagram successively.

Note: The find function may not be applied to the Service Manual depending on the date of issue.

Switching a page

- To move to the first page, click the .
- To move to the last page, click the .
- To move to the previous page, click the .
- To move to the next page, click the .

Reversing the screens displayed once

- To reverse the previous screens (operation) one by one, click the .
- To advance the reversed screens (operation) one by one, click the .

Application to the Service Manual:

This function allows you to go and back between circuit diagram and printed circuit board diagram, and accordingly it will be convenient for the voltage check.


Moving with link

1. Select either palm tool , zoom tool , text selection tool , or graphic selection tool .
2. Place the pointer in the position in a text where the link exists (such as a button on cover and the table of contents page, or blue characters on the removal flowchart page or drawing page), and the pointer will change to the forefinger form .
3. Then, click the link. (You will go to the link destination.)

Moving with bookmark:

Click an item (text) on the bookmark pallet, and you can move to the link destination. Also, clicking  can display the hidden items.

(To go back to original state, click )

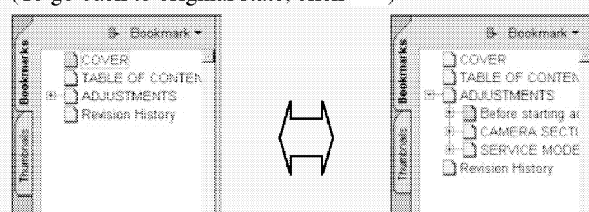

Zooming or rotating the screen display "Zoom in/out"

- Click the triangle button in the zoom control box to select the display magnification. Or, you may click  or  for zooming in or out.



"Rotate"

- Click rotate tool , and the page then rotates 90 degrees each.

Application to the Service Manual:

The printed circuit board diagram you see now can be changed to the same direction as the set.