


5. REPAIR PARTS LIST

5-1-6. MECHANISM DECK SECTION

ns: not supplied

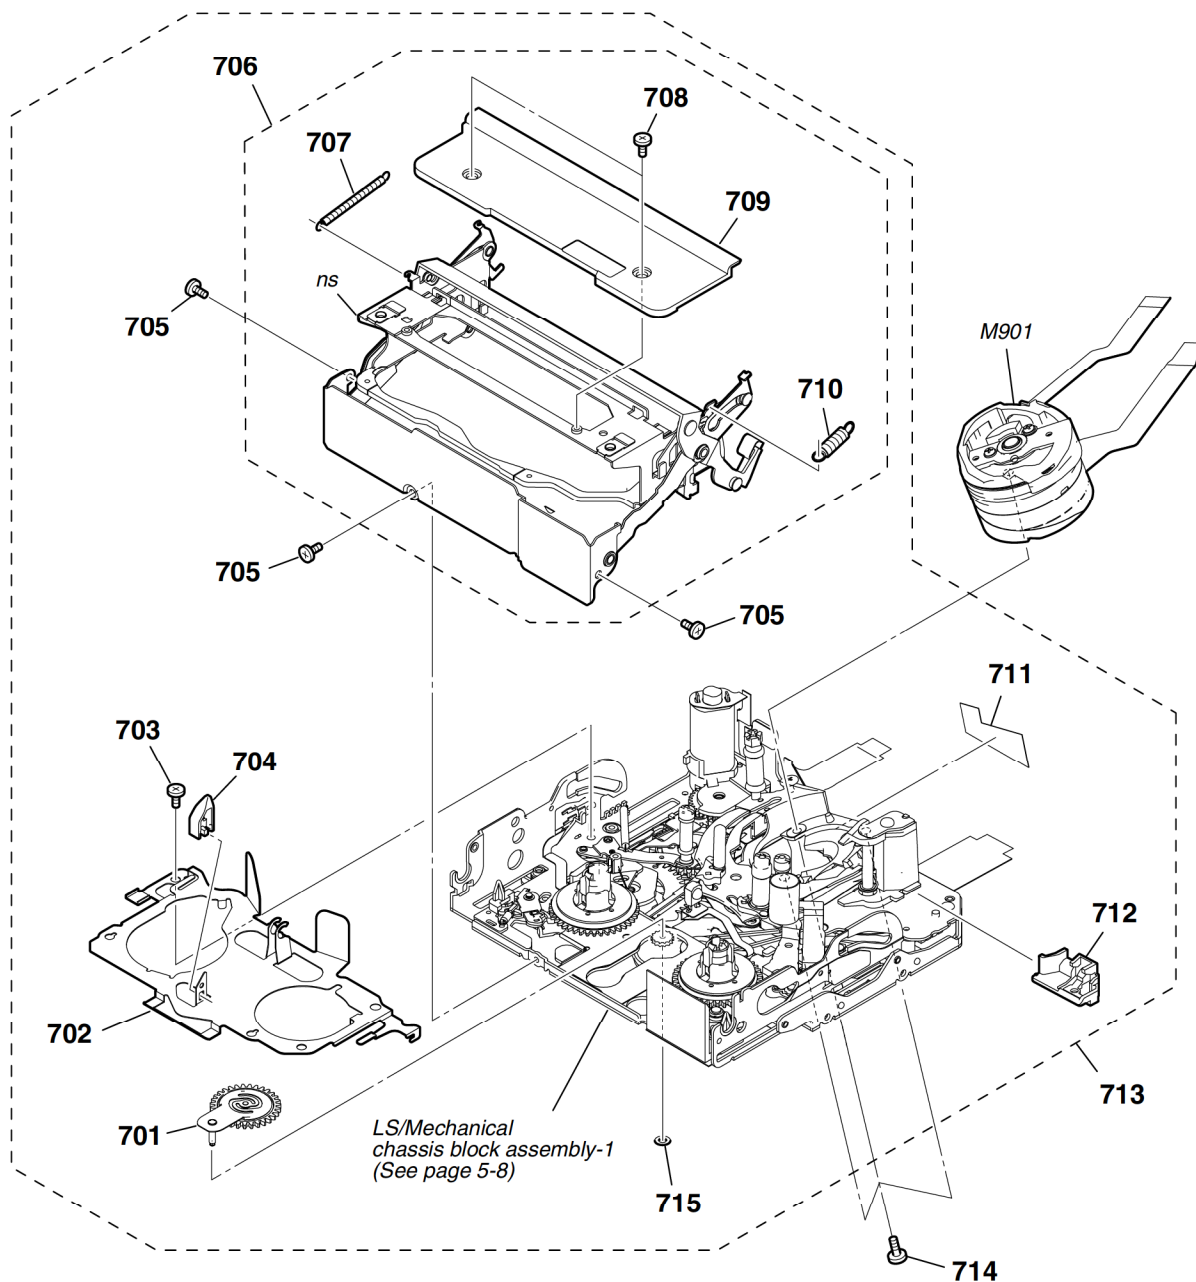


Ref. No.	Part No.	Description
701	X-2024-478-1	PENDULUM ASSY
702	2-342-917-02	BASE, LED
703	7-627-850-77	SCREW, PRECISION +P 1.4X1.8
704	3-079-366-11	RELEASE, REEL LOCK
705	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD
706	X-2024-450-3	CASSETTE COMPARTMENT ASSY
707	2-342-926-01	SPRING (ARM S), TENSION COIL
708	2-656-669-01	SCREW (M1.4)

Ref. No.	Part No.	Description
709	2-342-933-02	PLATE, TOP
710	2-342-927-01	SPRING (ARM T), TENSION COIL
711	2-541-585-01	SHEET, FLEXIBLE ADHESIVE
712	2-342-918-01	TG6 CATCHER
713	A-1156-601-A	MD (N110) SUB ASSY (S) A
714	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
715	3-315-414-31	WASHER
M901	A-1154-545-A	DRUM (DEH-33E-R) (SERVICE)

5. REPAIR PARTS LIST

5-1-7. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-1

ns: not supplied

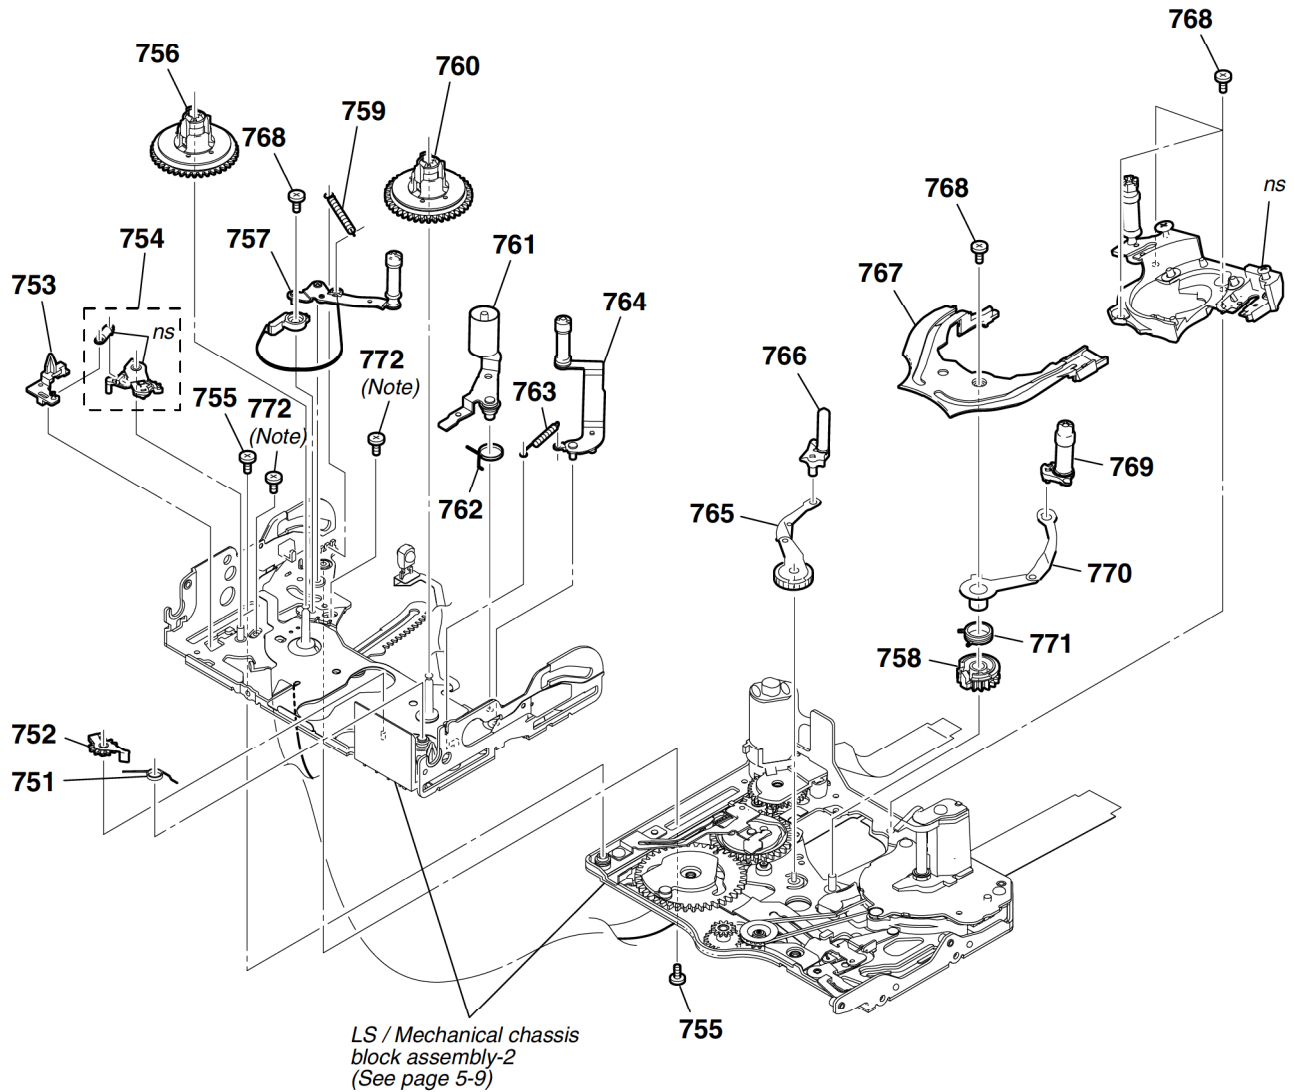

Note: These two screws are the fixing screws of the LS cam plate.
These two fixing screws are used for adjusting the LS cam plate position.
(Refer to 4-2. LS cam adjustment of DV mechanical adjustment manual IX)

Ref. No.	Part No.	Description
751	2-342-759-01	SPRING, RVS BRAKE
752	A-1083-005-A	BRAKE BLOCK ASSY, RVS
753	2-342-731-01	POSITIONING (S)
754	A-1083-006-A	BRAKE BLOCK ASSY, S
755	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD
756	X-2067-290-1	TABLE ASSY, S REEL
757	A-1132-279-A	REGULATOR BLOCK ASSY, TENSION
758	2-342-705-01	GEAR (T), GL
759	2-342-902-01	SPRING, TENSION REGULATOR
760	X-2067-291-1	TABLE ASSY, T REEL
761	X-2067-295-4	ARM ASSY, PINCH


Ref. No.	Part No.	Description
762	2-342-906-01	SPRING (PINCH RETURN), TORSION
763	2-342-626-01	SPRING (TG6 RETURN), EXTENSION
764	A-1083-002-A	TG6 BLOCK ASSY
765	X-2024-468-1	ARM (S) ASSY, GL
766	X-2024-465-1	COASTER (S) ASSY
767	2-342-612-01	RAIL
768	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
769	X-2024-466-1	COASTER (T) ASSY
770	X-2024-469-1	ARM (T) ASSY, GL
771	2-342-716-01	SPRING (T), GL TORSION COIL
772	3-703-816-08	SCREW (M1.4X1.4), SPECIAL HEAD

(for adjustment)

5. REPAIR PARTS LIST

5-1-8. LS/MECHANICAL CHASSIS BLOCK ASSEMBLY-2

ns: not supplied

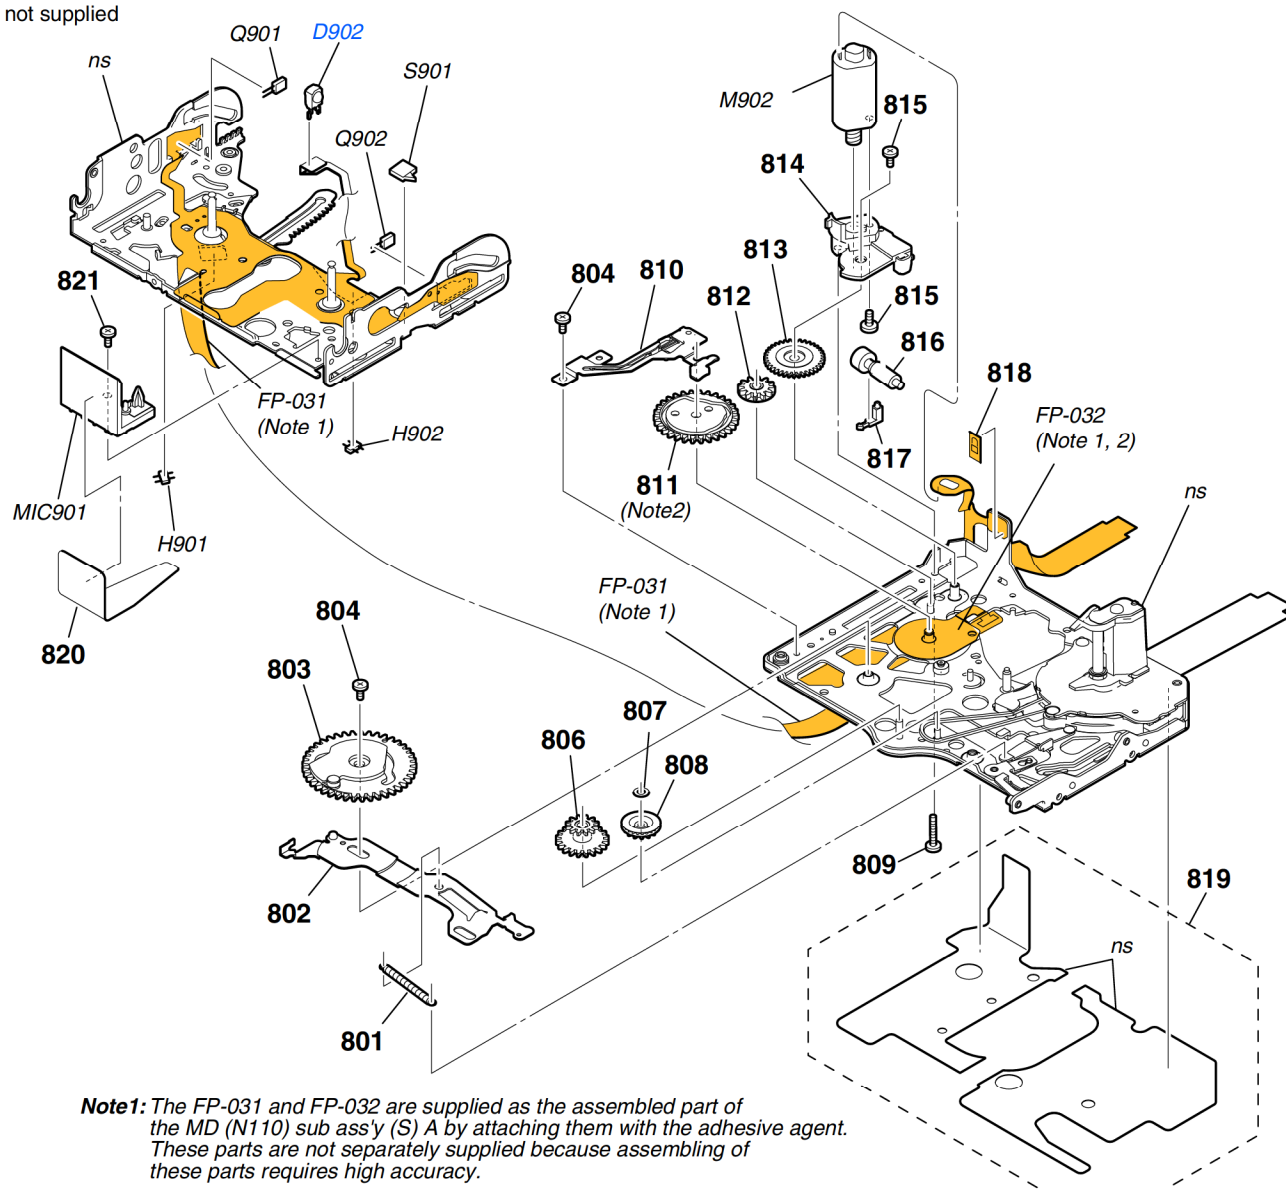

Note1: The FP-031 and FP-032 are supplied as the assembled part of the MD (N110) sub ass'y (S) A by attaching them with the adhesive agent. These parts are not separately supplied because assembling of these parts requires high accuracy.

Note2: The mode switch (S903) function works when the contactor of the FP-032 contacts with the bottom surface of wiper of the mode gear ass'y.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
801	2-342-624-01	SPRING (PINCH LIMITTER), EXTENSION	817	2-637-947-01	BASE, MOTOR HOLDER
802	X-2024-463-2	SLIDER ASSY, MODE	818	1-677-049-11	FP-228 FLEXIBLE BOARD
803	X-2024-462-1	GEAR ASSY, CAM	819	2-342-686-01	COVER, CAPSTAN
804	3-075-097-11	SCREW (M1.4X1.4), SPECIAL HEAD	820	2-541-984-01	MIC COVER
806	2-342-621-01	GEAR, RELAY	821	3-703-816-13	SCREW (M1.4X2.0), SPECIAL HEAD
807	3-315-414-31	WASHER	D902	6-500-652-01	DIODE GL453SE0000F (TAPE LED)
808	2-342-620-01	GEAR, CONVERSION	H901	8-719-067-74	ELEMENT HOLE HW-105A-CDE-T (S REEL)
809	3-084-377-01	HEAD (SCREW M1.2)	H902	8-719-067-74	ELEMENT HOLE HW-105A-CDE-T (T REEL)
810	X-2024-460-1	BASE ASSY, CAM	M902	X-2024-464-1	MOTOR ASSY
811	X-2024-461-1	GEAR ASSY, MODE (Note 2)	MIC901	1-818-576-11	PIN, CONNECTOR (WITH DETECTION SWITCH)
812	2-342-615-01	GEAR, NO.2	Q901	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE END)
813	2-342-691-01	GEAR, NO.1	Q902	6-550-672-01	TRANSISTOR PT4850FJE00F (TAPE TOP)
814	2-637-945-01	HOLDER, MOTOR	S901	1-786-448-22	SWITCH, PUSH (1 KEY) (CC DOWN)
815	3-895-822-71	SCREW (M1.2X2), SPECIAL, 0			
816	2-342-689-01	SHAFT (2J), WORM			