


The changed portions from
Ver. 1.0 are shown in blue.

2-1. EXPLODED VIEWS

2-1-1. OVERALL SECTION-1

(XR550/XR550E/XR550V/XR550VE)

Refer to page 2-4 about CX550/CX550E/CX550V/CX550VE
ns: not supplied

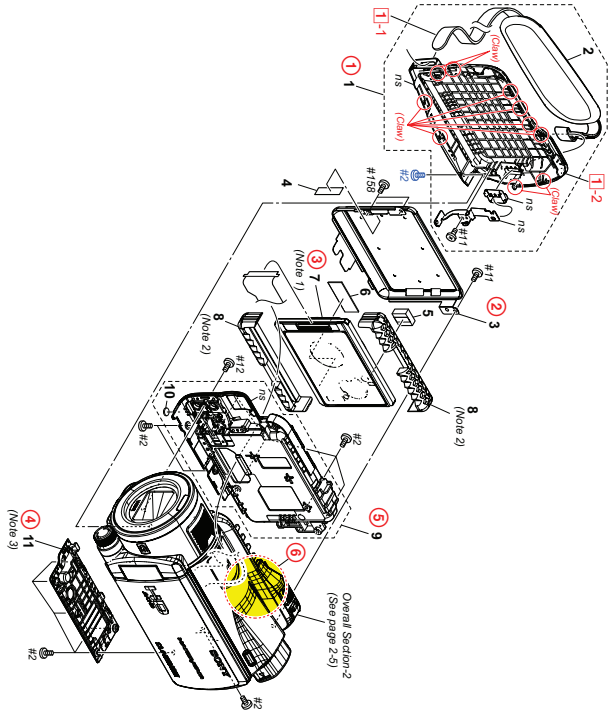


Ref. No.	Part No.	Description
1	X-254-05-41	CABINET G (GR) ASSY
2	2-664-028-41	BEEL GRIP (GR)
3	2-664-028-01	BEEL GRIP (GR)
4	4-173-880-01	HD DAMPER SHEET
5	4-177-986-01	GASKET (10X10X4)
6	4-181-717-01	SHEET HD GUARD

Ref. No.	Part No.	Description
10	2-558-376-01	FOOT (38), RUBBER
11	(Note 3)	CABINET (BM)
#2	2-635-550-31	SCREEN (MT 7)
#11	3-073-880-11	SCREEN TAPPING
#12	3-068-204-21	SCREEN (MT 7) NEW RUST-PROOF
#158	2-668-401-51	SCREEN (MT 7) NEW RUST-PROOF

DISASSEMBLY

1. Remove to numerical order (①) to (⑥) in the left figure.


① #2 X 2 → Remove the Grip Belt (①-1) → Slide the Cabinet (G) Assy (①-2)

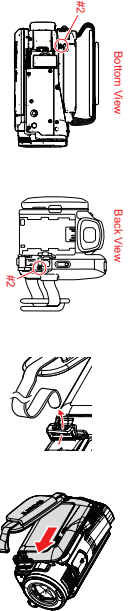

② #1 X 1 → #158 X 2



 ③ #12 X 1 → #2 X 6



DISCHARGING OF THE CHARGING CAPACITOR

ストロボ用充電コンデンサの放電

Screw


Note

Note 1: Do not factory check HDD in which Map Data is installed (XR550V/XR550VE). The map data is erased when the factory check is done.

Note 1: 地図データ入りHDD (XR550V/XR550VE) にはフラットリーチエッジを行わずに、必ず、フラットリーチエッジを行うと、地図データが消去されてしまいます。


Note 2: In case of attaching, turn concave portion to the main body side.

 Note 2: 取付時は、窪みのある面を本体側に向けて取り付けてください。



Note 3: Refer to page 1-4 'Precaution on rebuilding the Cabinet (BM)' when changing the cabinet.


2-1-2. OVERALL SECTION-1
(CX550/CX550E/CX550V/CX550VE)
Refer to page 2-3 about XRS50/XRS50E/XRS50V/XRS50VE
ns: not supplied

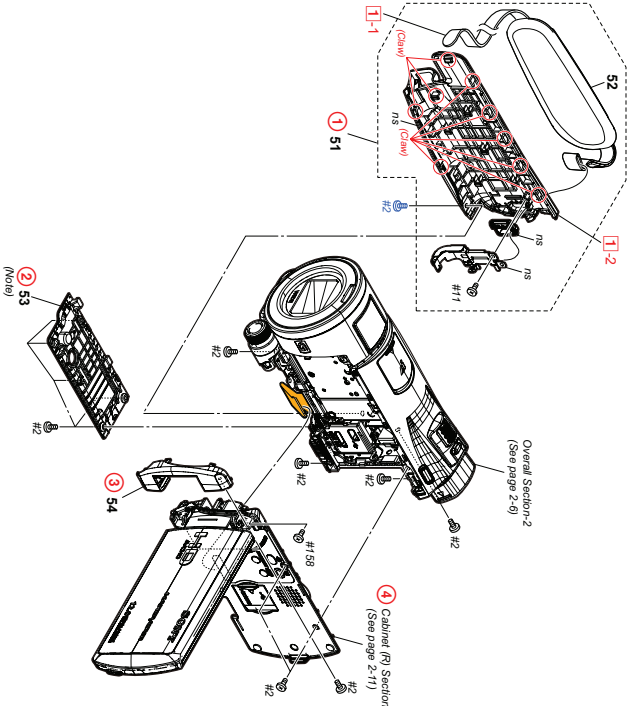


DISASSEMBLY

1. Remove to numerical order (1) to (4) in the left figure.

 
① #2 X 2 → Remove the Grip Belt (1-1) → Slide the Cabinet (G) Assy (1-2)




② #2 X 5

 

③ #2 X 2

 

④ #2 X 5 → #158 X 1

 

Screw

#2: M1.7 X 4.0 (Black) 2-635-562-31	#11: M1.7 X 4.0 (Trimop) (Silver) 3-078-895-11	#158: M1.7 X 5.0 (Red) 2-660-401-51
4.0	4.0	5.0

Note


Note: Refer to page 1-4 "Precaution on replacing the Cabinet (BM)" when changing the Cabinet (BM).

Note: キャビネット (BM) 相互の交換時は、1-9ページのキャビネット (BM) 交換時の注意を参照してください。

2-1-3. OVERALL SECTION-2

(XR550)/XR550E/XR550V/XR550VE


Refer to page 2-6 about CX550/CX550E/CX550V/CX550VE

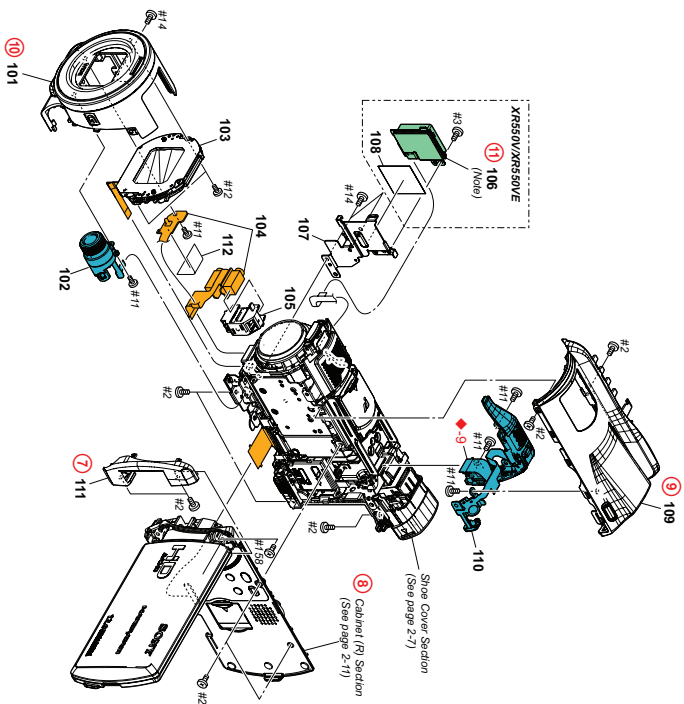


DISASSEMBLY

1. Remove to numerical order (②) to (⑪) in the left figure.
2. The meaning of the sign in left figure is as follows. Be careful when it removes.
◆ -X: Flexible Board, Flat Cable, Harness

 
② #2 X 2




③ #2 X 5 → #1S8 X 1

 


Bottom View

 


Right View

 


④ #11 X 1 → #2 X 2

 


Right View

 

⑩ #14 X 1

 

⑪ #3 X 1 → #14 X 2



 


Screw

Note

Note: Be sure to read "1-7 GPS RECEIVING SECTION" before 1-7 when you exchange the GPS Assy (GP-028).

   
Note: GPS Assy (GP-028) 交換時は、1-10ページの「1-7 GPS受信確認」を必ずお読みください。



2-14. OVERALL SECTION-2


(CX590/CX590E/CX590V/CX590VE)

Refer to page 2-3 about XR590/XR590E/XR590V/XR590VE
ms not supplied

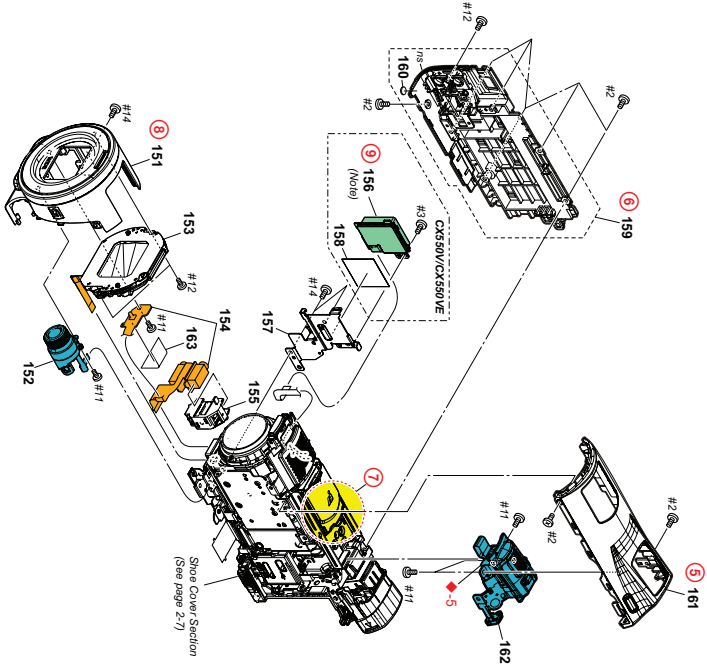

DISASSEMBLY

1. Remove to numerical order (①) to (⑦) in the left figure.
2. The meaning of the sign in left figure is as follows. Be careful when it removes.
◆-X: Flexible Board, Flat Cable, Harness

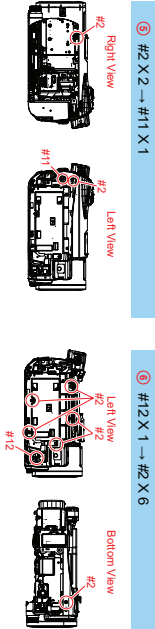


DISCHARGING OF THE CHARGING CAPACITOR

ストロボ用充電コンデンサの放電



Screw

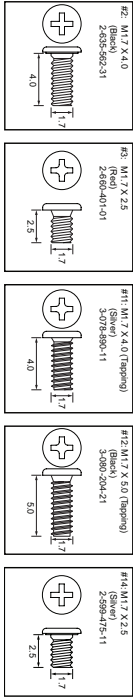

Note

Note: Be sure to read "1-7. GPS RECEIVING CHECK" on page 1-5 when you exchange the GPS key (GP-020).

Note: GPS key (GP-020) 交換時は、1-10ページ「1-7. GPS受信確認」を必ずお読みください。


Ref.No.	Part.No.	Description
151	X-2947-056-1	CABINET F (348) ASSY
152	1-487-590-11	SWITCH BLOCK CONTROL (RS34800)
153	A-7182-054	PRINTER LENS
154	A-7182-054	PRINTER LENS COMPLETE
155	4-173-025-01	CASE (FRONT), JACK FIXED

Ref.No.	Part.No.	Description
161	X-2947-049-1	CABINET TOP (346) ASSY (CX590V/CX590VE)
162	X-2947-077-1	CABINET TOP (346) ASSY IN (CX590/CX590E)
163	2-595-655-01	TYPE (AS 1/2)
164	2-595-655-31	SCREW (M1.7)

The changed portions from
Ver. 1.0 are shown in blue.

2-1-5. SHOE COVER SECTION


ns: not supplied

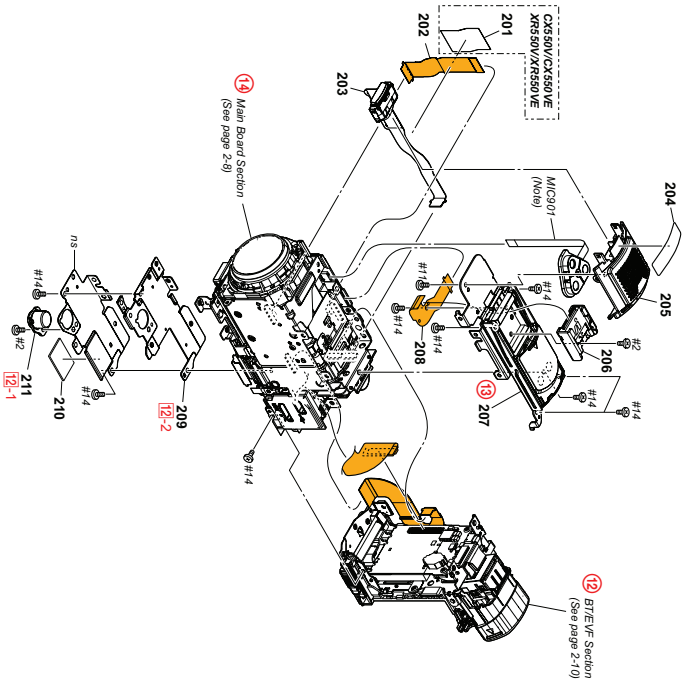


DISASSEMBLY

1. Remove to numerical order (12) to (14) in the left figure.


12 #2 X 1 → Tripod Screw (12-1) → #14 X 2 → Bottom Frame (12-2) → #14 X 3

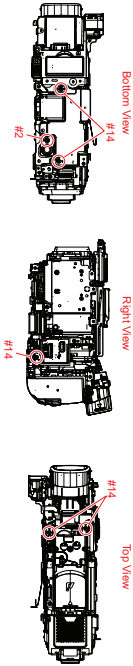

13 #14 X 2

 

Screw

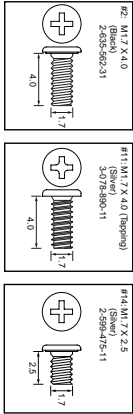


Note

Note: Refer to "Assembly-2: How to Fold the Microphone Flexible Board" when installing.

Note: 組立時は"Assembly-2: How to Fold the Microphone Flexible Board"を参照してください。

2-16. MAIN BOARD SECTION


ns: not supplied

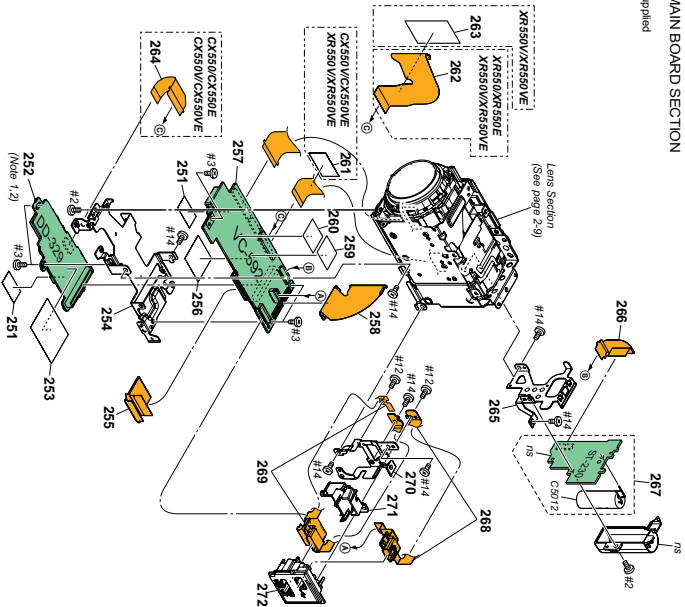

Ref.No.	Part.No.	Description
251	4-177-966-01	INSULATING SHEET (VC)
252	A-1785-177-A	DD-329 BOARD, COMPLETE
252	A-1785-179-A	DD-329 BOARD, COMPLETE (NOM 1/2)
252	A-1785-398-A	DD-329 BOARD, COMPLETE (SERVICE)
252	A-1785-398-A	DD-329 BOARD, COMPLETE (SERVICE)
252	A-1785-398-A	DD-329 BOARD, COMPLETE (SERVICE)
253	4-177-967-01	INSULATING SHEET (DD)
254	4-177-968-01	VC FRAME
255	4-180-391-11	FP-126 FLEXIBLE BOARD
257	A-1785-268-A	VC582 BOARD, COMPLETE (SERVICE)
258	A-1785-108-A	FP-1188 FLEXIBLE BOARD, COMPLETE
259	4-177-964-01	SHEET (B), SHIELD

Ref.No.	Part.No.	Description
253	4-177-963-01	SHEET (A), SHIELD
254	4-180-395-11	FP-1203 FLEXIBLE BOARD
255	4-177-963-01	SHEET (A), SHIELD
256	4-180-391-11	FP-1209 BOARD, COMPLETE
257	A-1785-129-A	ST-220 BOARD, COMPLETE
258	A-1785-110-A	FP-1200 FLEXIBLE BOARD, COMPLETE
259	A-1785-108-A	FP-1185 FLEXIBLE BOARD, COMPLETE
270	4-177-952-01	PLATE (H), FIXED
271	4-177-955-01	HOLDER (H), TERMINAL
272	4-177-954-01	HOLDER (H), TERMINAL
272	Δ*CS012	CAP, ELECT 33μF 315V

Screw

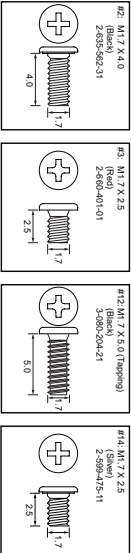

Note

Note 1: When replacing the DD-329 board, start the Adjust Manual ADJUSTMENTS and refer to the INTERNAL MEMORY ADJUSTMENTS.


Note 2: Do not forget to check DD-329 board in which Map Data is installed (CX550V/CX550VE). The map data is erased when the factory check is done.

Note 1: DD-329基板を交換の際は、Adjust Stationから内部調整を行う必要があります。内部調整は「INTERNAL MEMORY ADJUSTMENTS」を参照してください。

Note 2: 地図データをUDD-329基板 (CX550V/CX550VE) にはフラットリーディングチップを付与する必要があります。フラットリーディングチップを付与すると、地図データが消去されてしまいます。

2-1-7. LENS SECTION

ns: not supplied

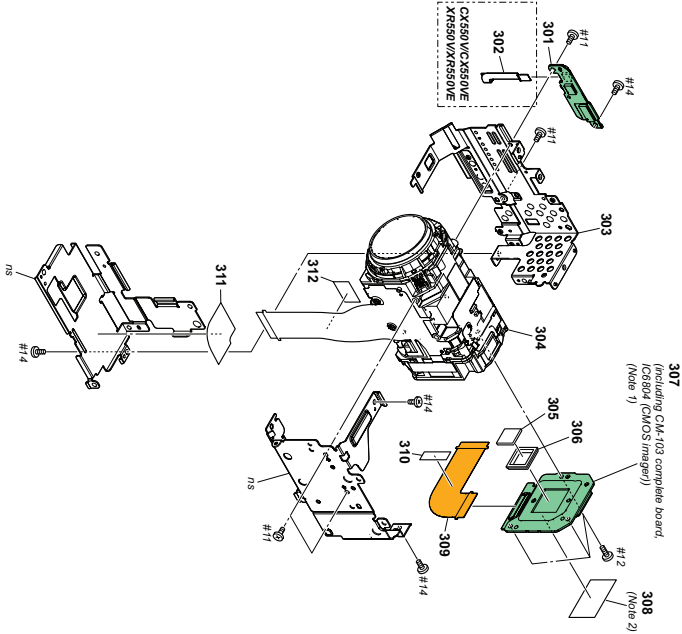


Ref.No.	Part No.	Description
301	A-7765-13-04	MA-464 BOARD, COMPLETE (CX650V/CX650VE/XRS50V/XRS50VE)
301	A-7765-13-1-A	MA-464 BOARD, COMPLETE (CX650V/CX650VE/XRS50V/XRS50VE)
302	1-680-386-11	FP-1204 FLEXIBLE BOARD (CX650V/CX650VE/XRS50V/XRS50VE)
* 303	4-178-003-01	FRAME (L), LENS
304	A-7765-30-2-A	LS711930A (SERV) (GE)

Ref.No.	Part No.	Description
* 310	4-178-006-01	SHEET (SX13)
* 311	4-178-005-01	SHEET (C), SHIELD
* 312	4-177-966-01	INSULATING SHEET (V)
#11	3-078-890-11	SCREW, TAPPING
#12	3-085-204-21	SCREW, TAPPING, PZ
#14	2-589-475-11	SCREW (M1.7)

305	1-656-033-21	OPTICAL FILTER BLOCK (CFB-03-52)
306	3-216-044-01	RUBBER (1770), SEAL

Screw

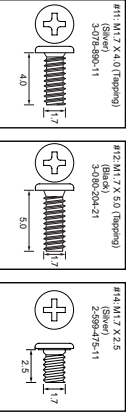

Note

Note 1: Be sure to read "Precautions for Replacement of Image" on page 6-1 when changing the imager.


Note 1: イメージャの交換時は6-1ページの「イメージャ交換時の注意」をお読みください。

Note 2: The Radiation Sheet CM when peeling off once, so that it cannot be reused

Note 2: Radiation Sheet CMは一度剥がすと粘着力が弱くなるため、再利用はしないでください。

2-1-8. BT/EVF SECTION

ns: not supplied

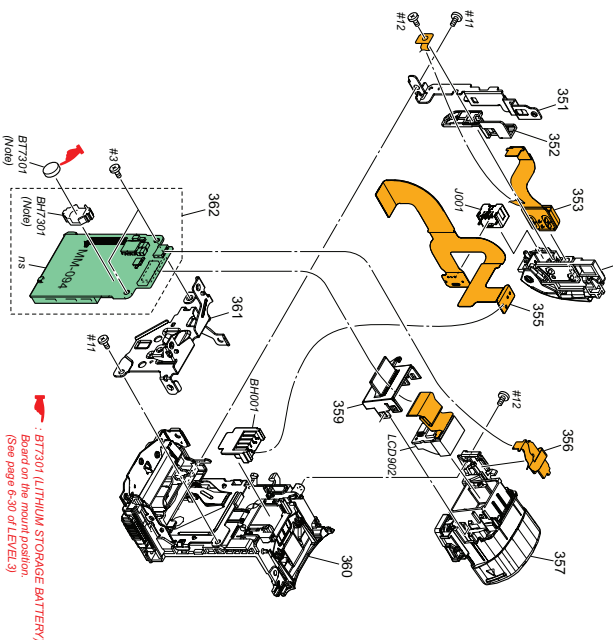

Ref.No.	PartNo.	Description	Ref.No.	PartNo.	Description
* 351	A-178-09-01	PLATE TERMINAL HOLDER RIGID	* 361	A-178-00-07	BATTERY CASE
* 352	A-178-00-01	REINFORCER TERMINAL	362	A-178-02-04	MM-994 B.O.R.D. COMPLETE (SERVICE)
A-178-111-A	FP-117 FIBRE E BOARD	COMPLETE			
354	A-254-05-1	HOLDER (36x35) TERMINAL			
		(O-50-100 C-50X50)(C-55X50)	A-BH01	1-78-00-04	BATTERY TERMINAL (N60)
			A-BH03	1-25-00-21	SOCKET BATTERY (N60)
354	X-254-05-1	HOLDER (36x35) TERMINAL	1-78-134-12		BATTERY STORAGE LITHIUM (N60)
		(O-50-100 C-50X50)(C-55X50)	A-BT001	A-178-132-11	CONNECTOR DC-EN (J20)

Ref. No.	Part No.	Description
* 361	4-176-007-01	BI FRAME
362	A-1765-28+4	MM-694 BOARD, COMPLETE (SERVICE)
Δ BH01	1-785-064-21	BATTERY TERMINAL BOARD
Δ BHJ301	1-251-928-21	SOCKET, BATTERY (Note)
Δ BT7301	1-756-394-11	BATTERY, STORAGE LITHIUM (Note)
Δ B10030	1-815-392-11	CONNECTOR, DC-IN (72V)

Screw

	#03: M1.2 X 2.5 (Red) 2-850-001-01
	#11: M1.2 X 4.0 (Tapping) (Silver) 3-073-880-11
	#12: M1.2 X 5.0 (Tapping) (Black) 3-080-004-21

Note

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Dispose of used batteries according to the instructions.

Note: Replace the battery holder (BH7301) together when replacing the lithium storage battery (BT7310) on the MM-094 board.
(The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium storage battery next.


注意:
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

Note: MM-094 基板のリチウム蓄電池 (B1301) を交換する場合
は、バッテリーホルダ (BH1301) も同時に新品に交換してく
ださい。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けて
からリチウム蓄電池を装着してください。

BT7301 (LITHIUM STORAGE BATTERY)
Board on the mount position.
(See page 6-30 of LEVEL 3)

2-19. CABINET (R) SECTION


ns: not supplied

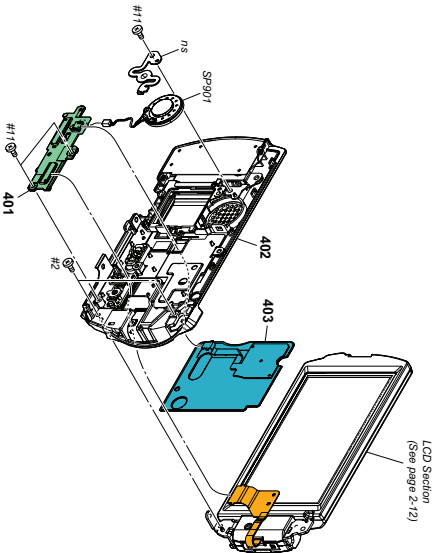

Ref. No.	Part No.	Description
401	A-1785-174A	OK-222 BOARD COMPLETE
	(C6550/C6550E/XR6500/XR6500E)	
401	A-1785-175A	OK-222 BOARD COMPLETE
	(C6550/C6550E/XR6500/XR6500E)	
402	X-2547-06-1-1	CABINET R ASSY


Ref. No.	Part No.	Description
403	1-487-585-21	SWITCH BLOCK CONTROL (SC3460)
	(C6550/C6550E/XR6500/XR6500E)	
SP901	1-489-075-12	SPEAKER (1.8Ω)

Screw

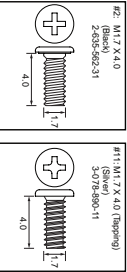


2-1-10. LCD SECTION

ns: not supplied

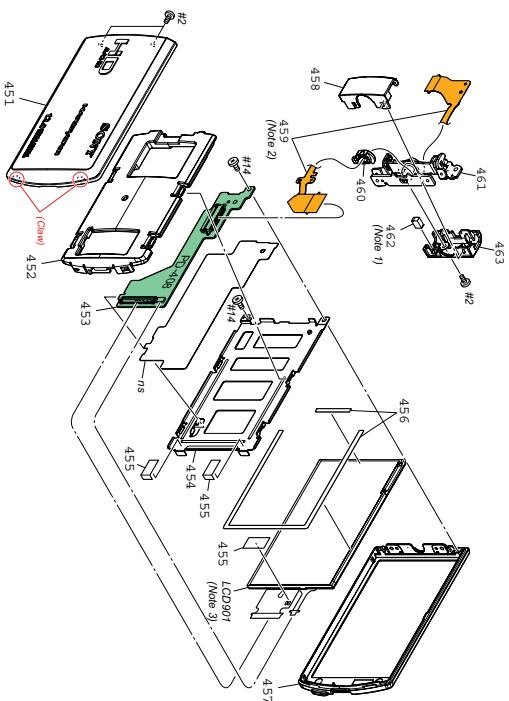


Ref.No.	Part.No.	Description	Ref.No.	Part.No.	Description
451	4-173-866-01	P CABINET C (X2650/CX606/CX607/CX609/E)	* 450	4-187-146-01	CLAMP FL EXIBLE (348)
451	4-173-868-11	P CABINET C (X2650/X2652E/X2650V/X2650VE)	461	X-2547-243-1	HINGE (348) ASSY
* 452	4-173-861-01	MOULD LCD INNER	462	1-471-504-11	MAGNET INDEX (SIZE 4.8) (Note 1)
453	A-1735-173-4	PD-08 BOARD COMPLETE	* 463	4-173-863-01	COVER(U) HINGE
454	4-173-860-01	LCD FRAME	LCD901	A-1735-866-4	LCD BLOCK ASSY (SERVICE) (Note 3)



Screw

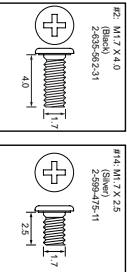


Note

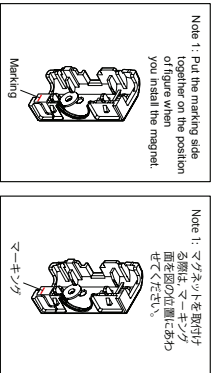

Note2: Refer to Assembly 1. The method of attachment of PP-1208 flexible board when installing.

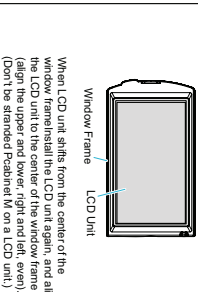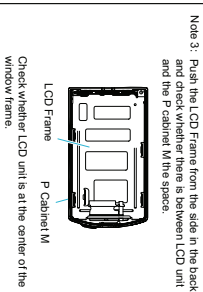

Note 2: 配線図はAssembly 1. The method of attachment of PP-1208 flexible board を参照してください。

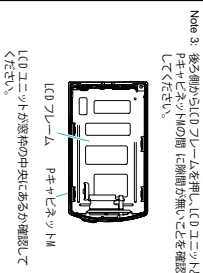

• J MODEL
付属品

Note 1: 当商品はアクセサリとして同梱されておりませんが、サービス用補修部品として扱います。



Power cord (Mains lead)
 Δ 1-832-121-41 (CH)
 Δ 1-832-169-41 (HK)

Δ 1-834482-21 (AEP, NE, E-PAL)
Δ 1-834484-31 (US, CND)
Δ 1-834485-21 (ENTSC)

Wireless Remote Commander
(RMT-835)

1-479-275-51



1



Rechargeable battery pack (NP-FV50)



Rechargeable battery pack
(NP-FV50)
(Note)



Operating Guide

日本語、韓国語のみ部品供給可能です。

4-170-538-41 (TRADITIONAL CHINESE)

4-170-538-51 (KOREAN)

英語、中国語のみ部品供給可能です。

4-170-541-11 (SIMPLIFIED CHINESE) (CH)



4-170-533-01

HDR-CX500/CX550 V1XR550XR550V

- 4-170-534-61 (KOBEN)

[The Instruction Manual in pdf \(Handycam Handbook.pdf\)](#) for printing

日本国内については印刷での部品供給は行っておりません。

HDR-CX500E/CX550V/EXR550E/XR550V/E

* 4-170-537-81 (THAI)
* 4-170-536-21 (HUNGARIAN)

準備してありません。



1-836-251-1111

1-487-150-51



D端子AVケーブル
1-834-646-21



1-419-215-51



リチャード・ジャラルバツテリー・バツク



1-835-993-31



4-170-533-01

行っておりません。

