


2-1-4. CABINET (L) SECTION

ns: not supplied

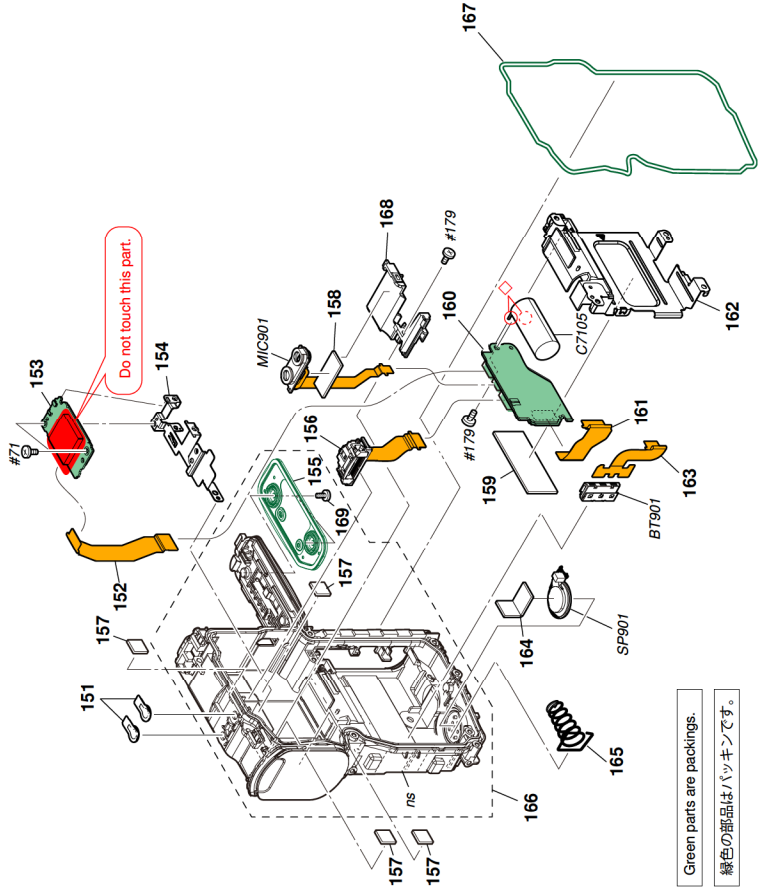

Green parts are packings.
緑色の部品はパッキンです。

Ref. No.	Part No.	Description
151	4-427-606-01	SHEET, MICROPHONE
152	1-885-180-11	FP-1530 FLEXIBLE BOARD
153	A-1880-388-A	GP055 ASSY (GW55VE/GW77V/GW77VE)
153	A-1880-389-A	GP055N ASSY (GW77/GW77E)
154	4-427-587-01	PLATE, GP GROUND
155	4-427-537-01	PACKING (BT LID)
△156	1-490-053-11	FLASH UNIT
157	4-434-439-01	SHEET (A), DAMPER
158	4-427-586-01	CUSHION, MICROPHONE
159	4-427-569-01	SHEET (L), RADIATION
160	A-1880-226-A	CK-243 BOARD, COMPLETE
161	1-885-158-11	FP-1528 FLEXIBLE BOARD
162	X-2584-406-1	FRAME ASSY, BT
163	1-885-159-11	FP-1529 FLEXIBLE BOARD
164	4-427-568-01	CUSHION, SPEAKER


Ref. No.	Part No.	Description
165	4-427-579-01	SPRING, BT DISCHARGE
166	X-2584-407-1	CABINET (L) ASSY
167	4-427-588-01	PACKING (LR)
168	4-427-585-01	HOLDER, MICROPHONE
169	4-179-002-21	TAPPING (1.4)
△16901	1-780-826-11	TERMINAL BOARD, BATTERY
△C7105	1-118-127-11	CAP. ALUMINUM ELECT 36uF 315V
MIC901	1-542-912-11	MICROPHONE UNIT
SP901	1-826-837-71	SPEAKER (1.3CM)
#71	3-208-537-01	0.2 M. 4X2 NEW TORASUTA
#179	4-179-310-01	TAPPING (1.7)

DISASSEMBLY

1. The meaning of the sign in left figure is as follows. Be careful you remove it.


◇: Solder

Screw

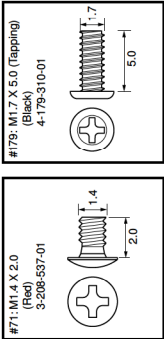

2-1-5. CABINET (R) SECTION



ns: not supplied

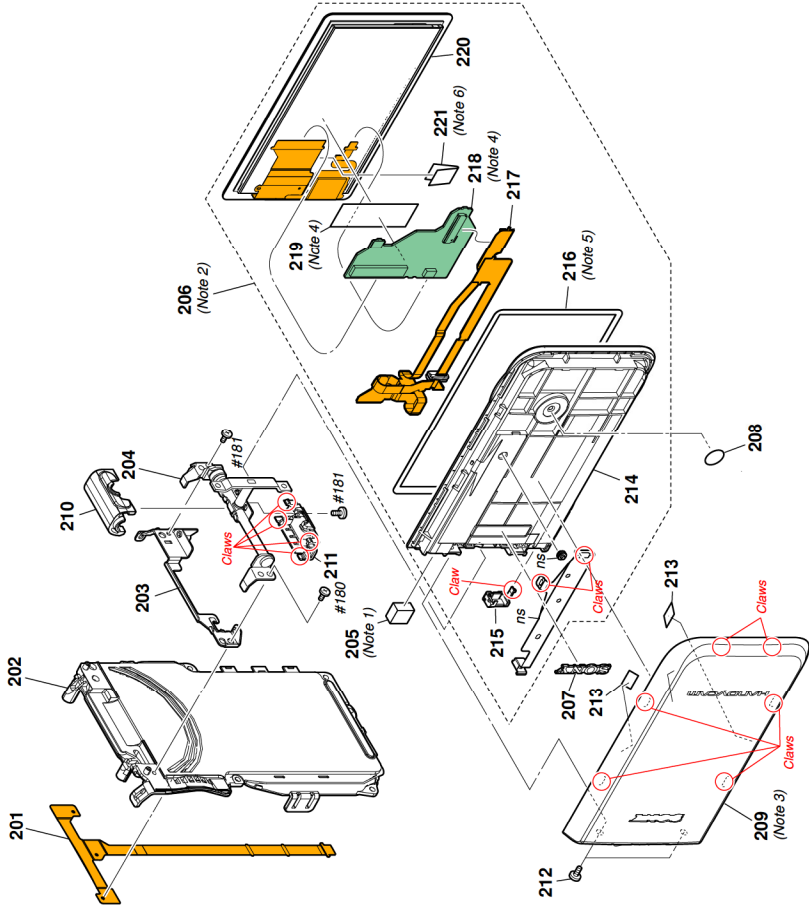

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
201	A-1880-244-A	FP-1527 FLEXIBLE BOARD, COMPLETE	210	4-427-600-21	COVER (O), HINGE (BLUE)
202	A-1887-602-A	CABINET (R) BLOCK ASSY, SERVICE (BLACK, BLUE)	211	4-427-592-01	COVER (U), HINGE (BLACK, BLUE)
203	A-1887-603-A	CABINET (R) BLOCK ASSY, SERVICE (WHITE)	211	4-427-592-11	COVER (U), HINGE (WHITE)
204	X-2583-972-1	HINGE ASSY, S TYPE	212	4-427-607-01	2 MAIN TOP ASSY, M1.7 (RIGHT)
205	1-471-620-11	MR MAGNET (Note 1)	213	4-434-441-01	SHEET (SM)
206	A-1885-954-A	PANEL BLOCK ASSY (BK), SERVICE (BLACK, BLUE)	214	4-427-588-01	CABINET (M), P (BLACK, BLUE)
206	A-1885-955-A	PANEL BLOCK ASSY (WH), SERVICE (WHITE) (Note 2)	214	4-427-589-01	CABINET (M), P (WHITE)
207	4-271-679-11	EMBLEM (N03), SONY	215	4-427-593-01	HOLDER (P), GROMMET
208	4-179-356-01	INSPECTION WATER SHEET	216	4-427-589-01	SHEET (TP), ADHESIVE (Note 5)
209	4-427-602-01	ORNAMENT, P CABINET (C) (BLACK) (Note 3)	217	1-885-155-11	FP-1525 FLEXIBLE BOARD
209	4-427-602-21	ORNAMENT, P CABINET (C) (WHITE) (Note 3)	218	A-1880-227-A	PD-483 BOARD, COMPLETE (Note 4)
210	4-427-600-01	COVER (O), HINGE (BLACK)	219	4-427-591-01	SHEET (LCD), ADHESIVE (Note 4)
210	4-427-600-11	COVER (O), HINGE (WHITE)	220	A-1880-765-A	DISPLAY MODULE, MOUSE, MESSNG
210	4-427-600-11	COVER (O), HINGE (WHITE)	221	4-427-574-01	SHEET (PU), SHIELD (Note 6)
			#180	4-179-319-01	TAPPING (1.7)
			#181	4-179-987-41	SCREW (M1.4) (FLAT) PRECISION


HDR-GW55VE/GW77/GW77E/GW77V/GW77VE_L2

Screw

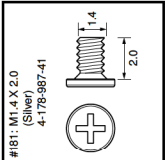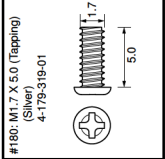


Note


Note 1: Install the magnet with the marking oriented as shown below.

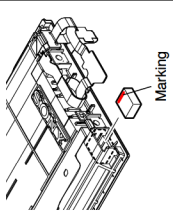

Note 1: マグネットを取付ける際は、マーキング面を図の位置にあわせてください。

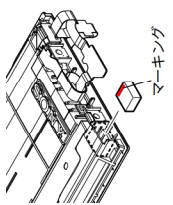

Note 2: Claw C and Claw F of the P Cabinet (C) Ornament are engaged in the directions shown below. Apply force in the order of numbers in the directions shown below to release Claw C and Claw F.

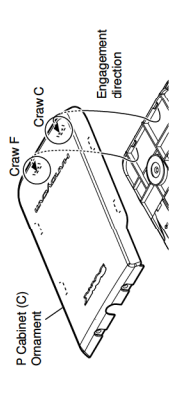

Note 2: PキャビネットのツメC、ツメFは下図の方向に結合しています。下図の順番と矢印方向に従って力を加え、ツメC、ツメFを外してください。

