

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION-1

ns: not supplied

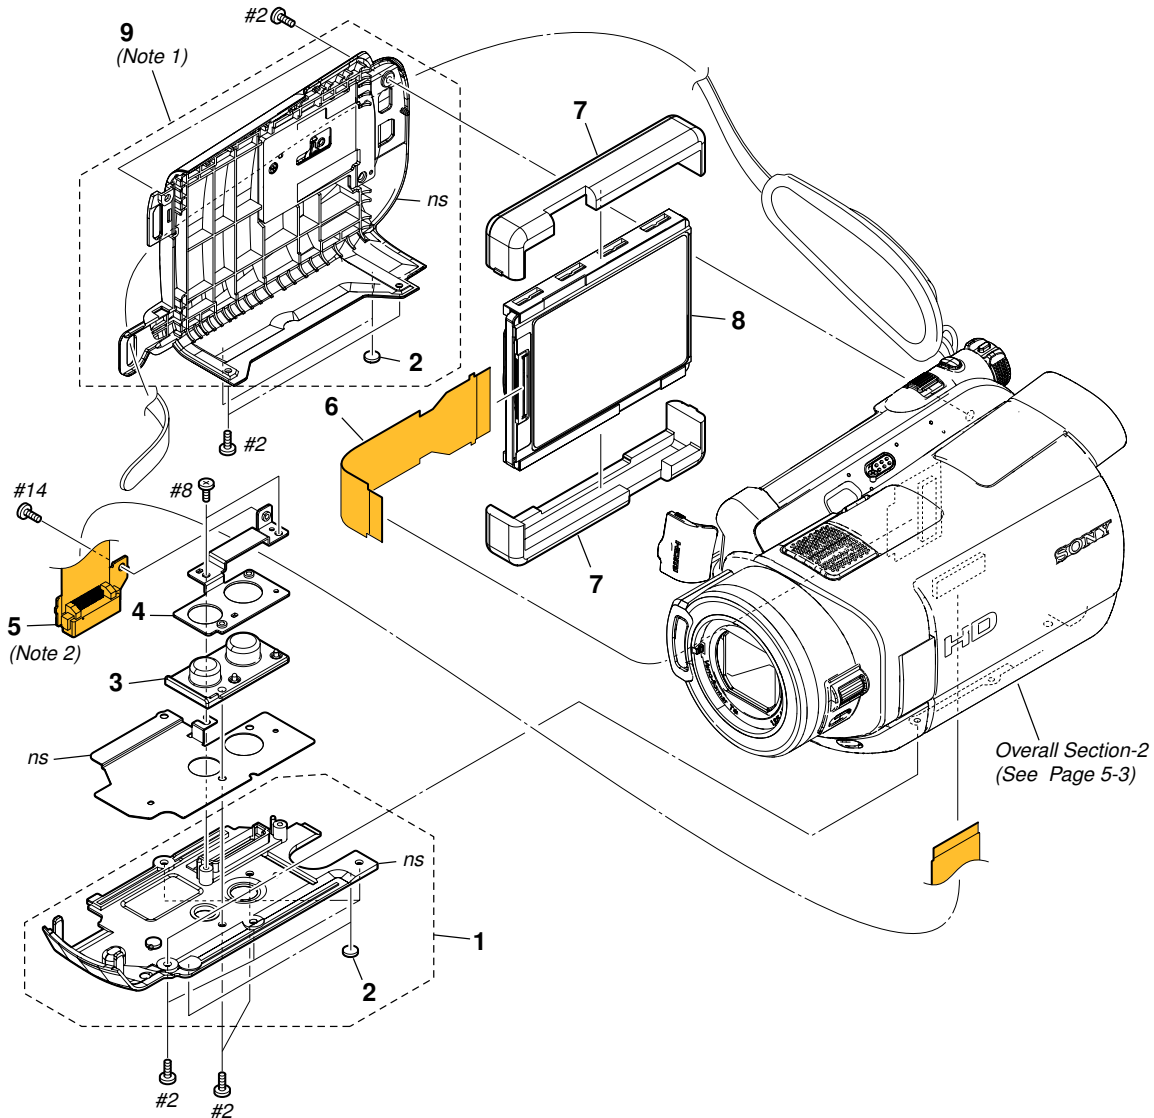

Note 1 : Refer to page 1-13 "Precaution on replacing the cabinet (G) assy" when changing the cabinet (G) assy.

Note 1 : キャビネット (G) 組立の交換時は1-13ページの「キャビネット (G) 組立交換時の注意」を参照してください。

Note 2 : Be sure to read "HELP" when attach the FP-718 flexible board.

Note 2 : FP-718フレキシブル基板取付時は「HELP」を必ずお読みください。

Ref. No.	Part No.	Description
1	A-1317-545-A	CABINET (SERVICE), BOTTOM
2	2-589-376-01	FOOT (395), RUBBER
* 3	3-213-064-01	SCREW, TRIPOD
* 4	3-213-066-01	FRAME, BOTTOM CABINET
5	A-1274-040-A	FP-718 FLEXIBLE BOARD, COMPLETE (Note 2)
6	A-1202-561-A	FP-515 FLEXIBLE BOARD, COMPLETE
7	2-697-545-01	DAMPER, DM
8	1-797-659-11	HDD (MK6008GAH-60GB) (SR7/SR7E)


Ref. No.	Part No.	Description
8	1-797-808-11	HDD (MK4009GAL-40GB) (SR5/SR5E)
8	1-797-867-11	HDD (MK1011GAH-100GB) (SR5C/SR8/SR8E)
9	(Note 1)	CABINET (G) ASSY
#2	2-635-562-31	SCREW (M1.7) (Black)
#8	3-078-890-01	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-2. OVERALL SECTION-2

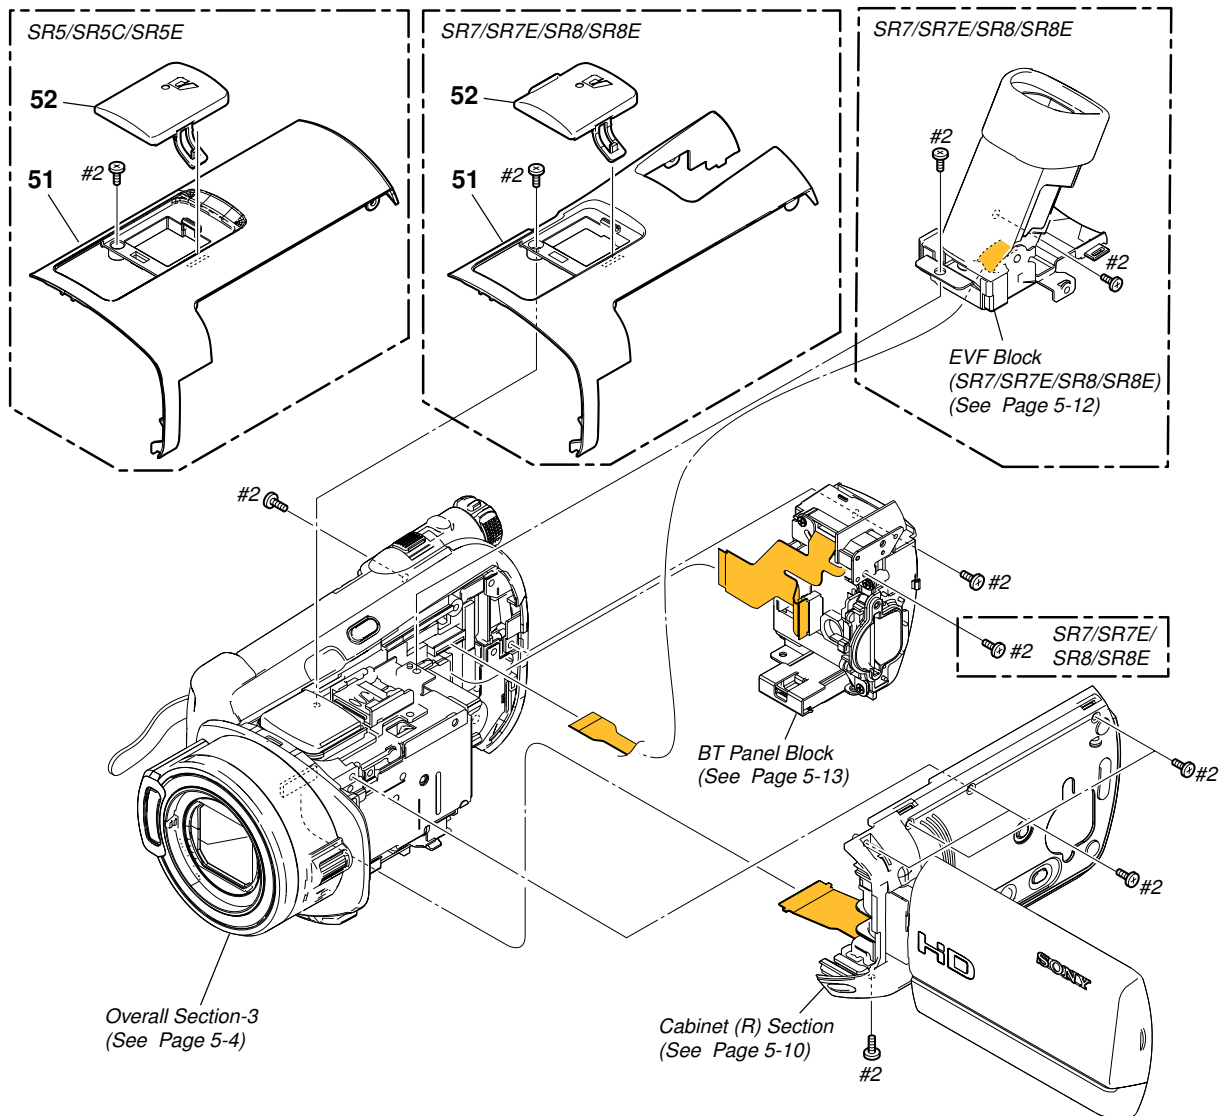

Ref. No.	Part No.	Description
51	3-212-977-01	CABINET (T (255)) (SR7:J)
51	3-212-977-11	CABINET (T (255)) (SR7:US, CND, E, KR, JE/ SR7E/SR8:US, CND, E, KR, JE/SR8E)
51	3-212-977-21	CABINET (T (255)) (SR8:J)
51	X-2178-757-1	CABINET (T (253)) ASSY (SR5/SR5C/SR5E)
52	X-2178-751-1	COVER (255C) ASSY, SHOE (SR7:J)


Ref. No.	Part No.	Description
52	X-2178-752-1	COVER (255B) ASSY, SHOE (SR7:US, CND, E, KR, JE/SR7E/SR8/SR8E)
52	X-2178-753-1	COVER (253) ASSY, SHOE (SR5/SR5C/SR5E)
#2	2-635-562-31	SCREW (M1.7) (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-3. OVERALL SECTION-3

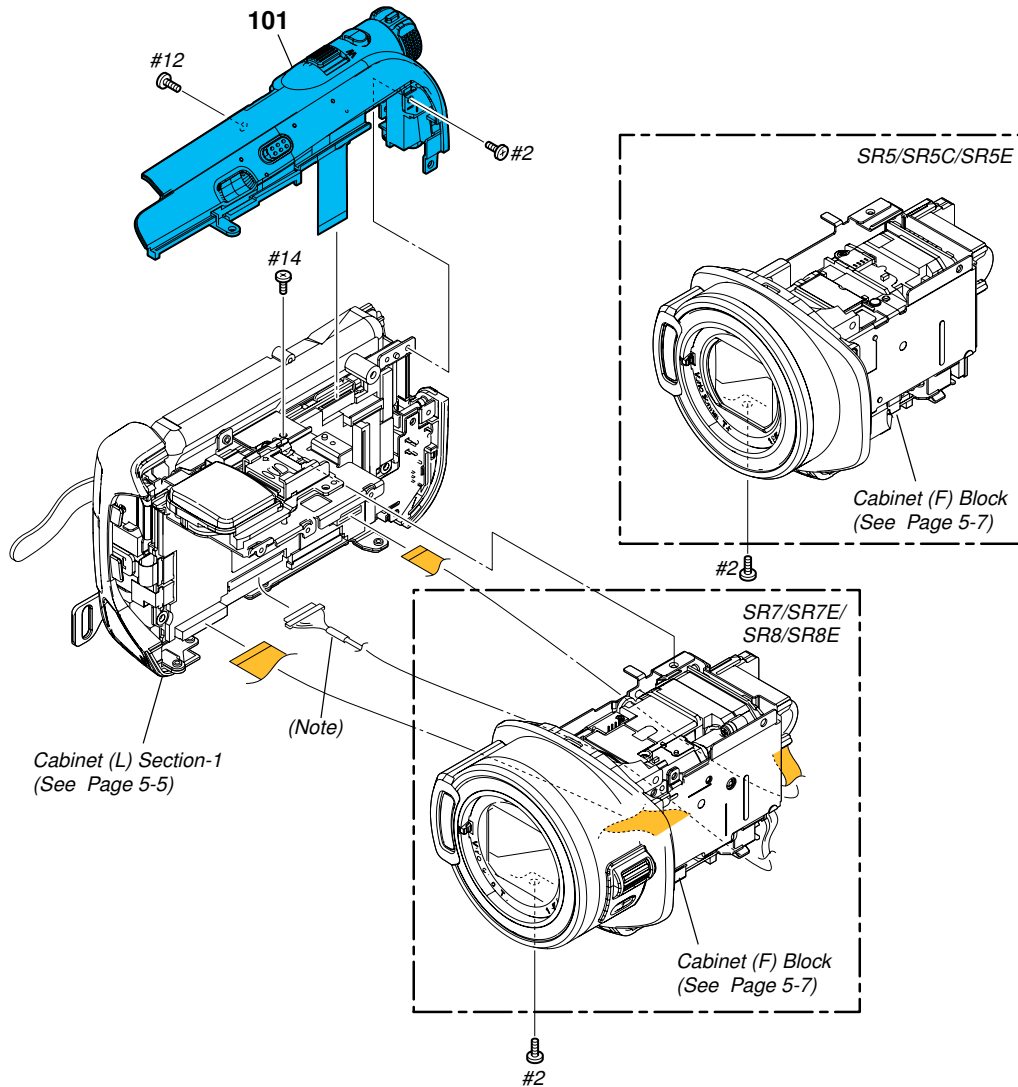

Note: Refer to page 2-1 "Note for disconnection the harness" when changing the harness.

Note: HARNESS (COAXIAL CABLE) の交換時は2-1ページ "Note for disconnection the harness" を参照して下さい。

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	1-480-164-11	SWITCH BLOCK, CONTROL (PS25500) (SR7:J/SR8:J)	#2	2-635-562-31	SCREW (M1.7) (Black)
101	1-480-164-21	SWITCH BLOCK, CONTROL (PS25500) (SR7:US, CND, E, KR, JE/SR7E/SR8:US, CND, E, KR, JE/SR8E)	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
101	1-480-164-41	SWITCH BLOCK, CONTROL (PS25500) (SR5/SR5C/SR5E)	#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-4. CABINET (L) SECTION-1

ns: not supplied

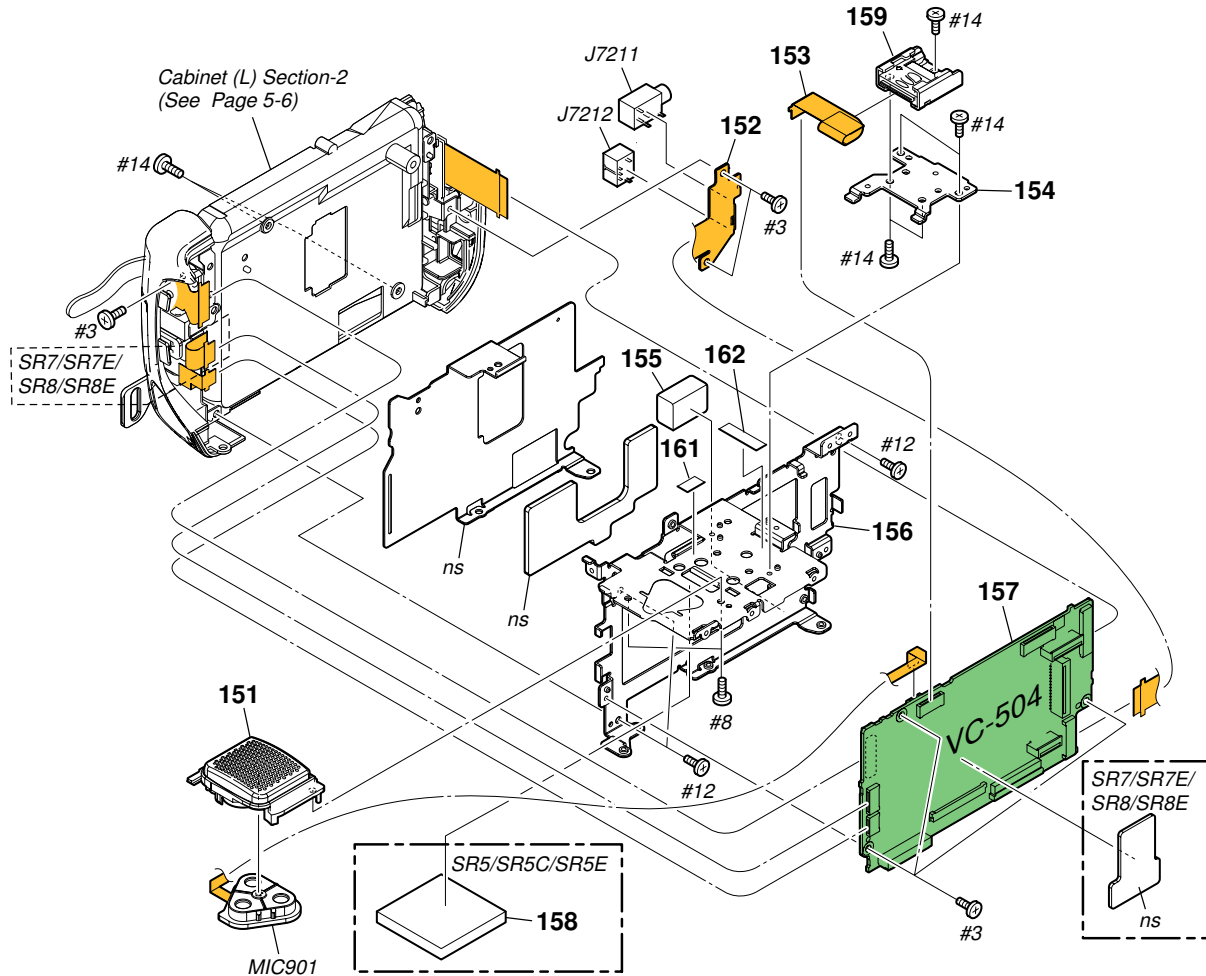

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
151	X-2178-754-1	HOLDER ASSY, MICROPHONE (SR7:J)	157	A-1274-789-A	VC-504 BOARD, COMPLETE (SREVICE)
151	X-2178-755-1	HOLDER (255B) ASSY, MICROPHONE (SR7:US, CND, E, KR, JE/SR7E/SR8/SR8E)			(SR5E)
151	X-2178-756-1	HOLDER (253) ASSY, MICROPHONE (SR5/SR5C/SR5E)	* 158	3-214-816-01	CUSHION (253), SILENCE (SR5/SR5C/SR5E)
152	1-873-196-11	FP-721 FLEXIBLE BOARD	159	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
153	1-873-200-11	FP-725 FLEXIBLE BOARD	* 161	3-269-692-01	SHEET (SMALL), ABSORBING
154	3-212-974-01	FRAME, SHOE	* 162	3-269-691-01	SHEET (LARGE), ABSORBING
* 155	2-673-770-01	GASKET (D)	J7211	1-793-995-21	JACK, SUPER SMALL TYPE (REMOTE)
156	3-212-973-01	FRAME, MAIN	△ J7212	1-815-792-11	CONNECTOR, DC-IN (7.2V) (DC IN)
157	A-1274-786-A	VC-504 BOARD, COMPLETE (SREVICE)	MIC901	1-542-711-31	MICROPHONE UNIT
		(SR7/SR8)	#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
157	A-1274-787-A	VC-504 BOARD, COMPLETE (SREVICE)	#8	3-078-890-01	SCREW, TAPPING (Silver)
		(SR7E/SR8E)	#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
157	A-1274-788-A	VC-504 BOARD, COMPLETE (SREVICE)	#14	2-599-475-11	SCREW (M1.7) (Silver)
		(SR5/SR5C)			


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET (L) SECTION-2

ns: not supplied

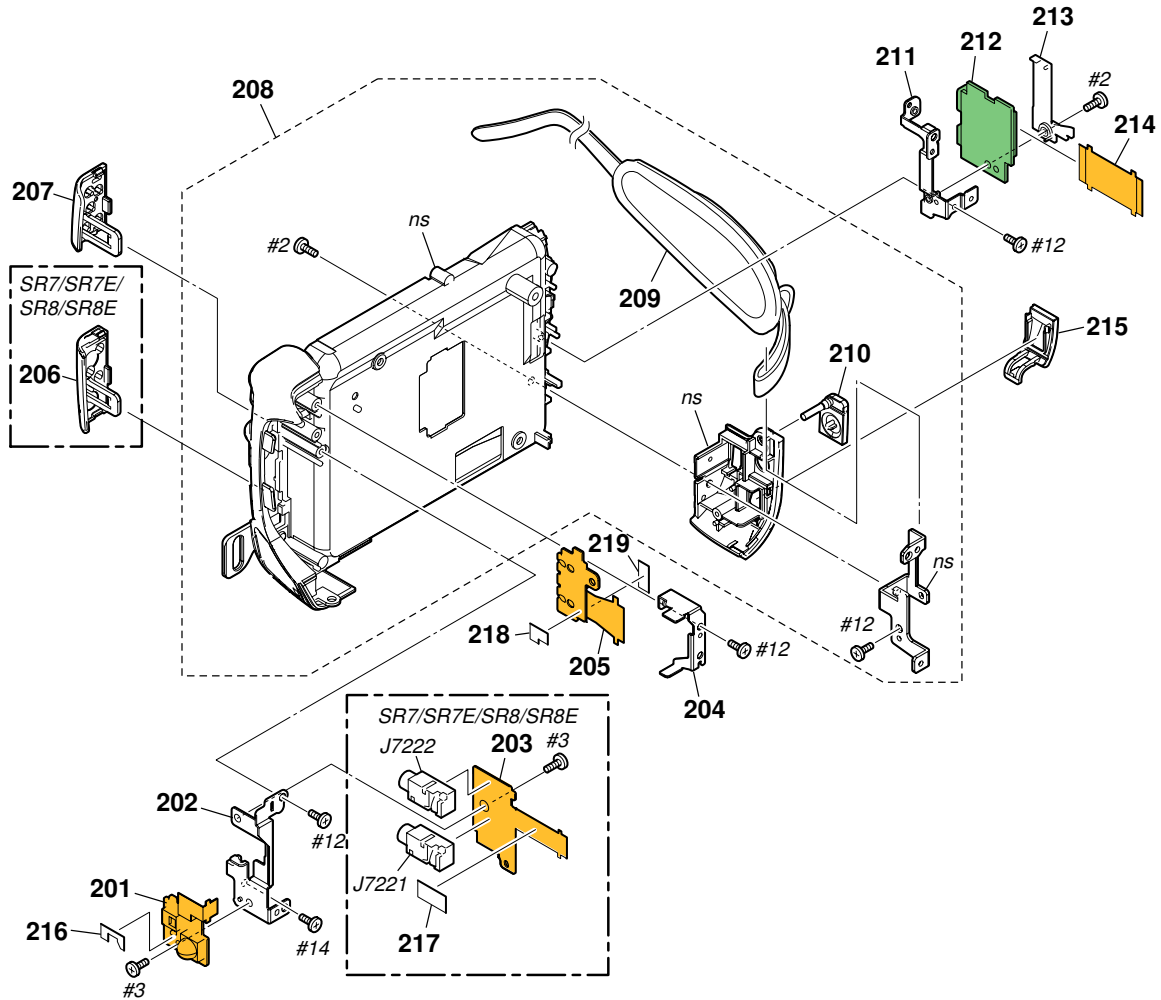

Ref. No.	Part No.	Description
201	A-1274-042-A	FP-729 FLEXIBLE BOARD, COMPLETE
* 202	3-213-057-01	FRAME (F), JACK
203	1-873-197-11	FP-722 FLEXIBLE BOARD (SR7/SR7E/SR8/SR8E)
* 204	3-213-058-01	FRAME (HDMI), JACK
205	A-1274-041-A	FP-719 FLEXIBLE BOARD, COMPLETE
206	X-2178-750-1	COVER (MICHP) ASSY, JACK (SR7/SR7E/SR8/SR8E)
207	X-2178-749-1	COVER (HDMI) ASSY, JACK
208	X-2178-739-1	CABINET (L (255)) ASSY (SR7/SR7E/SR8/SR8E)
208	X-2178-740-1	CABINET (L (253)) ASSY (SR5/SR5C/SR5E)
209	2-664-928-31	BELT, GRIP
210	3-213-124-01	COVER (REMOTE), JACK
* 211	3-213-059-01	FRAME (R), JACK
212	A-1274-034-A	JK-342 BOARD, COMPLETE

Ref. No.	Part No.	Description
* 213	3-213-060-01	RETAINER, D TERMINAL
214	1-873-201-11	FP-726 FLEXIBLE BOARD
215	3-213-160-01	COVER (DC), JACK
* 216	3-269-696-01	SHEET, TALLY LIGHT INTERCEPTION
* 217	3-269-693-01	GUARD, MIC FLEXIBLE (SR7/SR7E/SR8/SR8E)
* 218	3-269-695-01	CUSHION (REAR), HDMI
* 219	3-269-694-01	CUSHION (FRONT), HDMI
J7221	1-569-950-41	JACK (SMALL TYPE) (HEADPHONE) (SR7/SR7E/SR8/SR8E)
J7222	1-691-737-41	JACK (SMALL TYPE) (MIC (PLUG IN POWER)) (SR7/SR7E/SR8/SR8E)
#2	2-635-562-31	SCREW (M1.7) (Black)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-6. CABINET (F) BLOCK

ns: not supplied

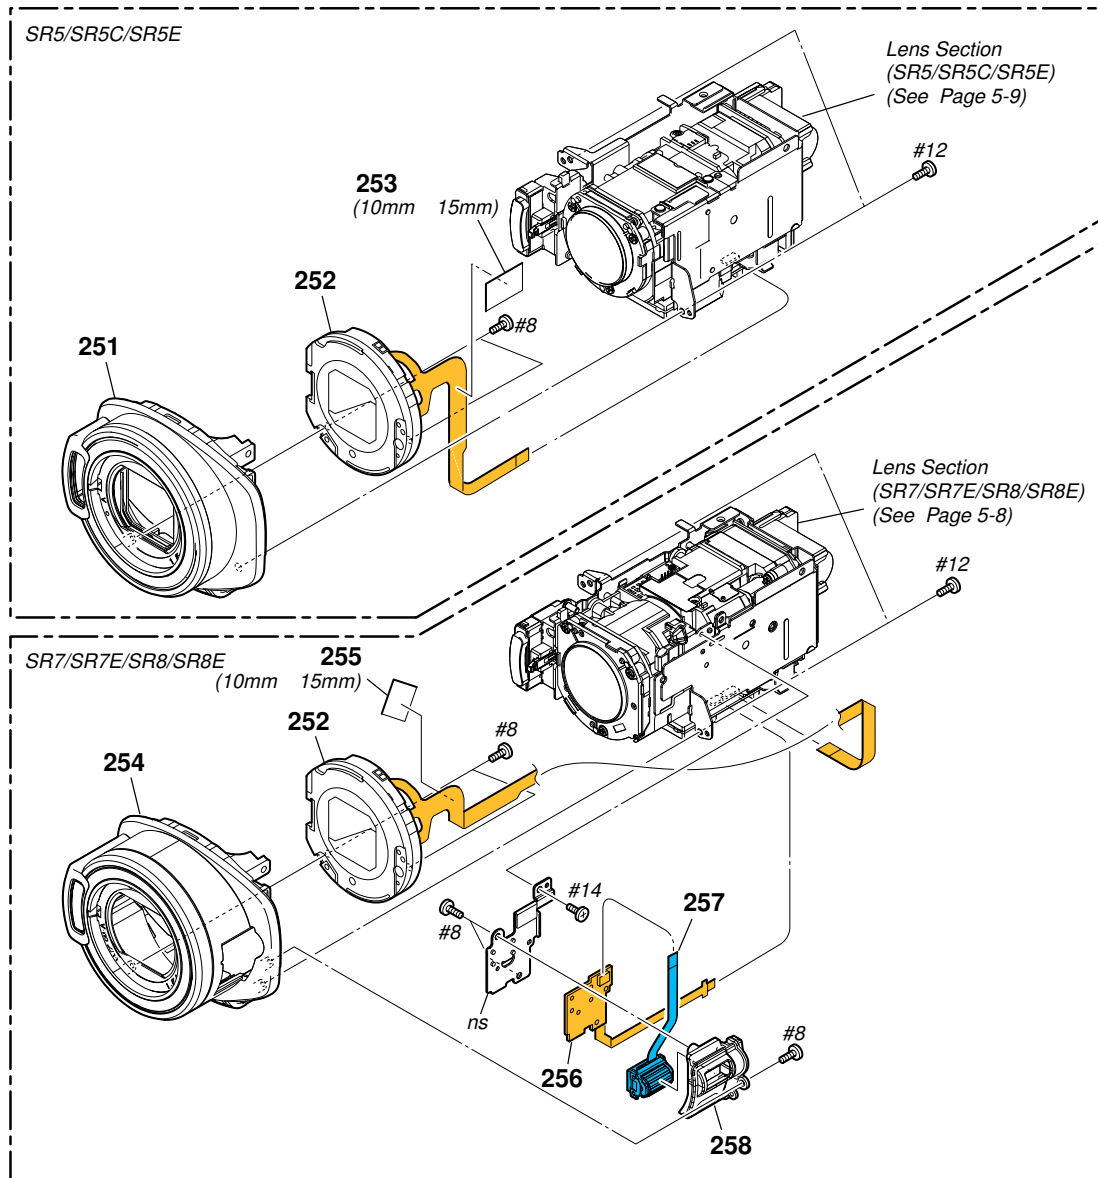

CAUTION :

For the part of 253: TAPE AS (3-079-115-01) or 255: TAPE (A (2/3)) (2-676-475-01), cut NON WOVEN (T0.25) (3-076-631-01) into the desired length and use it.

CAUTION :

253: TAPE AS (3-079-115-01)、255: TAPE (A(2/3)) (2-676-475-01)は、ヒメロン T0.25 (3-076-631-01) を切って使用して下さい。

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
251	X-2178-738-1	CABINET (F (253)) ASSY (SR5/SR5C/SR5E)	255	CAUTION	TAPE (A(2/3)) (SR7/SR7E/SR8/SR8E)
252	A-1217-971-A	LENS BARRIER UNIT	256	A-1274-039-A	FP-717 FLEXIBLE BOARD, COMPLETE (SR7/SR7E/SR8/SR8E)
253	CAUTION	TAPE AS (SR5/SR5C/SR5E)	257	1-479-004-21	SWITCH BLOCK, CONTROL (AD11800) (SR7/SR7E/SR8/SR8E)
254	X-2178-735-1	CABINET (F (255C)) ASSY (SR7:J)	258	X-2178-734-1	BASE ASSY, AD (SR7/SR7E/SR8/SR8E)
254	X-2178-736-1	CABINET (F (255B)) ASSY (SR8:J)			
254	X-2178-737-1	CABINET (F (255B)) ASSY (E) (SR7:US, CND, E, KR, JE/SR7E/SR8:US, CND, E, KR, JE/SR8E)	#8	3-078-890-01	SCREW, TAPPING (Silver)
			#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
			#14	2-599-475-11	SCREW (M1.7) (Silver) (SR7/SR7E/SR8/SR8E)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-7. LENS SECTION (SR7/SR7E/SR8/SR8E)

ns: not supplied

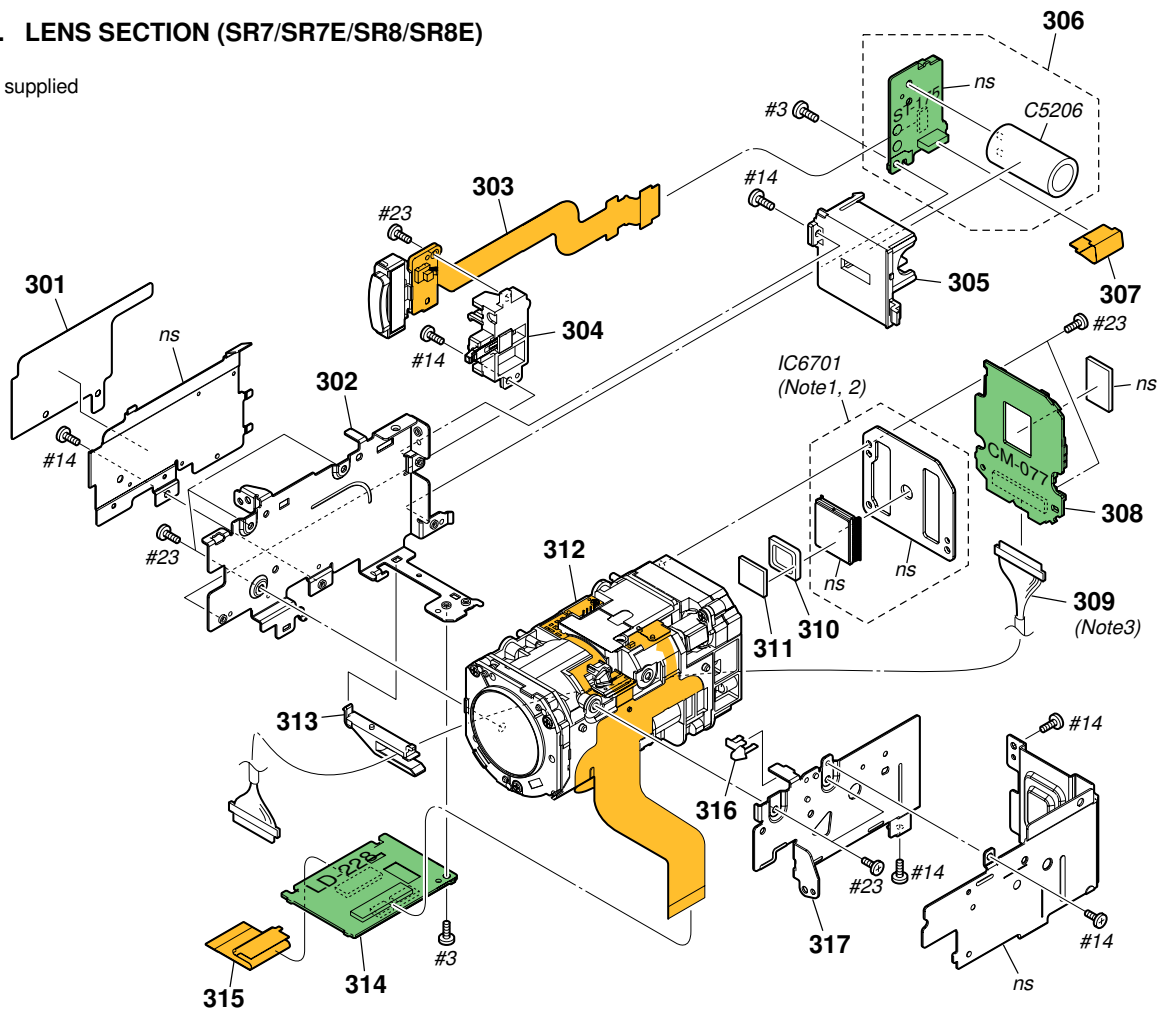

Note 1: IC6701 is not supplied, but this is included in CMOS block assy.

Note 1: IC6701は交換対象ではありませんが、CMOS部組に含まれます。

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Note 2: イメージャの交換時は4-4ページの「イメージャ交換時の注意」を必ずお読みください。

Note 3: Refer to page 2-1 "Note for disconnection the harness" when changing the harness.

Note 3: HARNESS (COAXIAL CABLE) の交換時は2-1ページ "Note for disconnection the harness" を参照して下さい。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 301	3-213-042-01	SHEET (255), VC INSULATING
* 302	3-213-033-01	FRAME (L (255)), LENS
△ 303	1-480-263-11	FLASH UNIT
304	X-2176-859-1	HOLDER ASSY, ST
* 305	3-213-035-01	HOLDER, CAPACITOR
306	A-1274-038-A	ST-175 BOARD, COMPLETE
307	1-873-199-11	FP-724 FLEXIBLE BOARD
308	A-1237-309-A	CM-077 BOARD, COMPLETE (SERVICE)
309	1-965-256-11	HARNESS (COAXIAL CABLE) (Note3)
310	2-698-010-01	RUBBER (1190), SEAL
311	1-788-558-11	FILTER BLOCK, OPTICAL

Ref. No.	Part No.	Description
312	A-1227-735-A	LSV-1190A (SERVICE)
* 313	3-213-036-01	CLAMP, HARNESS
314	A-1274-032-A	LD-228 (FIR) BOARD, COMPLETE
315	1-873-198-11	FP-723 FLEXIBLE BOARD
* 316	3-213-037-01	GUARD, BARRIER FLEXIBLE
* 317	3-213-034-01	FRAME (R (255)), LENS
△ *C5206	1-114-393-11	CAP, ELECT 70MF 330V
IC6701	A-1209-688-A	CMOS BLOCK ASSY (CMOS IMAGER)(Note1, 2)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#14	2-599-475-11	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-8. LENS SECTION (SR5/SR5C/SR5E)

ns: not supplied

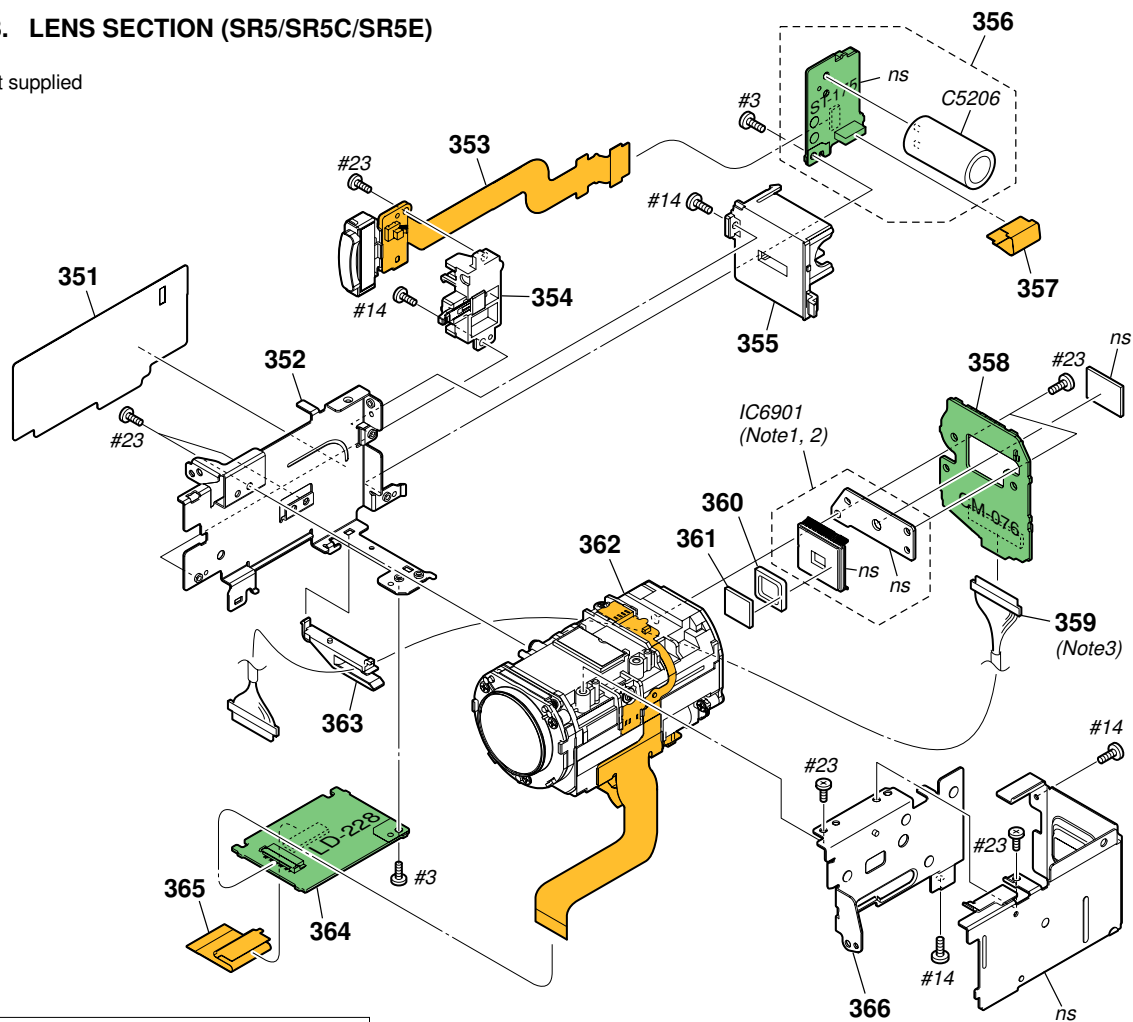

Note 1: IC6901 is not supplied, but this is included in CMOS block assy.

Note 1: IC6901は交換対象ではありませんが、CMOS部組に含まれます。

Note 2: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.

Note 2: イメージャの交換時は4-4ページの「イメージャ交換時の注意」を必ずお読みください。

Note 3: Refer to page 2-1 "Note for disconnection the harness" when changing the harness.

Note 3: HARNESS (COAXIAL CABLE) の交換時は2-1ページ "Note for disconnection the harness" を参照して下さい。

• Refer to page 5-1 for mark △.

Ref. No.	Part No.	Description
* 351	3-213-045-01	SHEET (253), VC INSULATING
* 352	3-213-043-01	FRAME (L (253)), LENS
△ 353	1-480-263-11	FLASH UNIT
354	X-2176-859-1	HOLDER ASSY, ST
* 355	3-213-035-01	HOLDER, CAPACITOR
356	A-1274-038-A	ST-175 BOARD, COMPLETE
357	1-873-199-11	FP-724 FLEXIBLE BOARD
358	A-1231-932-A	CM-076 BOARD, COMPLETE
359	1-965-258-71	HARNESS (COAXIAL CABLE) (Note3)
360	2-629-086-01	RUBBER (871), SEAL
361	1-788-382-11	OPTICAL FILTERBLOCK (OFB-03-26)

Ref. No.	Part No.	Description
362	8-848-825-01	DEVICE, LENS LSV-942C
* 363	3-213-036-01	CLAMP, HARNESS
364	A-1274-033-A	LD-228 (FIY) BOARD, COMPLETE
365	1-873-198-11	FP-723 FLEXIBLE BOARD
* 366	3-213-044-01	FRAME (R (253)), LENS
△ * C5206	1-114-393-11	CAP, ELECT 70MF 330V
IC6901	A-1172-742-A	CMOS BLOCK ASSY (CMOS IMAGER)(Note1, 2)
#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
#14	2-599-475-11	SCREW (M1.7) (Silver)
#23	3-080-204-11	SCREW, TAPPING, P2 (Black)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-9. CABINET (R) SECTION

ns: not supplied

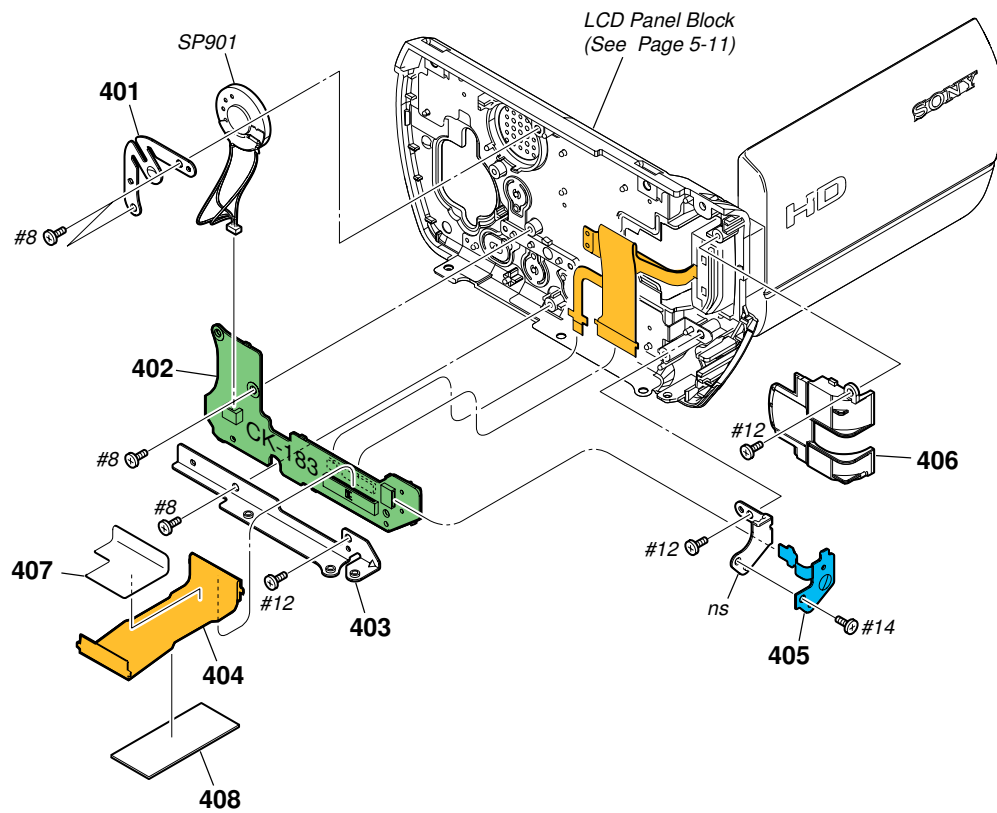

Ref. No.	Part No.	Description
401	3-213-049-01	FRAME, SP RETAINER
402	A-1274-036-A	CK-183 BOARD, COMPLETE
* 403	3-213-050-01	FRAME, CABINET (R)
404	1-873-203-11	FP-727 FLEXIBLE BOARD
405	1-480-165-11	SWITCH BLOCK, CONTROL (SB25500)
406	3-213-048-01	COVER, HINGE BLIND

Ref. No.	Part No.	Description
* 407	3-270-566-01	SHEET, WATERPROOF
* 408	3-218-521-01	SHEET, FLEXIBLE ELECTROSTATIC
SP901	1-825-262-82	LOUD SPEAKER (1.6CM)
#8	3-078-890-01	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)


5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-10. LCD PANEL BLOCK

ns: not supplied

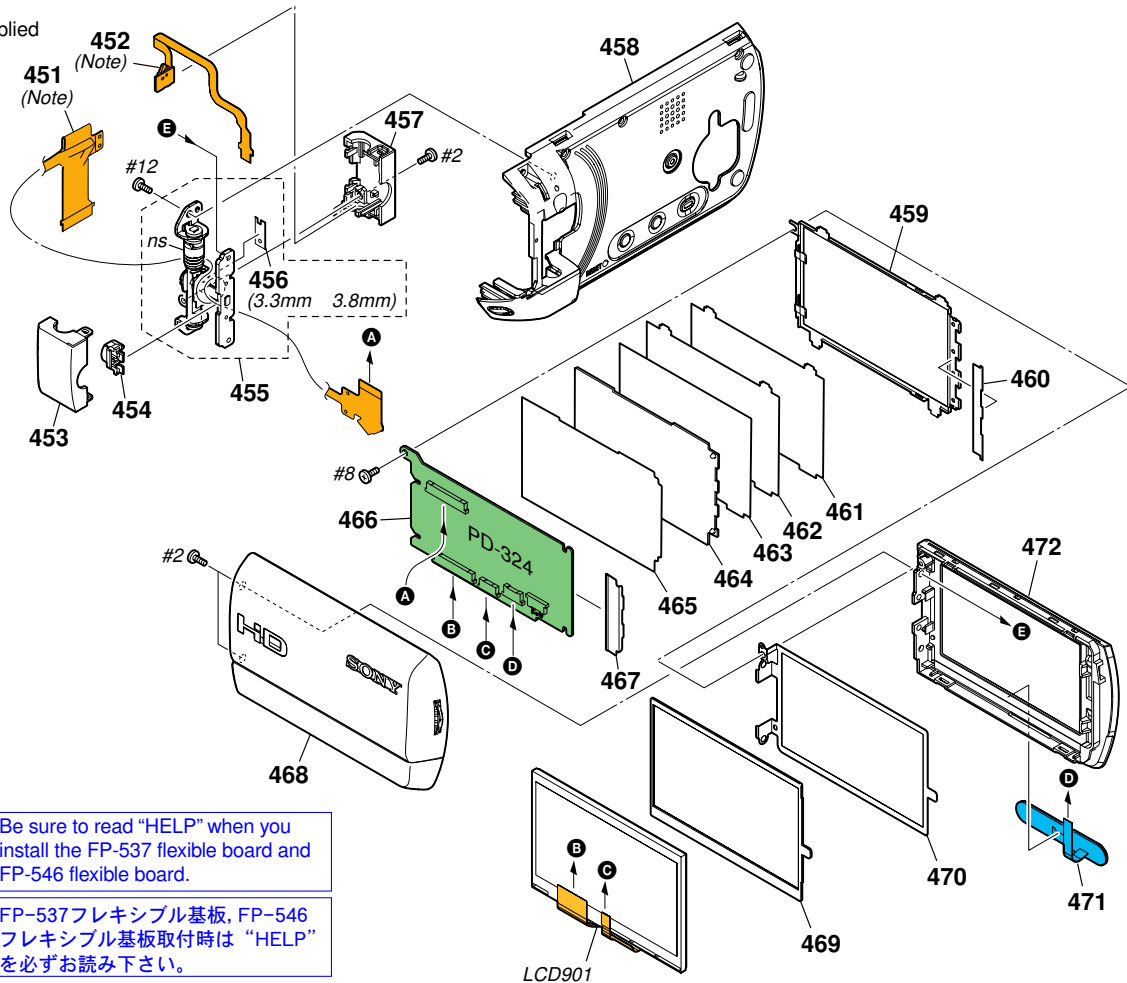

Note : Be sure to read "HELP" when you install the FP-537 flexible board and FP-546 flexible board.

Note : FP-537フレキシブル基板, FP-546フレキシブル基板取付時は "HELP" を必ずお読み下さい。

CAUTION :
For the part of 456: SHEET, HINGE ADHESIVE (3-089-465-01), cut SHEET, ADHESIVE (2-649-300-01) into the desired length and use it.

CAUTION :
456: ヒンジ接着紙 (3-089-465-01) は、接着紙 (2-649-300-01) を切って使用して下さい。


Ref. No.	Part No.	Description
451	1-870-992-11	FP-537 FLEXIBLE BOARD (Note)
452	A-1239-340-A	FP-546 FLEXIBLE BOARD, COMPLETE (Note)
453	3-213-051-01	COVER (O), PANEL HINGE (SR7:J)
453	3-213-051-11	COVER (O), PANEL HINGE (SR7:US, CND, E, KR, JE/SR7E/SR8/SR8E)
453	3-213-051-21	COVER (O), PANEL HINGE (SR5/SR5C/SR5E)
* 454	3-096-413-01	CLAMP, FLEXIBLE
455	X-2108-475-1	HINGE ASSY
456	CAUTION	SHEET, HINGE ADHESIVE
457	3-213-052-01	COVER (U), PANEL HINGE
458	X-2178-741-1	CABINET (R) ASSY (E) (EXCEPT SR7:J/SR8:J)
458	X-2178-742-1	CABINET (R) ASSY (SR7:J/SR8:J)
459	2-887-999-01	FRONT FRAME (2.7J)
460	2-666-807-02	AG SHEET (2.7)
461	2-666-802-01	PRISM SHEET V (2.7)
462	2-666-803-01	PRISM SHEET H (2.7)
463	2-666-804-01	DIFFUSION SHEET (2.7)

Ref. No.	Part No.	Description
464	2-666-801-01	LIGHT GUIDE (2.7)
465	2-894-347-01	REFLECTION SHEET (2.7J)
466	A-1242-019-A	PD-324 BOARD, COMPLETE
* 467	2-638-780-01	CLIP
468	X-2178-743-1	CABINET (C (255C)) ASSY, P (SR7:J)
468	X-2178-744-1	CABINET (C (255B)) ASSY, P (SR7:US, CND, E, KR, JE/SR7E)
468	X-2178-745-1	CABINET (C (253)) ASSY, P (SR5/SR5C/SR5E)
468	X-2179-066-1	CABINET (C (SR8B)) ASSY, P (SR8/SR8E)
* 469	2-672-277-01	CUSHION, TP
* 470	3-213-054-01	FRAME, PANEL GROUND
471	1-479-995-11	KEY BLOCK, CONTROL (SB22200)
472	3-213-053-01	CABINET (M), P (SR7:J/SR8:J)
472	3-213-053-11	CABINET (M), P (EXCEPT SR7:J/SR8:J)
LCD901	A-1202-059-A	TP BLOCK ASSY (27ESTMG07)
#2	2-635-562-31	SCREW (M1.7) (Black)
#8	3-078-890-01	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-11. EVF BLOCK (SR7/SR7E/SR8/SR8E)

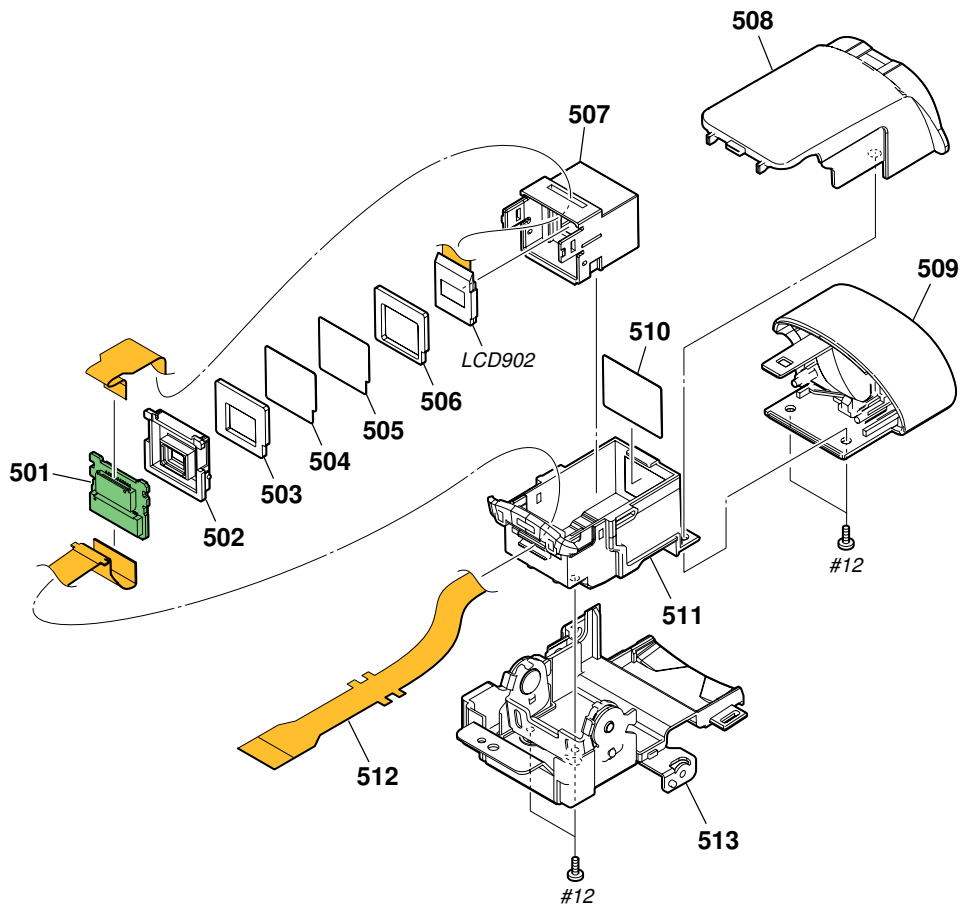

Ref. No.	Part No.	Description
501	A-1274-035-A	BL-013 BOARD, COMPLETE
502	2-664-672-01	GUIDE, LAMP
* 503	2-638-819-01	CUSHION, LCD
* 504	2-638-818-01	ILLUMINATOR
* 505	2-638-816-01	PLATE (TFT), DEFLECTION
506	2-664-671-01	SPACER, LCD
* 507	2-699-236-01	CABINET (222), INNER
508	3-213-061-01	CABINET (UPPER), VF (SR7:J)
508	3-213-061-11	CABINET (UPPER), VF (SR7:US, CND, E, KR, JE/SR7E/SR8/SR8E)


Ref. No.	Part No.	Description
509	X-2178-733-1	EYE CUP ASSY
* 510	2-668-134-01	PANEL (CF), POLARIZATION
511	3-213-062-01	CABINET (LOWER), VF
512	1-873-204-11	FP-728 FLEXIBLE BOARD
513	X-2178-732-1	BASE ASSY, VF TILT
LCD902	8-753-241-14	LCX076AKE-1
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-12. BT PANEL BLOCK

ns: not supplied

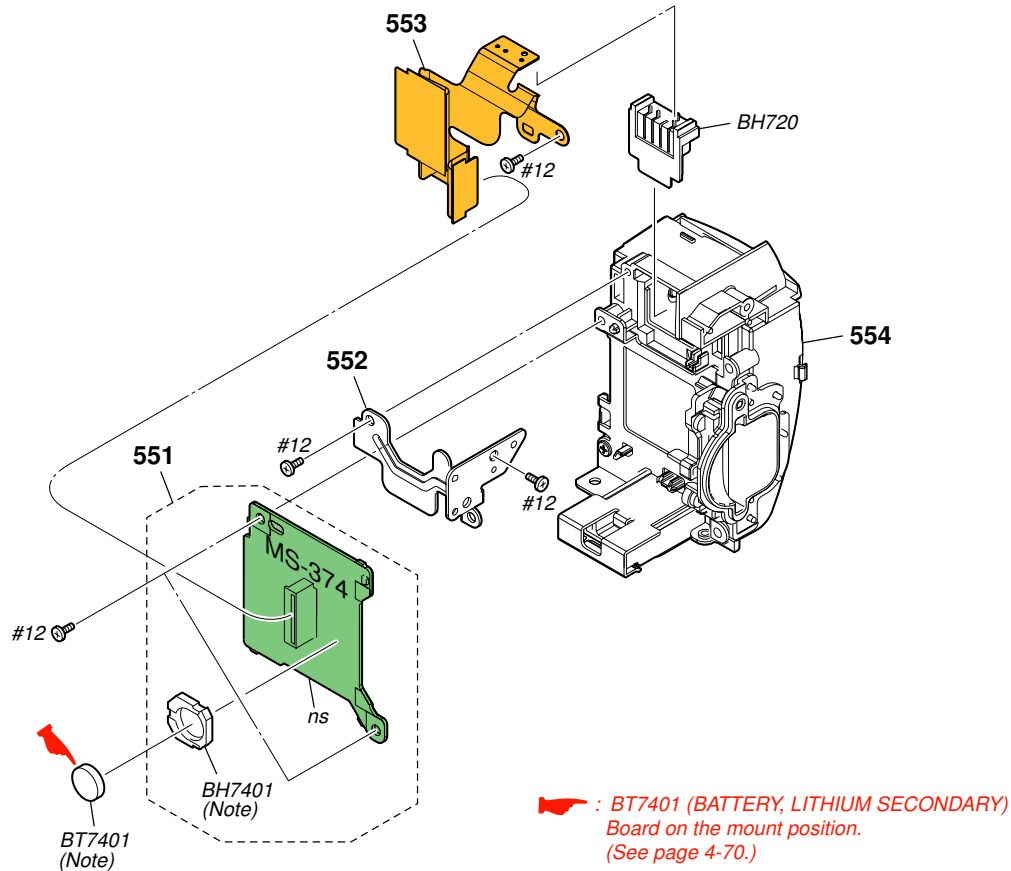

Note: Replace the battery holder (BH7401) together when replacing the lithium battery (BT7401) on MS-374 board.
(The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: MS-374基板のリチウム電池(BT7401)を交換する場合はバッテリーホルダ(BH7401)も同時に新品に交換して下さい。
(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

• Refer to page 5-1 for mark △.

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

注意
電池の交換は、正しく行わないと破裂する恐れがあります。電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。

Ref. No.	Part No.	Description
551	A-1274-037-A	MS-374 BOARD, COMPLETE
* 552	3-213-063-01	FRAME, BT TERMINAL
553	1-873-195-11	FP-720 FLEXIBLE BOARD
554	X-2178-731-1	PANEL ASSY, BT

Ref. No.	Part No.	Description
△ BH720	1-780-064-21	BATTERY TERMINAL BOARD
△ BH7401	1-756-615-31	HOLDER, BATTERY (Note)
△ BT7401	1-528-900-31	BATTERY, LITHIUM SECONDARY (Note)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)