

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1. EXPLODED VIEWS

5-1-1. OVERALL SECTION

ns: not supplied

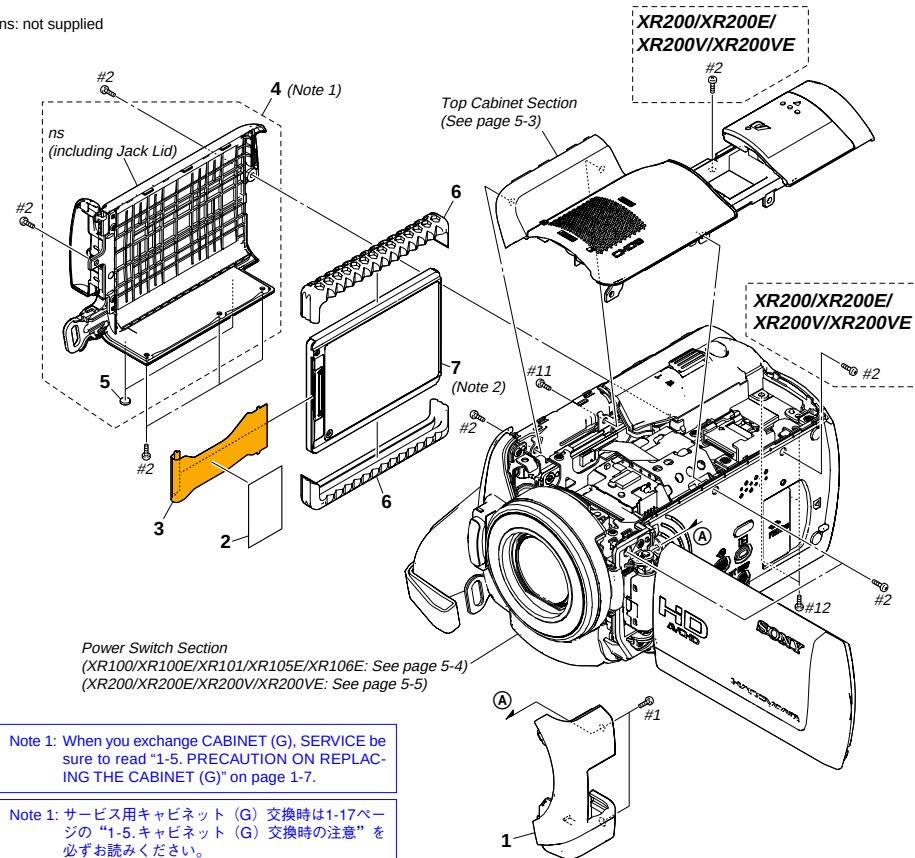

Note 1: When you exchange CABINET (G), SERVICE be sure to read "1-5. PRECAUTION ON REPLACING THE CABINET (G)" on page 1-7.

Note 1: サービス用キャビネット (G) 交換時は1-17ページの"1-5. キャビネット (G) 交換時の注意"を必ずお読みください。

Note 2: Do not factory check HDD in which Map Data is installed (XR200V/XR200VE).

Note 2: 地図データ入りHDD (XR200V/XR200VE) にはファクトリーチェックを行わないでください。


Ref. No.	Part No.	Description
1	X-2345-266-1	COVER (R (310)) ASSY, HINGE (XR200/XR200E/XR200V/XR200VE)
1	X-2345-267-1	COVER (R (309)) ASSY, HINGE (XR100: US, CND, J/XR101/XR106E)
1	X-2348-294-1	COVER (R (309B)) ASSY, HINGE (XR100: E, BR, KR, JE/XR100E/XR105E)
* 2	4-141-656-01	SHEET, ATA RADIATION
3	1-877-398-11	FP-1012 FLEXIBLE BOARD
4	(Note 1)	CABINET (G) ASSY
5	2-589-376-01	FOOT (395), RUBBER

Ref. No.	Part No.	Description
6	4-128-711-01	DAMPER B (1), 9STYLE
7	1-840-185-21	HDD (MK8031GAL-80GB) (XR100/XR100E/XR101/XR105E/XR106E)
7	1-840-186-21	HDD (MK1231GAL-120GB) (XR200/XR200E)
7	A-1707-463-A	HDD SERVICE 120G (XR200V/XR200VE) (Note 2)
#1	2-635-562-11	SCREW (M1.7) (Black)
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-2. TOP CABINET SECTION

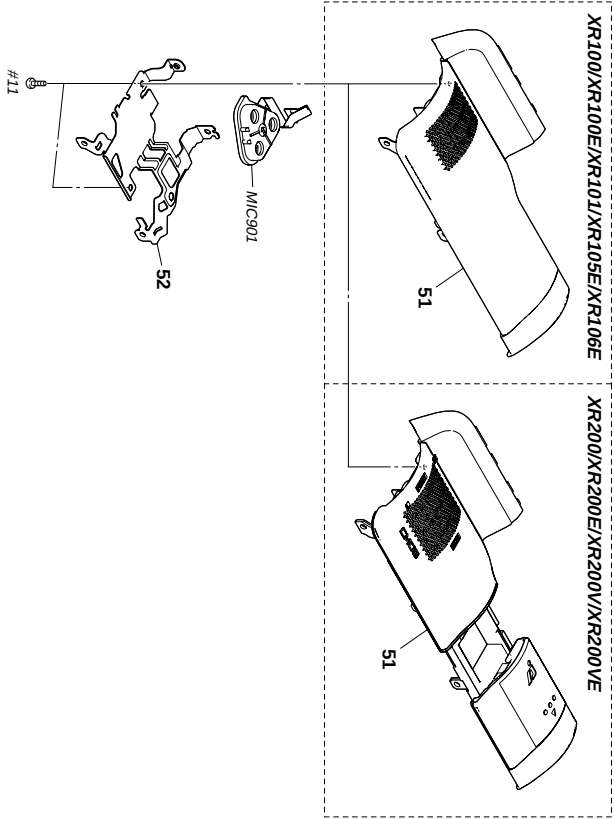

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
51	X-2345-270-1	CABINET (310) ASSY. TOP (XR200V/XR200VE)	* 52	4-132-269-01	RETAINER, MICROPHONE
51	X-2345-271-1	CABINET (N) ASSY. TOP (XR200/XR200E)	MIC901	1-542-771-61	MICROPHONE UNIT
51	X-2345-272-1	CABINET (309) ASSY. TOP (XR100: US. CND. J/XR101/XR106E)	#11	3-078-890-11	SCREW, TAPPING (Silver)
51	X-2348-285-1	CABINET (309B) ASSY. TOP (XR100: E. BR. KR. JE/XR100E/XR105E)			

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-3. POWER SWITCH SECTION
(XR100/XR100E/XR101/XR105E/XR106E)

Refer to page 5-5 about HDR-XR200/XR200E/XR200V/XR200VE.

ns: not supplied

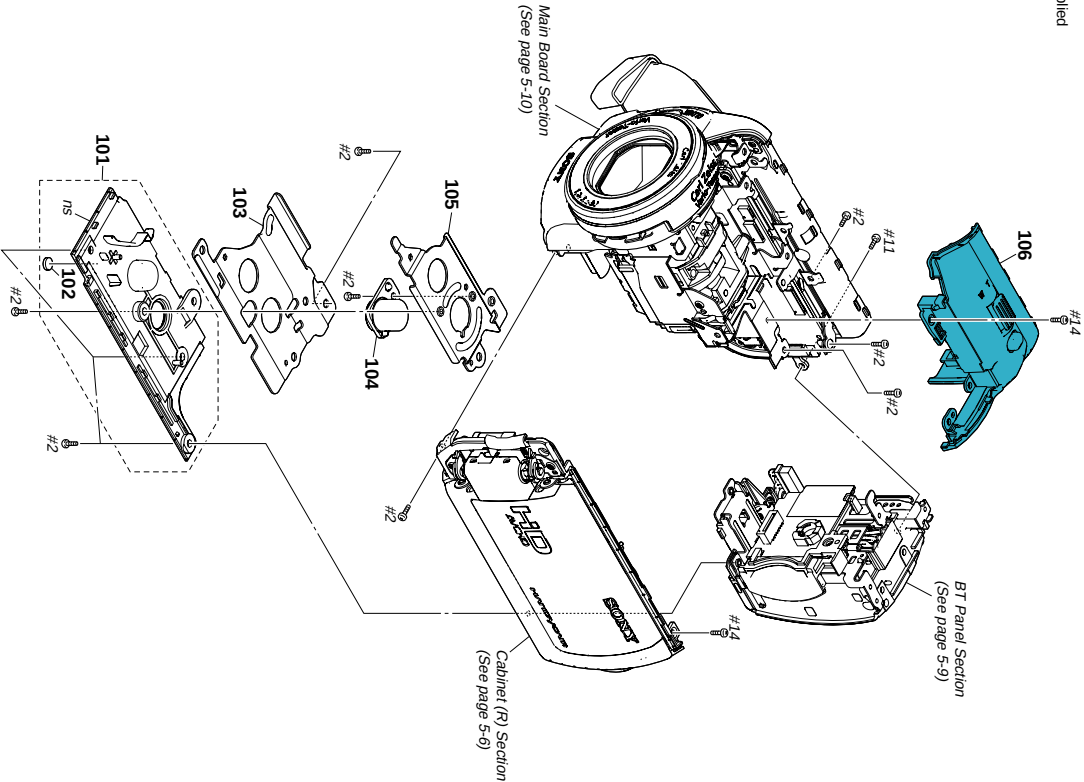

Refer to page 5-5 about HDR-XR200/XR200E/XR200V/XR200VE.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
101	X-2345-265-1	CABINET ASSY. BOTTOM	106	1-487-101-21	SWITCH BLOCK CONTROL (PS31000)
102	2-589-376-01	FOOT (395), RUBBER	#2	2-635-562-31	SCREW (M1.7) (Black)
* 103	4-132-317-01	HEAT SINK, BOTTOM	#11	3-073-890-11	SCREW, TAPPING (Silver)
104	3-283-643-01	SCREW, TRIP OD	#14	2-589-475-11	SCREW (M1.7) (Silver)
* 105	4-132-306-01	FRAME, BOTTOM			

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-4. POWER SWITCH SECTION
(KR200/KR200E/KR200V/KR200VE)

Refer to page 5-4 about HDR-XR100/
XR100E/XR101/XR105E/XR106E.

ns: not supplied

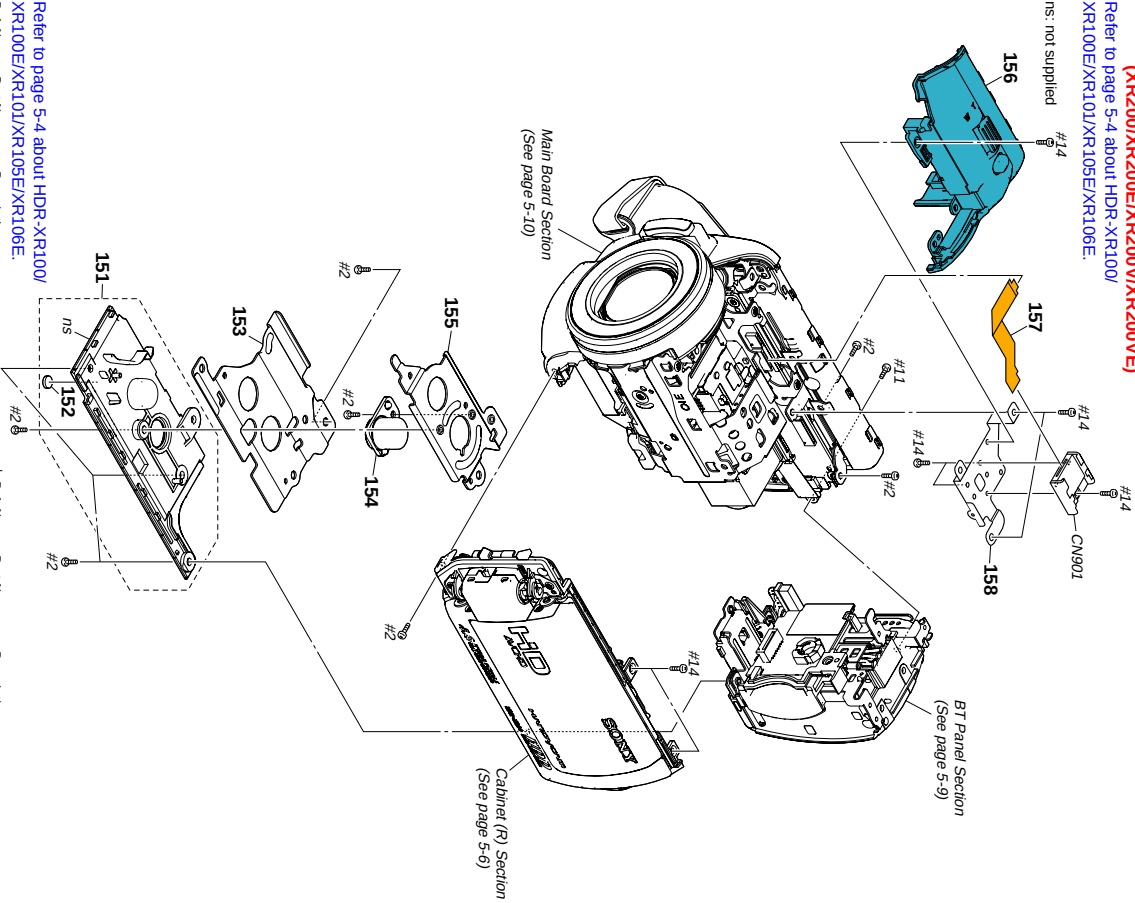

Ref. No.	Part No.	Description
151	X-2345-265-1	CABINET ASSY, BOTTOM
152	2-589-376-01	FOOT (395), RUBBER
* 153	4-132-317-01	HEAT SINK, BOTTOM
154	3-283-643-01	SCREW, TRIPPOD
* 155	4-132-306-01	FRAME, BOTTOM
156	1-487-101-11	SWITCH BLOCK, CONTROL (PS31000)


Ref. No.	Part No.	Description
157	1-877-403-11	FP-1017 FLEXIBLE BOARD
* 158	4-132-318-01	FRAME, SHOE
CN901	1-818-890-11	CONNECTOR, EXTERNAL (HOT SHOE)
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-5. CABINET (R) SECTION

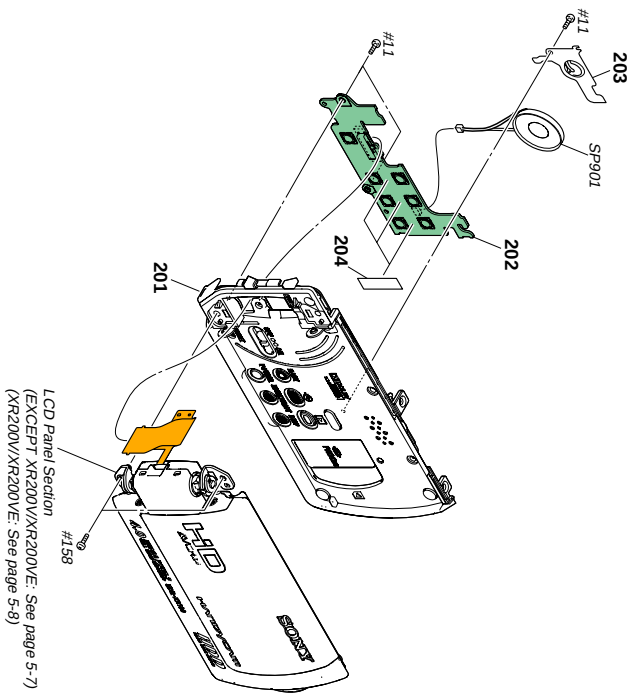

Ref. No.	Part No.	Description
201	X-2345-282-1	CABINET (R (310)) ASSY (XR200V/XR200VE)
201	X-2345-283-1	CABINET (R (N)) ASSY (XR200/XR200E)
201	X-2345-284-1	CABINET (R (309)) ASSY (XR100/XR100E/XR101/XR105E/XR105E)
202	A-1665-628-A	CK-205 BOARD, COMPLETE (XR200V/XR200VE)
202	A-1665-629-A	CK-205 BOARD, COMPLETE (XR200/XR200E)
202	A-1665-630-A	CK-210 BOARD, COMPLETE (XR100/XR100E/XR101/XR105E/XR105E)

Ref. No.	Part No.	Description
* 203	4-132-288-01	RETAINER, SP
* 204	4-140-602-01	SHEET, CK
SP901	1-825-262-82	LOUD SPEAKER (1.6CM)
#11	3-076-890-11	SCREW, TAPPING (Silver)
#158	2-660-401-51	SCREW (M1.7), NEW TRU-STAR, P2 (Red)

5. REPAIR PARTS LIST

DISASSEMBLY


HARDWARE LIST

5-1-6. LCD PANEL SECTION

(EXCEPT XR200V/XR200VE)

Refer to page 5-8 about HDR-XR200V/XR200VE.

ns: not supplied

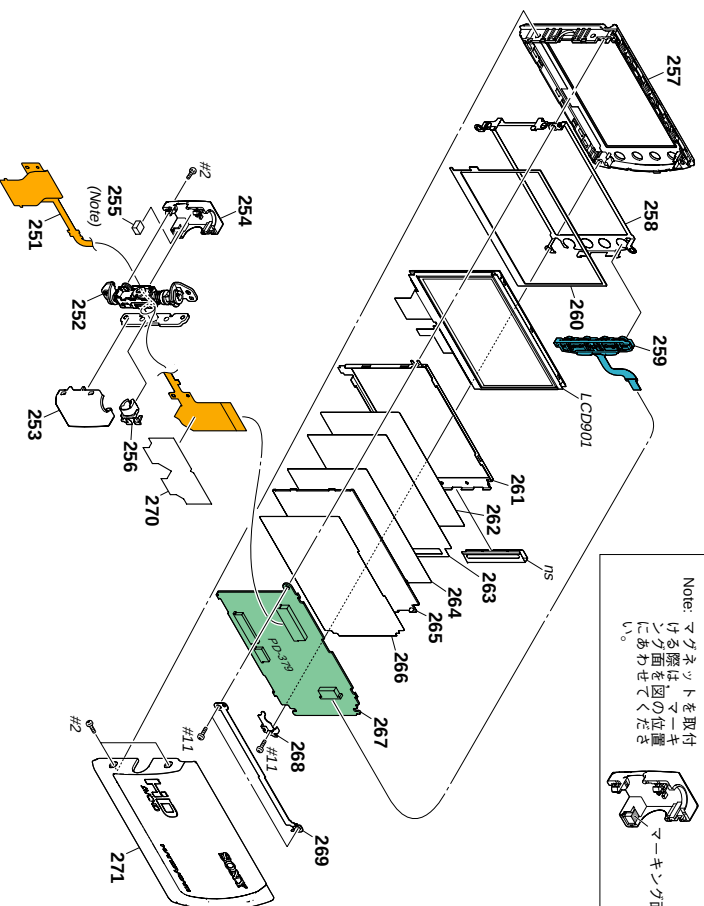

Note: Put the marking side together on the position of figure when you install the magnet.



Note: マグネットを、取付ける際は、マークの面を図の位置にあわせてください。



Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
251	1-877-411-11	FP-1025 FLEXIBLE BOARD	263	2-694-513-01	PRISM SHEET H (2.7)
252	X-2345-273-1	HINGE (NO) (09STYLE) ASSY	264	2-694-514-01	DIFFUSION SHEET (2.7)
253	4-132-272-01	COVER (O) (310), HINGE (XR200/XR200E)	265	2-666-901-01	LIGHT GUIDE (2.7)
253	4-132-279-01	COVER (O) (309), HINGE (XR100: US, CND, J/XR101/XR106E)	266	2-694-515-01	REFLECTION SHEET (2.7)
253	4-132-279-11	COVER (O) (309), HINGE (XR100: E, BR, KR, JE/XR106E/XR106E)	267	A-1665-625-A	PD-379 BOARD, COMPLETE
254	4-132-273-01	COVER (U) (310), HINGE (XR200/XR200E)	* 268	4-133-789-01	FRAME (LOWER), P
254	4-132-280-01	COVER (U) (309), HINGE (XR100/XR100E/XR101/XR106E/XR106E)	* 269	4-132-281-01	FRAME (UPPER), P
255	1-471-505-11	MAGNET (NEOS08W) (Note)	270	4-136-965-01	SHEET (309), PD RADIATION
256	2-668-087-01	CLAMP FLEXIBLE	271	X-2345-277-1	CABINET (C) (310) ASSY, P (XR200/XR200E)
257	4-132-271-01	CABINET (M) (310), P (XR200/XR200E)	271	X-2345-279-1	CABINET (C) (309), ASSY, P (XR100: US, CND, J/XR101/XR106E)
257	4-132-278-01	CABINET (M) (309), P (XR100/XR100E/XR101/XR106E/XR106E)	271	X-2345-280-1	CABINET (C) (01) ASSY, P (XR106E)
* 258	4-132-275-01	PLATE, P GROUND	271	X-2345-281-1	CABINET (C) (D1) ASSY, P (XR106E)
259	1-487-053-11	SWITCH BLOCK, CONTROL (SB30300)	271	X-2345-350-1	CABINET (C) (CA) ASSY, P (XR101)
260	4-132-277-01	CUSHION, TP	271	X-2348-293-1	CABINET (C) (309B) ASSY, P (XR100: E, BR, KR, JE/XR106E)
261	2-694-516-01	FRONT FRAME (2.7)			
262	2-694-512-01	PRISM SHEET V (2.7)			

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-7. LCD PANEL SECTION

(XR200V/XR200VE)

Refer to page 5-7 about except HDR-XR200V/XR200VE.

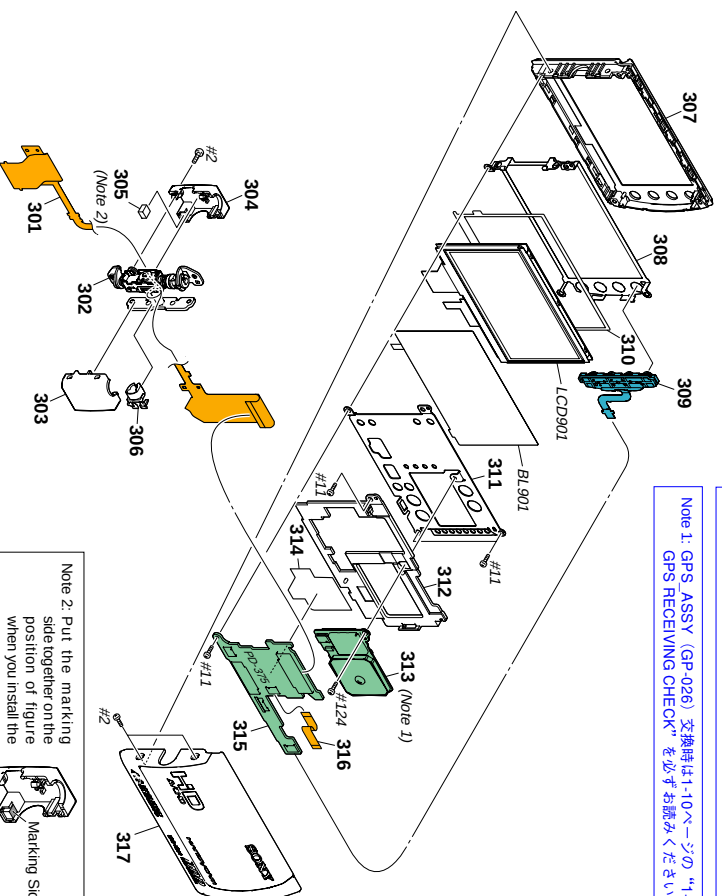


Note 1: When you exchange GPS_ASSY (GP-026), be sure to read "1-6. GPS RECEIVING CHECK" on page 1-10.

Note 1: GPS_ASSY (GP-026) 交換時は1-10ページの“1-6. GPS RECEIVING CHECK”を必ずお読みください。

Note 2: Put the marking side together on the position of figure when you install the magnet.



 Note 2: マグネットを取付ける際は、マーキング面を図の位置にあわせてください。



Refer to page 5-7 about except HDR-XR200V/XR200VE.

Ref. No.	Part No.	Description
301	1-877-406-11	FP-1020 FLEXIBLE BOARD
302	X-2345-273-1	HINGE (NO) (ORSTYLE) ASSY
303	4-132-272-01	COVER (O (310)), HINGE
304	4-132-273-01	COVER (U (310)), HINGE
305	1-471-505-11	MAGNET (NE050BW) (Note 2)
306	2-668-087-01	CLAMP, FLEXIBLE
307	4-132-271-01	CABINET (M (310)), P
* 308	4-132-275-01	PLATE, P GROUND
309	1-487-100-11	SWITCH BLOCK, CONTROL (SBS1000)
310	4-132-277-01	CUSHION, TP
* 311	4-132-276-01	FRAME, P


Ref. No.	Part No.	Description
* 312	4-132-274-01	MOLD, INNER
313	A-1665-623-A	GPS_ASSY (GP-026) (Note 1)
314	4-136-970-01	SHEET (310), PD RADIATION
315	A-1665-624-A	PD-375 BOARD, COMPLETE
316	1-877-407-11	FP-1021 FLEXIBLE BOARD
317	X-2345-277-1	CABINET (G (310)) ASSY, P
BL901	1-480-681-11	BLOCK, LIGHT GUIDE PLATE (2.7)
LCD901	A-1228-786-A	TP BLOCK ASSY (ZTSH6U07)
#2	2-635-562-31	SCREW (M1.7) (Black)
#11	3-078-890-11	SCREW, TAPPING (Silver)
#124	2-599-475-01	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-8. BT PANEL SECTION

ns: not supplied

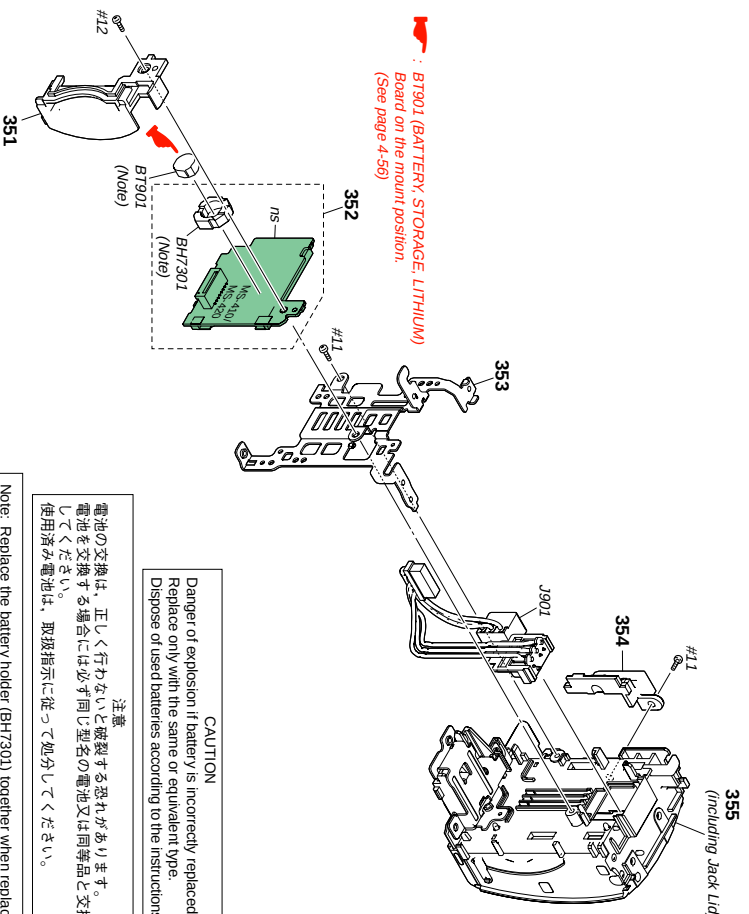

CAUTION
Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意
電池の交換は、正しく行わないと爆発する恐れがあります。
電池を交換する場合には必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

Note: Replace the battery holder (BH7301) together when replacing the lithium battery (BT901) on the MS-410/MS-420 board. (The battery holder removed once cannot be used again).
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: MS-410/MS-420基板的リチウム電池 (BT901) を交換する場合は、バッテリーホルダ (BH7301) も同時に新品に交換してください。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

• Refer to page 5-1 for mark Δ.


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 351	4-132-290-01	HOLDER, MS	355	X-2945-285-1	PANEL ASSY, BT (including Jack Lid)
352	A-1671-280-A	MS-410 BOARD, COMPLETE (XR200/XR200E/XR200V/XR200VE)	Δ BH7301	1-756-615-61	HOLDER, BATTERY (Note)
352	A-1671-335-A	MS-420 BOARD, COMPLETE (XR100/XR100E/XR101/XR105E/XR106E)	Δ BT901	1-756-134-12	BATTERY, STORAGE, LITHIUM (Note)
* 353	4-132-291-01	FRAME, BT	Δ J901	1-822-410-31	DC JACK
* 354	4-132-289-01	RETAINER, DC JACK	#11	3-078-890-11	SCREW, TAPPING (Silver)
			#12	3-080-204-21	SCREW, TAPPING, P2 (Black)

5. REPAIR PARTS LIST

DISASSEMBLY

HARDWARE LIST

5-1-9. MAIN BOARD SECTION

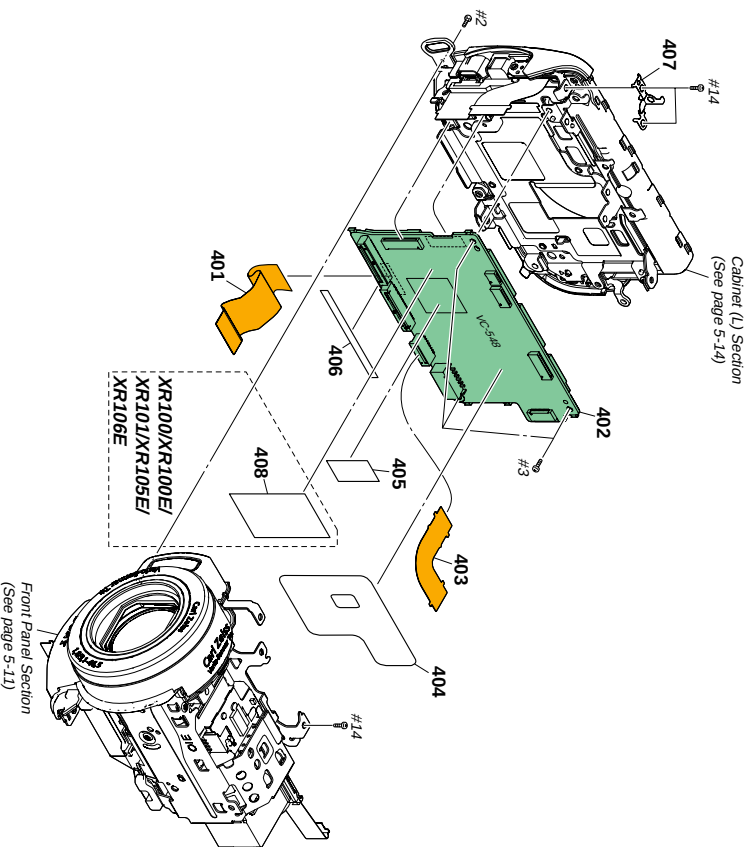


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
401	1-877-400-11	FP-1014 FLEXIBLE BOARD	403	1-877-401-11	FP-1015 FLEXIBLE BOARD
402	A-1705-314-A	VC-548 BOARD, COMPLETE (SERVICE)	404	4-132-315-01	LABEL, RISE
402	A-1705-315-A	VC-548 BOARD, COMPLETE (SERVICE)	405	4-132-316-01	SHEET, AG RADIATION
402	A-1705-316-A	VC-548 BOARD, COMPLETE (SERVICE)	* 406	4-140-951-01	SHEET, VC RADIATION
402	A-1705-317-A	VC-548 BOARD, COMPLETE (SERVICE)	* 407	4-139-504-01	SHEET METAL (L (309)), G
402	A-1705-318-A	VC-548 BOARD, COMPLETE (SERVICE)	* 407	4-139-505-01	SHEET METAL (L (310)), G
402	A-1705-319-A	VC-548 BOARD, COMPLETE (SERVICE)	* 408	4-141-957-01	SHEET (309), AG RADIATION
402	A-1705-320-A	VC-548 BOARD, COMPLETE (SERVICE)	#2	2-635-562-31	SCREW (M1.7) (Black)
			#3	2-660-401-01	SCREW (M1.7), NEW TRU-STAR, P2 (Red)
			#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST


DISASSEMBLY

HARDWARE LIST

5-1-10. FRONT PANEL SECTION

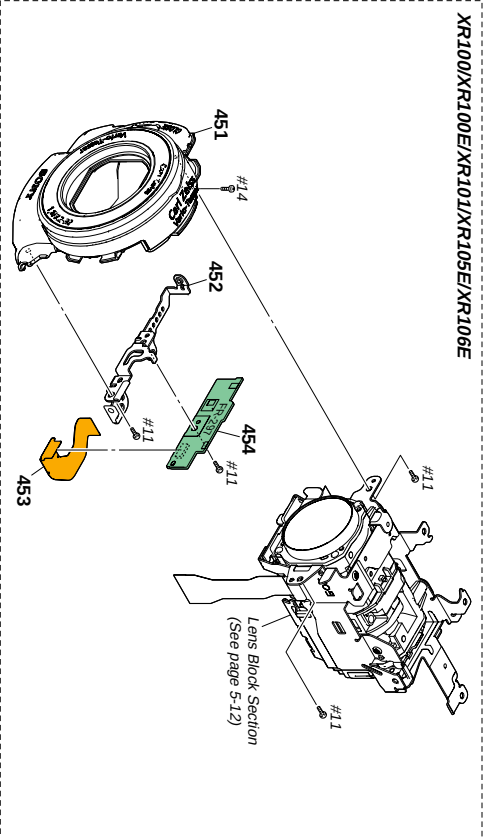

XR200/XR200E/XR200V/XR200VE

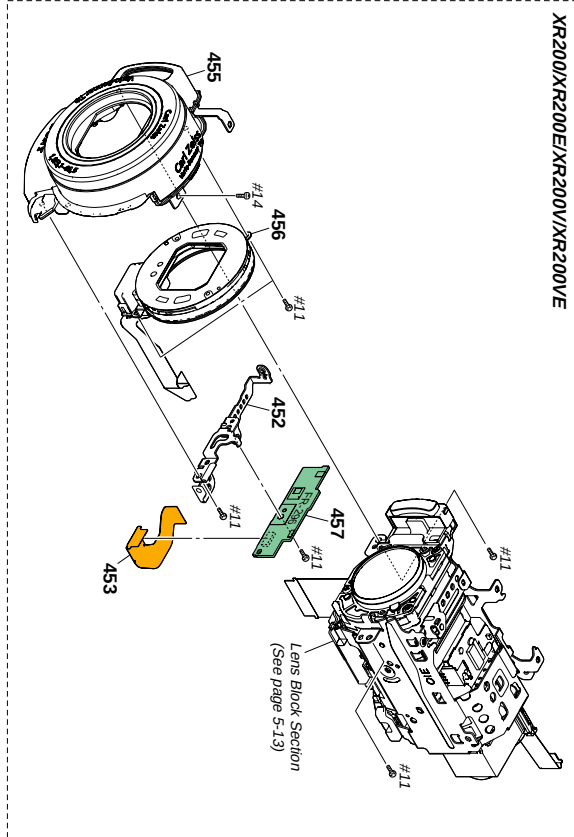


Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
451	X-2345-287-1	PANEL (309) ASSY. F (XR100: US, CND, JYXR101/XR106E)	455	X-2345-286-1	PANEL (310) ASSY. F (XR200/XR200E/XR200V/XR200VE)
451	X-2348-292-1	PANEL (309B) ASSY. F (XR100: E, BR, KR, JE/RX100E/XR105E)	456	A-1419-023-A	LENS BARRIER UNIT (XR200/XR200E/XR200V/XR200VE)
* 452	A-132-305-01	PLATE, FR FIXED	457	A-1705-271-A	FR-286 BOARD, COMPLETE (SERVICE) (XR200/XR200E/XR200V/XR200VE)
453	1-877-399-11	FR-291 BOARD, COMPLETE	#11	3-078-880-11	SCREW, TAPPING (Silver)
454	A-1671-284-A	(XR100/XR100E/XR101/XR105E/XR106E)	#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-11. LENS BLOCK SECTION
(XR100/XR100E/XR101/XR101E/XR105E/XR106E)
Refer to page 5-13 about HDR-XR200/XR200E/XR200V/XR200VE.

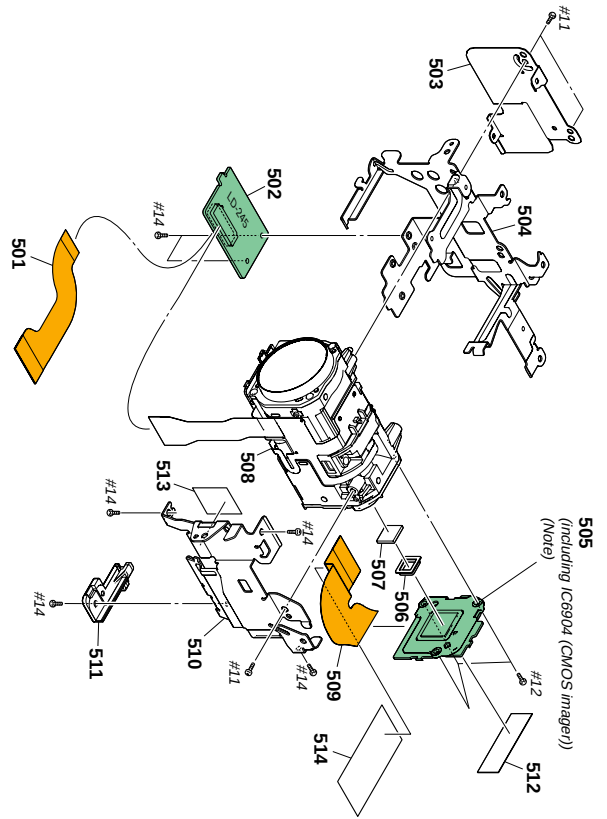

Refer to page 5-13 about HDR-XR200/XR200E/XR200V/XR200VE.

Ref. No.	Part No.	Description
501	1-877-412-11	FP-1026 FLEXIBLE BOARD
502	A-1671-294-A	LD-245 BOARD, COMPLETE
* 503	4-132-302-01	HEAT SINK (A (309)) VC
* 504	4-132-300-01	FRAME (L (309)), LENS
505	A-1671-378-A	CM-102 BOARD, COMPLETE (including IC6904 (CMOS imager)) (Note)
506	3-279-478-01	RUBBER (CH001), SEAL
507	1-788-916-11	OPTICAL FILTER BLOCK (OPB-05-09)
508	1-788-863-11	OPTICAL UNIT (CH002)
509	1-877-413-11	FP-1027 FLEXIBLE BOARD

Ref. No.	Part No.	Description
* 510	4-132-301-01	FRAME (R (309)), LENS
* 511	4-132-303-01	CLAMP (309) CM FLEXIBLE
512	4-132-304-01	SHEET (309) CM RADIATION
513	4-136-865-01	SHEET, LF (RADIATION)
* 514	4-144-535-01	SHEET (310), CM RADIATION
#11	3-078-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-559-475-11	SCREW (M1.7) (Silver)


Note: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.
Note: イメージャの交換時は4-4ページの“イメージャ交換時の注意”を必ずお読みください。

5. REPAIR PARTS LIST

5-1-12. LENS BLOCK SECTION

(XR200/XR200E/XR200V/XR200VE)

Refer to page 5-12 about HDR-XR100/
XR100E/XR101/XR105E/XR106E.

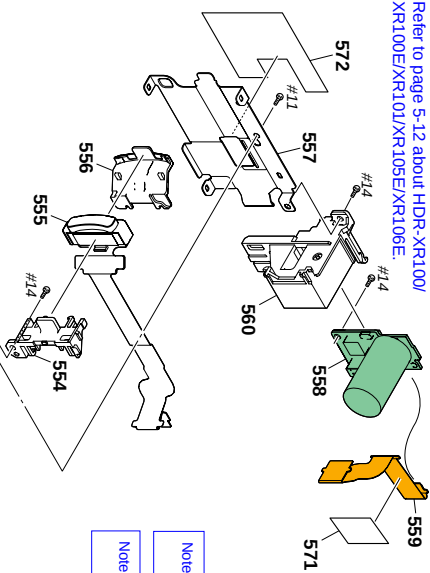

Note: Be sure to read "Precautions for Replacement of Imager" on page 4-3 when changing the imager.


Note: イメージの交換時は4-4ページの「イメージ交換時の注意」を必ずお読みください。

HARDWARE LIST

Refer to page 5-12 about HDR-XR100/
XR100E/XR101/XR105E/XR106E.

• Refer to page 5-1 for mark Δ.

Ref. No.	Part No.	Description
551	1-877-394-11	PP-1008 FLEXIBLE BOARD
552	A-1671-293-A	LD-244 BOARD, COMPLETE
* 553	4-132-293-01	FRAME (L (310)), LENS
* 554	4-132-298-01	HOLDER, ST
Δ 555	1-480-263-41	FLASH UNIT
* 556	4-132-299-01	GUARD, ST
* 557	4-132-295-01	HEAT SINK (A (310)), VC
558	A-1671-289-A	ST-206 BOARD, COMPLETE
559	1-877-402-11	FP-1016 FLEXIBLE BOARD
* 560	4-132-296-01	HOLDER, CAPACITOR
561	A-1671-595-A	CMOS BLOCK ASSY (1260SC) (including CM-101 complete board and IC8304 (CMOS Imager)) (Note)
562	3-217-744-01	RUBBER (1260), SEAL
563	1-786-709-11	OPTICAL FILTER BLOCK (OPB-03-37)

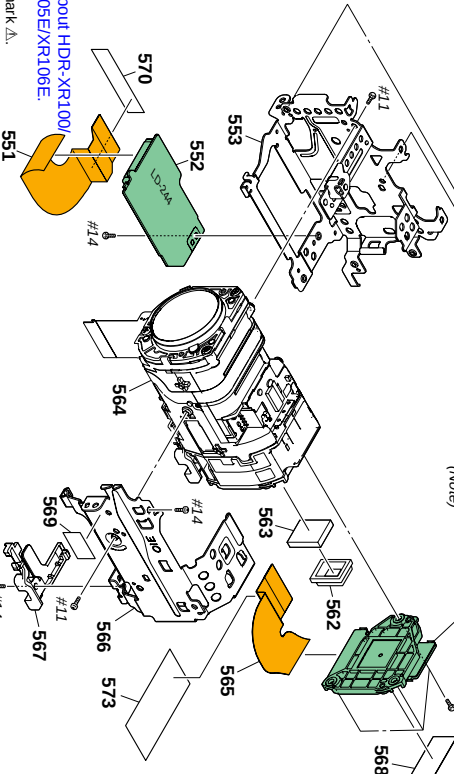


Ref. No.	Part No.	Description
564	A-1497-728-A	LSV-1260A (SERVICE)
565	1-877-413-11	PP-1027 FLEXIBLE BOARD
* 566	4-132-294-01	FRAME (R (310)), LENS
* 567	4-132-297-01	CLAMP (310), CM FLEXIBLE
568	3-295-427-01	SHEET (700), CM RADIATION
569	4-136-969-01	SHEET, LF (RADIATION)
* 570	4-141-654-01	SHEET (310), LD RADIATION
* 571	4-141-655-01	SHEET (310), ST RADIATION
572	4-135-260-01	SHEET (310), AG RADIATION
* 573	4-144-535-01	SHEET (310), CM RADIATION
#11	3-076-890-11	SCREW, TAPPING (Silver)
#12	3-080-204-21	SCREW, TAPPING, P2 (Black)
#14	2-599-475-11	SCREW (M1.7) (Silver)

5. REPAIR PARTS LIST

HARDWARE LIST

5-1-13. CABINET (L) SECTION

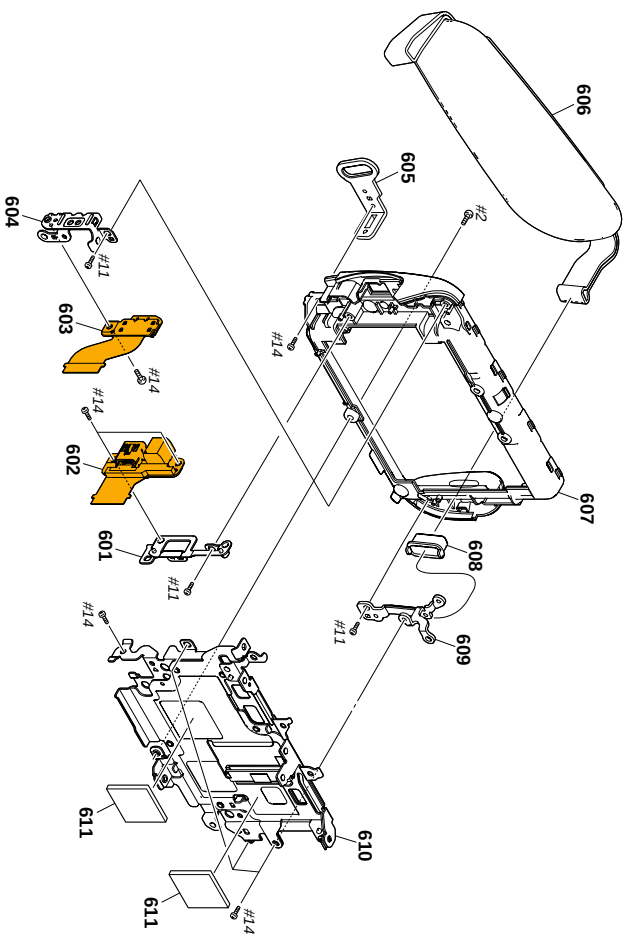

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
* 601	4-132-312-01	PLATE, AD FIXED	* 608	4-132-310-01	GUARD BELT
602	A-1671-288-A	FP-1011 FLEXIBLE BOARD, COMPLETE	* 609	4-132-309-01	PLATE (R), STRAP
603	A-1671-287-A	FP-1010 FLEXIBLE BOARD, COMPLETE	610	X-2345-268-1	FRAME ASSY, MAIN
* 604	4-132-311-01	PLATE, HD FIXED	611	4-132-314-01	SHEET (B), VC RADIATION
* 605	4-132-308-01	PLATE (F), STRAP	#2	2-635-562-31	SCREW (M1.7) (Black)
606	2-664-928-41	BELT, GRP	#11	3-078-890-11	SCREW, TAPPING (Silver)
607	X-2348-598-1	CABINET (L) ASSY	#14	2-599-475-11	SCREW (M1.7) (Silver)

5-2. ELECTRICAL PARTS LIST

Ref. No.	Part No.	Description
	A-1665-628-A	CK-205 BOARD, COMPLETE (XR200V/XR200VE)
	A-1665-629-A	CK-205 BOARD, COMPLETE (XR200V/XR200E)
	A-1665-630-A	CK-210 BOARD, COMPLETE (XR100V/XR100E/XR101V/XR105E/XR106E)

	< CAPACITOR >	
C5802	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
	< CONNECTOR >	
* CN5801	1-819-781-61	CONNECTOR, FPC (ZIF) 45P
* CN5802	1-819-572-51	FPC/CONNECTOR, FPC (LIF (NON-ZIF)) 30P
CN5803	1-778-506-21	PIN, CONNECTOR (PC BOARD) 2P
	< RESISTOR >	
RS801	1-218-957-11	METAL CHIP 2.2K 5% 1/16W
RS802	1-218-958-11	METAL CHIP 2.7K 5% 1/16W
RS807	1-218-960-11	METAL CHIP 3.9K 5% 1/16W
RS811	1-218-964-11	METAL CHIP 8.2K 5% 1/16W
	< SWITCH >	
SS801	1-771-138-21	SWITCH, KEY BOARD (RESET)
SS802	1-771-138-21	SWITCH, KEY BOARD (EASY)
SS803	1-771-138-21	SWITCH, KEY BOARD (DISC BURH)
SS804	1-771-138-21	SWITCH, KEY BOARD (▶)
SS805	1-771-138-21	SWITCH, KEY BOARD (DISP)
SS808	1-771-138-21	SWITCH, KEY BOARD (NIGHTSHOT)
	(XR200V/XR200E/XR200V/XR200VE)	
SS810	1-771-731-21	SWITCH, SLIDE (GPS)
SS811	1-771-138-21	SWITCH, KEY BOARD (POWER)
	< SENSOR >	
* SE5801	1-487-118-21	GMR SENSOR

	A-1671-595-A	CMOS BLOCK ASSY (1260SC) (XR200V/XR200E/XR200V/XR200VE)
	(Not supplied)	CM-101 BOARD, COMPLETE (XR200V/XR200E/XR200V/XR200VE)

	(IC8304 (CMOS imager) and CM-101 complete board are not supplied, but they are included in CMOS block assy (1260SC).)	
	< CAPACITOR >	
C8306	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8309	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8310	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8311	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C8312	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8313	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8314	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C8315	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8316	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C8317	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8318	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8319	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8320	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V

CK-205/CK-210

CM-101

CM-102

Ref. No.	Part No.	Description
C8321	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8323	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8324	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8325	1-164-937-11	CERAMIC CHIP 0.001uF 10% 50V
C8326	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8327	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8328	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8329	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8330	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8332	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C8340	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8341	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C8343	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
	< CONNECTOR >	
* CN8301	1-821-501-11	CONNECTOR, FPC (ZIF) 51P
	< IC >	
* IC8303	6-708-455-01	IC R11140271D-TR-FA
IC8304	(Not supplied)	IMX030CHR-13 (CMOS imager) (Note)
	(IC8304 is supplied including in CMOS block assy (1260SC).)	
	< LINE FILTER >	
* LF8301	1-457-648-21	COMMON MODE CHOKE COIL
* LF8302	1-457-648-21	COMMON MODE CHOKE COIL
* LF8303	1-457-648-21	COMMON MODE CHOKE COIL
* LF8304	1-457-648-21	COMMON MODE CHOKE COIL
* LF8305	1-457-648-21	COMMON MODE CHOKE COIL
	< RESISTOR >	
RS8312	1-218-953-11	METAL CHIP 1K 5% 1/16W
RS8316	1-218-941-81	METAL CHIP 100 5% 1/16W
RS8318	1-208-927-11	METAL CHIP 47K 0.5% 1/16W

A-1671-378-A	CM-102 BOARD, COMPLETE (XR100V/XR100E/XR101V/XR105E/XR106E)	

(IC6904 (CMOS imager) is not supplied, but this is included in CM-102 complete board.)		
< CAPACITOR >		
C6906	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6909	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6910	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6911	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C6912	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6913	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6914	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C6915	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6916	1-165-884-11	CERAMIC CHIP 2.2uF 10% 6.3V
C6917	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V

Note: Be sure to read "Precautions for Replacement of Image" on page 4-3 when changing the imager.

Note: イメージャの交換時は4ページの“イメージャ交換時の注意”を必ずお読みください。

Electrical parts list of the FR-296, FR-297, LD-244 and LD-245 boards are not shown. Pages 5-17 to 5-19 are not shown.

Ref. No.	Part No.	Description			
06918	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06919	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06920	1-165-884-11	CERAMIC CHIP	2.2uF	10%	6.3V
06921	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06923	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06924	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06925	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
06926	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06927	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06928	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06929	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06930	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06932	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06933	1-164-937-11	CERAMIC CHIP	0.001uF	10%	50V
06940	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06941	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06943	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
< CONNECTOR >					
< IC >					
* IC6903 6-708-465-01 IC R11140271D-TR-FA					
IC6904 (Not supplied) ASM030MR-CB-A (CMOS imager) (Note)					
(IC6904 is supplied including in CM-102 complete board.)					
< LINE FILTER >					
* LF6901 1-457-648-21 COMMON MODE CHOKE COIL					
* LF6902 1-457-648-21 COMMON MODE CHOKE COIL					
* LF6903 1-457-648-21 COMMON MODE CHOKE COIL					
* LF6904 1-457-648-21 COMMON MODE CHOKE COIL					
* LF6905 1-457-648-21 COMMON MODE CHOKE COIL					
< RESISTOR >					
R6912	1-218-963-11	METAL CHIP	1K	5%	1/16W
R6916	1-218-941-81	METAL CHIP	100	5%	1/16W
R6918	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
A-1671-287-A FP-1010 FLEXIBLE BOARD, COMPLETE					

< CONNECTOR >					
CN7101 1-821-166-21 CONNECTOR, HDMI (HDMI OUT)					
A-1671-288-A FP-1011 FLEXIBLE BOARD, COMPLETE					

< CONNECTOR >					
CN7202	1-819-436-11	CONNECTOR (SQUARE TYPE) (USB) 5P			
CN7203	1-815-794-13	CONNECTOR (MULTIPLE) (AV/R)			
< LINE FILTER >					
LF7201	1-457-223-11	COMMON MODE CHOKE COIL			
< RESISTOR >					
R7201	1-216-809-11	METAL CHIP	100	5%	1/10W

Note: Be sure to read "Precautions for Replacement of Image" on page 4-3 when changing the image.

Note: イメージの交換時は4ページの“イメージ交換時の注意”を必ずお読みください。

MS-410MS-420

PD-375

Ref.No.	PartNo.	Description
	A-1671-280-A	MS-410 BOARD, COMPLETE (XR200/XR200E/XR200V/XR200VE)
	A-1671-335-A	MS-420 BOARD, COMPLETE (XR100/XR100E/XR101/XR105E/XR106E) ***** (BT901 is not included in MS-410MS-420 complete board.)
	< BATTERY HOLDER >	
	Δ BH7301	1-756-615-61 HOLDER, BATTERY (Note)
	< BATTERY >	
	Δ BT901	1-756-134-12 BATTERY, STORAGE, LITHIUM (Note)
	< CAPACITOR >	
C7305	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
	< CONNECTOR >	
CN7301	1-779-332-51	CONNECTOR, FFC/PPC 16P
* CN7302	1-819-980-21	MEMORY STICK DUO CONNECTOR 10P
	< DIODE >	
D7301	6-501-216-01	DIODE CL-271HR-C-TS (MS ACCESS)
	< FERRITE BEAD >	
FB7301	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7302	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7303	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
FB7304	1-469-580-21	INDUCTOR, FERRITE BEAD (1005)
	< RESISTOR >	
R7303	1-218-944-11	METAL CHIP 180 5% 1/16W
R7304	1-218-944-11	METAL CHIP 180 5% 1/16W
R7305	1-218-944-11	METAL CHIP 180 5% 1/16W
R7306	1-218-944-11	METAL CHIP 180 5% 1/16W
	A-1665-624-A	PD-375 BOARD, COMPLETE (XR200V/XR200VE) *****
	< CAPACITOR >	
C6101	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6102	1-100-581-81	CERAMIC CHIP 0.0047uF 10% 50V
C6103	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6104	1-119-750-11	TANTAL. CHIP 22uF 20% 6.3V
C6105	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6108	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6109	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6110	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6113	1-127-760-11	CERAMIC CHIP 4.7uF 10% 6.3V
C6114	1-125-889-11	CERAMIC CHIP 2.2uF 10% 10V
C6116	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V
C6117	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6118	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
* C6119	1-100-741-81	CERAMIC CHIP 5600PF 5% 50V
C6121	1-165-908-11	CERAMIC CHIP 1uF 10% 10V
C6125	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V
C6126	1-100-567-81	CERAMIC CHIP 0.01uF 10% 25V

• Refer to page 5-1 for mark Δ.

Ref.No.	PartNo.	Description
C6127	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6128	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
C6129	1-125-777-11	CERAMIC CHIP 0.1uF 10% 10V
	< CONNECTOR >	
* CN6101	1-691-394-51	CONNECTOR, FFC/PPC 30P
* CN6102	1-794-322-51	FFC/CONNECTOR, FPC (ZIF) 6P
CN6103	1-816-654-61	FFC/PPC CONNECTOR (LIF) 6P
CN6104	1-816-654-61	FFC/PPC CONNECTOR (LIF) 6P
* CN6105	1-819-913-71	CONNECTOR, FPC (ZIF) 24P
CN6106	1-816-654-61	FFC/PPC CONNECTOR (LIF) 6P
	< DIODE >	
D6104	6-502-150-01	DIODE MA2SD32068S0
D6105	6-502-150-01	DIODE MA2SD32068S0
	< IC >	
* IC6101	6-710-240-01	IC IR3Y65M4
	< COIL >	
L6101	1-400-588-11	INDUCTOR 10uH
L6102	1-400-588-11	INDUCTOR 10uH
L6103	1-400-588-11	INDUCTOR 10uH
	< TRANSISTOR >	
O6101	8-729-427-37	TRANSISTOR XR411F-TXE
O6102	8-729-427-67	TRANSISTOR XR421F-TXE
O6107	6-550-150-01	TRANSISTOR SSM3J09FU (TE88L)
O6108	6-550-119-01	TRANSISTOR DTJ144EMF5612L
O6110	8-729-053-84	TRANSISTOR SSM3K09FU (TSLSONY1)
O6111	6-551-184-01	TRANSISTOR MCH6305-TL-E-S
O6112	6-551-184-01	TRANSISTOR MCH6305-TL-E-S
	< RESISTOR >	
R6101	1-218-957-11	METAL CHIP 2.2K 5% 1/16W
R6102	1-218-955-11	METAL CHIP 1.5K 5% 1/16W
R6105	1-218-954-11	METAL CHIP 1.2K 5% 1/16W
R6111	1-218-936-11	METAL CHIP 39 5% 1/16W
R6112	1-218-965-11	METAL CHIP 10K 5% 1/16W

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
Dispose of used batteries according to the instructions.

注意

電池の交換は、正しく行わないと破裂する恐れがあります。
電池を交換するには必ず同じ型名の電池又は同等品と交換してください。
使用済み電池は、取扱指示に従って処分してください。

Note: Replace the battery holder (BH7301) together when replacing the lithium battery (BT901) on the MS-410MS-420 board.
(The battery holder removed once cannot be used again.)
When mounting these parts, mount new battery holder first and attach new lithium battery next.

Note: MS-410/MS-420基板のリチウム電池 (BT901) を交換する場合はバッテリーホルダ (BH7301) も同時に新品に交換してください。(一度使用したバッテリーホルダは再使用できません。)
部品取り付けの際は、先にバッテリーホルダを取り付けてからリチウム電池を装着してください。

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
R6115	1-218-975-11	METAL CHIP	68K	5%	1/16W
R6119	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R6120	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R6141	1-218-981-91	METAL CHIP	220K	5%	1/16W
< COMPOSITION CIRCUIT BLOCK >					
R66102	1-234-381-21	RES. NETWORK	100K (1005X4)		
< SENSOR >					
< CAPACITOR >					
06101	1-100-581-81	CERAMIC CHIP	0.0047uF	10%	50V
06102	1-100-581-81	CERAMIC CHIP	0.0047uF	10%	50V
06103	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
06104	1-119-750-11	TANTAL. CHIP	22uF	20%	6.3V
06105	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06108	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
06109	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
06110	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
06113	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
06114	1-125-889-11	CERAMIC CHIP	2.2uF	10%	10V
06116	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
06117	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06118	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
* 06119	1-100-741-81	CERAMIC CHIP	560PF	5%	50V
06121	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
06125	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
06126	1-100-567-81	CERAMIC CHIP	0.01uF	10%	25V
06127	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06128	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
06129	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
< CONNECTOR >					
CN6101	1-815-031-51	FFC/CONNECTOR, FPC (ZIF) 24P			
* CN6102	1-794-322-51	FFC/CONNECTOR, FPC (ZIF) 6P			
CN6103	1-691-370-51	CONNECTOR, FFC/FPC (ZIF) 6P			
* CN6105	1-819-913-71	CONNECTOR, FPC (ZIF) 24P			
< DIODE >					
D6104	6-502-150-01	DIODE	MA2SD320G8S0		
D6105	6-502-150-01	DIODE	MA2SD320G8S0		
* D6106	6-501-597-01	DIODE	NSSW0080D1-1108 (BACKLIGHT)		
* D6107	6-501-597-01	DIODE	NSSW0080D1-1108 (BACKLIGHT)		
* D6108	6-501-597-01	DIODE	NSSW0080D1-1108 (BACKLIGHT)		
< IC >					
* IC6101	6-710-240-01	IC	IR3V65M4		
< COIL >					
L6101	1-400-588-11	INDUCTOR	10uH		
L6102	1-400-588-11	INDUCTOR	10uH		
L6103	1-400-588-11	INDUCTOR	10uH		
< TRANSISTOR >					
* 06101	8-729-427-37	TRANSISTOR	XP411F-TXE		
06102	8-729-427-67	TRANSISTOR	XP421F-TXE		
06107	6-550-150-01	TRANSISTOR	SSM3J09FU (TE8L)		
06108	6-550-119-01	TRANSISTOR	DTIC144EMF5612L		
06110	8-729-053-84	TRANSISTOR	SSM3K09FU (75LS0N1)		
06111	6-551-184-01	TRANSISTOR	MCH6305-TL-E-S		
06112	6-551-184-01	TRANSISTOR	MCH6305-TL-E-S		
< RESISTOR >					
R6101	1-218-957-11	METAL CHIP	22K	5%	1/16W
R6102	1-218-955-11	METAL CHIP	13K	5%	1/16W
R6105	1-218-954-11	METAL CHIP	1.2K	5%	1/16W
R6111	1-218-936-11	METAL CHIP	39	5%	1/16W
R6112	1-218-965-11	METAL CHIP	10K	5%	1/16W
R6115	1-218-975-11	METAL CHIP	68K	5%	1/16W
R6119	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R6120	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R6141	1-218-981-91	METAL CHIP	220K	5%	1/16W
< COMPOSITION CIRCUIT BLOCK >					
R66102	1-234-381-21	RES. NETWORK	100K (1005X4)		
< SENSOR >					
< CAPACITOR >					
C5003	1-125-777-11	CERAMIC CHIP	0.1uF	10%	10V
C5004	1-114-238-91	CERAMIC CHIP	22uF	20%	10V
C5005	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C5006	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
C5007	1-162-915-11	CERAMIC CHIP	10PF	0.5Pf	50V
Δ* C5008	1-116-036-11	ELECT	80uF		315V
< CONNECTOR >					
CN5001	1-779-332-51	CONNECTOR, FFC/FPC 16P			
CN5003	1-816-645-61	FFC/FPC CONNECTOR (LH) 14P			
< DIODE >					
D5001	6-500-619-01	DIODE	RBS20S-40TE61		
Δ D5002	6-501-095-01	DIODE	CRH02 (TE85R)		
< IC >					
Δ* IC5001	6-712-975-01	IC	BD4215NUV-E2		
< COIL >					
* L5001	1-400-820-11	INDUCTOR	2.2uH		
< TRANSISTOR >					
Δ* 06002	6-552-144-01	TRANSISTOR	TIG62TS-TL-E		
* 06003	6-551-852-01	TRANSISTOR	UP04313608S0		

* Refer to page 5-1 for mark Δ.

Ref. No.	Part No.	Description
< RESISTOR >		
R5008	1-208-923-11	METAL CHIP 33K 0.5% 1/16W
R5009	1-208-911-11	METAL CHIP 10K 0.5% 1/16W
R5010	1-216-829-11	METAL CHIP 4.7K 5% 1/10W
R5015	1-216-805-11	METAL CHIP 47 5% 1/10W
R5016	1-218-989-11	METAL CHIP 1M 5% 1/16W

< TRANSFORMER >


 
Δ* T5001 1-445-491-21 D.C.-D.C.CONVERTER TRANSFORMER

Electrical parts list of the VC-548 board is not shown.
Pages 5-23 to 5-30 are not shown.


• Refer to page 5-1 for mark Δ.

• EXCEPT J MODEL
Checking supplied accessories.

to J MODEL

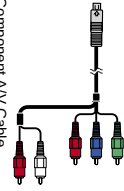	AC Adaptor (AC-L200C/AC-L200D) Δ 1-487-150-21 (EXCEPT BR)		Power Cord Δ 1-832-121-41 (CH) Δ 1-832-169-41 (UK, HK) Δ 1-832-892-41 (KR) Δ 1-834-482-31 (AEP, NE, E: PAL) Δ 1-834-484-31 (US, CND) Δ 1-834-852-11 (E: NTSC) Δ 1-835-983-11 (AUS) Δ 1-836-251-11 (JE)		Conversion (2P) Adaptor Δ 1-569-007-12 (E: NTSC, JE)
	Component A/V Cable 1-834-646-11		A/V Connecting Cable 1-823-156-51		USB Cable 1-829-868-31
	Wireless Remote Commander (RMT-335) 1-479-275-11 (XR200/XR200E/ XR200V/XR200VE)		Rechargeable Battery Pack NP-FH60 Δ A-1201-668-A (CH) Δ A-1599-883-A (US, CND) Δ A-1599-884-A (EXCEPT US, CND, CH)		

 • Refer to page 5-1 for mark Δ



Operating Guide

HDR-XR100/XR101/XR200/XR200V

4-121-425-11 (ENGLISH, SPANISH) (US, CND, E, JE)
4-121-425-21 (FRENCH) (CND)
4-121-425-32 (PORTUGUESE) (JE)
4-121-425-42 (TRADITIONAL CHINESE) (E)
4-121-425-52 (KOREAN) (KR, JE)

HDR-XR100E/XR105E/XR106E/XR200E/XR200VE

4-121-426-12 (ENGLISH) (AEP, UK, E, HK, AUS, JE)
4-121-426-22 (FRENCH, GERMAN, ITALIAN, DUTCH) (AEP)
4-121-426-32 (SPANISH, PORTUGUESE, TURKISH, GREEK) (AEP)
4-121-426-42 (CZECH, HUNGARIAN, SLOVAK, POLISH) (AEP)
4-121-426-52 (SWEDISH, DANISH, FINNISH, ROMANIAN) (AEP)
4-121-426-62 (RUSSIAN, UKRAINIAN) (NE, JE)
4-121-426-72 (TRADITIONAL CHINESE) (HK)
4-121-426-82 (SIMPLIFIED CHINESE) (E, JE)
4-121-426-92 (ARABIC, PERSIAN) (E)
4-131-022-11 (SIMPLIFIED CHINESE) (CH)



How To Use GPS

HDR-XR200V/XR200VE

4-135-833-11 (ENGLISH, SPANISH, FRENCH)
4-135-833-21 (GERMAN, DUTCH, PORTUGUESE,
ITALIAN, GREEK, TURKISH, POLISH,
CZECH, HUNGARIAN, SLOVAK,
ROMANIAN, SWEDISH, DANISH, FINNISH)
(AEP)



CD-ROM
"Handycam Application Software"
("PMB" (software, including "PMB Guide")
"Handycam Handbook" (PDF))
4-121-422-01
(XR100/XR100E/XR101/XR105E/XR106E)
4-136-320-01
(XR200/XR200E/XR200V/XR200VE)



Handycam Handbook (PDF)

The CD-ROM supplied contains all of language version of the Handycam Handbook (PDF) for printing.
• The printed matter is not supplied. If required, please order it with the part number below.

• (Only for destination Japanese model)
日本国内については日本語での部品供給可能です。

HDR-XR100

HDR-XR100/XR101/XR200/XR200V

* 4-121-423-11 (ENGLISH)
* 4-121-423-21 (FRENCH)
* 4-121-423-31 (SPANISH)
* 4-121-423-41 (PORTUGUESE)
* 4-121-423-51 (TRADITIONAL CHINESE)
* 4-121-423-61 (KOREAN)
* 4-121-424-11 (ENGLISH)
* 4-121-424-21 (FRENCH)
* 4-121-424-31 (GERMAN)
* 4-121-424-41 (ITALIAN)
* 4-121-424-51 (DUTCH)
* 4-121-424-61 (SPANISH)
* 4-121-424-71 (PORTUGUESE)
* 4-121-424-81 (TURKISH)
* 4-121-424-91 (GREEK)
* 4-131-019-11 (CZECH)
* 4-131-019-21 (HUNGARIAN)
* 4-131-019-31 (SLOVAK)
* 4-131-019-41 (POLISH)
* 4-131-019-51 (SWEDISH)
* 4-131-019-61 (DANISH)
* 4-131-019-71 (FINNISH)
* 4-131-019-81 (ROMANIAN)
* 4-131-019-91 (RUSSIAN)
* 4-131-020-11 (UKRAINIAN)
* 4-131-020-21 (TRADITIONAL CHINESE)
* 4-131-020-31 (SIMPLIFIED CHINESE)
* 4-131-020-41 (ARABIC)
* 4-131-020-51 (PERSIAN)
* 4-131-020-61 (MALAY)
* 4-131-020-71 (INDONESIAN)
* 4-131-020-81 (THAI)

• J MODEL
付属品



 
ACアダプター
(AC-L200C/AC-L200D)
△ 1.487-150-21




電源コード
△ 1.836-251-11



取扱説明書
4-121-425-01 (日本語)



D端子AVケーブル
1.834-646-21

 


AV接続ケーブル
1.823-156-51



CD-ROM
「Handycam Application Software」
「Picture Motion Browser」(ソフトウェア)
「PMB」(PMBガイド)を含むソフトウェア/
「ハンディカムハンドブック」(PDF)
4-121-422-01



 USBケーブル
1.829-868-31



リチウムイオンバッテリー
パック NP-FH60
△ A-1201-665-A



 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
ハンディカムハンドブック (PDF)

印刷用のハンディカムハンドブック (PDF) は、
全品対応の言語が付属品CD-ROMに含まれています。
必要に応じて、下部の品番表に添付の文を参照してください。





















4-121-423-01 (日本語)

• △マークについては、5-1ページを参照して下さい。
















HARDWARE LIST (1/8)

#1: M1.7 X 2.5 (Black) 2-635-562-11 	#2: M1.7 X 4.0 (Black) 2-635-562-31 	#3: M1.7 X 2.5 (Red) 2-660-401-01 	#4: M1.4 X 2.5 (Trapping) (Dark Silver) 3-348-998-81 
#5: M1.7 X 3.5 (Trapping) (Black) 3-080-204-01 	#6: M1.4 X 1.7 (Silver) 2-598-474-01 	#7: M1.7 X 1.6 (Black) 7-627-552-18 	#8: M1.7 X 3.5 (Trapping) (Silver) 3-078-890-01 
#9: M1.7 X 5.0 (Trapping) (Silver) 3-085-890-21 	#10: M1.7 X 4.0 (Silver) 2-599-475-31 	#11: M1.7 X 4.0 (Trapping) (Silver) 3-078-890-11 	#12: M1.7 X 5.0 (Trapping) (Black) 3-080-204-21 
#13: M1.7 X 2.5 (Trapping) (Silver) 3-085-397-01 	#14: M1.7 X 2.5 (Silver) 2-599-475-11 	#15: M1.4 X 1.5 (Silver) 3-062-214-01 	#16: M1.4 X 2.5 (Silver) 2-586-337-01 
#17: M1.7 X 1.5 (Silver) 2-586-389-01 	#18: M1.4 X 2.5 (Silver) 2-535-591-21 	#19: M1.2 X 4.0 (Trapping) (Red) 3-086-156-21 	#20: M1.4 X 3.0 (Silver) 2-635-591-31 





















HARDWARE LIST (2/8)

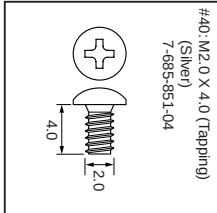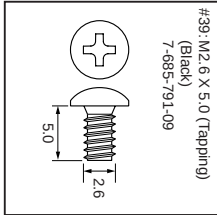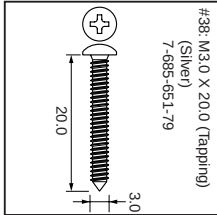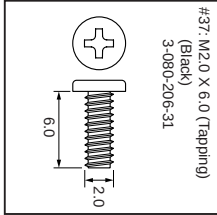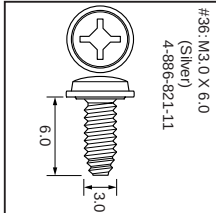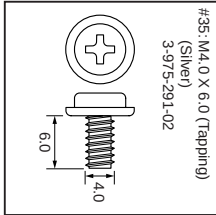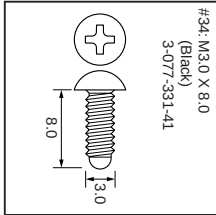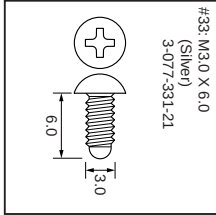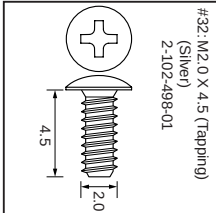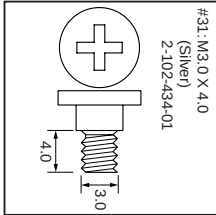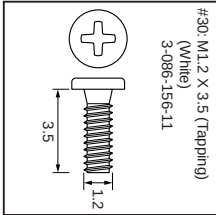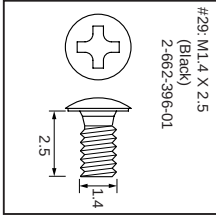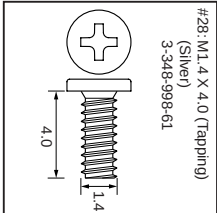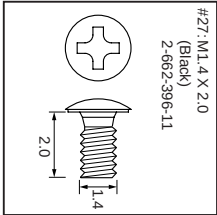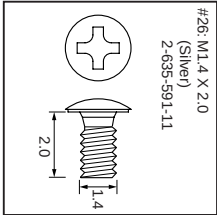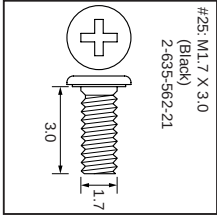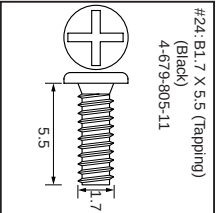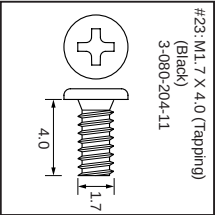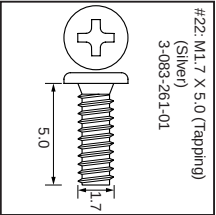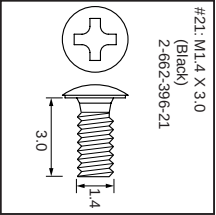





















HARDWARE LIST (3/8)
               
#41: M3.0 X 8.0 (Tapping) (Silver) 3-065-748-01 	#42: M2.0 X 4.0 (Tapping) (Silver) 7-628-253-00 	#43: M1.7 X 4.0 (Red) 2-660-401-31 	#44: M1.7 X 3.0 (Tapping) (Silver) 3-078-890-61 
#45: M1.4 X 2.5 (Silver) 2-587-151-01 	#46: M1.7 X 3.0 (Red) 2-660-401-11 	#47: M1.4 X 3.0 (Tapping) (Silver) 2-665-774-01 	#48: M1.7 X 2.5 (Silver) 3-973-497-91 
#49: M2.0 X 4.0 (Black) 2-630-005-31 	#50: M2.0 X 3.0 (Red) 2-891-494-11 	#51: M2.0 X 2.5 (Silver) 3-073-686-01 	#52: M2.0 X 4.0 (Tapping) (Black) 3-080-206-11 
#53: M2.0 X 5.0 (Tapping) (Black) 3-080-206-21 	#54: M1.75 X 6.0 (Tapping) (Black) 3-318-203-11 	#55: M2.0 X 4.0 (Silver) 2-655-582-11 	#56: M2.0 X 3.5 (Silver) 3-067-187-11 
#57: M1.7 X 4.0 (Black) 7-627-852-18 	#58: M2.0 X 6.0 (Tapping) (Silver) 3-719-408-11 	#59: M2.0 X 5.0 (Tapping) (Silver) 3-080-205-21 	#60: M2.6 X 5.0 (Black) 3-061-062-11 





















HARDWARE LIST (4/8)

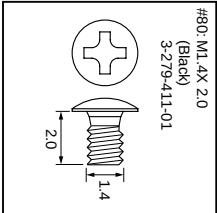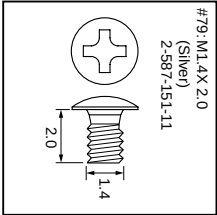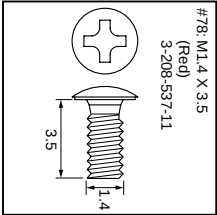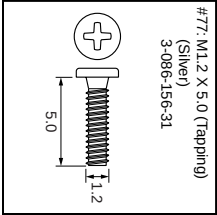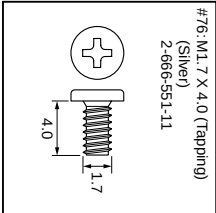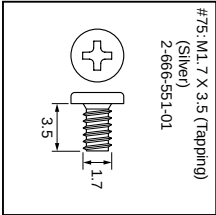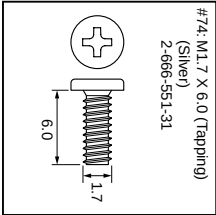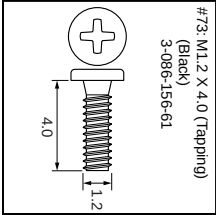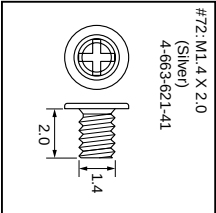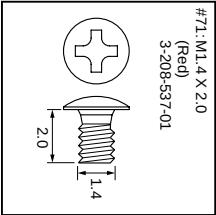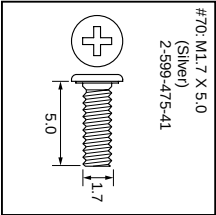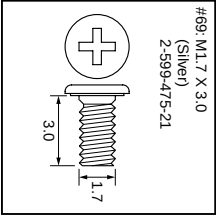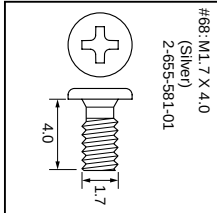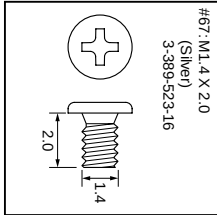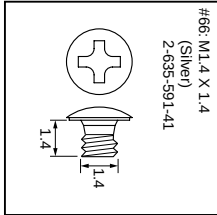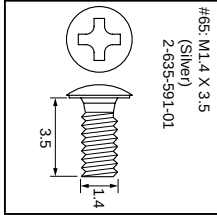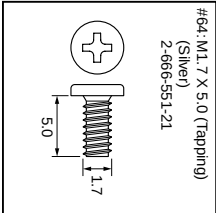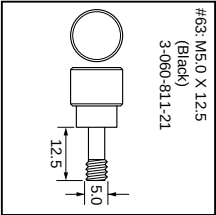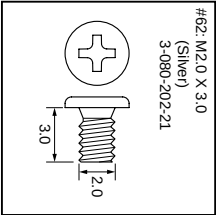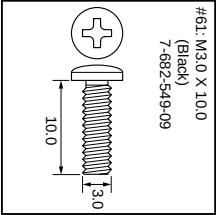





















HARDWARE LIST (5/8)

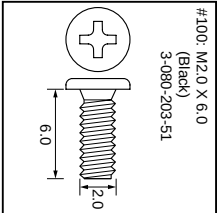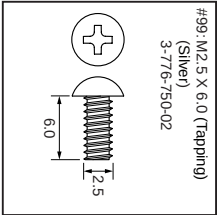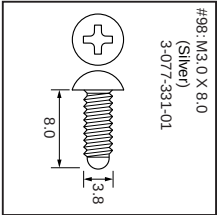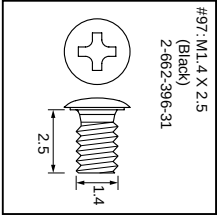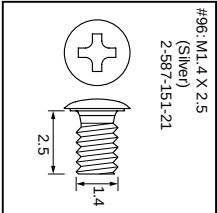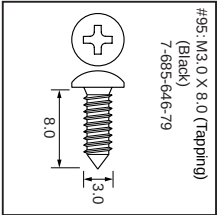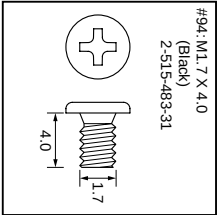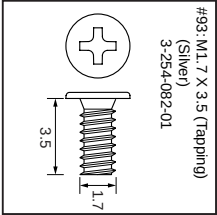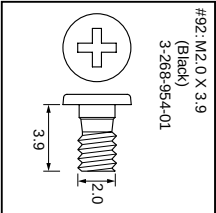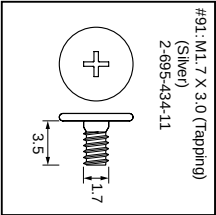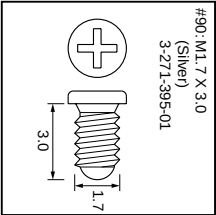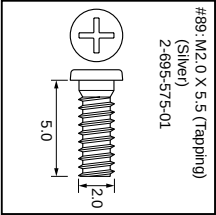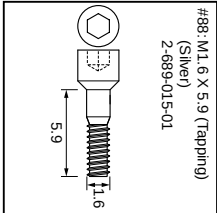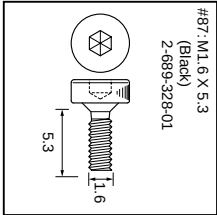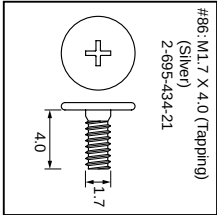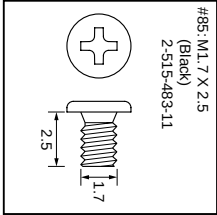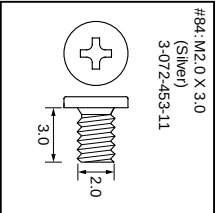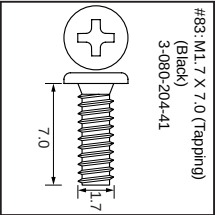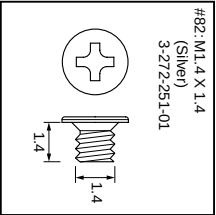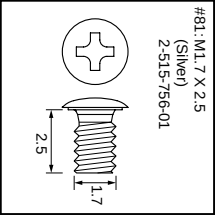




















HARDWARE LIST (6/8)

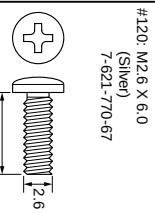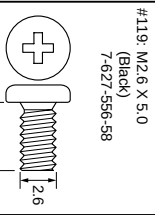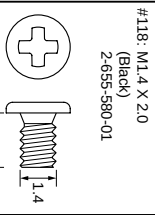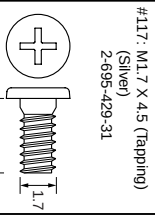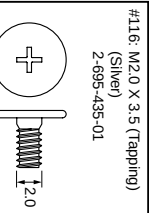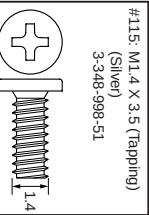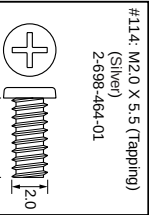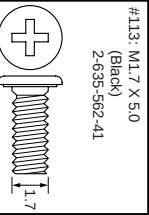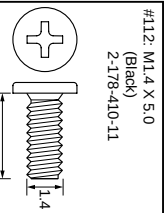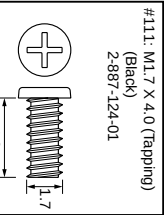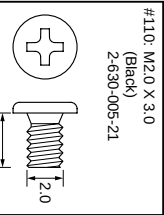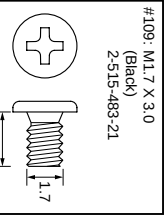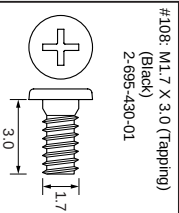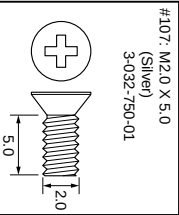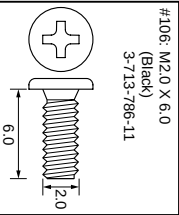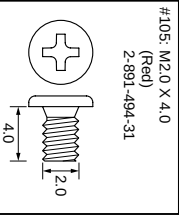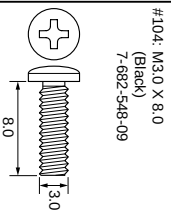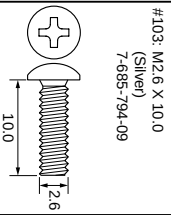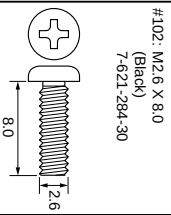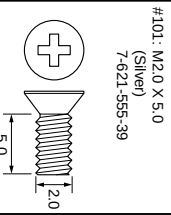

HARDWARE LIST (7/8)
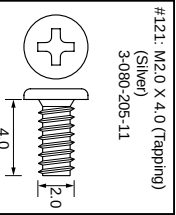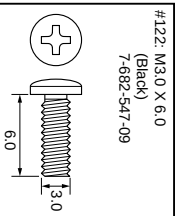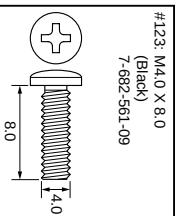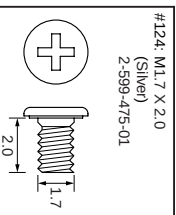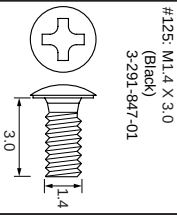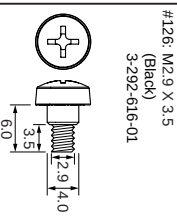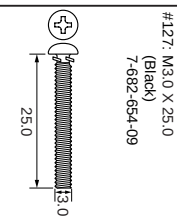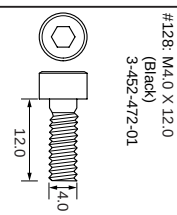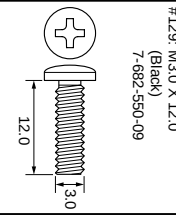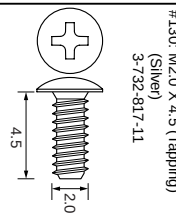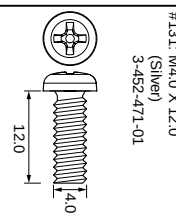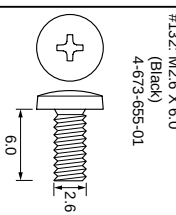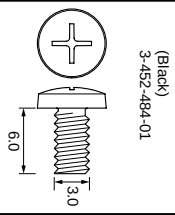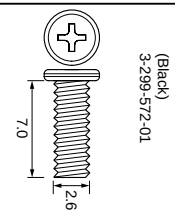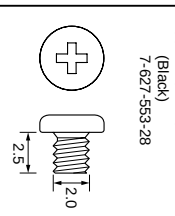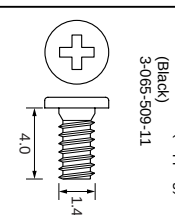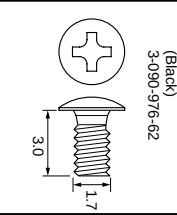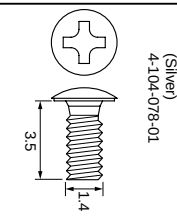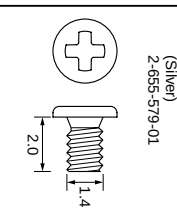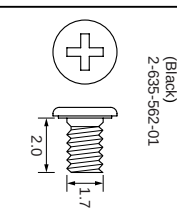
#121: M2.0 X 4.0 (Tapping) (Silver) 3-080-205-11 	#122: M3.0 X 6.0 (Black) 7-682-547-09 	#123: M4.0 X 8.0 (Black) 7-682-561-09 	#124: M1.7 X 2.0 (Silver) 2-599-475-01 
#125: M1.4 X 3.0 (Black) 3-291-847-01 	#126: M2.9 X 3.5 (Black) 3-292-616-01 	#127: M3.0 X 25.0 (Black) 7-682-654-09 	#128: M4.0 X 12.0 (Black) 3-452-472-01 
#129: M3.0 X 12.0 (Black) 7-682-550-09 	#130: M2.0 X 4.5 (Tapping) (Silver) 3-732-817-11 	#131: M4.0 X 12.0 (Silver) 3-452-471-01 	#132: M2.6 X 6.0 (Black) 4-673-655-01 
#133: M3.0 X 6.0 (Black) 3-452-484-01 	#134: M2.6 X 7.0 (Black) 3-299-572-01 	#135: M2.0 X 2.5 (Black) 7-627-553-28 	#136: M1.4 X 4.0 (Tapping) (Black) 3-065-509-11 
#137: M1.7 X 3.0 (Black) 3-090-976-62 	#138: M1.4 X 3.5 (Silver) 4-104-078-01 	#139: M1.4 X 2.0 (Silver) 2-655-579-01 	#140: M1.7 X 2.0 (Black) 2-635-562-01 

HARDWARE LIST (8/8)

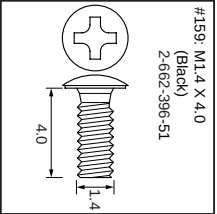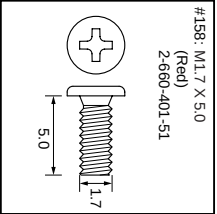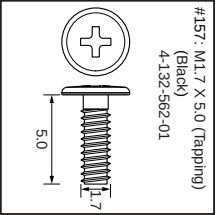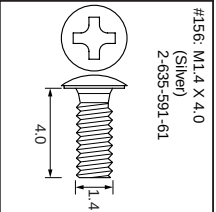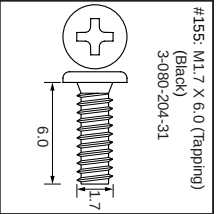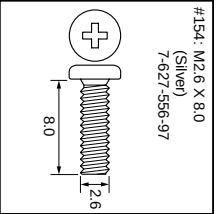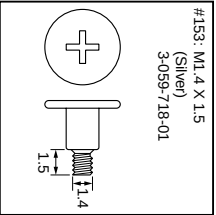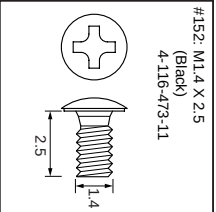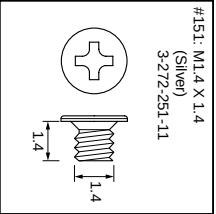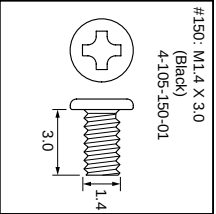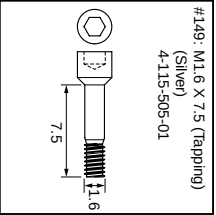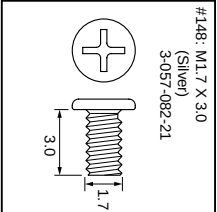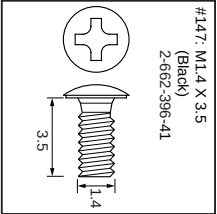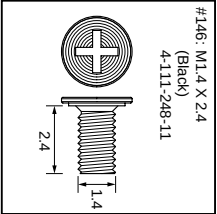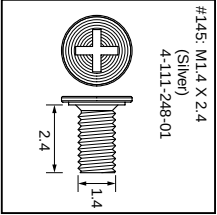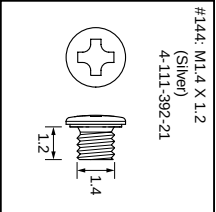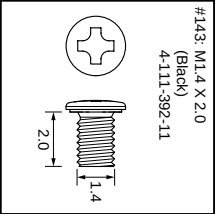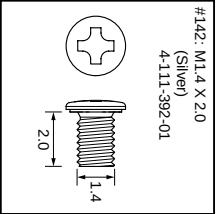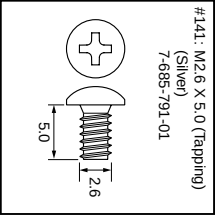

Revision History

Ver.	Date	History	Contents	S.M. Rev. issued
1.0	2009.01	Official Release	—	—
1.1	2009.02	Revised-1 (A1 DI08-334)	• Addition of Model Information Table • Correction of Service Note • Correction of Schematic Diagrams S.M. revised: Page 5, Page 1-7, Page 1-8, Page 1-12, Page 1-17, Page 1-18, 4-2. Schematic Diagrams, Page 4-41	Yes