


Exploded view for HTS3520/12:

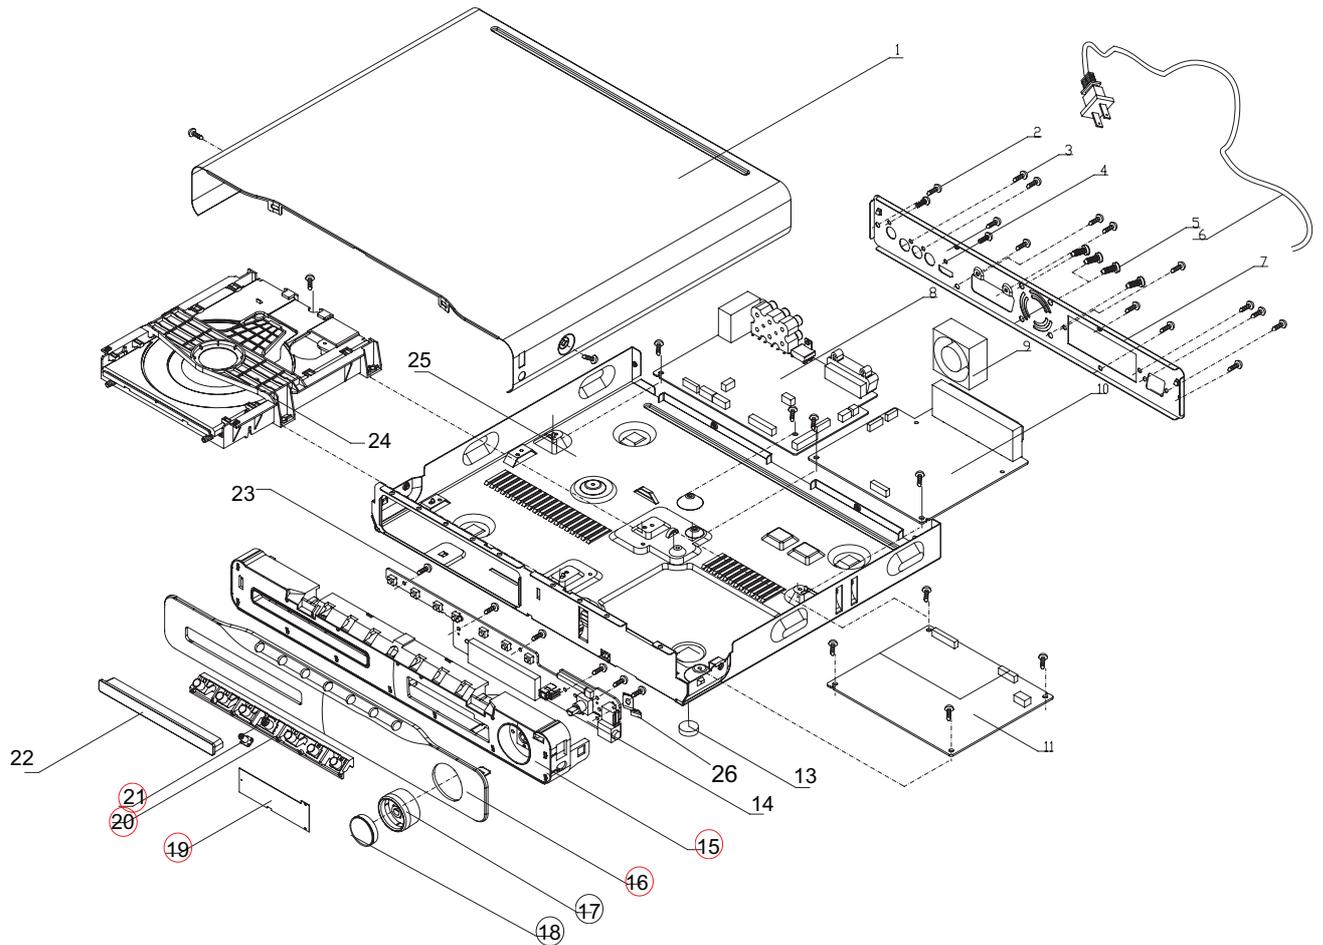


It is general mechanical exploded view for HTS3520/12, detailed information pls refer to the model set.

ASSY1 includes components:15.16.19.20.21

ASSY2 includes components:17.18

Exploded view for HTS3520/05:

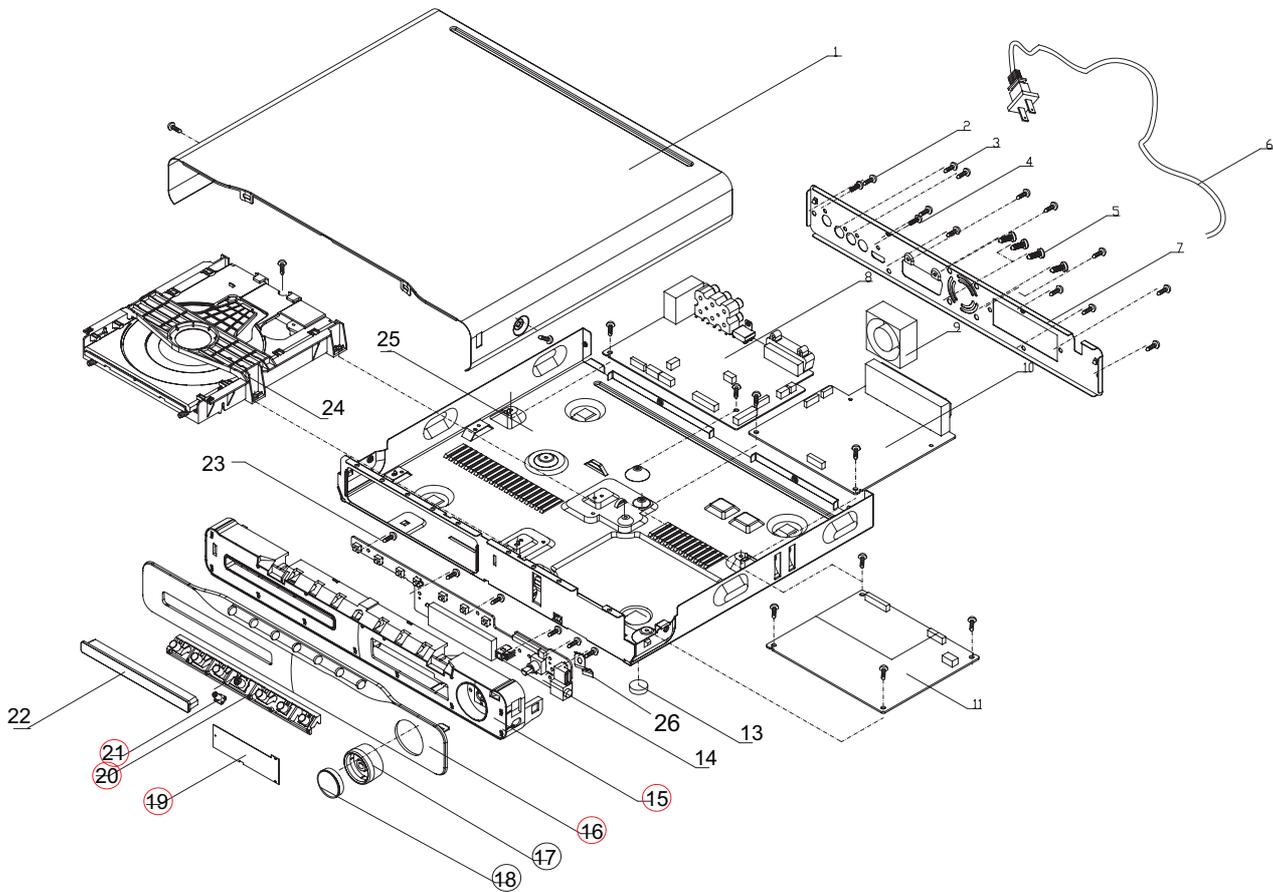


It is general mechanical exploded view for HTS3520/05, detailed information pls refer to the model set.

ASSY1 includes components:15.16.19.20.21

ASSY2 includes components:17.18

Exploded view for HTS3520/55/98:

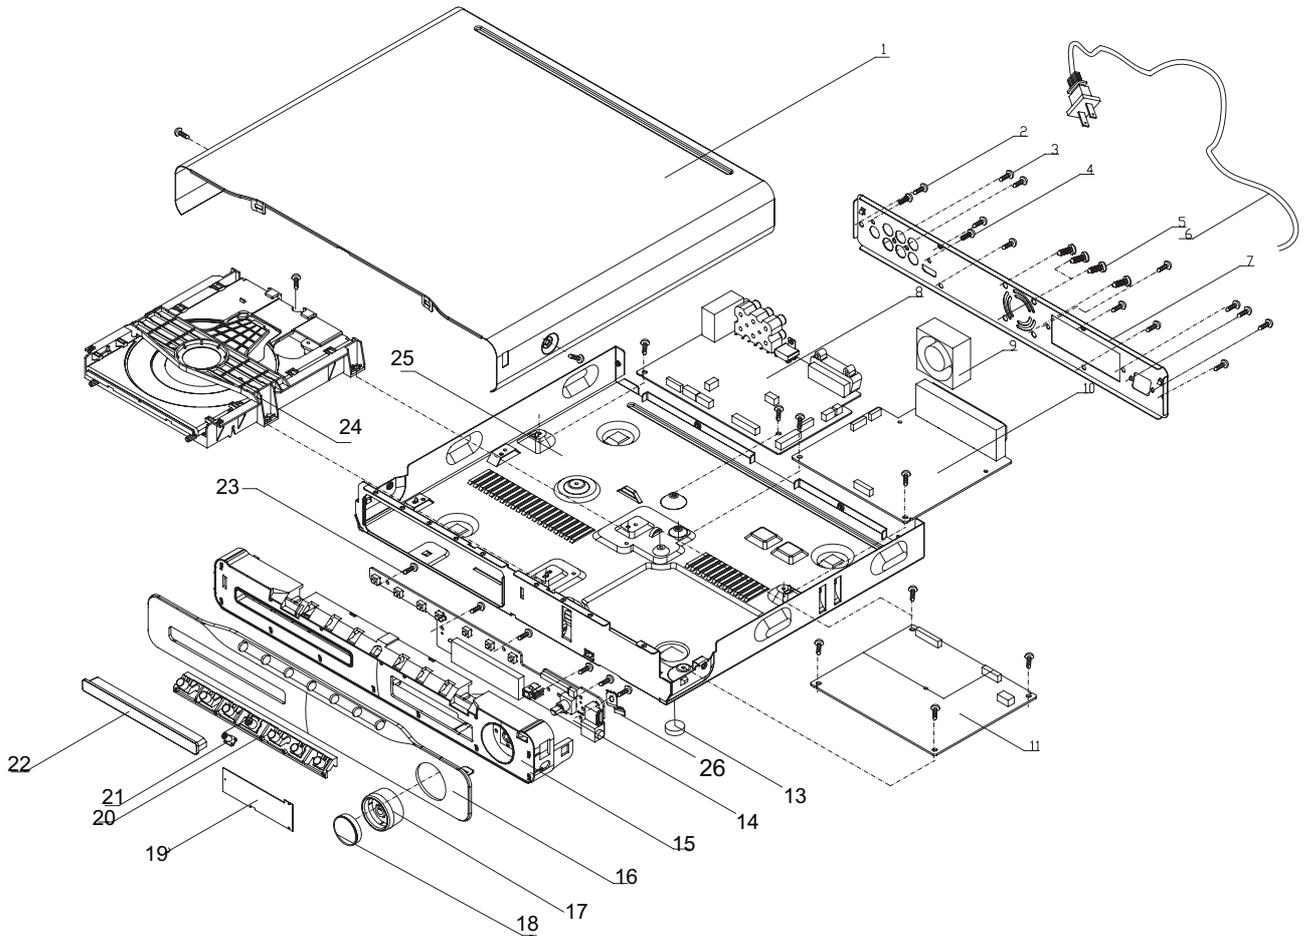


It is general mechanical exploded view for HTS3520/55/98, detailed information pls refer to the model set.

ASSY1 includes components:15.16.19.20.21

ASSY2 includes components:17.18

Exploded view for HTS3520/51/X78/94:

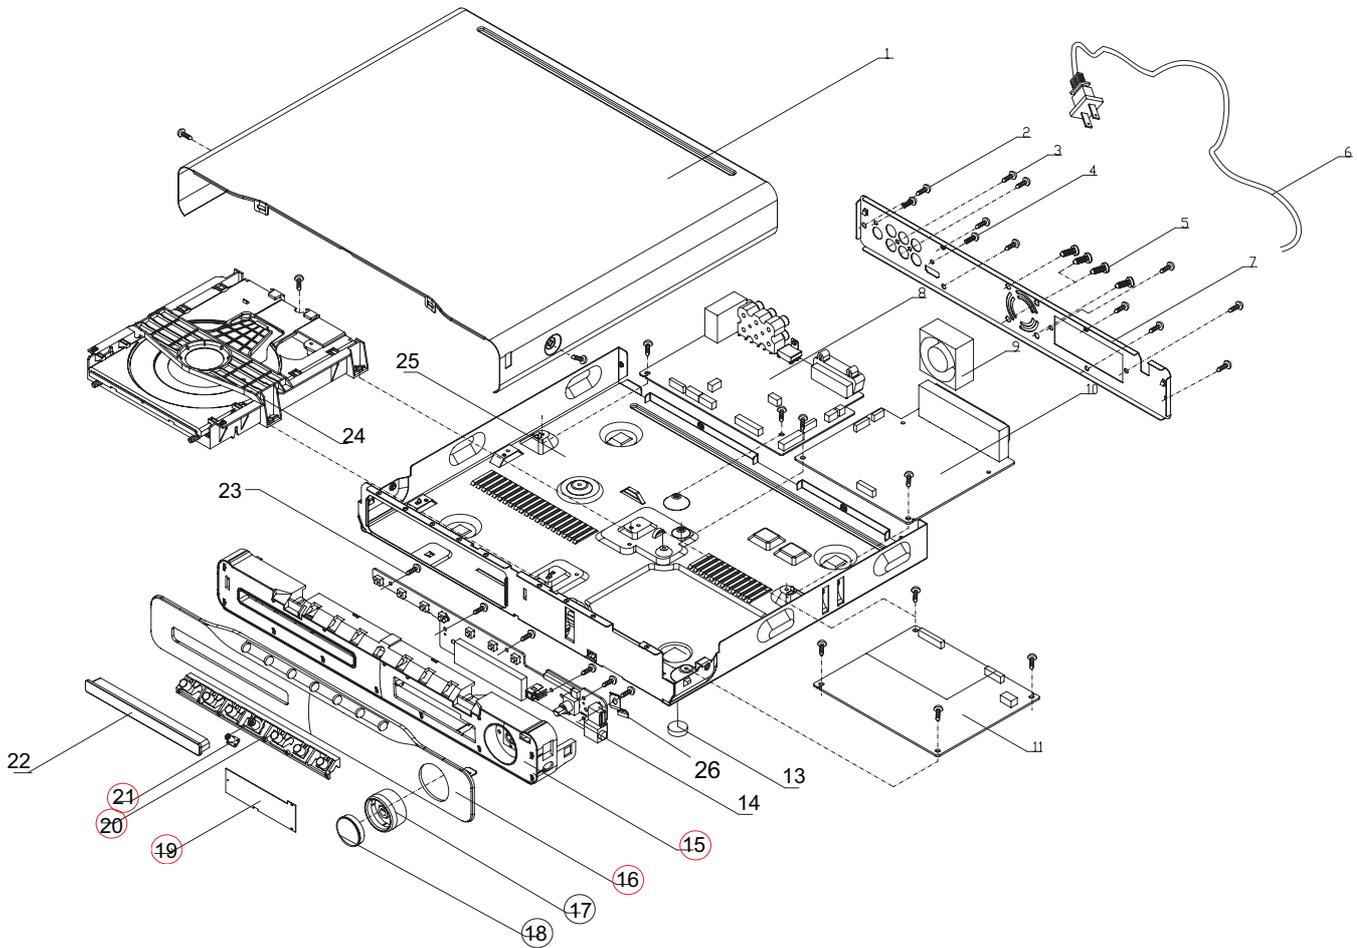

It is general mechanical exploded view for HTS3520/51/X78/94, detailed information pls refer to the model set.

ASSY1 includes components:15.16.19.20.21

ASSY2 includes components:17.18

REVISION LIST

Version 1.0

* Initial release for HTS3520/12/05/55

Version 1.1

* Adding HTS3520/51/X78/94/98

Version 1.2

*Adding location of PCB,Variation and Matrix.