

8. Exploded View of the Set

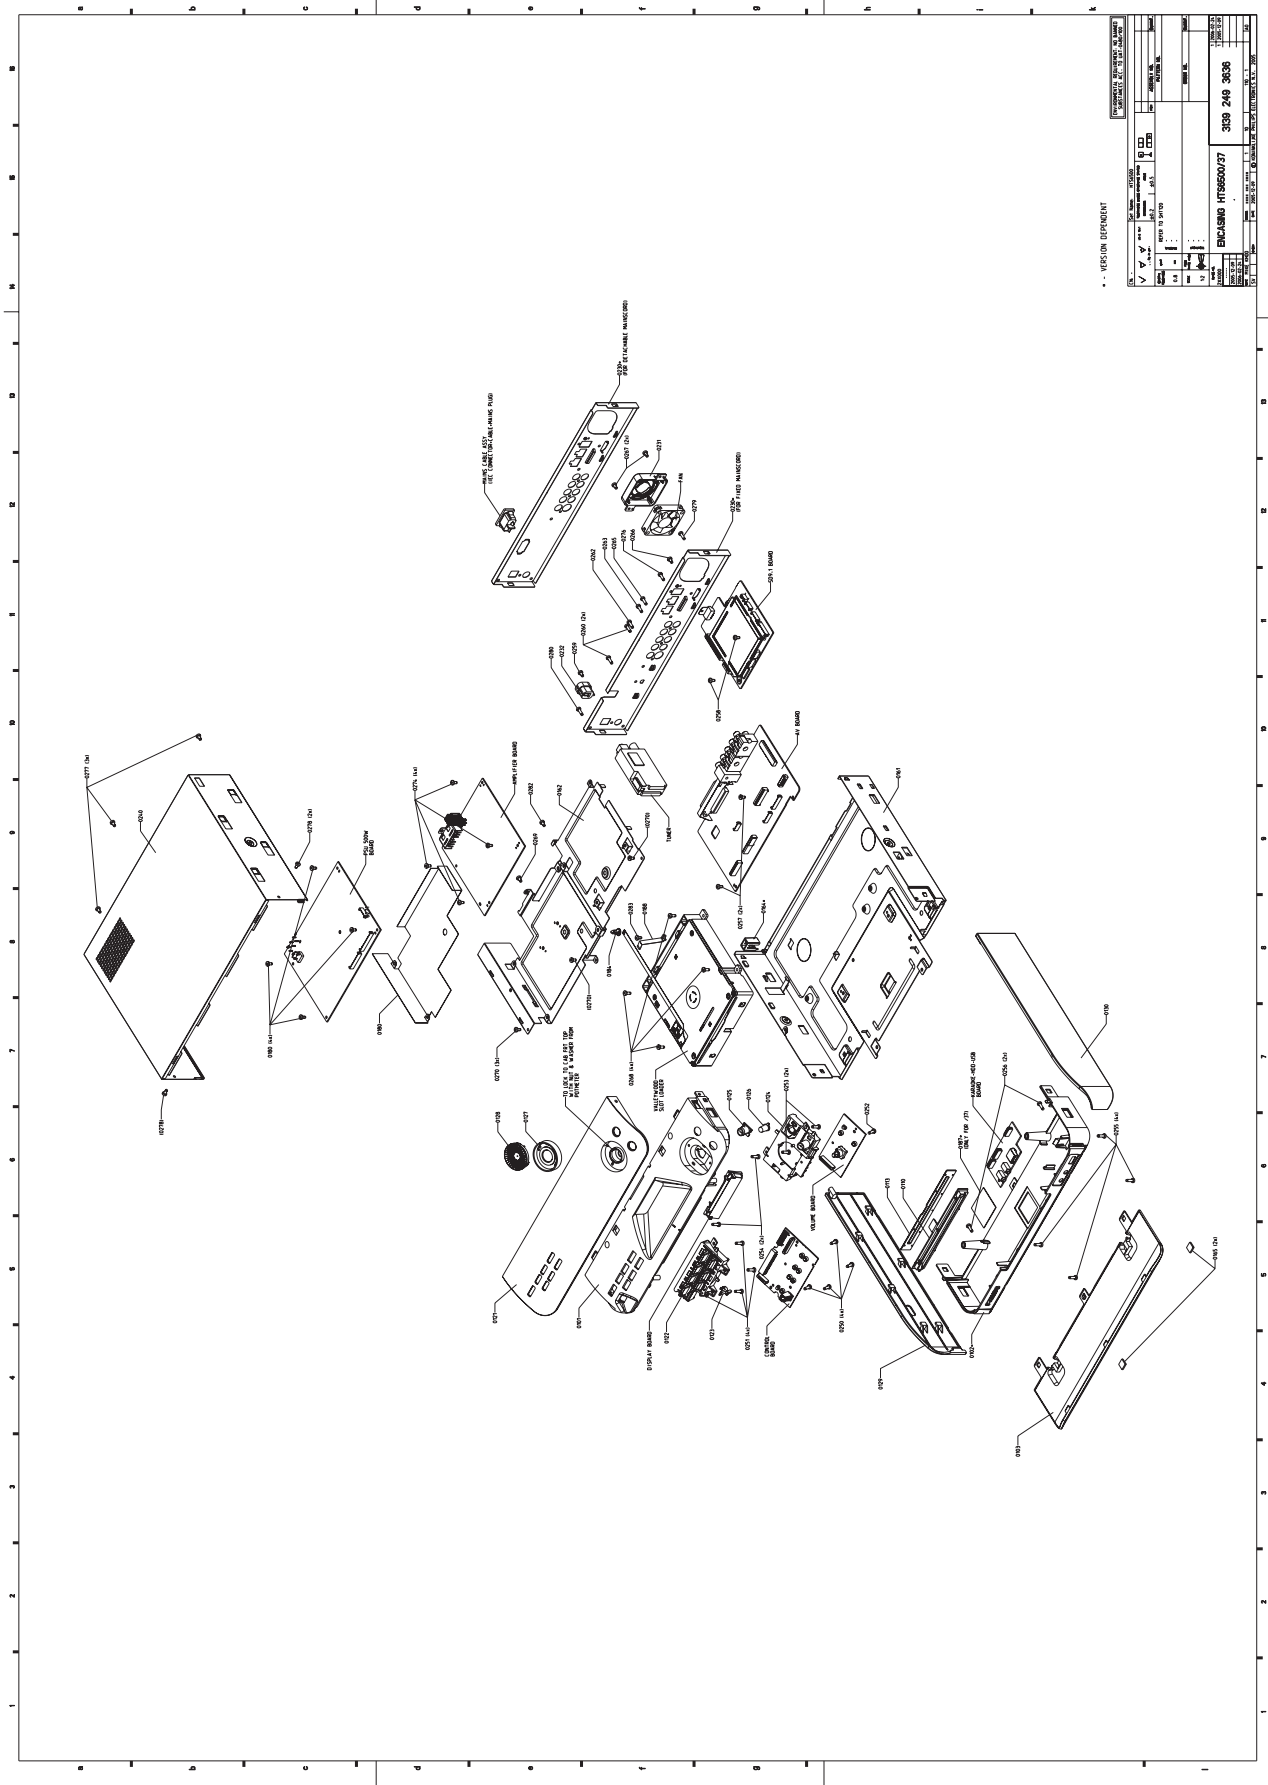


Figure 8-1

HTS6510**MISCELLANEOUS**

0110	3139 244 13921	COVER DVD SLOT HTS6510
0190	2822 031 00048	FAN 12VDC 0.5W 3700RPM B
0231	3139 244 11011	COVER FAN HTS3105
0232	4822 532 60948	BUSH
0325	3139 247 13011	BOX SPK ASSY SW6500 E
0326	3139 247 13291	BOX SPK ASSY CS6510 E
0337	2422 076 00546	FM AERIAL 24AWG BK B
0338	2422 549 45813	ANT AM LOOP 039S20014 B
0341	2422 549 00902	REMOTE CONTR HTS4550-USB-KOK B
0344	2422 070 98236 	MAINSCORD UK 5A 1M8 VH BK B /05 Only
0344	4822 321 11499 	MAINSCORD 2.0M - EU /12 Only
0351	2422 076 00468	CBLE SCART 1M1 SCART 21P BK B
0354	2422 076 00791	CBLE PHONE 1M0 PHONE 3P WH B
1010	3139 248 00321	LOADER ASSY VALLY-SONY HTS4550
1020	2422 542 00031	TUN A F ENG07806QRF EUR B
1030	3139 247 12831 	PSU 06T500 EU SRA1942EK MIT
1040	3139 247 12241	MODULE AMP-05-02B 500W (SONO)
1061	3139 248 87902	PCBAS AV BOARD EUROPE HTS6500
1070	3139 248 88211	PCBAS FB VOL-USB BD HTS6510
1111	3139 248 88161	PCBAS FB CONTROL BD HTS6500
1121	3139 248 87832	PCBAS FB DISPLAY HTS4550
1130	3139 248 87491	PCBAS 9.1 HTS6500
8000	3139 111 02721	FFC FOIL 10P/080/10P AD
8002	3139 241 02311	FFC FOIL 21P/280/21P AD FOLD
8003	3139 241 02391	FFC FOIL 30P/080/30P BD
8012	3139 241 02301	FFC FOIL 26P/240/26P AD FOLD
8018	3139 241 02701	FFC FOIL 20P/220/20P BD FOLD
P001	3143 027 65712	FRONT TOP ASSY HTS6510
P002	3143 027 64752	FRONT BOTTOM ASSY HTS6500
P003	3143 027 65722	KNOB VOLUME ASSY HTS6510

LOADER ASSY VALLY-SONY HTS4550

1011	2422 549 00967	DVD LOADER MODULE VSH-L33D B
1012	2422 549 00629	DVD MECHANISM KHM-313AAA Y
1016	3139 243 20531	CUTSHEET LOADER FFC HTS4550
8008	3139 110 27881	CBLE PH 06P/180/06P PH 26ST BK