


5-2. CHASSIS SECTION

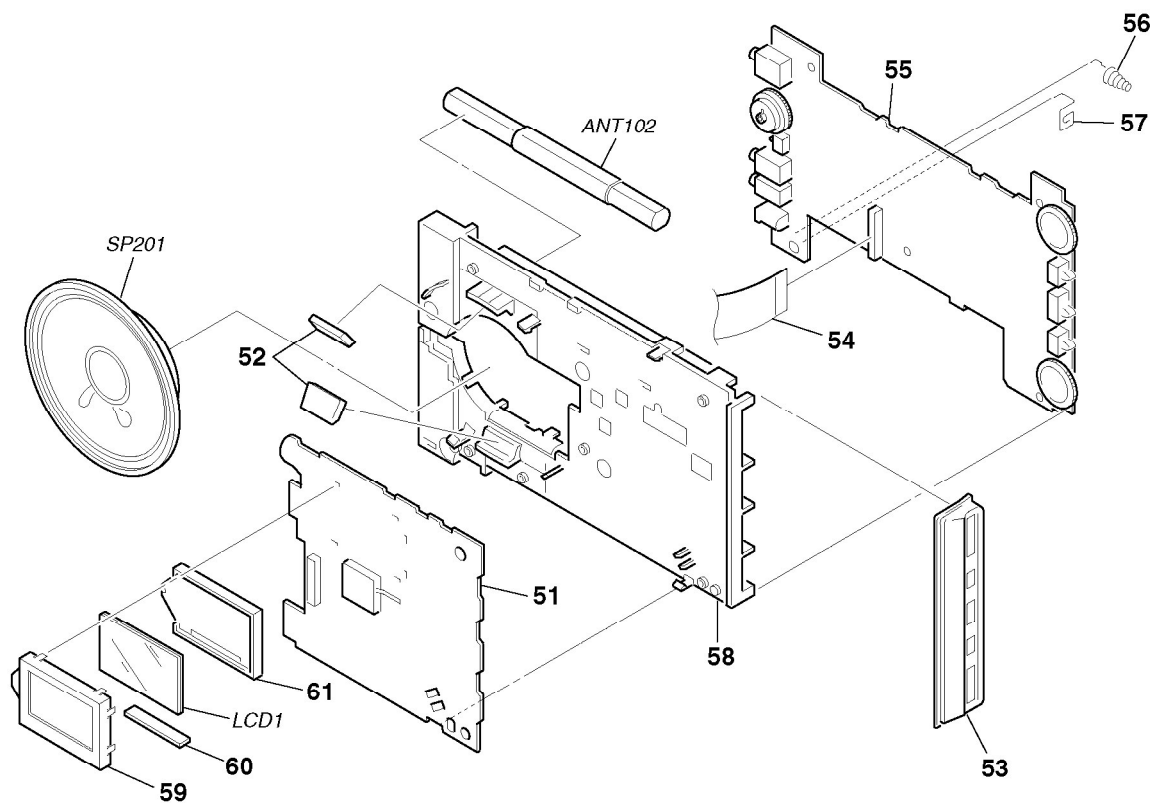

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* 51	A-4440-289-A	KEY BOARD, COMPLETE		57	3-227-396-01	TERMINAL (+), BATTERY	
52	4-910-502-01	CUSHION, ANTENNA		58	3-227-392-01	CHASSIS	
53	3-227-395-01	PANEL (SIDE) (EXCEPT EA)		* 59	3-227-389-01	HOLDER (LCD)	
53	3-227-395-11	PANEL (SIDE) (EA)		* 60	1-694-751-11	CONDUCTIVE BOARD, CONNECTION	
54	1-757-510-11	WIRE (FLAT TYPE) (18 CORE)		* 61	3-227-390-01	CASE (LCD)	
* 55	A-4440-288-A	MAIN BOARD, COMPLETE (EXCEPT CH,EA)		ANT102	1-402-479-21	ANTENNA, FERRITE-ROD (LW/MW)	
* 55	A-4440-290-A	MAIN BOARD, COMPLETE (EA)		LCD1	1-804-194-11	DISPLAY PANEL, LIQUID CRYSTAL	
* 55	A-4440-291-A	MAIN BOARD, COMPLETE (CH)		SP201	1 529 942 11	SPEAKER (7.7cm)	
56	3-227-397-01	TERMINAL (-), BATTERY					