

SECTION 5 EXPLODED VIEWS


NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

5-1. CHASSIS


Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

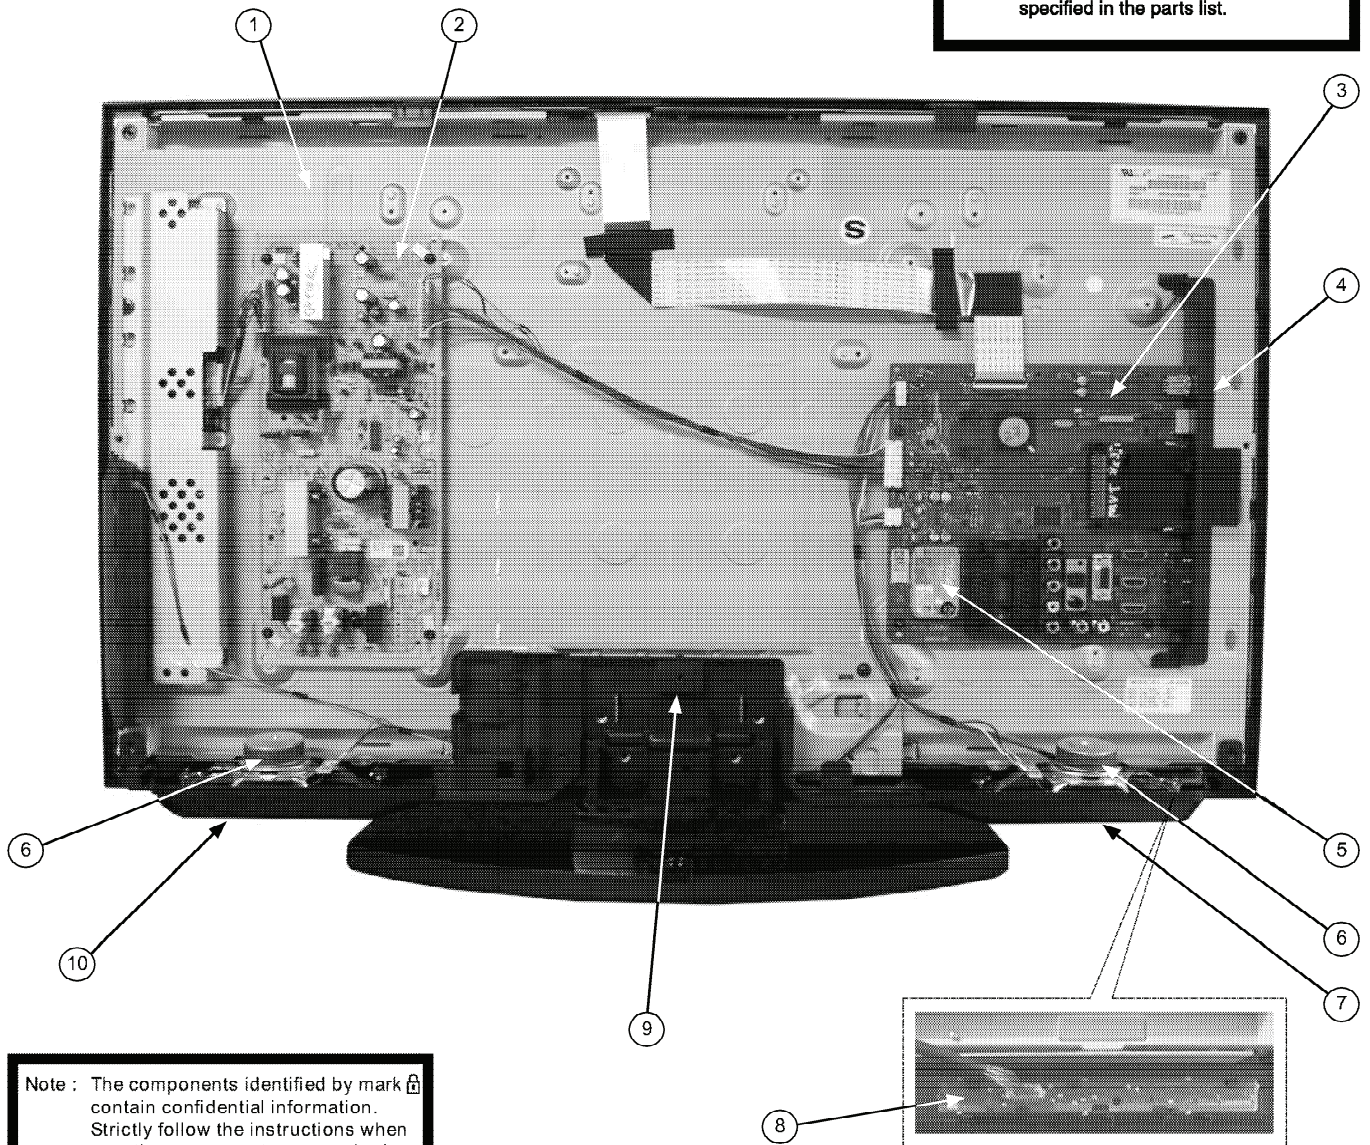


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	Δ 1-811-070-12	LCD PANEL (A216V3)	22 inches	7	4-164-517-01	BRACKET, SP (26L)	26 inches
	Δ 1-811-071-11	LCD PANEL (A26V0)	26 inches		4-164-507-01	BRACKET, SP (32L)	32 inches
	Δ 1-811-058-11	LCD PANEL (S32TSC)	32 inches	8	A-1763-559-A	HLR BOARD, COMPLETE	
2	1-474-204-31	STATIC CONVERTER (TV)	22 inches	9	4-125-784-21	COVER, UNDER (22)	22 inches
	1-474-199-11	STATIC CONVERTER (TV)	26 inches		4-164-515-01	COVER, UNDER (26)	26 inches
	1-474-208-11	STATIC CONVERTER (TV)	32 inches		4-164-509-02	COVER, UNDER (32)	32 inches
3	Δ A-1763-565-A	BEN BOARD, COMPLETE		10	4-164-516-01	BRACKET, SP (26R)	26 inches
4	4-164-508-01	BRACKET, SIDE JACK			4-164-506-01	BRACKET, SP (32R)	32 inches
5	8-597-735-00	UNIVERSAL SIL-TU SUT-AE102T					
6	1-858-339-11	LOUDSPEAKER (4x10cm)	22 inches				
	1-858-341-11	LOUDSPEAKER (4x10cm)	26 inches				
	1-858-364-13	LOUDSPEAKER (4.5x12.5cm)	32 inches				

5-1. CHASSIS Cont.

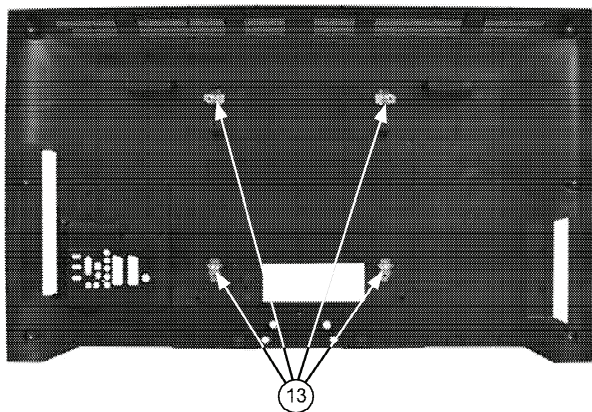

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

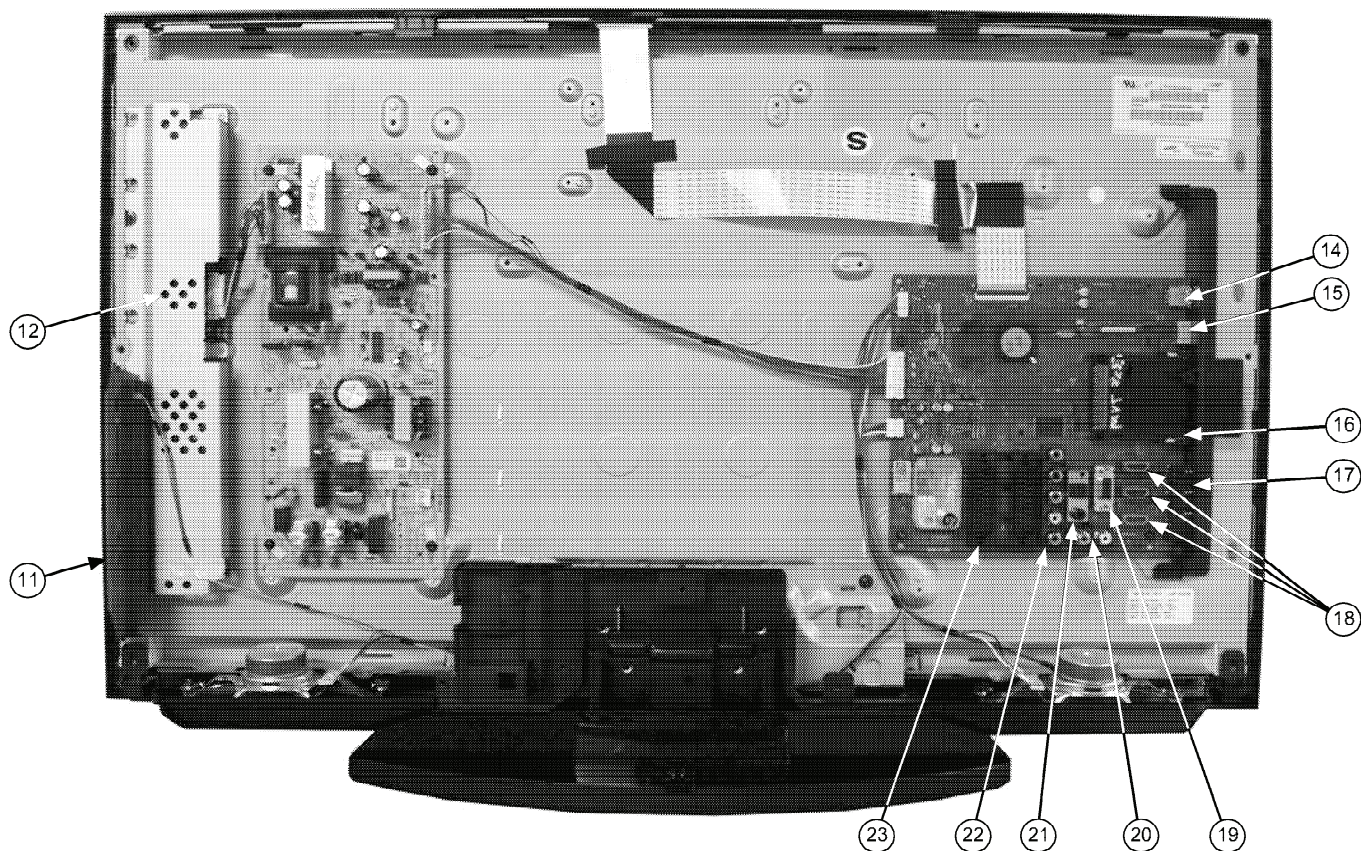


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
11	1-487-752-11	SWITCH UNIT	22 inches	16	1-822-579-31	CARD CONNECTOR (PCMCIA CARD)	
	1-487-728-11	SWITCH UNIT	26/32 inches	17	1-822-581-22	MULTIPLE PHONO JACK 4P	
12	1-857-634-11	INVERTER MT BOARD	32 inches	18	1-822-638-11	HDMI CONNECTOR	
13	4-127-133-01	PLATE, VESA	22 inches	19	1-842-087-11	D SUB CONNECTOR	
	4-163-972-01	BRACKET, VESA (SS)	26 inches	20	1-822-524-41	PHONO JACK 2P	
	4-163-973-01	BRACKET, VESA (S)	32 inches	21	1-822-954-11	PHONO BLOCK, OPTICAL OUT	
14	1-821-834-12	USB CONNECTOR		22	1-822-523-11	PHONO JACK 5P	
15	1-822-637-11	HDMI CONNECTOR		23	1-822-580-21	CONNECTOR DUAL SCART	

5-2. BEZEL ASSY & STAND ASSY

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.



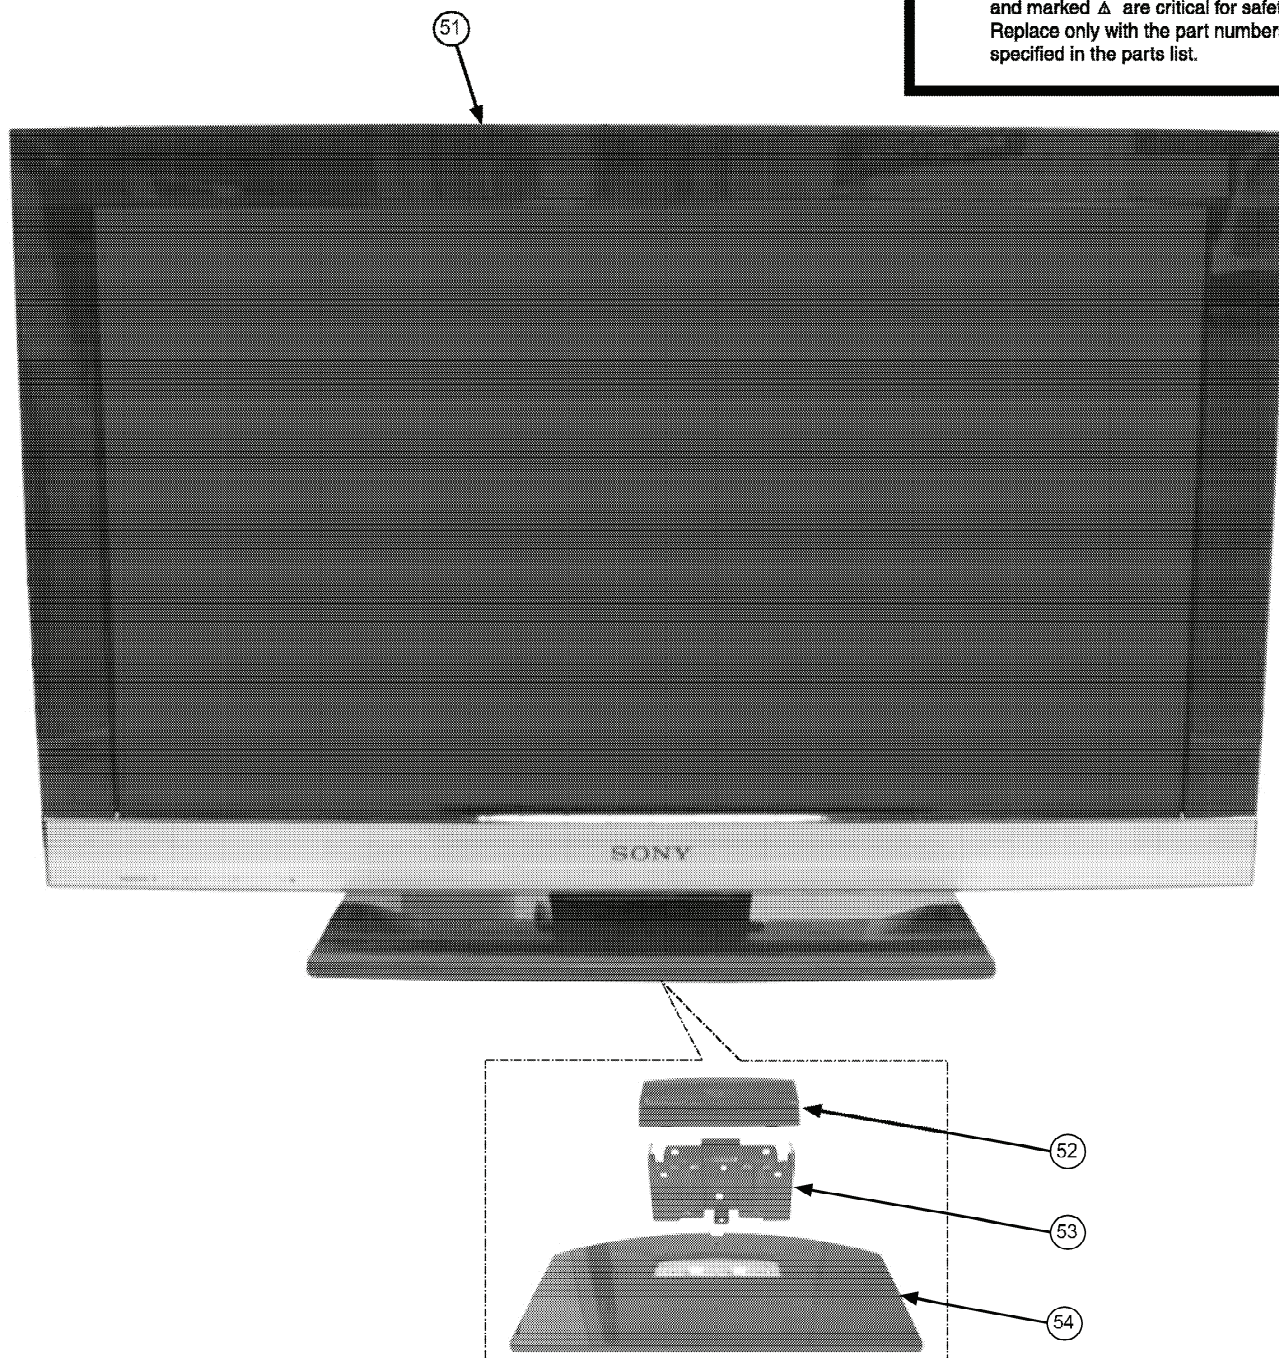


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-2515-385-1	BEZEL (CY22) ASSY	22 inches	53	4-158-353-01	NECK (S3B)	22 inches
	X-2541-764-1	BEZEL (CY26) ASSY	26 inches		4-163-976-01	NECK (M3B)	26/32 inches
	X-2541-763-1	BEZEL (CY32) ASSY	32 inches	54	X-2541-849-1	BASE (S3B) ASSY	22 inches
52	4-158-399-11	COVER, NECK (S3B)	22 inches		X-2541-767-1	BASE (M3B) ASSY	26/32 inches
	4-168-098-01	COVER, NECK (M3B)	26/32 inches				

5-3. REAR COVER ASSY & POWER SUPPLY CORDS

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

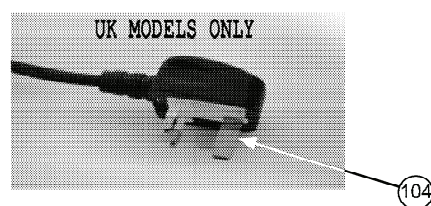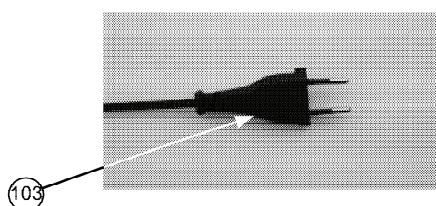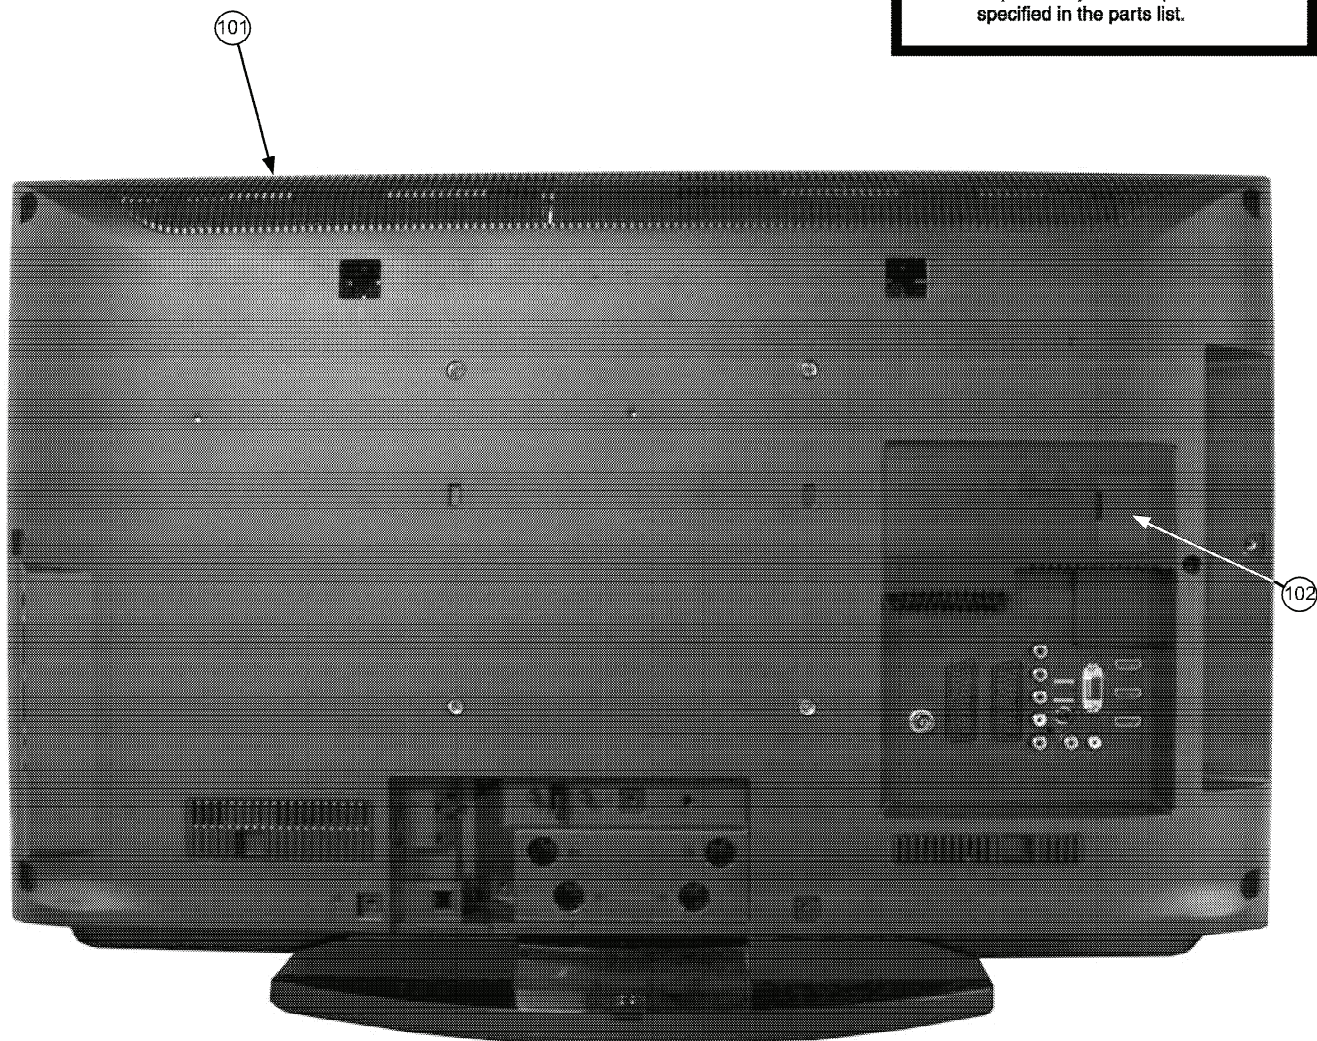

REF.NO.	PART.NO	DESCRIPTION	REMARK
101	X-2541-796-2	REAR COVER (22) ASSY	22 inches
	X-2541-766-1	REAR COVER (26) ASSY	26 inches
	X-2541-765-1	REAR COVER (32) ASSY	32 inches

REF.NO.	PART.NO	DESCRIPTION	REMARK
102	*3-299-466-31	ECS COVER	
103	Δ 1-837-454-11	POWER-SUPPLY CORD (AEP)	22/26/32 inches
104	Δ 1-837-455-11	POWER-SUPPLY CORD (UK)	22/26/32 inches

SECTION 6 PARTS LIST

PARTS LISTING TABLE OF CONTENTS

	<u>Page</u>
ACCESSORIES AND CONNECTORS :	21
REMOTE COMMANDER :	21

Note: To ensure safety and reliability it is Sony policy that boards should not be repaired in the field, as a result all boards are regarded as non service items for exchange only and are not indicated in the parts list of this service manual.

Note : Items marked “**” are not stocked since they are seldom required for routine service.
Some delay should be anticipated when ordering these items.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ACCESSORIES AND CONNECTORS							
22 INCHES							
	1-837-626-11	FLEXIBLE FLAT CABLE 30P (TCON-BEN(CN4300))					
	*1-910-060-70	MAIN MULTI HARNESS SPEAKER					
26 INCHES							
	1-837-627-11	FLEXIBLE FLAT CABLE (TCON-BEN(CN4300))					
	*1-910-060-71	MAIN MULTI HARNESS SPEAKER (BEN-G1L-HLR-SWITCH UNIT-SPEAKERS)					
	*1-910-060-72	CONNECTOR ASSY 14P (INVERTER-G1L)					
32 INCHES							
	1-837-662-11	FLEXIBLE FLAT CABLE (TCON-BEN(CN4301))					
	*1-910-060-73	CONNECTOR ASSY 15P (G2L(CN6401-BEN(CN6006))					
	*1-910-060-74	MULTI HARNESS SPEAKER BEN(CN6007/7901)-HLR-SWITCH UNIT-SPEAKERS)					
	*1-910-060-77	CONNECTOR ASSY 14P (G2L(CN6402)-INVERTER)					
INSTRUCTION MANUALS							
	*4-168-148-12	INSTRUCTION MANUAL (U) ENGLISH					
	*4-168-148-22	INSTRUCTION MANUAL (E) GERMAN/SPANISH/FRENCH/ITALIAN/DUTCH/PORTUGUESE					
	*4-168-148-32	INSTRUCTION MANUAL (K) BULGARIAN/CZECH/DANISH/FINNISH/GREEK/HUNGARIAN/NORWEGIAN/POLISH/ROMAINIAN/SWEDISH/SLOVAK/TURKISH					
	*4-168-148-43	INSTRUCTION MANUAL (R) RUSSIAN/UKRAINIAN					
REMOTE COMMANDER							
	1-487-828-11	REMOTE COMMANDER (RM-ED022)					

