



SECTION 3
DISASSEMBLY, EXPLODED VIEWS AND OTHER PARTS

Place the TV set on a stable, level surface before disassembly and assembly of parts.
▲ and shaded parts are critical for safety. Replace only with part number specified.
Parts contain confidential information. Strictly follow the instruction whenever the components are repaired and/or replaced.

3-3. KDL-50W656A, 50W685A
3-3-1. Disassembly, Exploded View

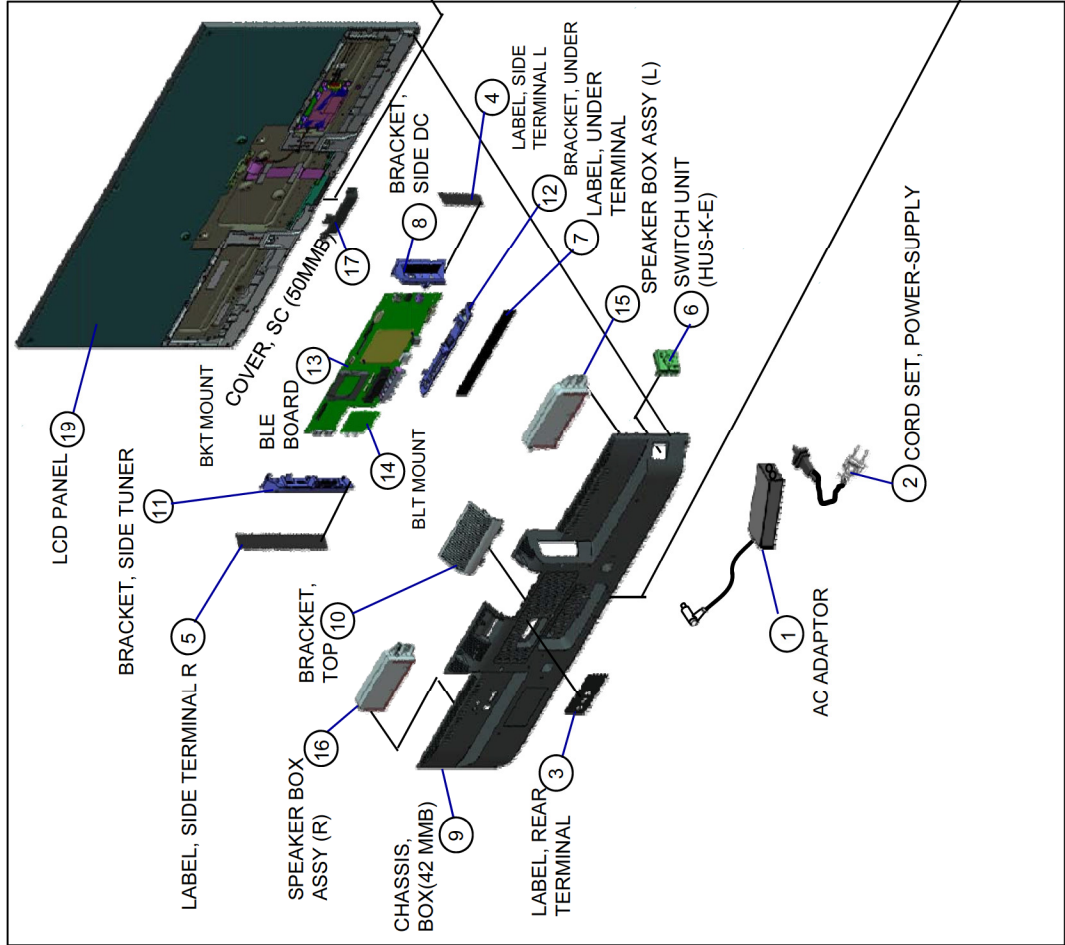

- (*) Parts are not stocked since they are seldom required for routine service. Some delays should be anticipated when ordering these components.
- Picture provided in this section might have slight difference from the actual sets.
- Lines that indicate parts are shown in blue in the illustration.
- The reference number besides the part description in the picture indicates the disassembly sequence.
- Remove screws before disassembly. Unplug connectors before disassembly

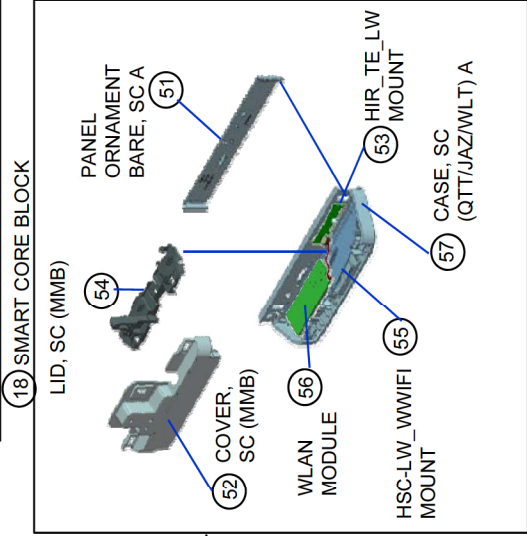

**Stand photo below is for reference purpose.
(*** Child parts are UNSTOCKED except for screws)

