


SET MECHANICAL EXPLODED VIEW

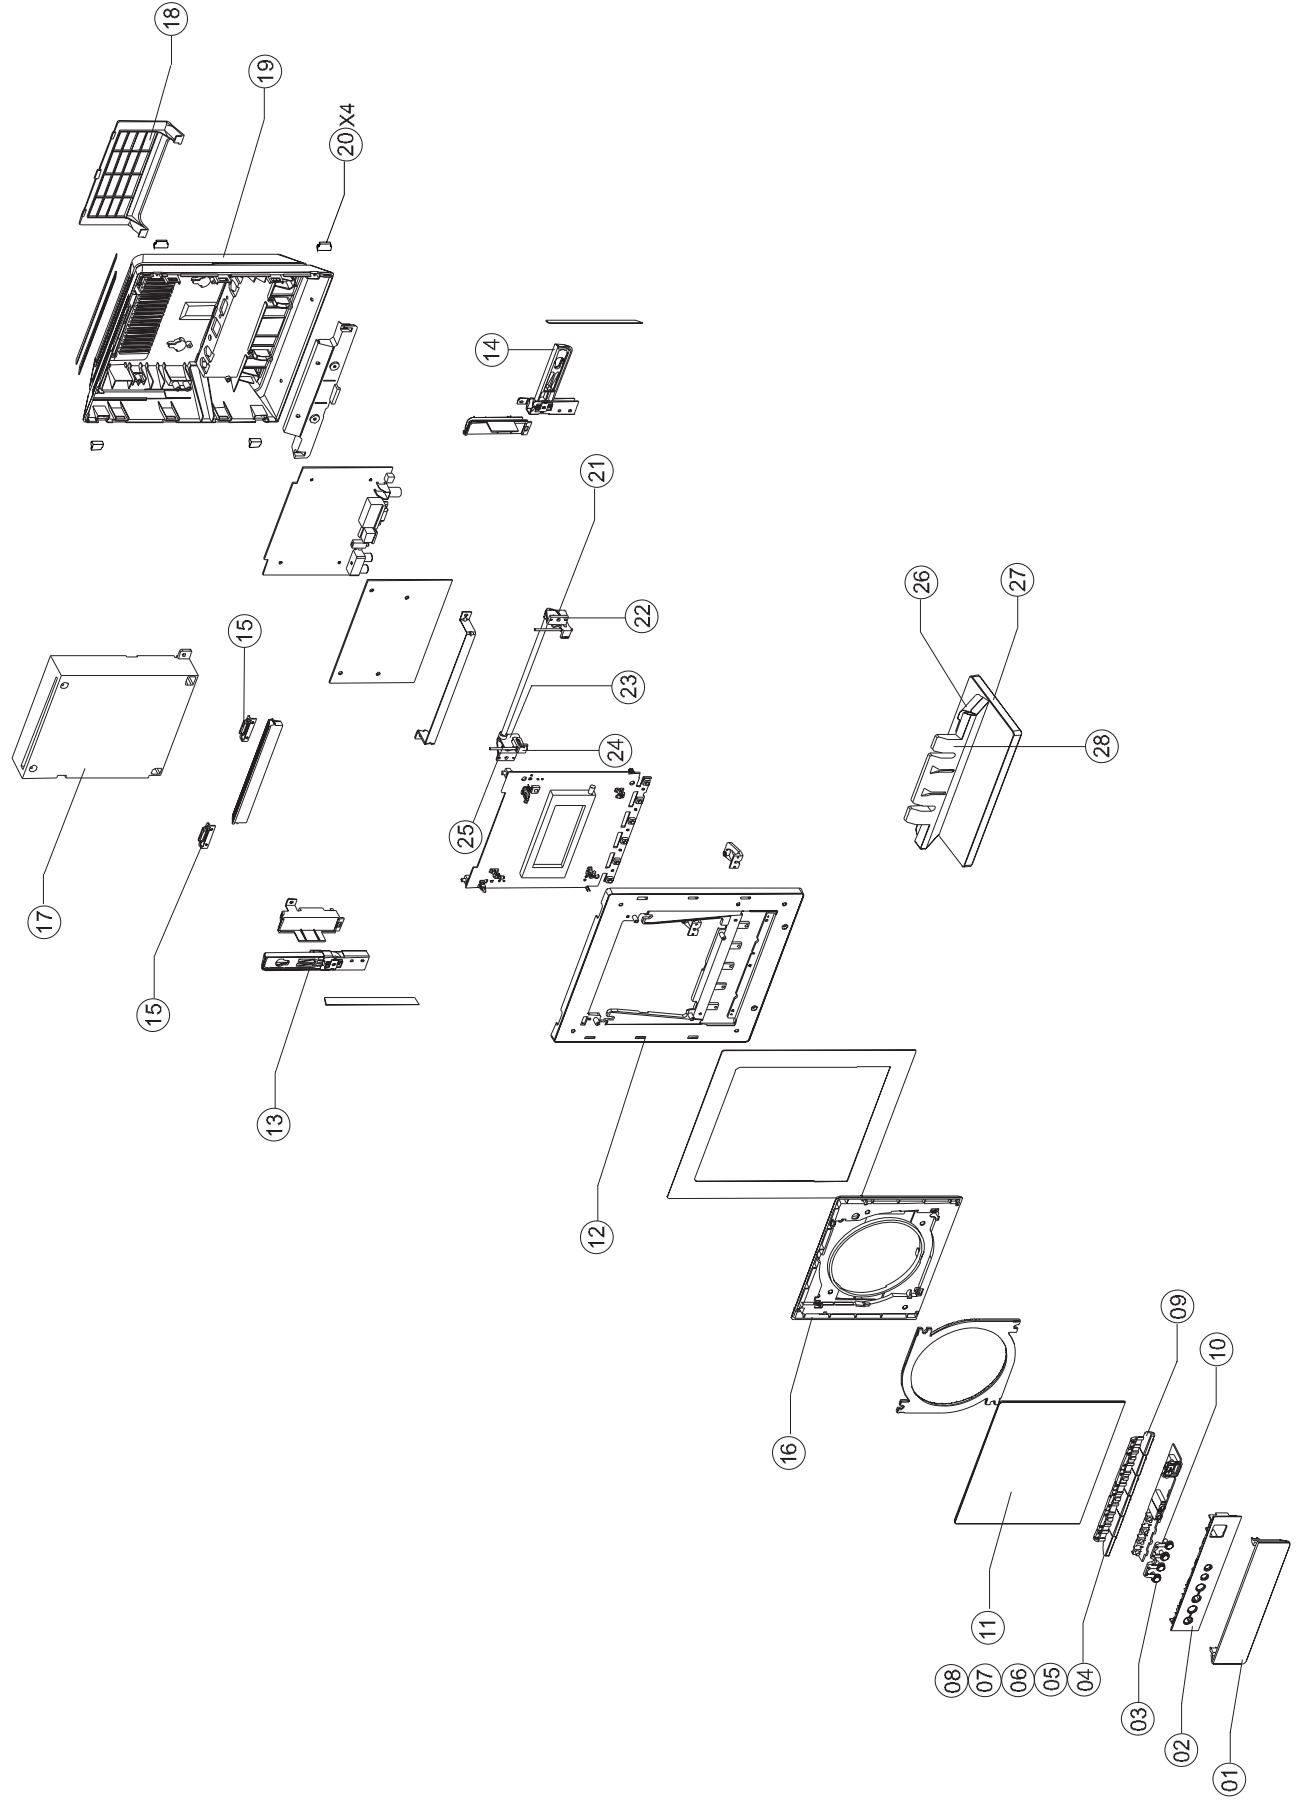

MECHANICAL & ACCESSORIES PARTS LIST

01	9940 000 04923	PUSH-DOOR /12/37
01	9940 000 05011	PUSH-DOOR /93/98/55
02	9940 000 04912	ADDITIONAL-KEY-PANEL
03	9940 000 04921	ADDITIONAL-KEY
04	9940 000 04914	FUNTION-KNOB(SOURCE)
05	9940 000 04915	FUNTION-KNOB(PLAY)
06	9940 000 04916	FUNTION-KNOB(STOP)
07	9940 000 04917	FUNTION-KNOB(PROGRAM)
08	9940 000 04918	FUNTION-KNOB(VOLUME-)
09	9940 000 04919	FUNTION-KNOB(VOLUME+)
10	9940 000 04903	ADDITIONAL-KEY-BRACKET
11	9940 000 04911	DISPLAY FRONT LENS
12	9940 000 04895	FRONT CABINET /37
12	9940 000 05004	FRONT CABINET /12/93/98/55
13	9940 000 04908	SPK ARM(L)
14	9940 000 04909	SPK ARM(R)
15	9940 000 04922	STANDBY/OPEN KNOB
16	9940 000 04905	FRONT-LENS-BRACKET
17	9940 000 04891	DVD MECHANISM KHM-313AAA
18	9940 000 04899	OUTPUT-COVER
19	9940 000 04896	BACK CABINET /37
19	9940 000 05005	BACK CABINET /12/93/98
20	9940 000 04924	SPK ORIENTATION RUBBER
21	9940 000 04894	SLIDE DOOR SPRING(R)
22	9940 000 04904	PUSH DOOR BKT
23	9940 000 04907	SWING ARM
24	9940 000 04906	DOOR-LIP
25	9940 000 04893	SLIDE DOOR SPRING(L)
26	9940 000 04898	FOOT-BACK-COVER
27	9940 000 05422	FOOT
28	9940 000 04897	FOOT-FRONT-COVER
	9940 000 04882	SUBWOOFER FOOT BOTTOM
	9940 000 04883	SUBWOOFER OUTPUT PAN
	9940 000 04884	AC SOCKET 2.5A/250V
	9940 000 04901	SOCKET BOX BOTTOM COVER
	9940 000 04902	SOCKET BOX TOP COVER
	9940 000 04913	SOCKET BOX PANEL /37/55/93/98
	9940 000 05007	SOCKET BOX PANEL /12

Note: Only these parts mentioned in the list are normal service parts.

ELECTRICAL PARTS LIST- MISCELLANEOUS

9940 000 04862	ECO POWER PCB ASSY /12/37
9940 000 04865	POWER PCB ASSY
9940 000 04868	DISPLAY PCB ASSY MCD288
9940 000 04869	AMP KEY PCB ASSY MCD288
9940 000 04871	WOOFER OUTPUT BOARD ASSY
9940 000 04873	WOOFER TERMINAL BOARD ASSY
9940 000 04874	VIDEO OUTPUT PCB ASSY
9940 000 04875	TUNER BOARD ASSY
9940 000 04927	DVD RECORDER BOARD ASSY
9940 000 04985	SCART BOARD ASSY /12

Note: Only these parts mentioned in the list are normal service parts.

9940 000 04877	REMOTE CONTROL
9940 000 04881	WOOFER SPEAKER 8R 50W
9940 000 04885	D-SUB CABLE 15PIN
9940 000 04886	AV CABLE (WD3.5X1 & RCAX3)
9940 000 04887	9P/10P CONNECT CABLE 2M
9940 000 04892	FM ANT. L=1.5M
9940 000 04925	FFC 14P 110 1.25
9940 000 04926	FFC 22P 110 1.25
9965 000 38886	LEFT SPEAKER BOX
9965 000 38887	RIGHT SPEAKER BOX
9940 000 04987	TRASFO. EI-76 230V/50 /12
9940 000 05009	TRASFO. 230V/50HZ /55/98
9940 000 05012	TRASFO. 230V/50HZ /93
9940 000 04878	TRASFO. 120V/60 /37
9940 000 04879	WOOFER SPEAKER BOX ASSY /37/55/93/98
9940 000 05013	WOOFER SPEAKER BOX ASSY/12
9940 000 03508	AC LINE CORD 1.8m /12/55/98
9940 000 04888	AC LINE CORD 1.8m /37
9940 000 05166	AC LINE CORD 1.8m /93
9940 000 04649	ECO POWER TRASFO. /12/37

ELECTRICAL PARTS LIST ***- DISPLAY BOARD***

IC301	9940 000 04953	IC LM340T5 7805
IC302	9940 000 04957	CPU 3S9228
IC303	9940 000 04953	IC LM340T5 7805
IC304	9940 000 04951	IC 24C01A-SC27
IC305	9940 000 02539	IC PT6311
IC306	9940 000 02524	IC PT2309-S(L)
IC307	9940 000 03512	CHIP IC AC6811
IC308	9940 000 04956	IC TDA2579 /12
IC309	9940 000 04954	IC SA6208
LED301	9940 000 03437	LED 3B4SCB01
LED302	9940 000 03437	LED 3B4SCB01
LED303	9940 000 03437	LED 3B4SCB01
LED304	9940 000 03437	LED 3B4SCB01
LED305	9940 000 03437	LED 3B4SCB01
LED306	9940 000 03437	LED 3B4SCB01
LED307	9940 000 02537	LED (BLUE)
Q301	9940 000 02518	TRANSISTOR 8050C
Q302	9940 000 02519	TRANSISTOR 8550C
Q303	9940 000 02519	TRANSISTOR 8550C
Q304	9940 000 02518	TRANSISTOR 8050C
Q305	9940 000 02518	TRANSISTOR 8050C
Q306	9940 000 04949	TRANSISTOR 9014-C
Q307	9940 000 02518	TRANSISTOR 8050C
S301	9940 000 02542	IR SENSOR
SW305	9940 000 02543	LIGHT TOUCH SWITCH
SW306	9940 000 02543	LIGHT TOUCH SWITCH
SW307	9940 000 02543	LIGHT TOUCH SWITCH
SW308	9940 000 02543	LIGHT TOUCH SWITCH
SW309	9940 000 04964	LIGHT TOUCH SWITCH
SW310	9940 000 04964	LIGHT TOUCH SWITCH
SW311	9940 000 02543	LIGHT TOUCH SWITCH
SW312	9940 000 02543	LIGHT TOUCH SWITCH
X302	9940 000 03152	FILTER FREQ. 4.19MH
X303	9940 000 04962	CRYSTAL 4.332MHZ /12

Note: Only these parts mentioned in the list are normal service parts.

ELECTRICAL PARTS LIST ***- POWER BOARD***

C290	9940 000 04932	ELE. CAP. 3300μF 35V
CN201	9940 000 04943	S-SOCKET DS-106
CN204	9940 000 04944	AV OUT SOCKET 4P
CN209	9940 000 04939	LEADING-OUT TER. 15P
CN214	9940 000 04941	FM OUTPUT SOCKET
F201	△ 9940 000 02529	FUSE F2A L250V
F501	9940 000 03433	FUSE F6.3A L250V
F502	9940 000 03433	FUSE F6.3A L250V
IC203	9940 000 04936	IC PT2313
IC204	9940 000 04935	IC LM2576-ADJP
IC502	9940 000 04937	IC 7812
JCK201	9940 000 04942	2PIN RCA SOCKET
L206	9940 000 04931	FIXED INDUCTOR 220μH
Q203	9940 000 02545	TRANSISTOR 9014C
Q204	9940 000 02519	TRANSISTOR 8550C
Q206	9940 000 02545	TRANSISTOR 9014C
Q207	9940 000 02545	TRANSISTOR 9014C
Q208	9940 000 02517	TRANSISTOR 2SB772
Q209	9940 000 02545	TRANSISTOR 9014C
R259	△ 9940 000 03412	FUSE F1.5A/125V

Note: Only these parts mentioned in the list are normal service parts.

ELECTRICAL PARTS LIST
- WOOFER OUTPUT BOARD

C506	9940 000 04971	CAP. 334J 100V
C524	9940 000 04972	MYLAR CAP. 5600P 100V
C560	9940 000 04973	ELEC. CAP. 4700μF 35V
C561	9940 000 04973	ELEC. CAP. 4700μF 35V
DB1	9940 000 03502	THYRISTOR RS808

F501	△ 9940 000 03433	FUSE F6.3A L250V
F502	△ 9940 000 03433	FUSE F6.3A L250V
IC1301	9940 000 03767	IC TDA7265
IC501	9940 000 04669	IC TL072
IC504	9940 000 04976	IC TDA7264

Q502	9940 000 04974	TRANSISTOR 8550-C
Q508	9940 000 02545	TRANSISTOR 9014C
Q509	9940 000 02545	TRANSISTOR 9014C
Q510	9940 000 02545	TRANSISTOR 9014C

Note: Only these parts mentioned in the list are
normal service parts.

ELECTRICAL PARTS LIST
- SCART BOARD (ONLY FOR /12)

JCK801	9940 000 04983	RCA SOCKET AV-8.4-0.8B
JCK802	9940 000 03511	SCART 21P SOCKET
JCK803	9940 000 04944	AV OUT SOCKET 4P
Q801	9940 000 02545	TRANSISTOR 9014C
Q802	9940 000 02519	TRANSISTOR 8550C

Note: Only these parts mentioned in the list are
normal service parts.

ELECTRICAL PARTS LIST
- ECO POWER BOARD(ONLY FOR /12/37)

Q2201	9940 000 02518	TRANSISTOR 8050C
REL1201	9940 000 03509	RELAY 10A 240VAC/30VDC
	△ 9940 000 04649	ECO POWER TRASFO.

Note: Only these parts mentioned in the list are
normal service parts.

ELECTRICAL PARTS LIST
- VIDEO OUTPUT BOARD(FOR /55/93/98)

JACK701	9940 000 04979	RCA SOCKET 2P B/Y
JACK702	9940 000 02553	3PINS RCA SOCKET(R/B/G)
JACK703	9940 000 04982	S-VIDEO OUTPUT SOCKET

Note: Only these parts mentioned in the list are
normal service parts.

ELECTRICAL PARTS LIST
- AMP KEY BOARD

J104	9940 000 04966	HEADPHONE JACK D3.5
J105	9940 000 04967	AUX IN JACK CK3511
J106	9940 000 04968	USB JACK A-TYPE 4P
LED101	9940 000 02537	LED (BLUE)
LED102	9940 000 02537	LED (BLUE)
SW101	9940 000 04965	LIGHT TOUCH SW. KFC-05
SW102	9940 000 04965	LIGHT TOUCH SW. KFC-05
SW103	9940 000 04965	LIGHT TOUCH SW. KFC-05
SW104	9940 000 04965	LIGHT TOUCH SW. KFC-05

Note: Only these parts mentioned in the list are
normal service parts.

ELECTRICAL PARTS LIST
- WOOFER TERMINAL BOARD

CN602	9940 000 04939	LEADING-OUT TER. 15P
LED501	9940 000 03437	LED 3B4SCB01

Note: Only these parts mentioned in the list are
normal service parts.