



EXPLODED VIEW


INTRODUCTION

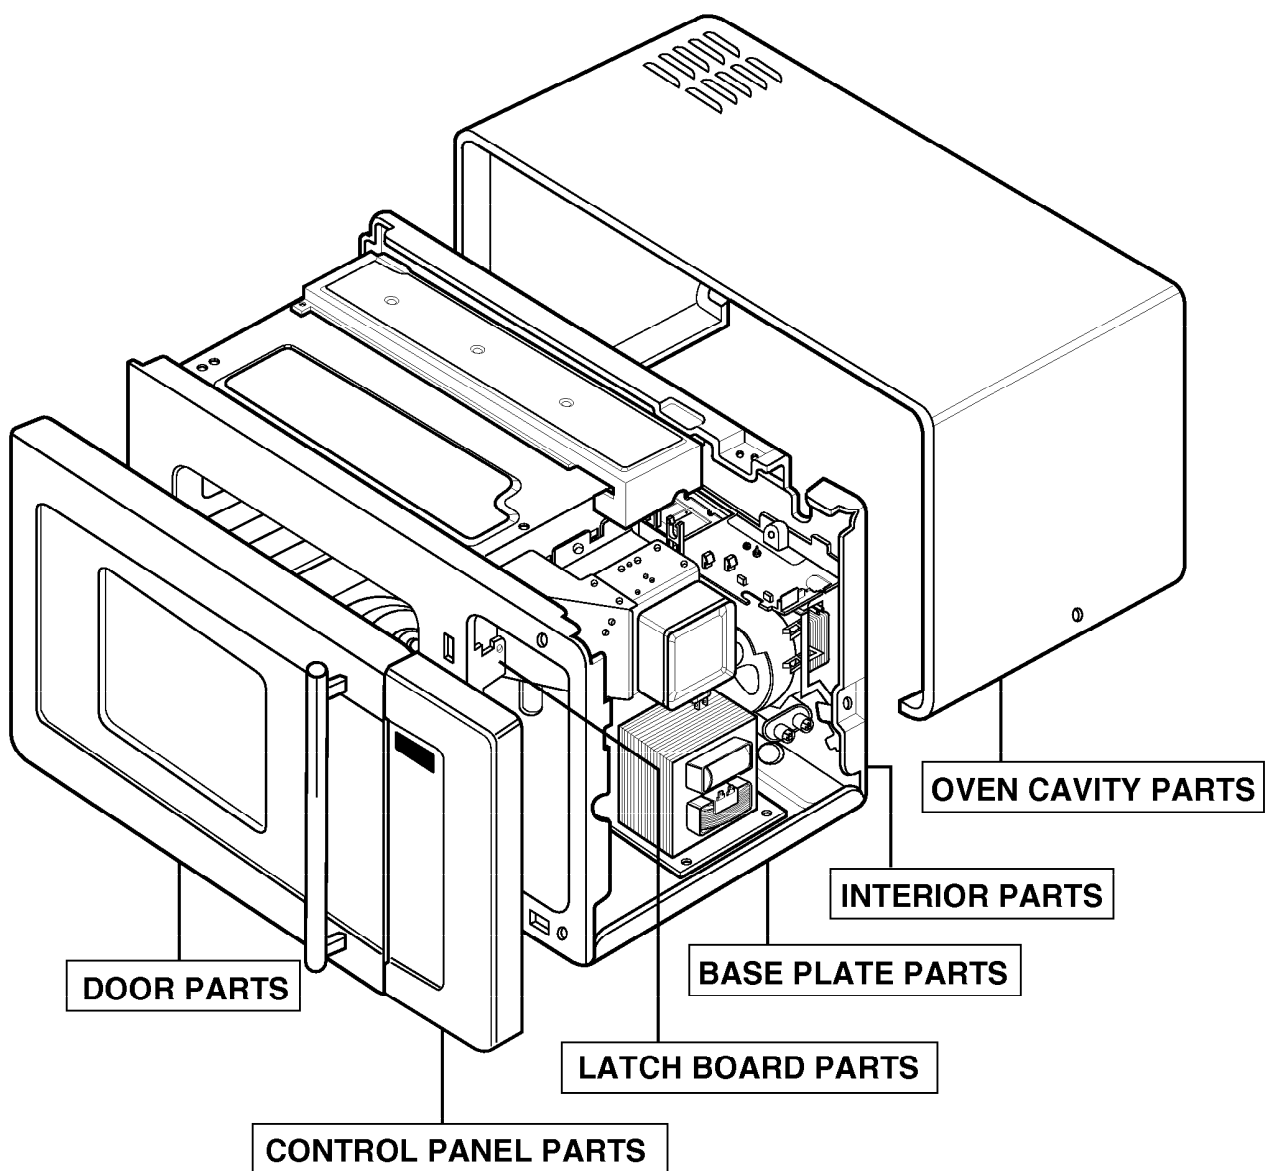

DOOR PARTS

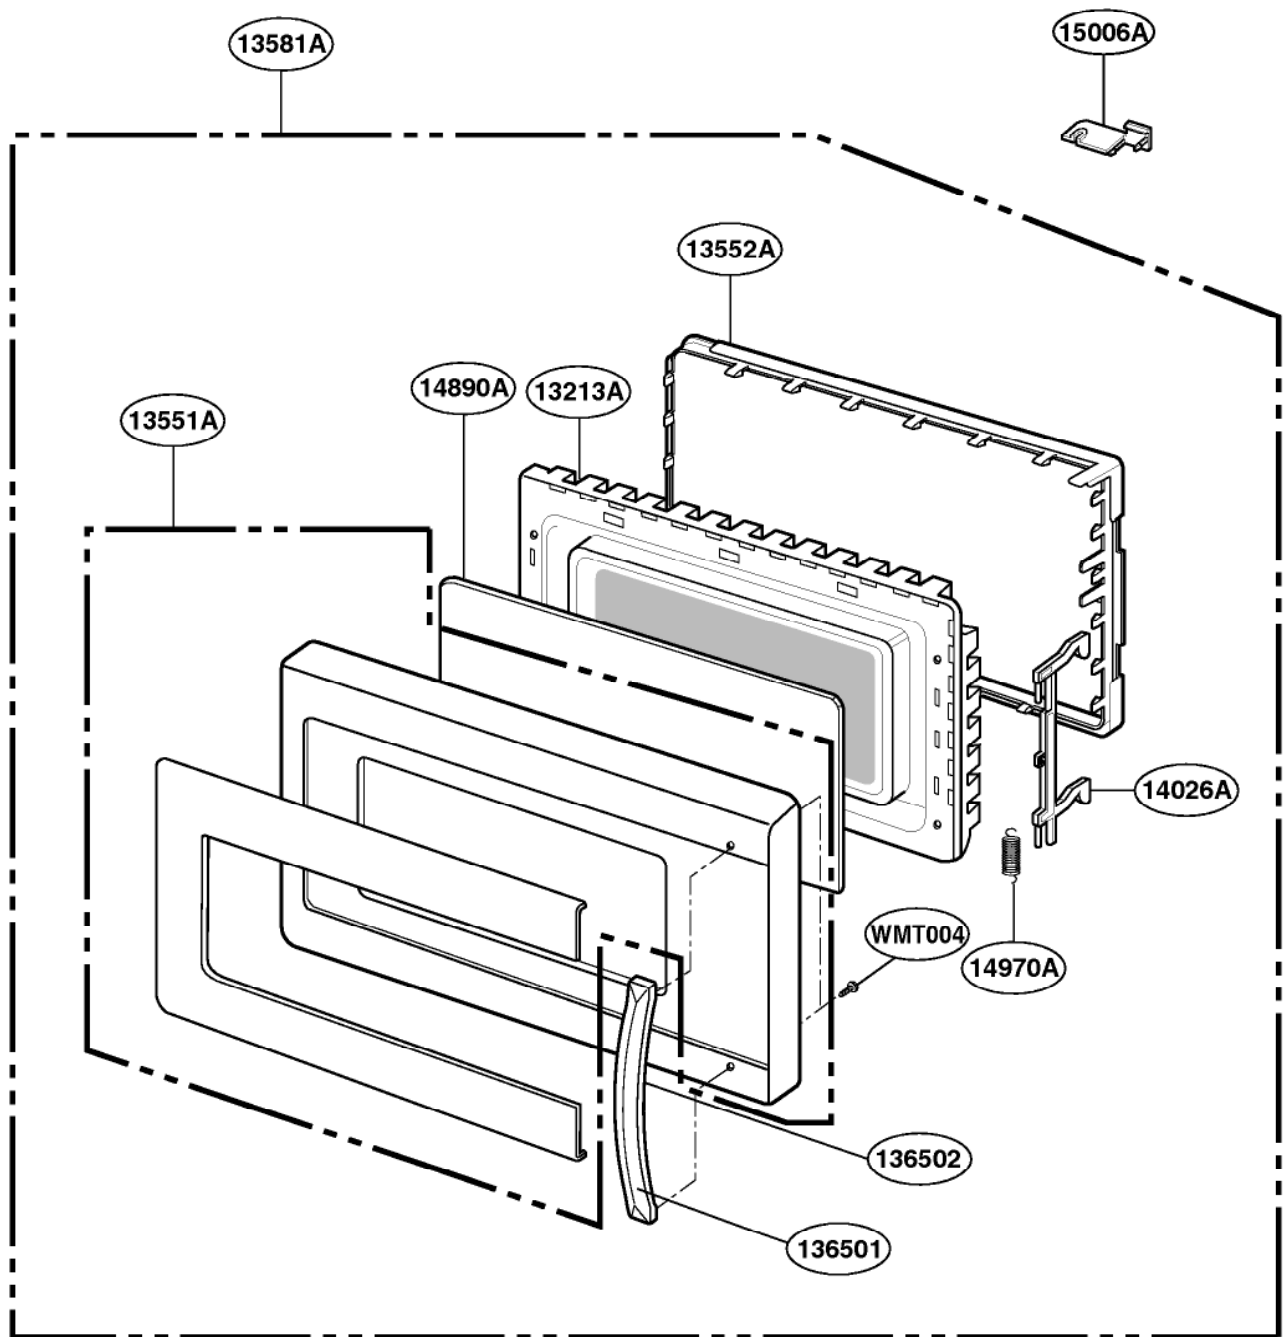


CONTROL PANEL PARTS

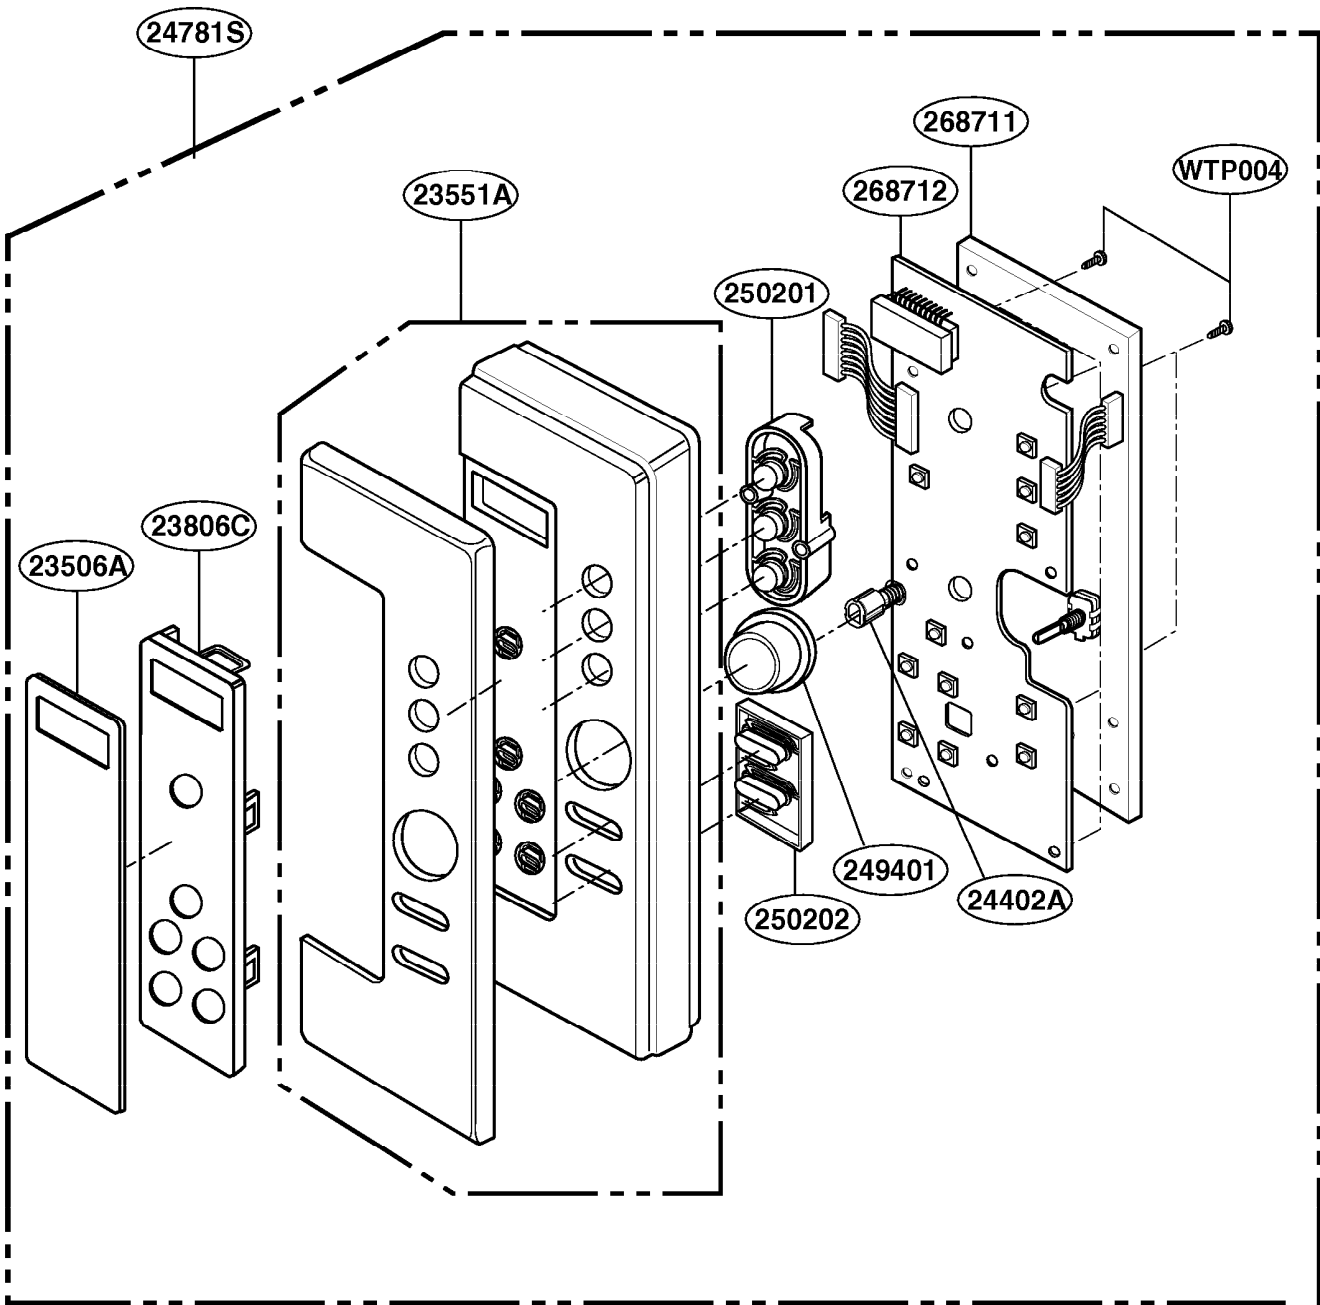


This diagram illustrates the exploded view of a microwave oven assembly. The components are labeled with part numbers in ovals:

- 33808A**: Top outer casing.
- WTT021**: Screws for the top casing.
- 33112U**: Top inner panel.
- 35264A**: Middle support bracket.
- WNZ015**: Waveguide cover.
- 33052M**: Door hinge pin.
- WSZ092**: Door hinge plate.
- WTT010**: Screws for the door frame.
- 35026G**: Turntable support stand.
- 35300S**: Turntable motor assembly.
- WSZ184**: Turntable motor mounting bracket.
- 34960A**: Turntable motor mounting plate.
- 36549S**: Turntable motor mounting bracket.
- WTP013**: Turntable motor mounting screw.
- 33390G**: Turntable.
- 34370T**: Turntable support pin.
- 35889A**: Turntable support ring.

LATCH BOARD PARTS

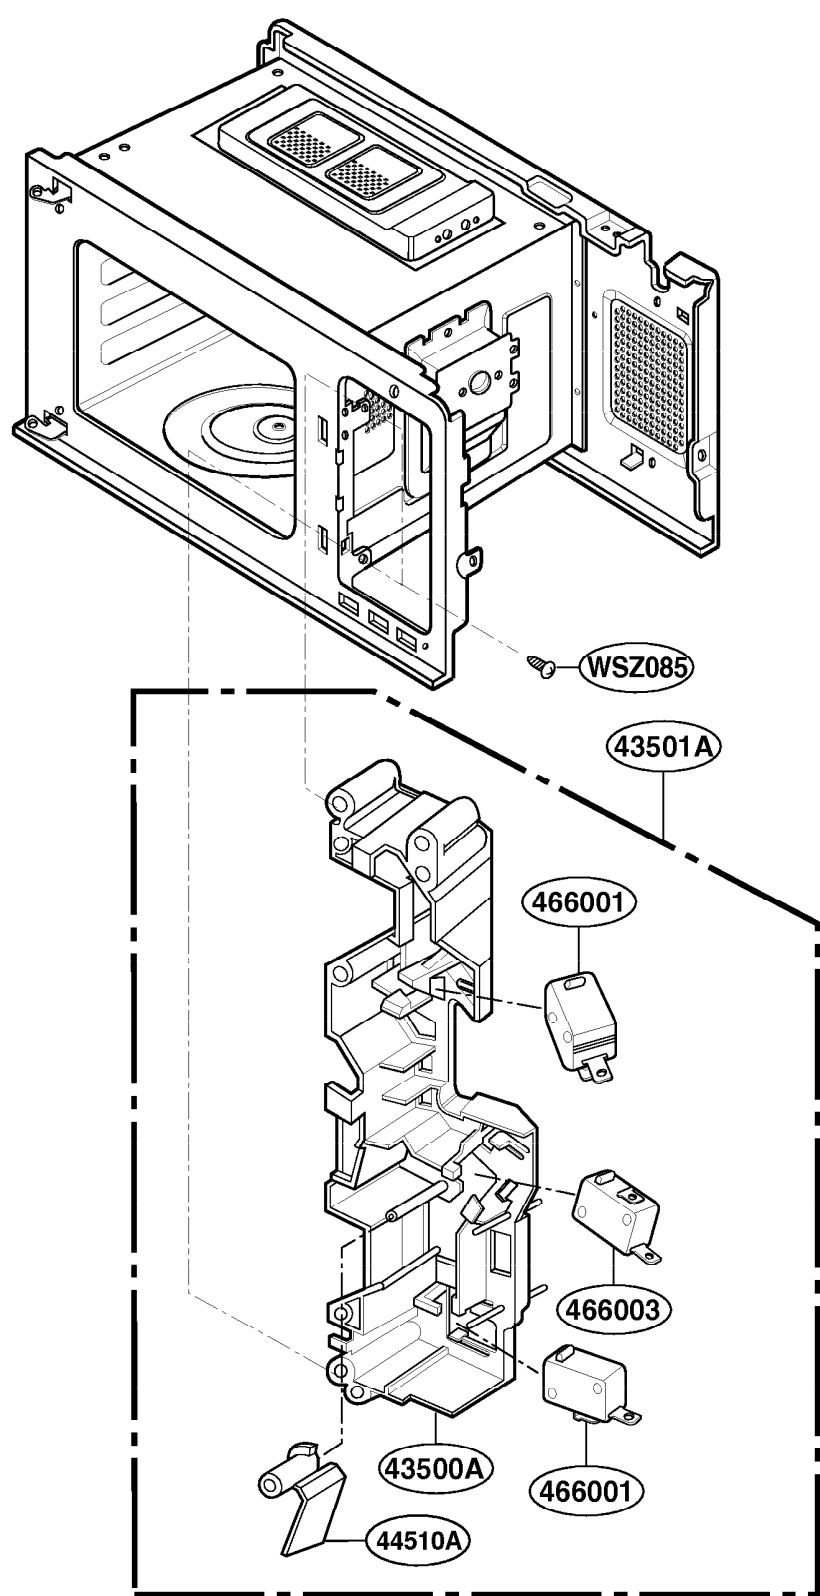

INTERIOR PARTS

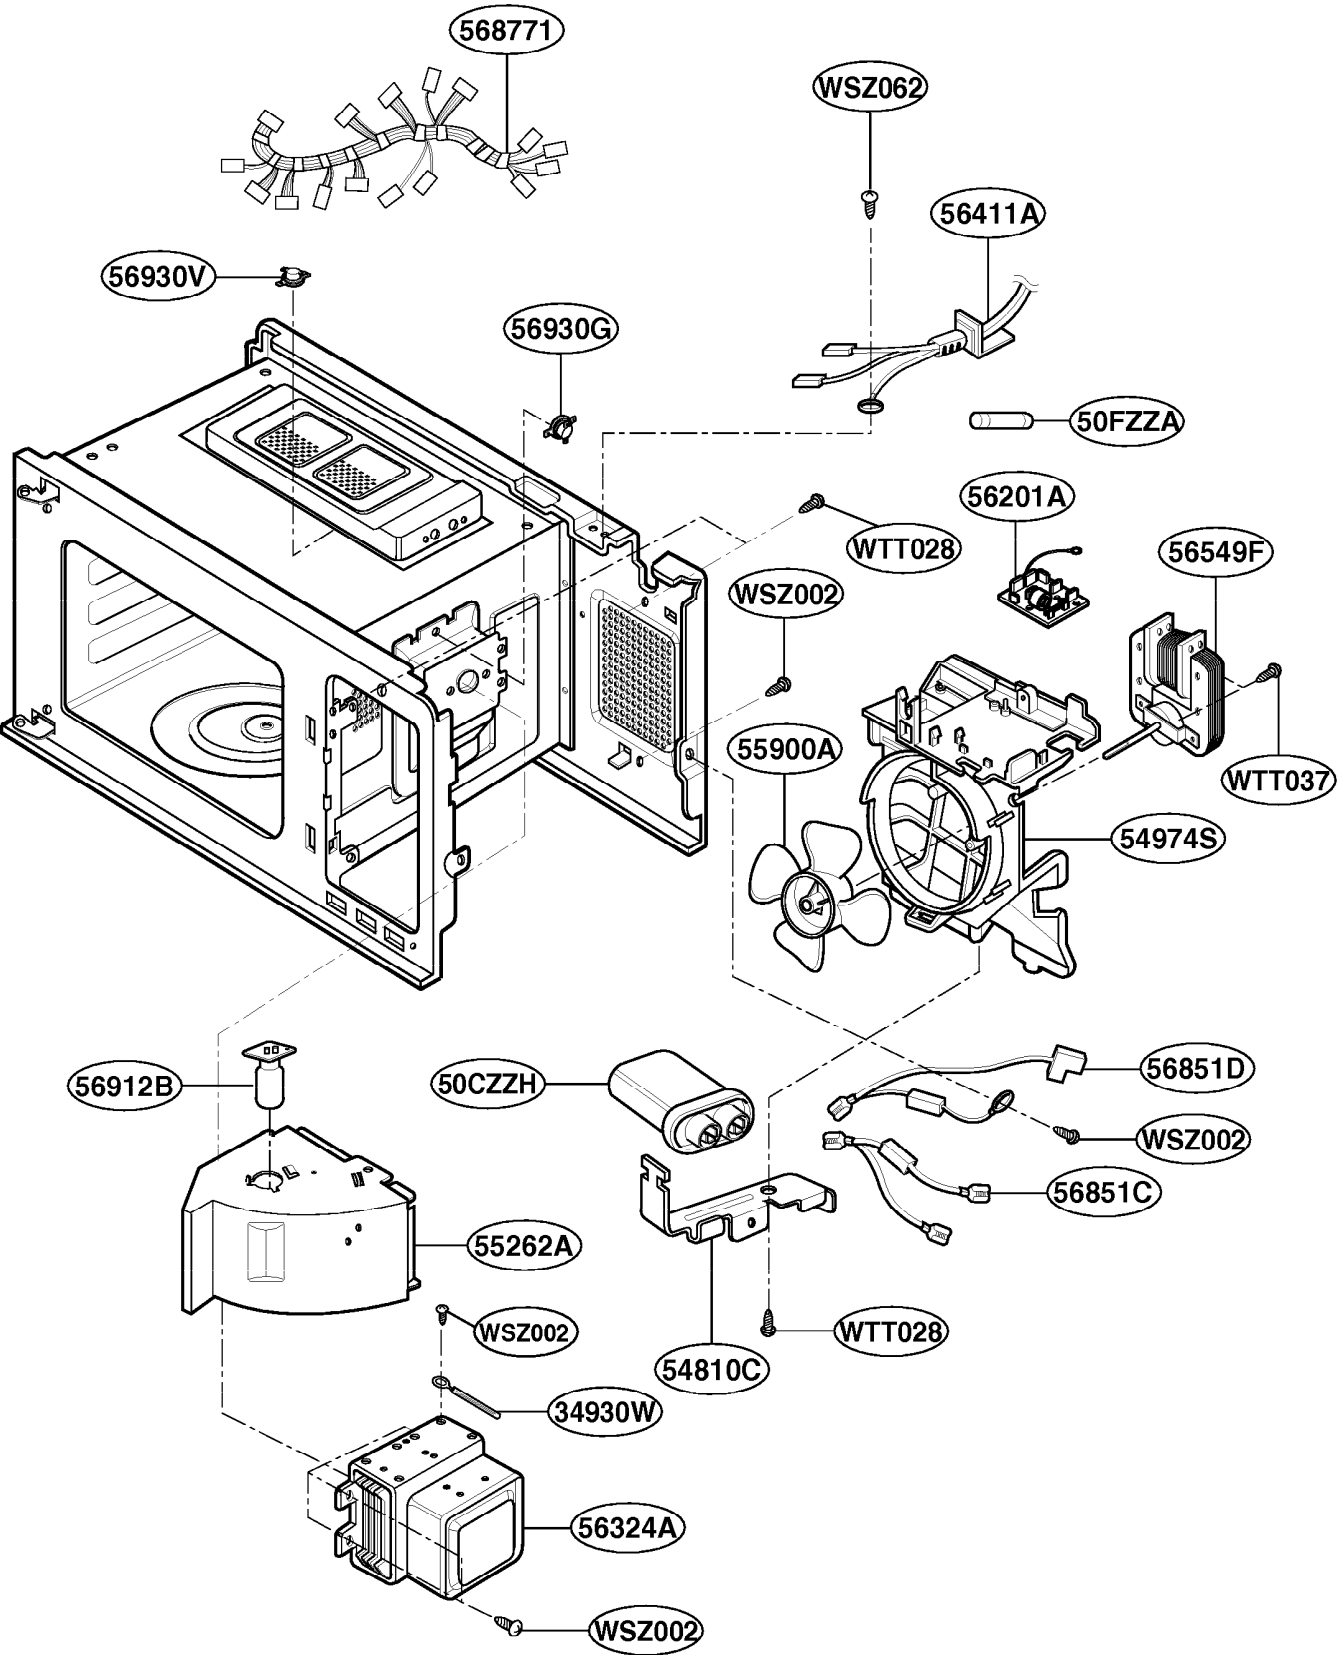

BASE PLATE PARTS

