



14 Exploded View

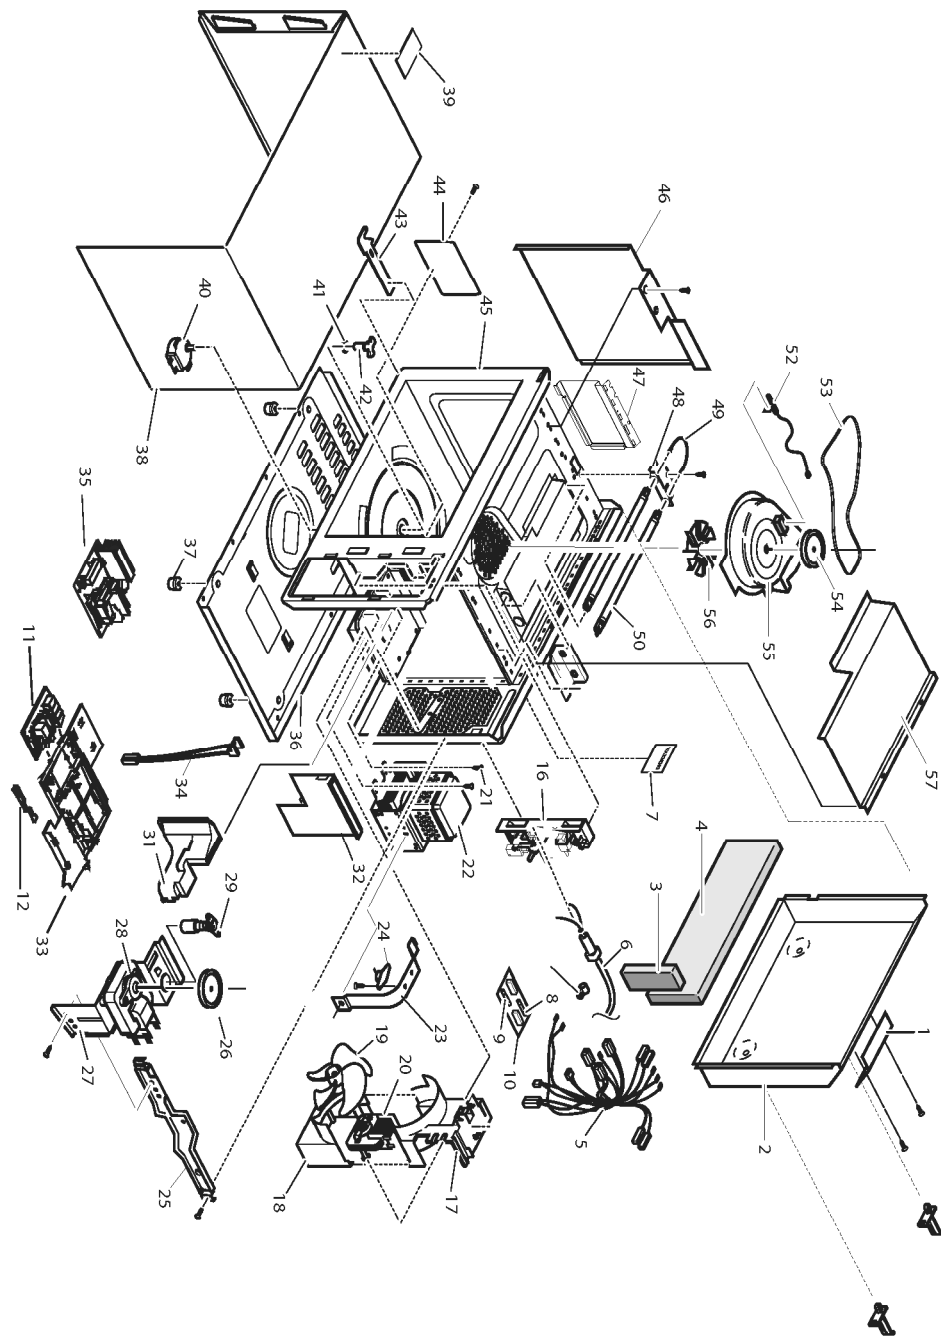


15 Door Assembly

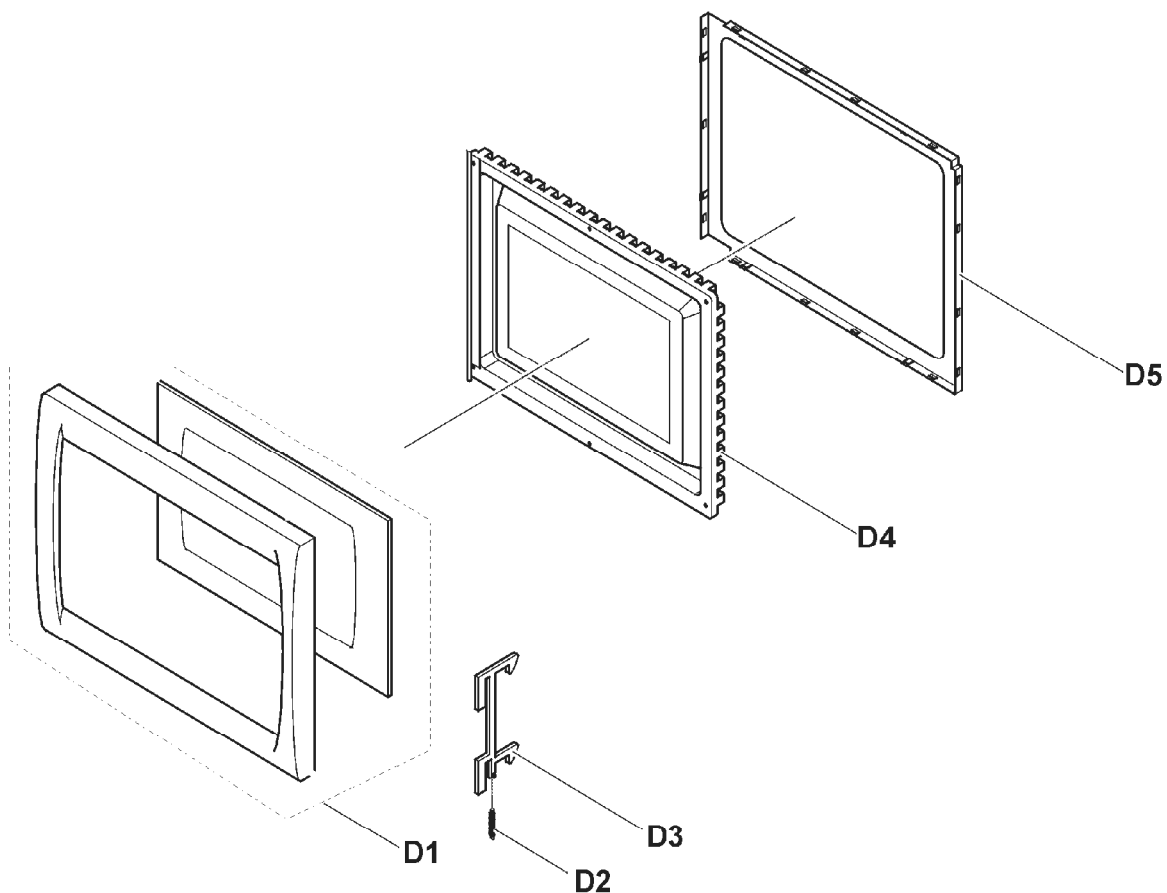

Ref no	Part Number	Part name & description	Qty	Remarks
D1	E302A7P40NEP	DOOR A ASSEMBLY	1	
D2	E30214000AP	DOOR KEY SPRING	1	
D3	E30184L00GS	DOOR KEY	1	
D4	(!) E302K4N00BP	DOOR E ASSEMBLY	1	
D5	E30854V00BP	DOOR C	1	

NOTE: When ordering any Door component also order door C as this part may become damaged during disassembly.


16 Escutcheon Base

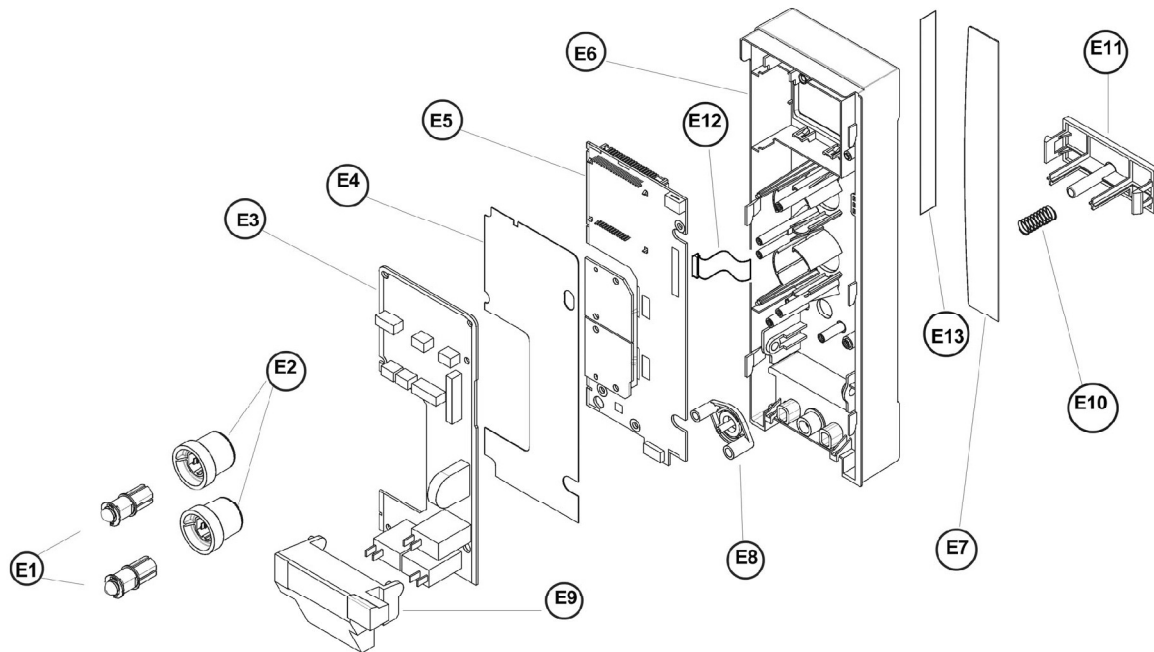

Ref. No.		Part No.	Part Name & Description	Qty	Remarks
E1		E892E7P20NBP	POP UP MECHANISM	2	
E2		E892E7P20NBP	POP UP KNOB	2	
E3	(!)	E605S7P40EP	PCB HU	1	
E4		E60707P20BP	INSULATION SHEET	1	
E5	(!)	E603L7P40EP	PCB AU	1	
E6		E80347P40NEP	ESCUTCHEON BASE	1	
E7		E63887P20EP	DISPLAY SHEET	1	
E8		E80247P20NBP	OPERATION BUTTON	1	
E9		E82566R20BP	DOOR OPENING LEVER	1	
E10		E80378A0AG	SPRING	1	
E11		E80727P20NBP	DOOR OPENING BUTTON	1	
E12		E66167P20BP	RIBBON CABLE	1	
E13	(!)	E00077P40NEP	MODEL LABEL	1	

NOTE: When replacing the escutcheon base, you must transfer the serial number of the microwave oven to the new base. Therefore, when ordering an escutcheon base, also order the blank name plate for your model. Write the model number and serial number on this nameplate and fix the nameplate to the new escutcheon base.

17 Packing and Accessories

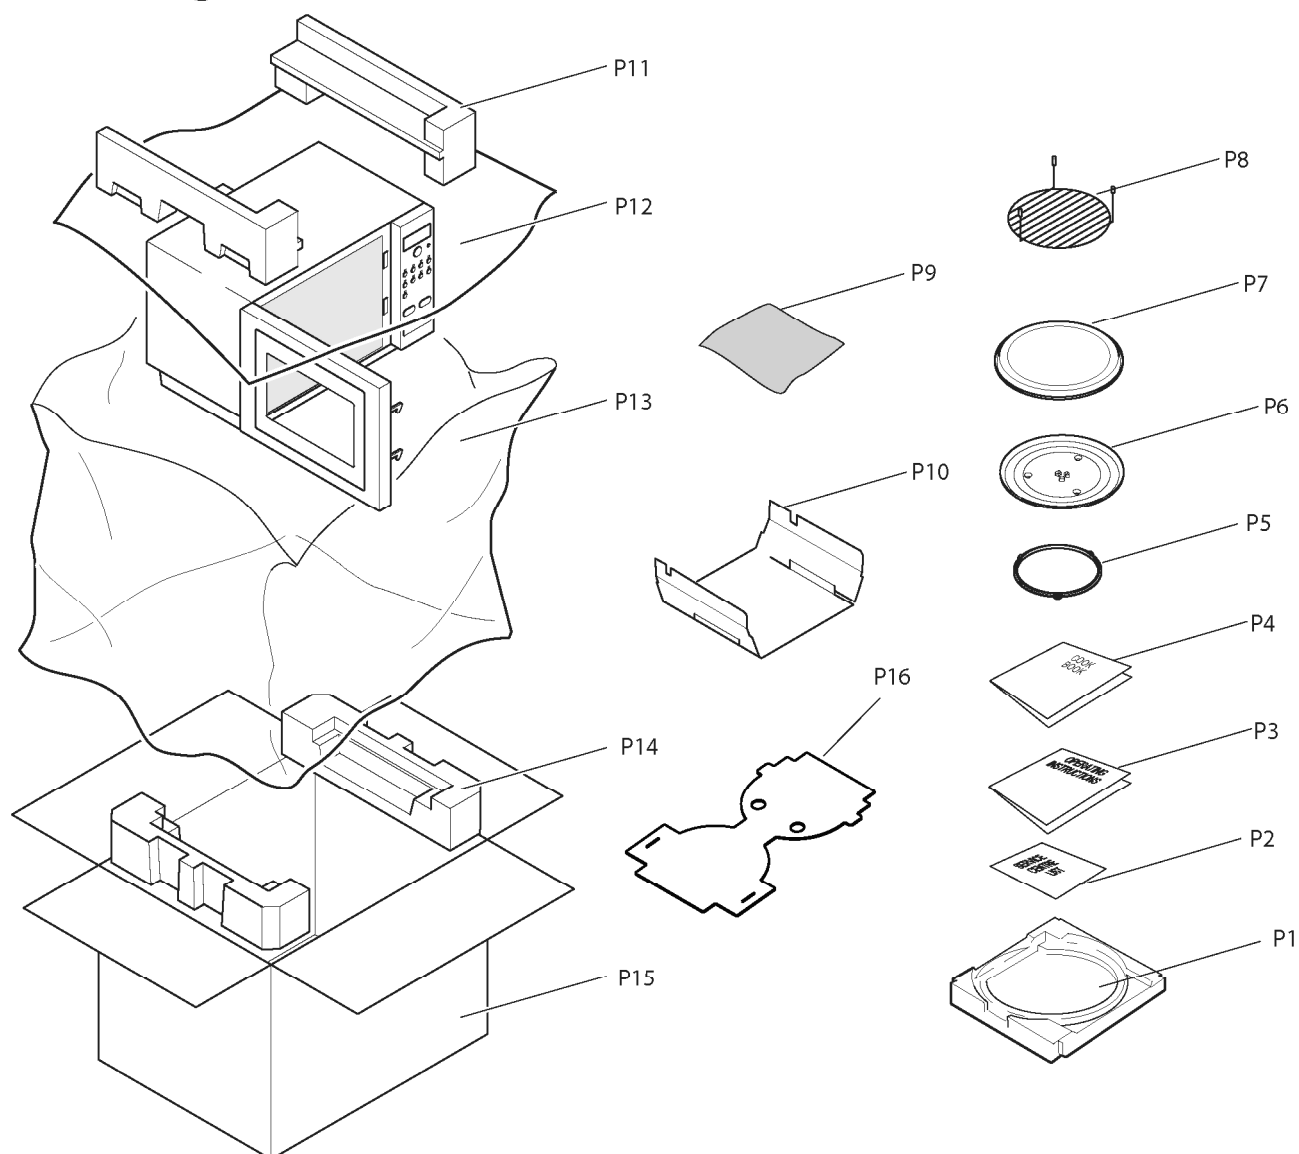

Ref. No.	Part No.	Part Name & Description	Qty	Remarks
P1	E01134N30BP	Tray Styrol	1	
P2	E01695750BP	Service Centre List	1	
P3	E00037P40EP	Operating Instructions	1	
P4	E000B7P40EP	Operating Instructions	1	
P5	E290D6R20BP	Roller Ring	1	
P6	E06014N30BP	Glass Tray	1	
P7	E06015020VP	Enamel Tray	1	
P8	E060V6R20BP	Wire Rack	1	
P9	E02146700BP	Foam Sheet	1	
P10	E01084N30GP	Tray Packing	1	
P11	E01044N30BP	Upper Filler	1	
P12	E01054N30BP	Lower Filler	1	
P13	E01926430GP	Protector Sheet	1	
P14	E01104N70GS	Vinyl Bag	1	
P15	E01027H80BP	Carton Box	1	
P16	E01196R31EP	Enamel Tray Packing	1	