


SECTION 4
EXPLODED VIEWS

- Note:
 - XX and -X mean standardized parts, so they may have some difference from the original one.
 - Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
 - Abbreviation
 - CND : Canadian model
 - CH : Chinese model
 - KR : Korea model
- The mechanical parts with no reference number in the exploded views are not supplied.
 - Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE) . . . (RED)
Parts Color Cabinet's Color
 - Accessories are given in the last of the electrical parts list.
- The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

4-1. MAIN SECTION

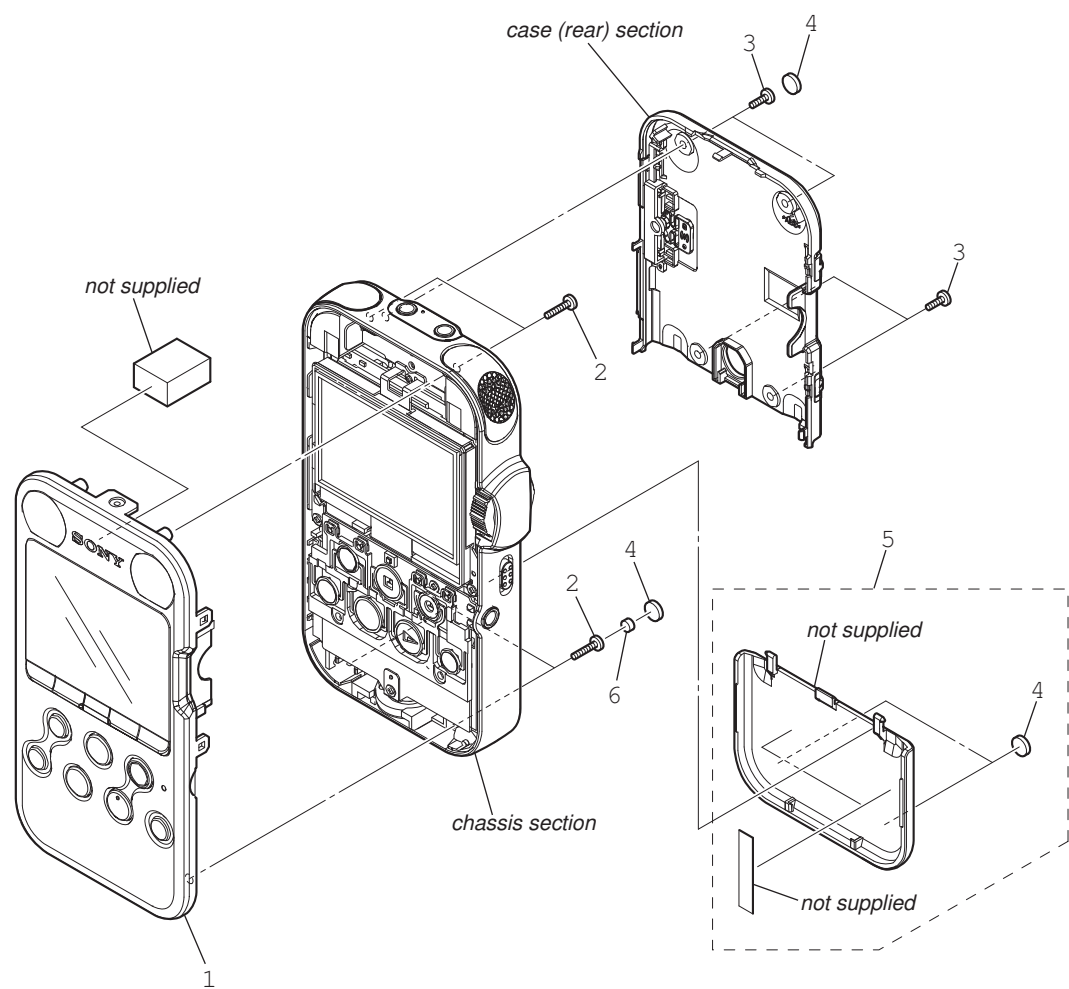


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	A-1743-272-A	PANEL (FRONT) ASSY (BLACK)...(BLACK) (M10:EXCEPT E/M10P)		4	4-166-920-01	CUSHION (FOOT)	
1	A-1745-314-A	PANEL (FRONT) ASSY (RED)...(RED)		5	A-1755-167-A	LID ASSY, BATTERY CASE (LUSTER BLACK)...(BLACK) (M10:E)	
1	A-1745-320-A	PANEL (FRONT) ASSY (WHITE)...(WHITE)		5	A-1755-168-A	LID ASSY, BATTERY CASE (RED)...(RED)	
1	A-1745-378-A	PANEL (FRONT) ASSY (LUSTER BLACK)...(BLACK) (M10:E)		5	A-1755-172-A	LID ASSY, BATTERY CASE (WHITE)...(WHITE)	
2	3-252-825-01	SCREW (1.7)		5	A-1755-174-A	LID ASSY, BATTERY CASE (BLACK)...(BLACK) (M10:EXCEPT E/M10P)	
3	3-254-083-01	SCREW (SILVER)...(WHITE)		6	4-168-919-01	SPACER (FOOT)	
3	3-254-083-11	SCREW (BLACK)...(BLACK,RED)					

4-2. LCD SECTION

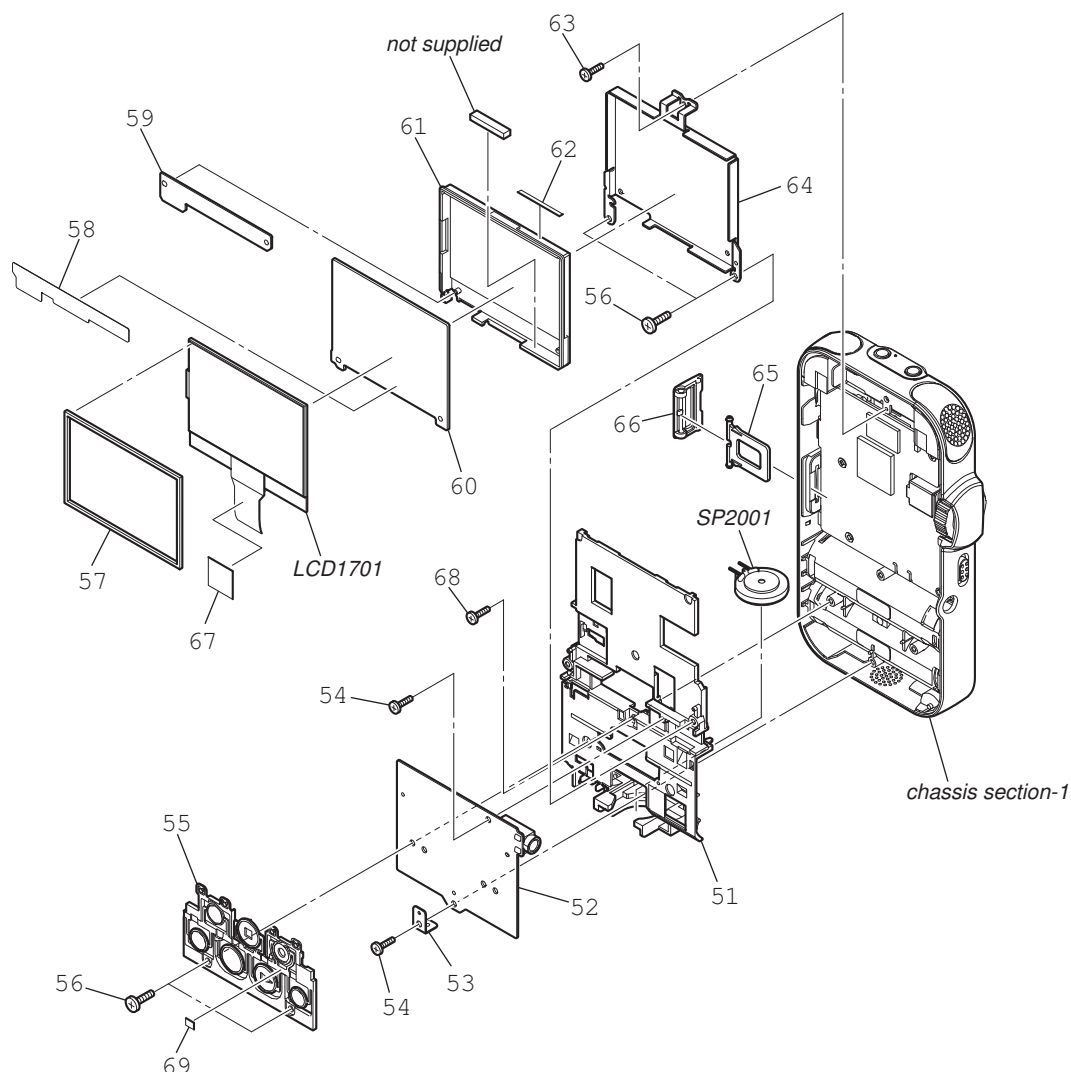


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	4-151-540-01	SPACER (LCD)		62	4-162-207-01	SHEET (LCD), ADHESIVE	
52	A-1736-094-A	SW BOARD, COMPLETE		63	3-234-449-27	SCREW (M1.4)	
53	4-151-575-01	BRACKET SP		64	4-151-541-01	REINFORCEMENT (LCD)	
54	3-254-014-01	SCREW		65	4-151-568-01	HINGE (SLOT)	
55	4-152-045-01	BUTTON (BASE)		66	4-151-567-01	LID (SLOT)	
56	3-254-083-11	SCREW		67	4-151-570-01	SHEET (LCD)	
57	4-151-537-01	CUSHION (LCD)		68	3-254-082-01	SCREW	
58	4-166-190-01	SHEET (BACK LIGHT)		69	4-171-338-01	SHEET (BUTTON)	
59	A-1736-097-A	LED BOARD, COMPLETE		LCD1701	1-802-982-11	DISPLAY PANEL, LIQUID CRYSTAL	
60	4-151-539-01	PLATE, LIGHT GUIDE		SP2001	1-826-852-21	SPEAKER (1.6cm)	
61	4-151-536-01	HOLDER (LCD)					

4-3. CHASSIS SECTION-1

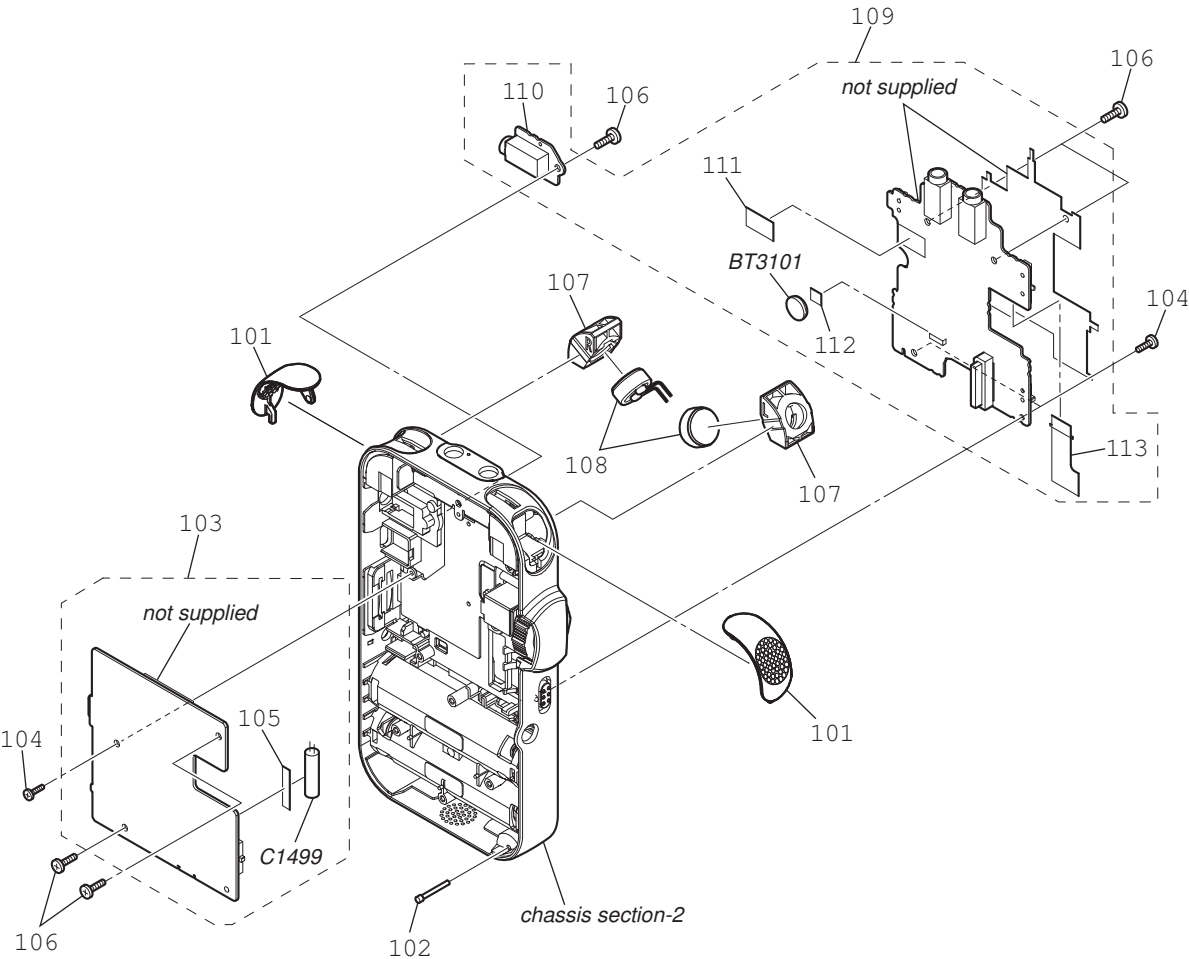


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	4-151-556-01	NET, MIC		108	9-885-138-06	MIC PAIR (2 pcs) (MIC3001,MIC3002)	
102	4-151-563-01	SHAFT (STRAP)		109	A-1736-087-A	AUDIO BOARD, COMPLETE (EXCEPT AEP,UK)	
103	9-885-138-01	SYSTEM BOARD, COMPLETE (US,CND)		109	A-1769-191-A	AUDIO BOARD, COMPLETE (AEP,UK)	
103	9-885-138-02	SYSTEM BOARD, COMPLETE (AEP,UK)		110	A-1736-091-A	HP BOARD, COMPLETE (EXCEPT AEP,UK)	
103	9-885-138-03	SYSTEM BOARD, COMPLETE (E)		110	A-1769-193-A	HP BOARD, COMPLETE (AEP,UK)	
103	9-885-138-04	SYSTEM BOARD, COMPLETE (KR)		111	4-151-570-01	SHEET (LED)	
103	9-885-138-05	SYSTEM BOARD, COMPLETE (CH)		112	2-549-689-01	SHEET (SHUTTER-B), ADHESIVE	
104	3-234-449-27	SCREW (M1.4)		113	1-880-763-11	REC VOL FLEXIBLE BOARD	
105	3-286-614-01	SHEET, ADHESIVE		BT3101	1-756-813-11	LITHIUM RECHARGEABLE BATTERY (MS614SE)	
106	3-254-082-01	SCREW				(DC 3V/3.4mAh)	
107	4-151-547-01	CUSHION (MIC)		C1499	1-126-934-11	ELECT 220uF 20% 16V	

4-4. CHASSIS SECTION-2

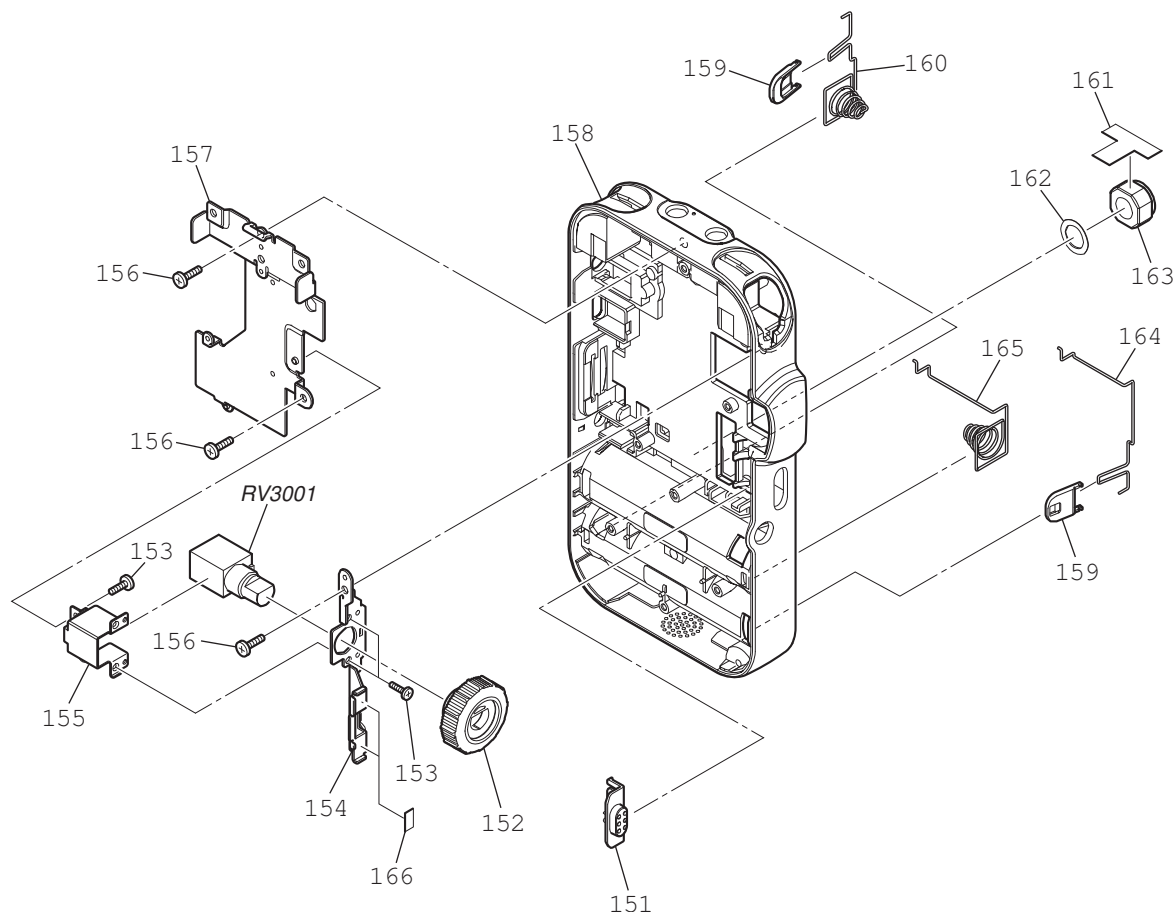

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	4-151-561-02	KNOB (POWER)		159	3-270-463-01	TERMINAL, CAP	
152	4-151-559-01	KNOB (REC VOL)		160	4-151-552-01	TERMINAL, CONNECTION	
153	3-234-449-27	SCREW (M1.4)		161	4-151-569-01	SHEET (TRIPOD)	
154	4-153-848-01	REINFORCEMENT (A REC_VOL)		162	4-151-557-01	SHEET (TRIPOD), ADHESIVE	
155	4-153-849-01	REINFORCEMENT (B REC_VOL)		163	4-153-941-01	SCREW, TRIPOD	
156	3-254-082-01	SCREW		164	4-151-551-01	TERMINAL (+), BATTERY	
157	4-151-555-01	REINFORCEMENT (REC_VOL)		165	4-151-553-01	TERMINAL (-), BATTERY	
158	4-151-554-11	CHASSIS (EXCEPT CH)		166	4-171-216-01	SHEET (HOLD)	
158	4-151-554-21	CHASSIS (CH)		RV3001	1-227-862-11	RES, VAR, CARBON 20KX4 (REC LEVEL)	

4-5. CASE (REAR) SECTION

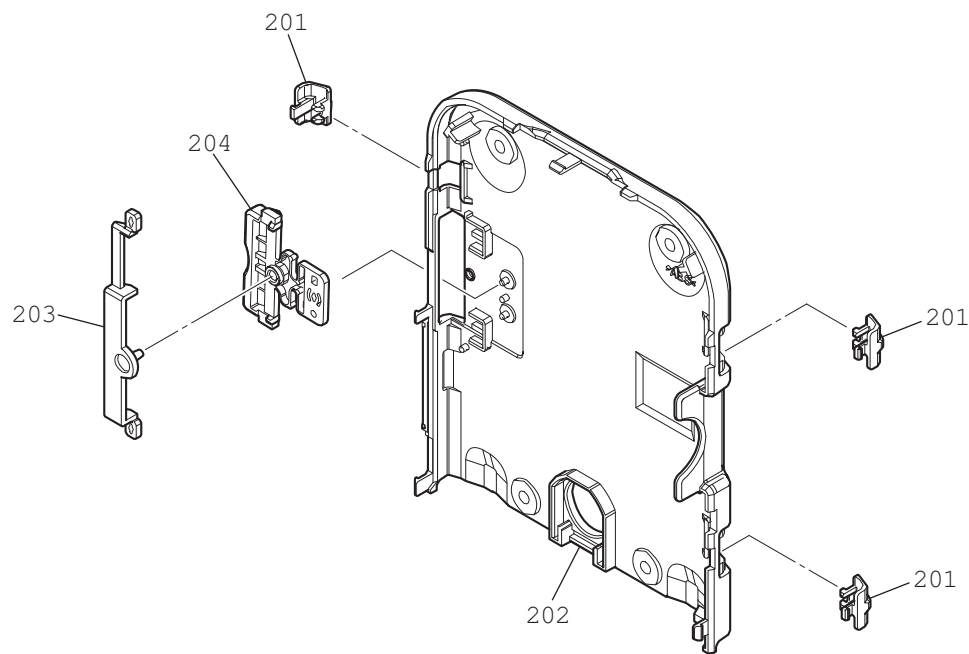

Ref. No.	Part No.	Description	Remark
201	4-151-565-01	KNOB (REAR) (BLACK)...(BLACK)	
201	4-151-565-11	KNOB (REAR) (WHITE)...(WHITE)	
201	4-151-565-21	KNOB (REAR) (RED)...(RED)	
202	4-151-534-02	PANEL (REAR) (LUSTER BLACK)...(BLACK)	(M10:E)
202	4-151-534-12	PANEL (REAR) (WHITE)...(WHITE) (E)	
202	4-151-534-32	PANEL (REAR) (BLACK)...(BLACK)	(M10:AEP,UK,KR/M10P)
202	4-151-564-32	PANEL (REAR) (BLACK)...(BLACK) (US,CND)	
202	4-151-564-52	PANEL (REAR) (WHITE)...(WHITE) (US)	
202	4-151-564-62	PANEL (REAR) (RED)...(RED) (US,CND)	

Ref. No.	Part No.	Description	Remark
202	4-151-564-73	PANEL (REAR) (BLACK)...(BLACK) (CH)	
202	4-151-564-83	PANEL (REAR) (WHITE)...(WHITE) (CH)	
202	4-151-564-93	PANEL (REAR) (RED)...(RED) (CH)	
203	4-151-545-02	COVER (VOL) (BLACK)...(BLACK)	
203	4-151-545-12	COVER (VOL) (WHITE)...(WHITE)	
203	4-151-545-22	COVER (VOL) (RED)...(RED)	
204	4-151-558-02	BUTTON (VOL) (BLACK)...(BLACK)	
204	4-151-558-12	BUTTON (VOL) (WHITE)...(WHITE)	
204	4-151-558-22	BUTTON (VOL) (RED)...(RED)	