

1-1X70

PS-LX70

SONY

SECTION 4
EXPLODED VIEWS AND PARTS LIST

NOTE :




The mechanical parts with no reference number in the exploded views are not supplied.

Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.


The construction parts of an assembled part are indicated with a collation number in the remark column.

The components are
by shading and ma
critical for safe
Replace only with
number specified.

4-1.

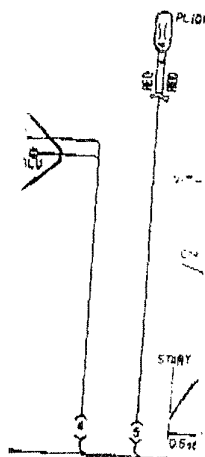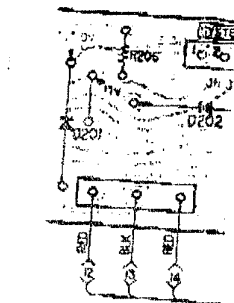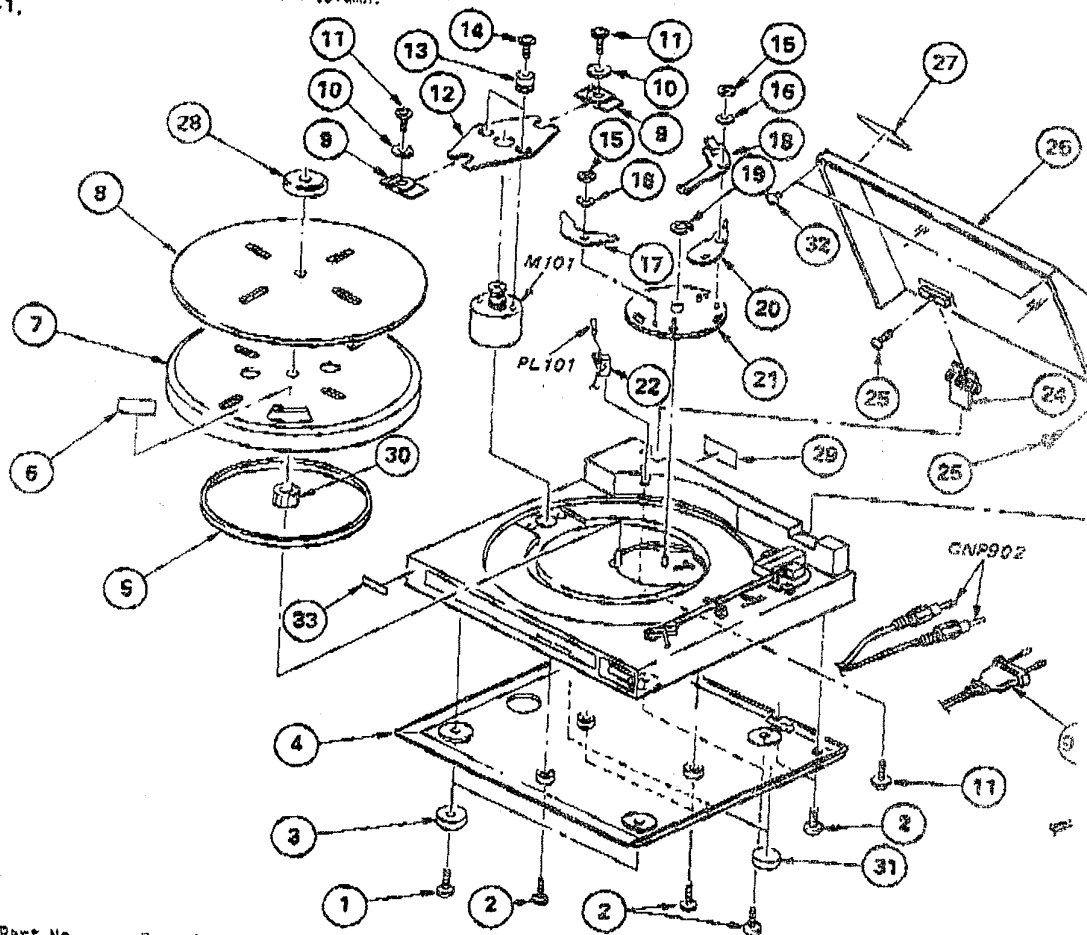


de jury to connect wires
to phone in room

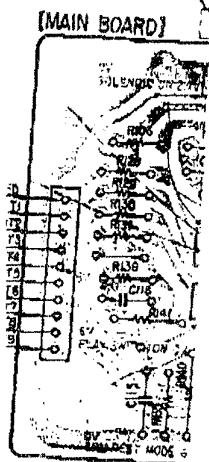

No.	Part No.	Description	Remarks	No.	Part No.	Description
1	7-685-550-19	SCREW +BTP 3X16 TYPEZ N-S		20	4-874-232-00	CLUTCH (R)
2	7-685-148-19	SCREW +BVTP 3X12 TYPEZ N-S		21	4-880-524-00	GEAR (S), DRIVE
3	X-4909-016-1	INSULATOR ASSY		22	4-908-110-01	COVER, LAMP
4	*X-4913-502-1	PLATE ASSY, BOTTOM		24	4-885-731-31	HINGE
5	4-880-655-01	BELT				
6	*4-909-004-01	LABEL, CAUTION. GEAR		25	7-682-546-04	SCREW +B 3X5
7	X-4909-004-1	TURNTABLE ASSY		26	X-4913-511-1	COVER ASSY, DUST
8	4-909-059-02	SHEET, TURNTABLE	30	3-703-705-41	STICKER, SONY SYMBOL (30)	
9	4-908-120-01	RUBBER, FLOATING		28	3-701-806-00	ADAPTOR, 45, (E)
10	*4-301-647-00	WASHER, SPECIAL				
11	3-703-137-00	SCREW, TAPPING		29	*4-913-507-01	(AEP)...LABEL, MODEL NUMBER
12	*4-908-151-01	BRACKET (C), MOTOR			4-913-609-01	(UK)...LABEL, MODEL NUMBER
13	4-909-061-01	CUSHION, MOTOR		30	4-858-052-00	GEAR, CENTER
14	4-909-062-01	SCREW, MOTOR		31	*4-913-527-01	FOOT
15	7-524-190-81	STOP RING 2, TYPE-CS		32	4-885-183-00	CUSHION (D)
				33	4-912-106-01	EMBLEM, SONY
16	7-623-106-15	W 2, MIDDLE		912	1-534-817-XX	(AEP)...CORD, POWER, EURO 1
17	4-874-279-00	CLUTCH (L)		913	1-556-562-11	(UK)...CORD, POWER
18	4-874-254-00	CLUTCH (S)		CNP902	1-551-294-00	CORD (WITH PLUG)
19	7-624-106-04	STOP RING 3.0, TYPE -E		MID1	8-835-126-01	MOTOR, DC (DNR=7600A)

4-2.

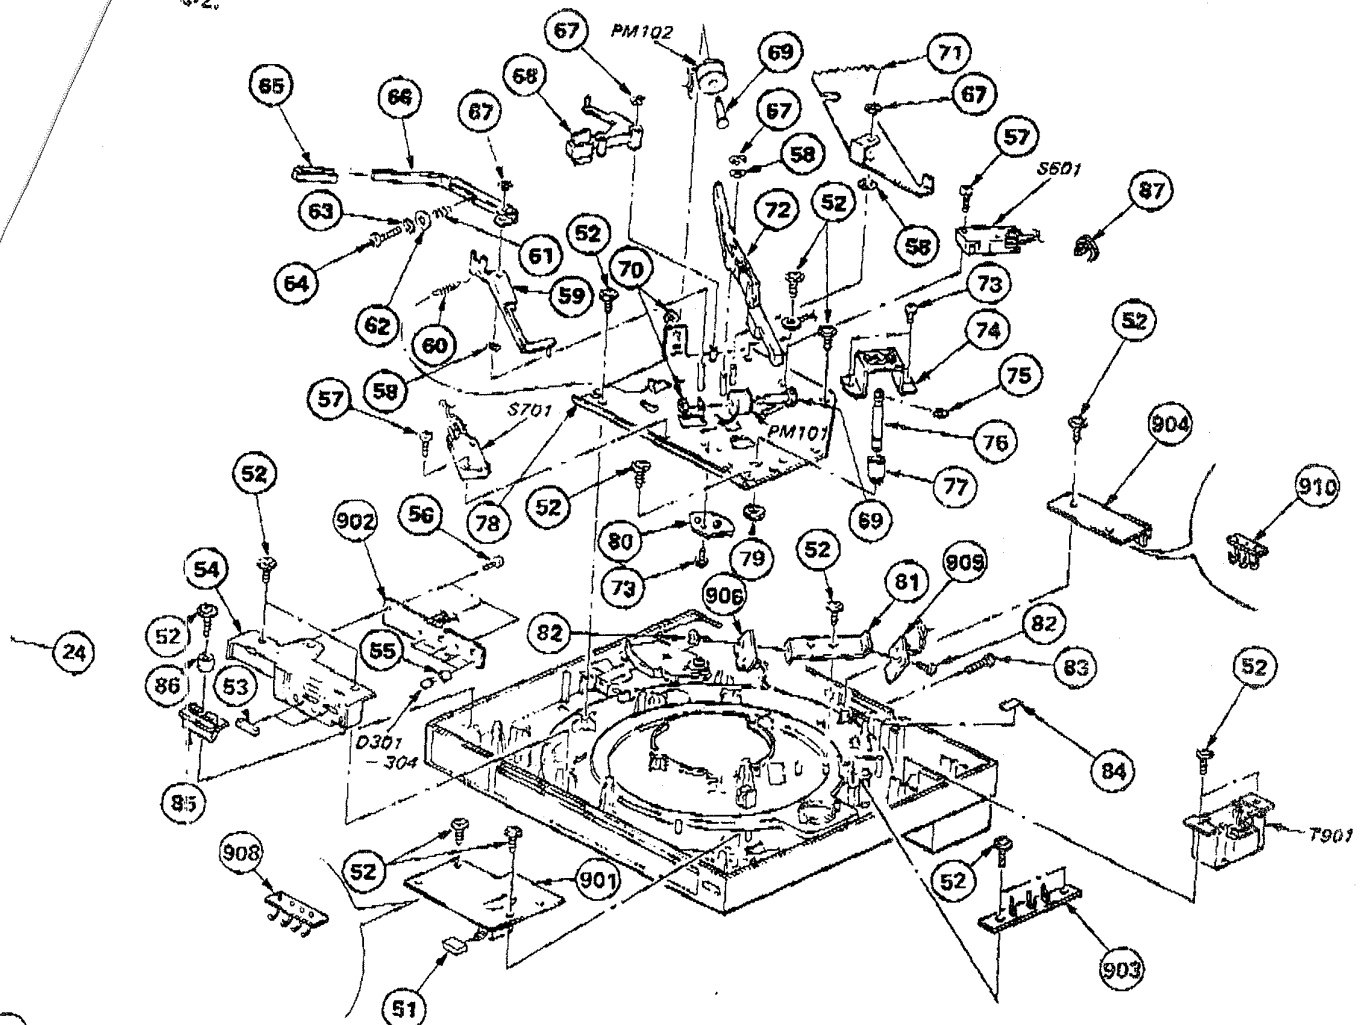

13

marks

7,32

No.	Part No.	Description
51	4-507-928-01	BUTTON, POWER
52	3-703-137-00	SCREW, TAPPING
53	4-908-111-01	BUTTON (B), CONTROL
54	*4-913-517-01	BASE, CONTROL BUTTON
55	*4-901-657-00	SPACER (A), LED
56	7-685-134-14	SCREW +P 2.6X8 TYPE2 NON-SLIT
57	7-695-755-01	SCREW +PTT 3X14 (S)
58	3-701-441-21	WASHER
59	*X-4909-010-1	LEVER ASSY, RESET
60	4-909-085-01	SPRING, TENTION
61	4-909-031-01	SPRING (BRAKE B), COMPRESSION
62	*4-301-647-00	WASHER, SPECIAL
63	4-812-554-00	WASHER
64	*7-682-551-09	SCREW +B 3X14
65	4-874-275-00	PAD, BRAKE
66	*4-909-030-01	LEVER (B), BRAKE
67	7-624-106-04	STOP RING 3.0, TYPE -E
68	X-4909-008-1	LEVER (DP) ASSY, SIZE
69	4-874-234-00	CORE
70	7-627-207-05	N 2.6, TYPE 2
71	*X-4909-007-1	LEVER ASSY, MAIN
72	X-4909-006-1	LEVER ASSY, CLUTCH
73	7-682-546-04	SCREW +9 3X5


Remarks

No.	Part No.	Description
74	*4-909-021-01	BRACKET, BEARING
75	7-824-133-34	STOP RING B, TYPE-CE
76	4-908-103-01	SHAFT, CENTER
77	4-909-022-01	BEARING (B)
78	*X-4909-015-1	CHASSIS ASSY
79	4-909-084-01	NUT, BEARING
80	*4-909-023-01	RETAINER, CLUTCH
81	*4-909-037-01	BRACKET, SENSOR
82	7-685-750-04	SCREW +PTT 3X5 (S)
83	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S
84	3-831-441-XX	CUSHION (B), CABINET
85	4-913-516-21	BUTTON, START
86	*4-913-528-01	SPACER, BUTTON
87	*3-701-748-00	CLAMP
901	*A-4619-283-A	MOUNTED PCB, SYSTEM CONTROL
902	*1-618-203-11	PC BOARD, CONTROL SW
903	*1-608-536-00	PC BOARD, PRIMARY TRANSLATION
904	*1-618-202-11	PC BOARD, 6P CONNECTOR
905	*1-614-855-11	PC BOAR, SIZE (OUT)
906	*1-614-854-11	PC BOAR, SIZE (IN)
908	*1-508-801-00	U TYPE BASE POST 4P
910	*1-508-800-13	U TYPE BASE POST 3P

Remarks

-LX70

4-3.

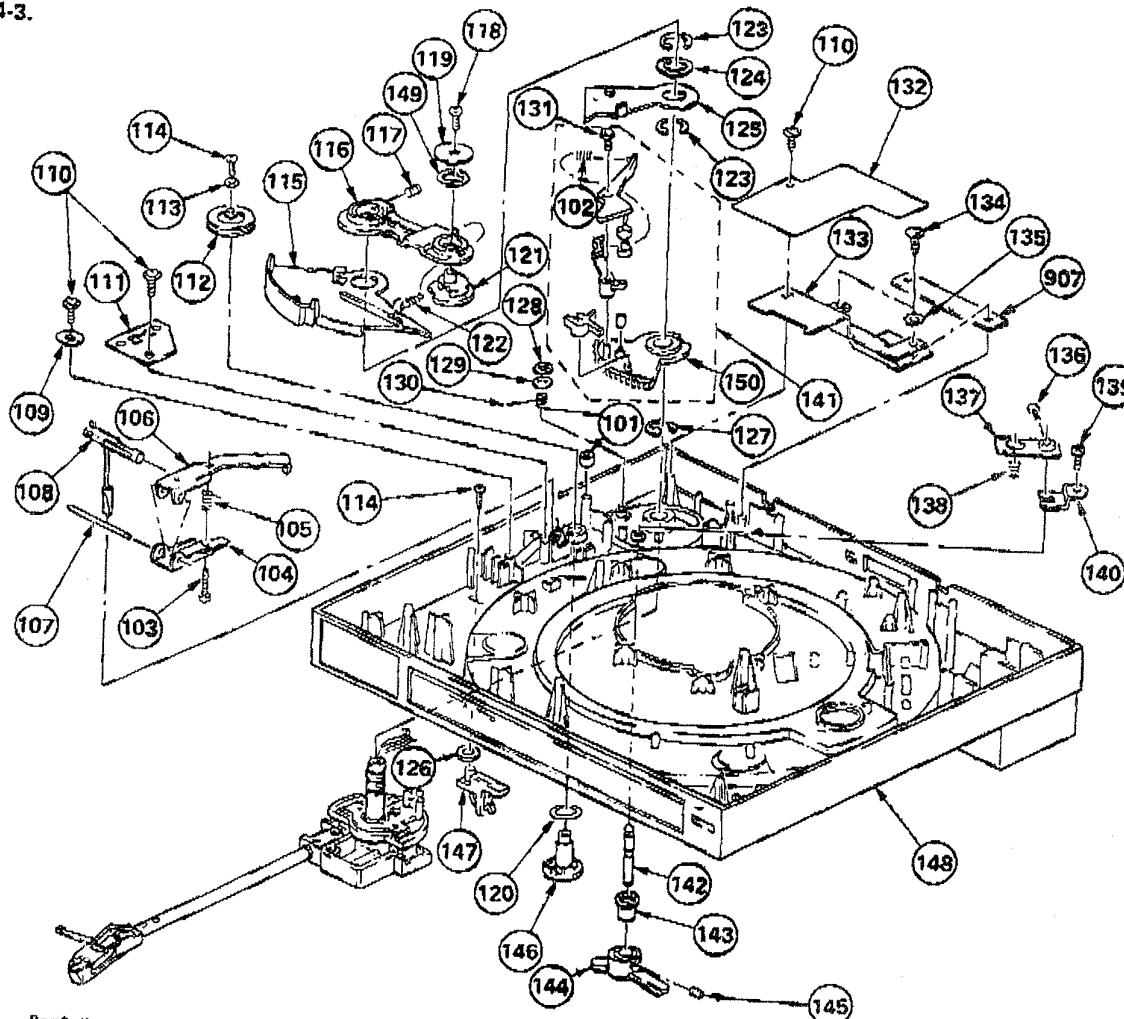

No.	Part No.	Description
101	*4-903-453-01	CUSHION (C)
102	4-876-347-01	SPRING, COMPRESSION
103	7-621-775-80	SCREW +B 2.6X16
104	*4-909-038-01	LEVER, LIFTER
105	4-880-503-00	SPRING, COMPRESSION
106	*4-880-501-00	LEVER (A), LIFTER
107	*4-881-511-00	SHAFT, LEVER, LIFTER
108	4-909-012-01	CAM, LIFTER
109	*4-301-547-00	WASHER, SPECIAL
110	3-703-137-00	SCREW, TAPPING
111	*4-909-009-01	RETAINER, CAM
112	*4-887-903-00	CAM, IFC
113	7-688-002-11	W 2.6, MIDDLE
114	7-685-134-14	SCREW +P 2.6X8 TYPE2 NON-SLIT
115	4-909-045-03	LEVER (C), ARM
116	4-909-056-01	LEVER (D), ARM
117	3-701-507-00	SET SCREW, DOUBLE POINT, (M3X5)
118	7-685-144-19	SCREW +P 3X5 TYPE2 NON-SLIT
119	0-056-028-00	WASHER, PLAIN, 14 DIA.
120	4-844-041-00	WASHER, (N)
121	4-909-046-01	CAM, ECCENTRIC
122	3-548-124-00	SPRING, TENSION
123	7-624-133-44	STOP RING 9, TYPE-CE
124	4-911-107-	POLY-SLIDER (DIA. 9.6)(LARGE)
125	*X-4909-003-1	LEVER (E) ASSY, INDEX

Remarks

No.	Part No.	Description
126	*4-913-524-01	SPACER, REST
127	7-624-133-54	STOP RING 10, TYPE-CE
128	7-624-190-31	STOP RING 4, TYPE-CS
129	7-688-004-11	W 4, MIDDLE
130	4-909-057-01	SPRING, IFC
131	7-687-202-21	TOTSU PTPWH 2X4, TYPE 2, SLIT
132	*4-909-006-01	PLATE (B), SHIELD
133	*4-909-007-01	PLATE (A), SHIELD
134	3-703-138-00	SCREW, TAPPING
135	7-623-422-07	LW 3, TYPE B
136	7-621-255-25	SCREW +P 2X4
137	*X-4909-011-1	GUIDE ASSY, LIFTER
138	4-909-099-01	SPRING, COMPRESSION (LIFTER D)
139	3-703-135-00	SCREW, TAPPING
140	*4-909-008-11	RETAINER (P)
141	X-4909-012-1	LEVER (D) ASSY, INDEX
142	4-909-034-01	ROD (A), PUSH
143	4-909-033-01	CASE (A), ROD, PUSH
144	X-4909-002-1	PLATE ASSY, UP AND DOWN
145	7-621-738-08	SET-SCRT, HEX. 2.6X4, FLAT POINT
146	4-909-010-01	KNOB, IFC
147	X-4909-030-1	REST SUB ASSY, ARM
148	X-4913-501-1	FRAME ASSY
149	4-844-041-11	WASHER, (N)
150	4-909-055-01	LEVER (D), INDEX
907	*1-618-204-11	PC BOARD, PHONO

Remarks

148