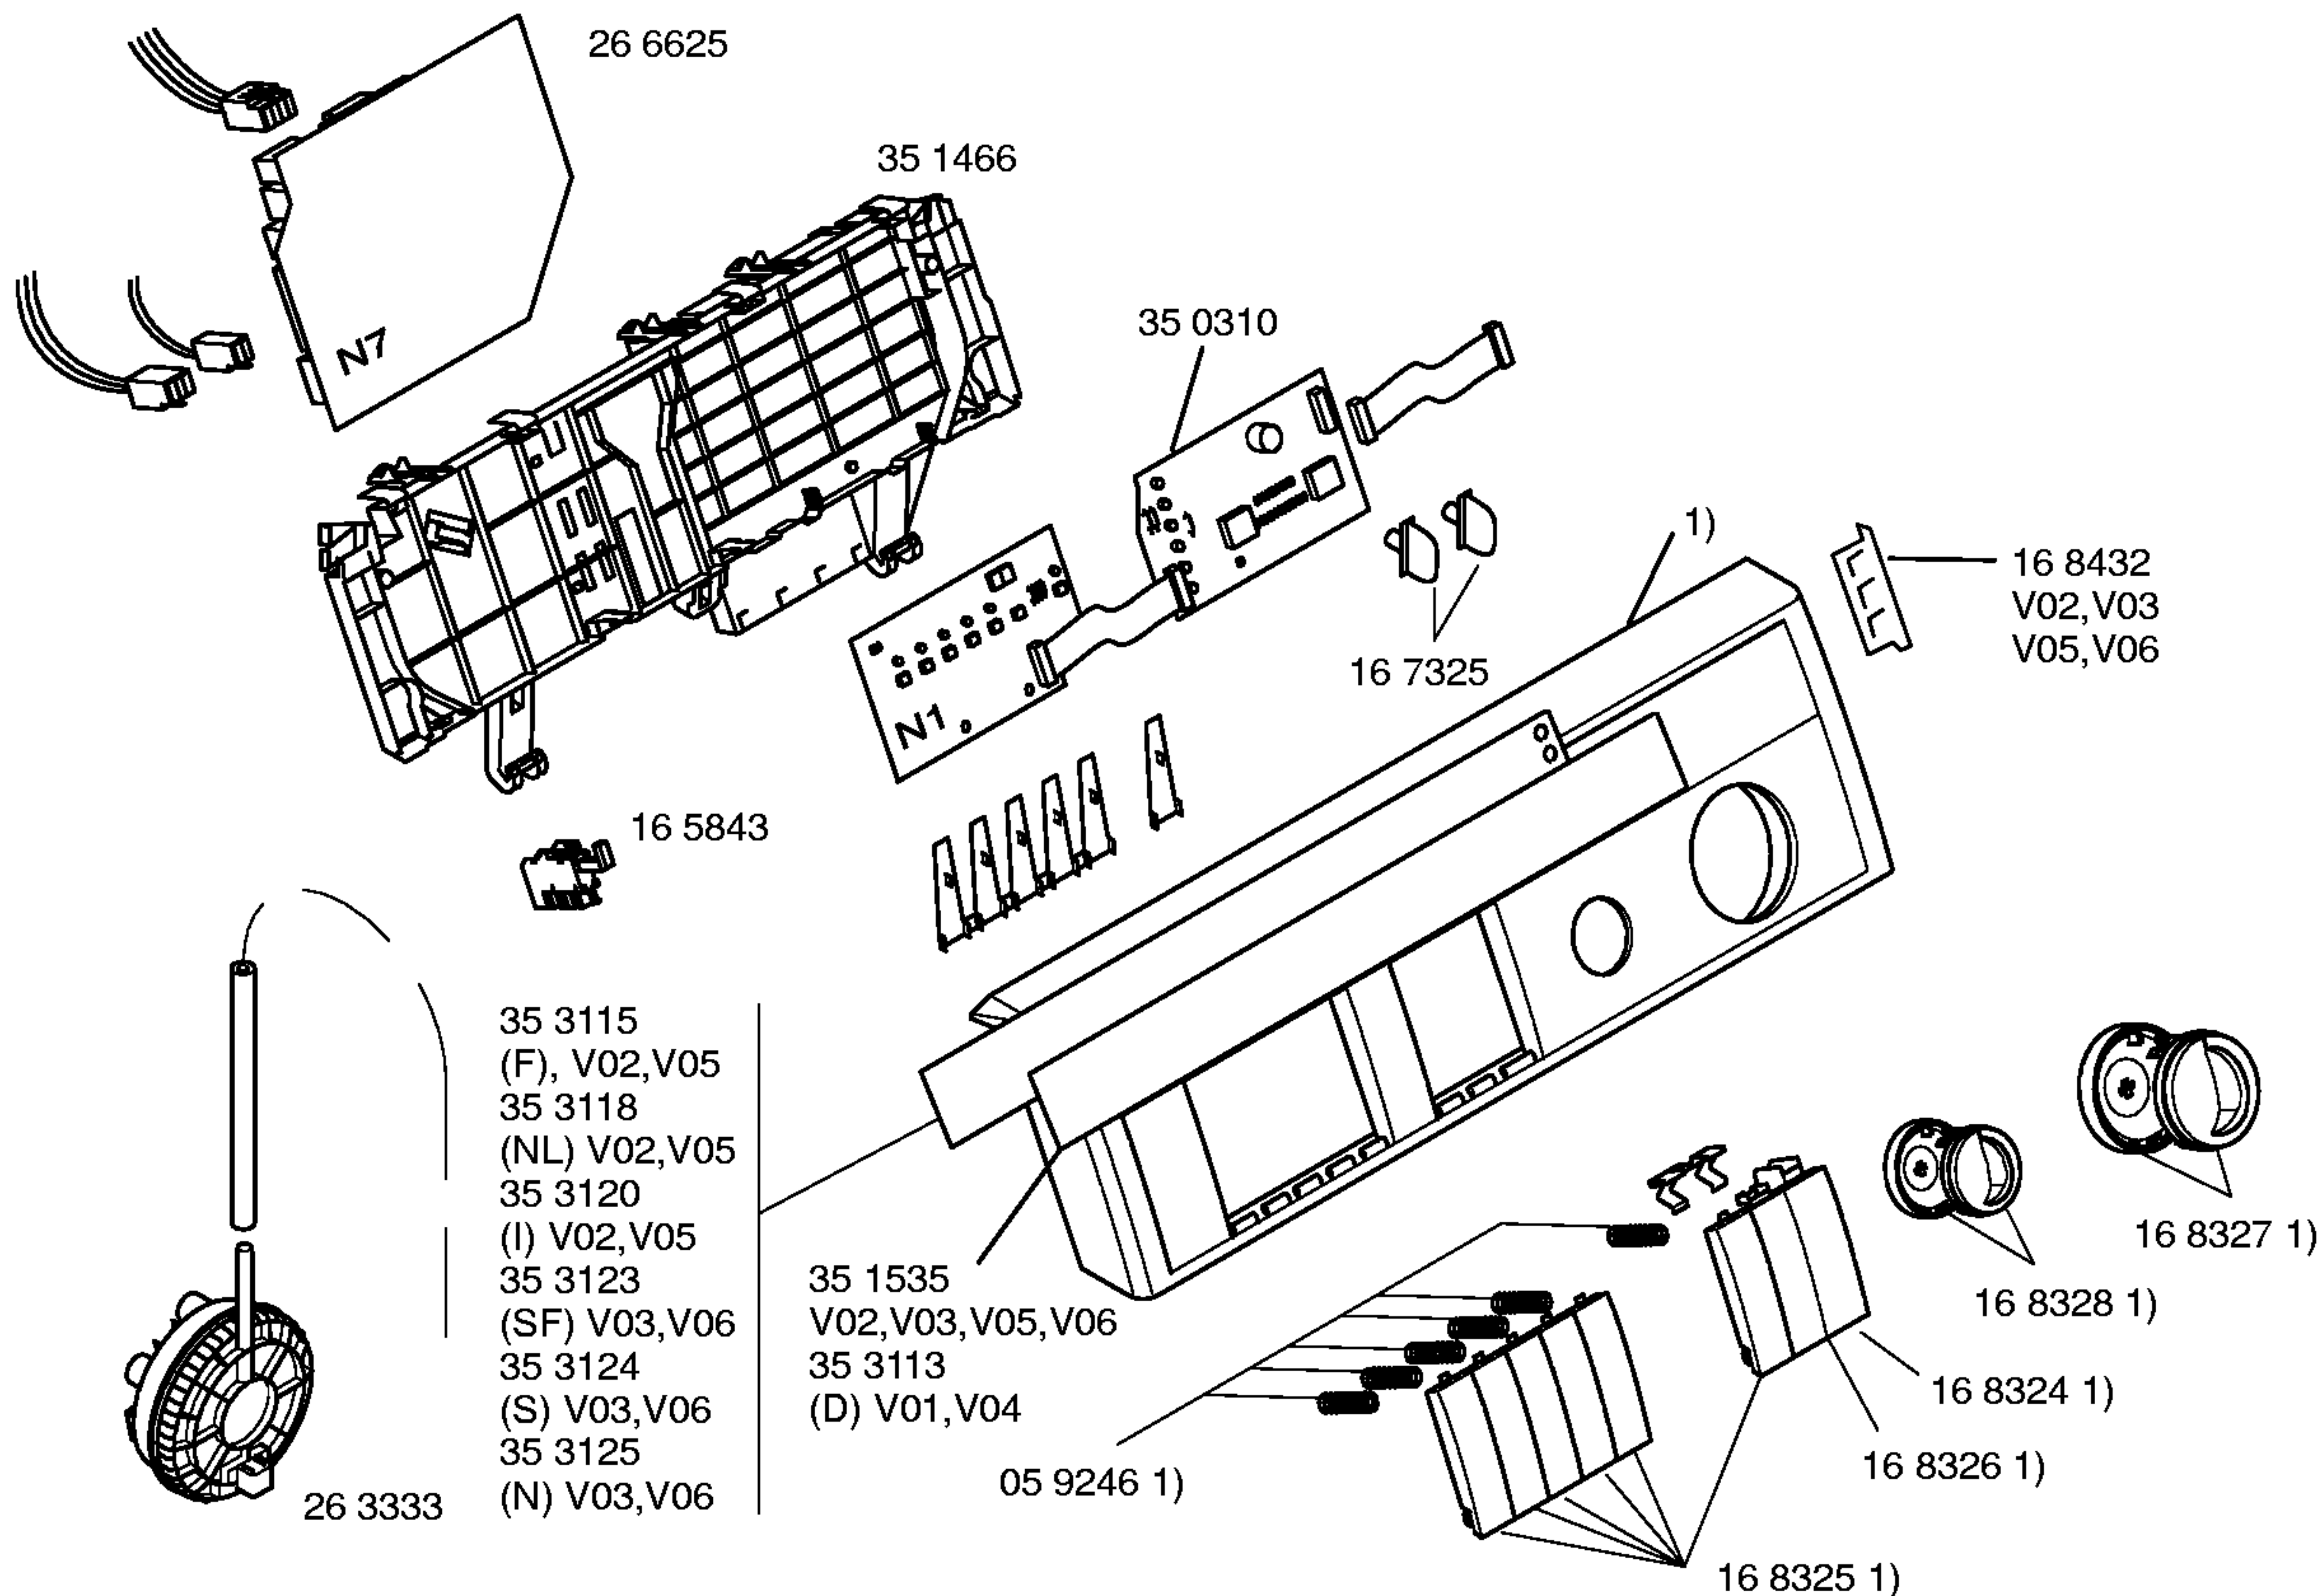


**BOSCH**

WOK2431-WOK2431/04-V01
 WOK2431-WOK2431EU/04-V02
 WOK2431-WOK2431SN/04-V03

WOK2431-WOK2431/05-V04
 WOK2431-WOK2431EU/05-V05
 WOK2431-WOK2431SN/05-V06

WASCHGERÄTE
 Waschvollautomaten

**Gebrauchsanweisung**

52 2422 (D)
 52 2453 (F)
 52 2454 (I)
 52 2455 (NL)
 52 2457 (S)
 52 2458 (SF)
 52 2459 (N)
 52 3113(GUS)

Aufstellanweisung

52 0294 (D)
 52 0354 (NL)
 52 1111 (N)
 52 1108 (I)
 52 1110 (SF)
 52 1109 (S)
 52 2431 (F)

Programmtabelle

52 2093 (D)
 52 2456 (I)
 52 2095 (NL)
 52 2094 (F)
 52 2460 (S)
 52 2461 (SF)
 52 2462 (N)

1) Blende kompl.


35 3114 (D)
 V01,V04
 35 3122 (F)
 V02,V05
 35 3126 (SF)
 V03,V06

**BOSCH**

WOK2431-WOK2431/04-V01
 WOK2431-WOK2431EU/04-V02
 WOK2431-WOK2431SN/04-V03

WOK2431-WOK2431/05-V04
 WOK2431-WOK2431EU/05-V05
 WOK2431-WOK2431SN/05-V06

WASCHGERÄTE
 Waschvollautomaten

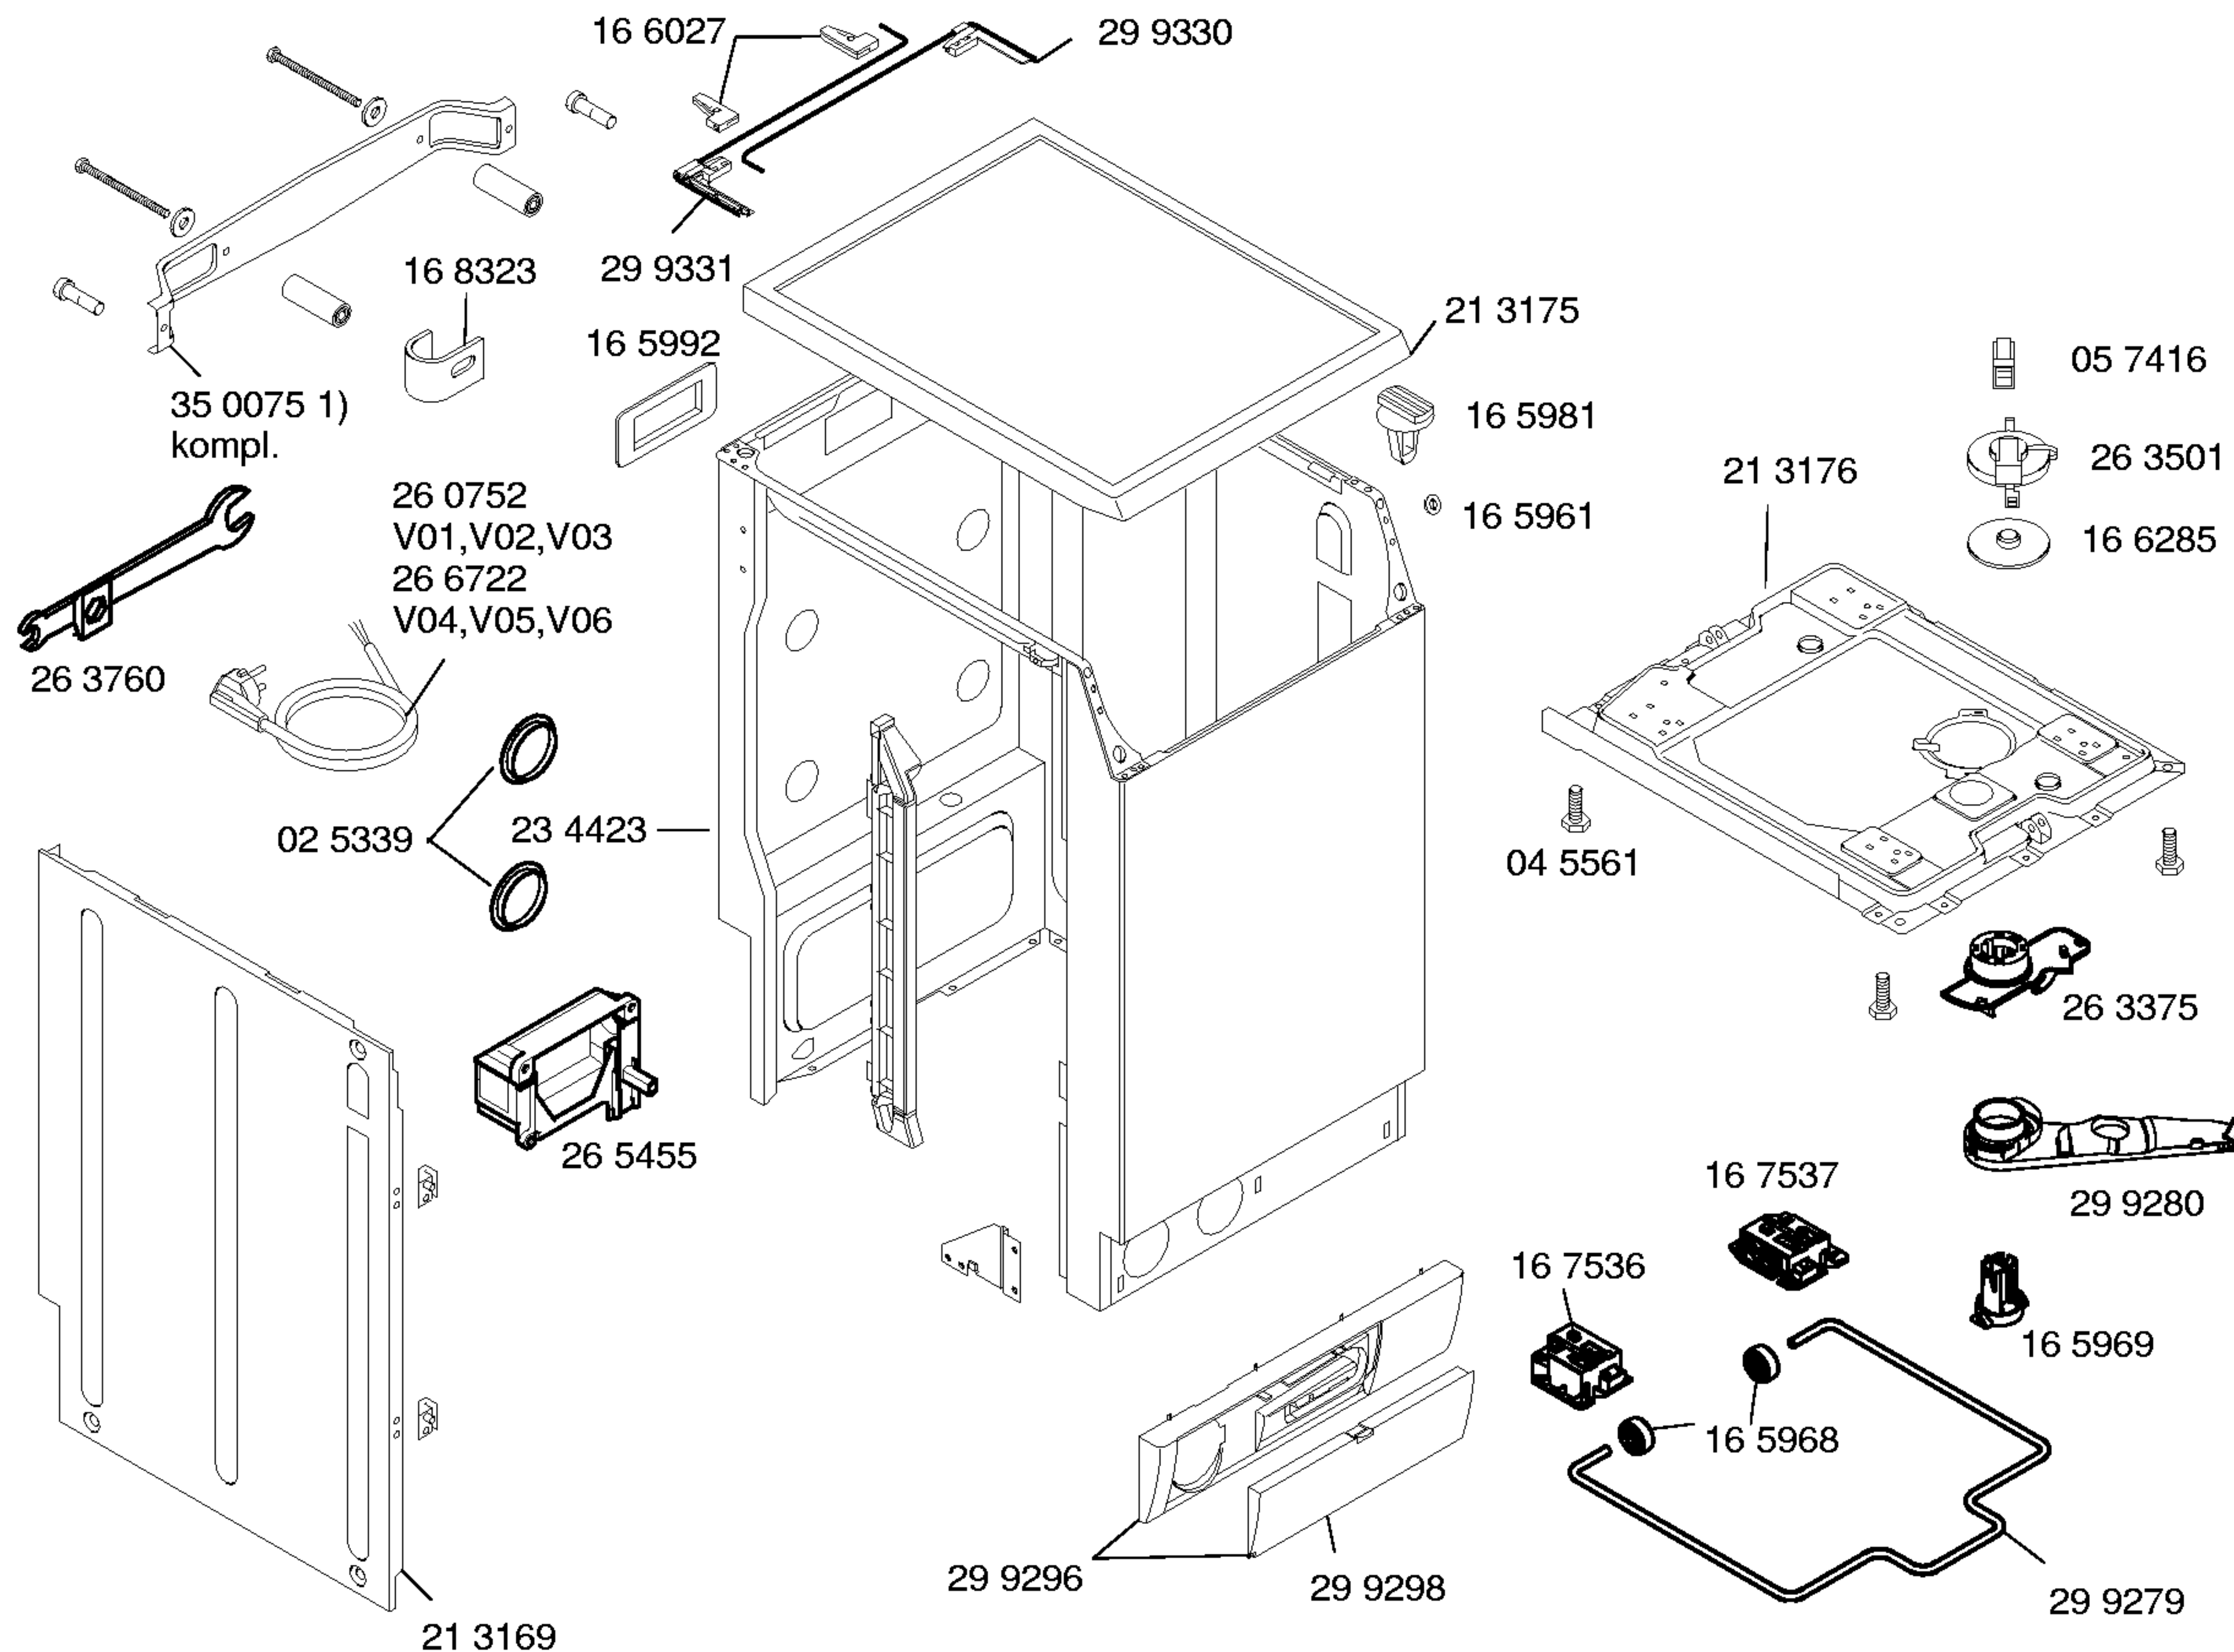

1) 2 x pro Gerät

Zubehör:

Bodenbefestigung
 WMZ2200

Verlängerung
 Zulaufschlauch 2,5 m
 WMZ2380

Entkalker
 46 0038


AET5830000083031000

**BOSCH**

WOK2431-WOK2431/04-V01
 WOK2431-WOK2431EU/04-V02
 WOK2431-WOK2431SN/04-V03

WOK2431-WOK2431/05-V04
 WOK2431-WOK2431EU/05-V05
 WOK2431-WOK2431SN/05-V06

WASCHGERÄTE
 Waschvollautomaten

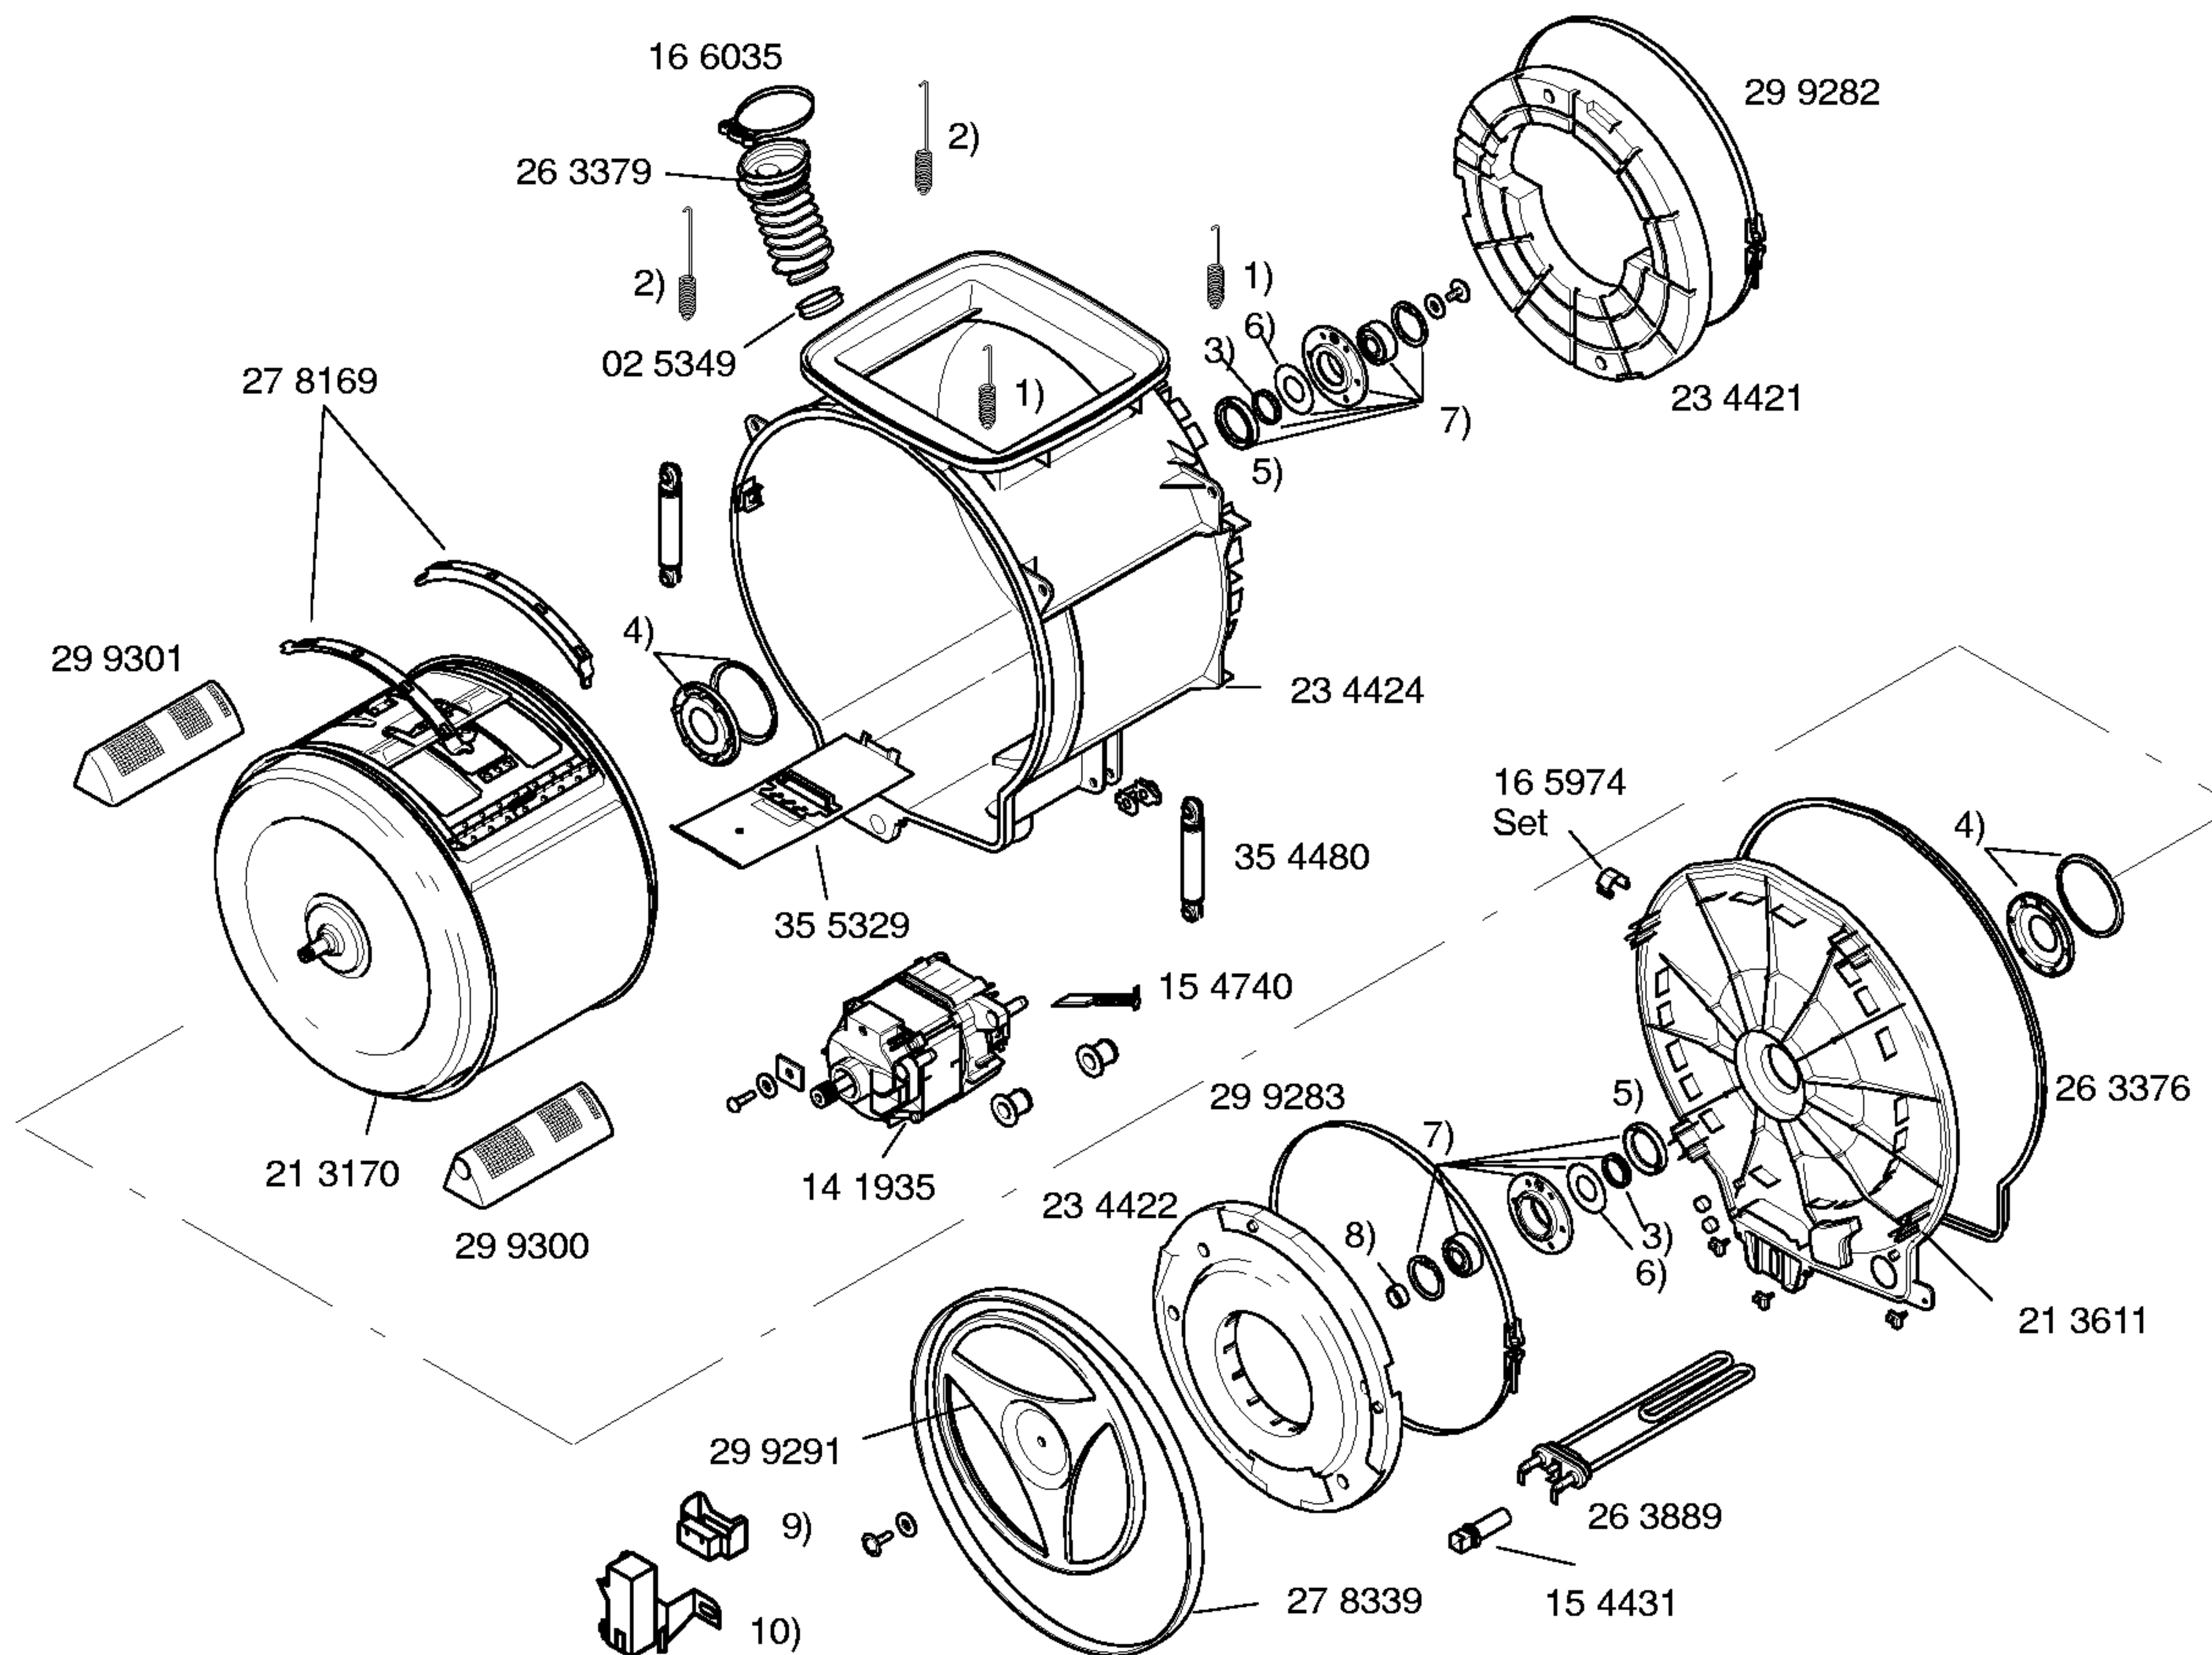

- 1) 26 3372
- 2) 26 3373
- 3) 16 5983
- 4) 26 3395
- 5) 16 5984
- 6) 16 5982
- 7) 26 3427
kompl.
- 8) 16 5978
- 9) 16 7191
- 10) 16 7192


16 2546
 Kabelbaum
 NTC Fühler

**BOSCH**

WOK2431-WOK2431/04-V01
WOK2431-WOK2431EU/04-V02
WOK2431-WOK2431SN/04-V03

WOK2431-WOK2431/05-V04
WOK2431-WOK2431EU/05-V05
WOK2431-WOK2431SN/05-V06

WASCHGERÄTE
Waschvollautomaten

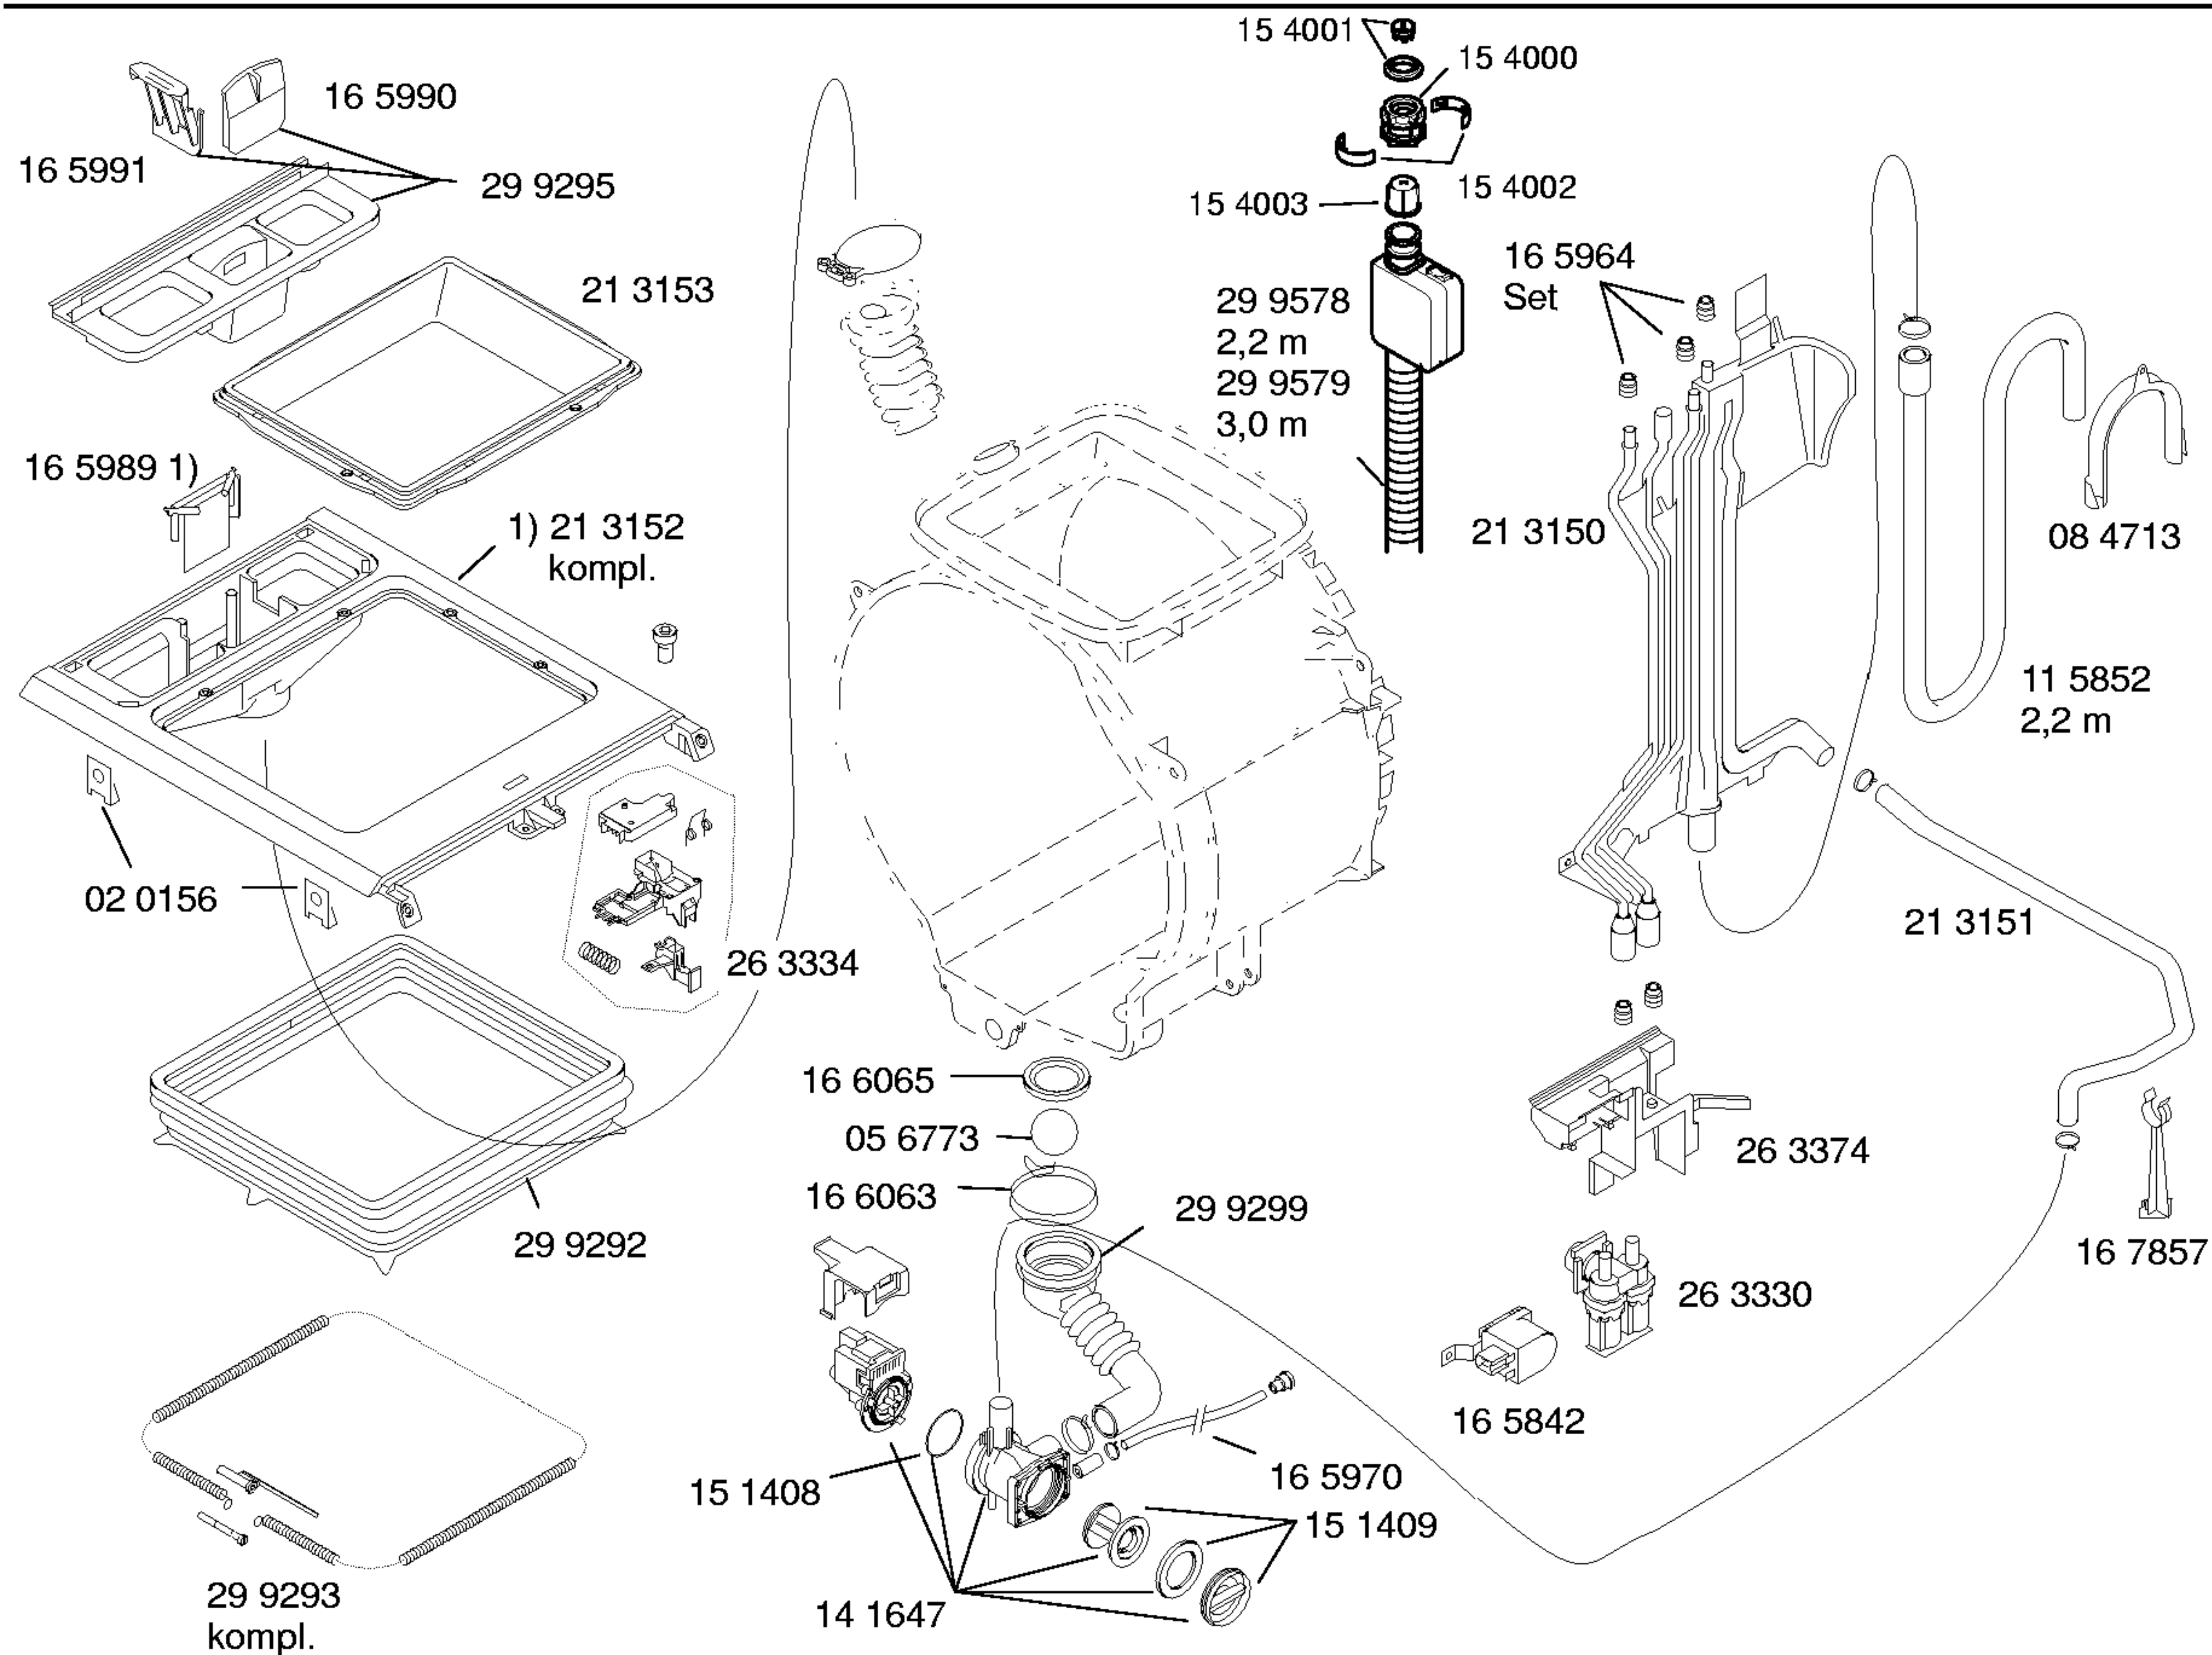

AET5830000083031000