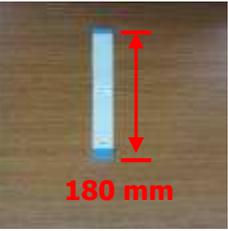
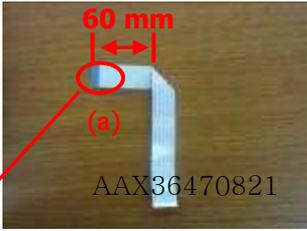
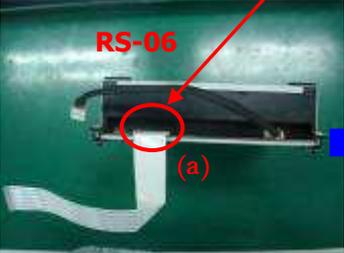
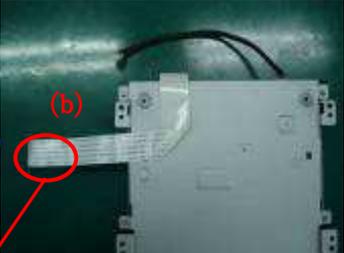
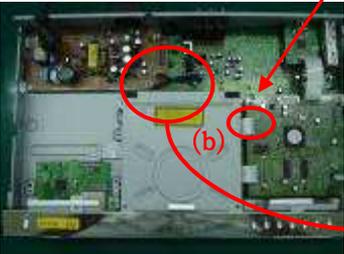


# Working Instruction

<b>Approved</b>	Checked	Manager
	S.SON 08.07.01	

Date : 2008.07.01

<b>Theme</b>	To rework DR100 series using new RS-06 SVC Loader
<b>Reason</b>	Replacing RS-01 with RS-06 owing to no more production of 812 pickup
<b>Method</b>	<p>• <b>AA336470824 : SVC Loader Assy (Included Cable)</b></p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>• <b>RS-06 SVC Loader</b>      • <b>EAD35827401 : Harness Cable 4pin 160mm</b></p> <p>• <b>EAD56414501 : FFC Cable 40pin 180mm</b></p> </div> <p><b>※ Preparation</b></p> <p><b>FFC cable should be folded like below before assembling to loader</b></p> <p>①   A side of EAD56414501 should be folded. The length is 60 mm.</p> <p>②   You should assemble EAD56414501 (FFC) and EAD35827401 (Harness) to RS-06 SVC Loader (a) part should be assembled to Loader</p> <p>③   <b>Completion !!!</b></p>


# Working Instruction

<b>Approved</b>	Checked	Manager
	G.C.SHIN 08.07.01	


Date : 2008.07.01

<b>Theme</b>	To rework RC100 series using new RS-06 Loader
<b>Reason</b>	Replacing RS-01 with RS-06 owing to no more production of 812 pickup
<b>Method</b>	<ul style="list-style-type: none"> <li>• <b>AAX36470824 : SVC Loader Assy (Included Cable)</b></li> </ul> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;">  <p>• <b>RS-06 SVC Loader</b></p> </div> <div style="text-align: center;">  <ul style="list-style-type: none"> <li>• <b>EAD35827401</b> : Harness Cable (4pin 160mm)</li> <li>• <b>EAD56414501</b> : FFC Cable (40pin 180mm)</li> </ul> </div> </div>

**FFC cable should be folded like below before assembling to loader**

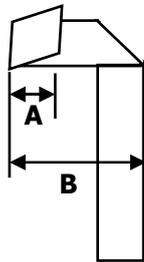

The FFC cable, A is 10 mm,  
B is 70 mm .  
(Total length of FFC is 180 mm)

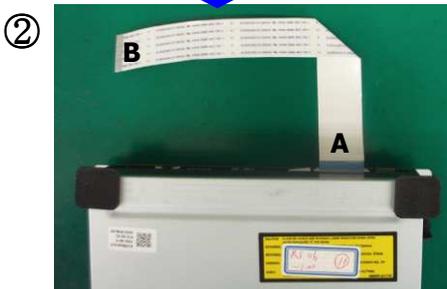

Insert FFC cable



The part you should hold with your hand



Insert FFC cable



Insert Loader Power cable and Loader assemble




Completion


Approved	Checked	Manager
	J.G Lee 08.07.01	

Theme	To rework RH100 series using new RS-06 Loader
Reason	Replacing RS-01 with RS-06 owing to no more production of 812 pickup
Method	<ul style="list-style-type: none"> <li>• AAX36470824 : SVC Loader Assy (Included Cable)</li> </ul>


※ Preparation

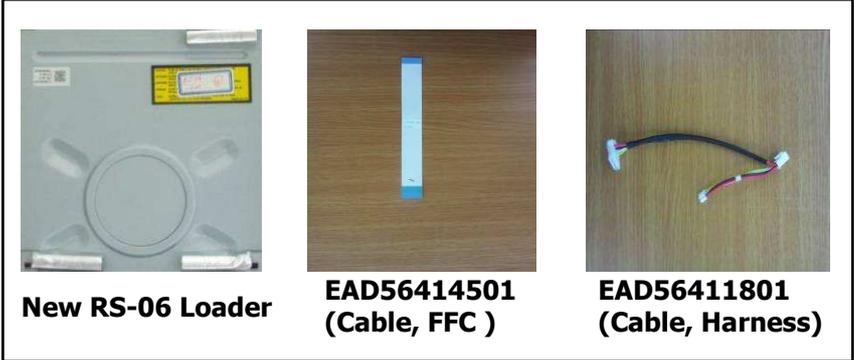

FFC cable should be folded like below before assembling to loader

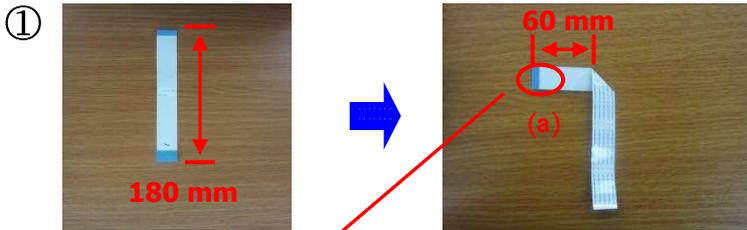

A side of EAD56414501 should be folded. The length is 60 mm.

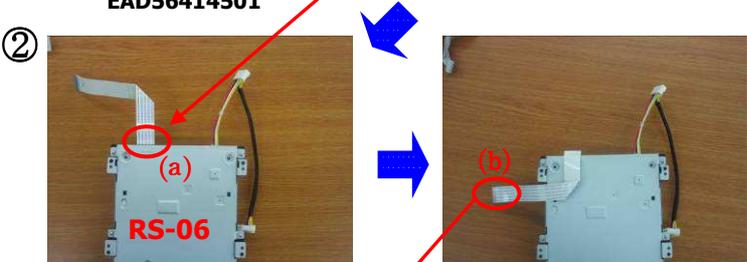

You should assemble EAD56414501 (FFC) and EAD56411801 (Harness) to RS-06 Loader

(a) part should be assembled to Loader



Completion !!!