


EXPLODED VIEW DIAGRAM - CABINET

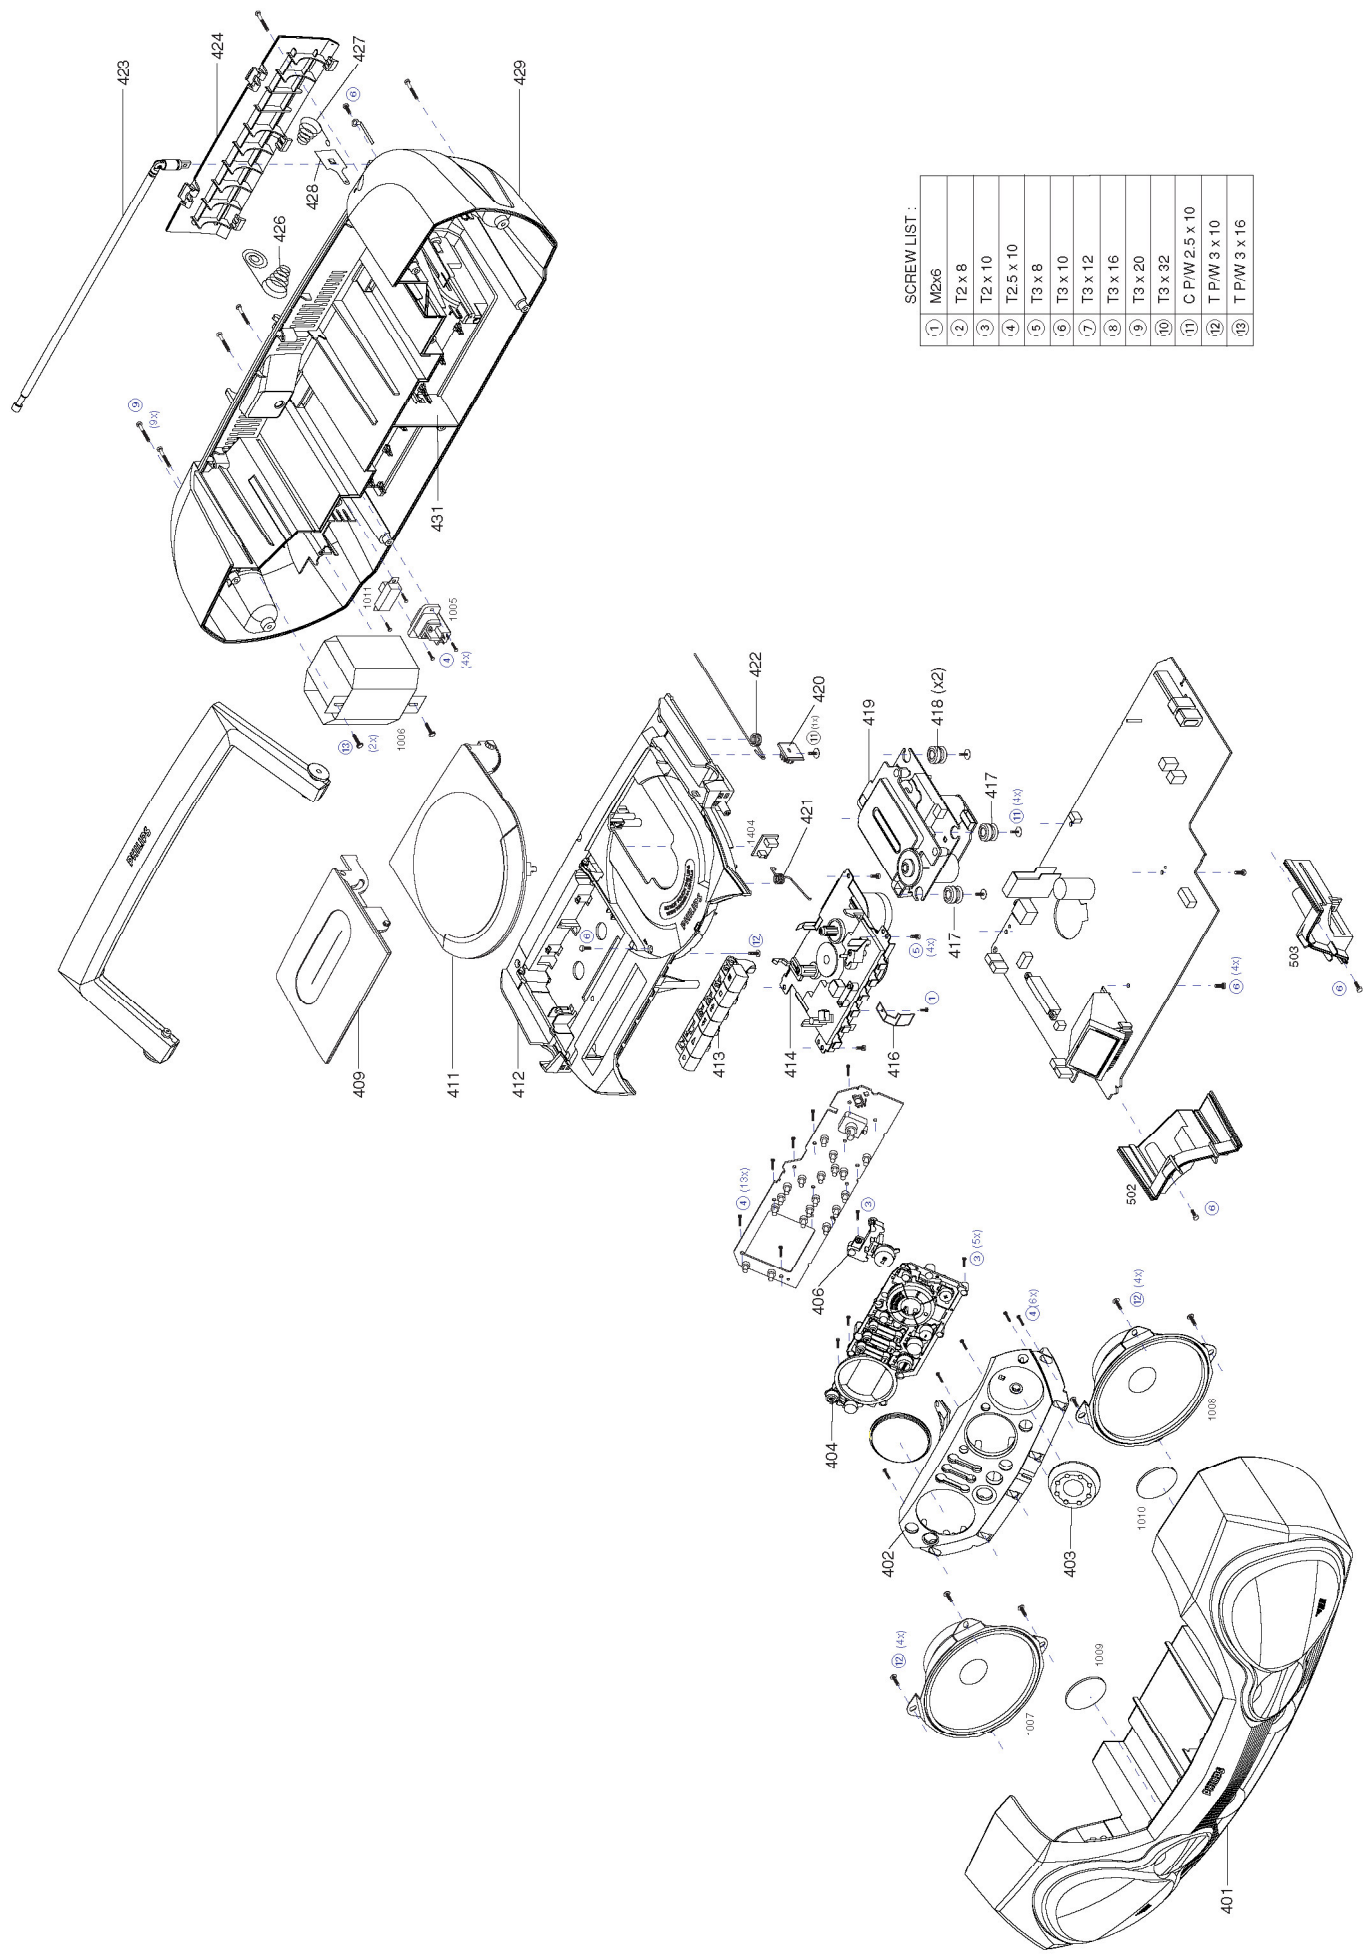

SCREW LIST :

①	M2x6
②	T2 x 8
③	T2 x 10
④	T2.5 x 10
⑤	T3 x 8
⑥	T3 x 10
⑦	T3 x 12
⑧	T3 x 16
⑨	T3 x 20
⑩	T3 x 32
⑪	CPW2.5 x 10
⑫	T PW 3 x 10
⑬	T PW 3 x 16