

SECTION 5 EXPLODED VIEWS


NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants identifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifique.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

5-1. CHASSIS

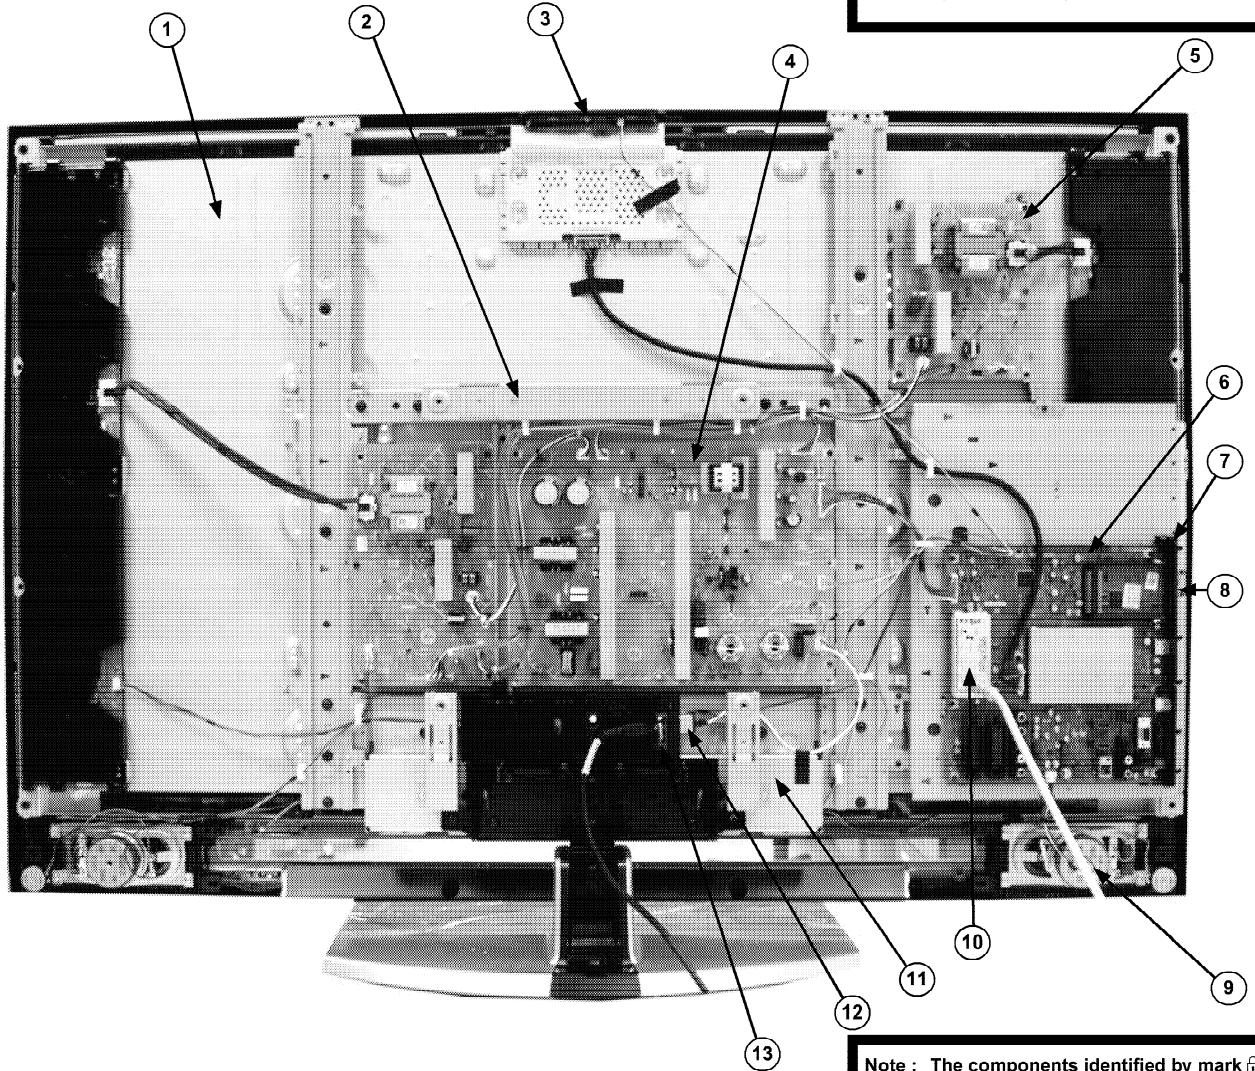


Note : The components identified by mark contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
1	Δ 1-802-648-11	LCD PANEL (32 INCH FHD TFT)	32 inches	5	*A-1511-383-A	D5 BOARD, COMPLETE	52 inches
	Δ 1-802-664-11	LCD PANEL (40 INCH FHD TFT)	40 inches	6	*A-1544-103-A	BE1 BOARD, COMPLETE	
	Δ 1-802-663-11	LCD PANEL (46 INCH FHD TFT)	46 inches	7	X-2189-647-1	SIDE JACK BRACKET ASSY (AEP)	
	Δ 1-802-662-11	LCD PANEL (52 INCH FHD TFT)	52 inches	8	*4-101-356-02	CARD, DUMMY	
2	3-284-386-01	FRAME, VESA (TOP)	32 inches	9	1-826-923-11	LOUDSPEAKER (5.5X12CM)	32 inches
	3-284-384-01	FRAME, VESA (TOP)	40 inches		1-826-922-11	LOUDSPEAKER ASSY (3,5.8X12.6CM)	40 inches
	3-298-053-01	FRAME, VESA (TOP)	46/52 inches		1-826-921-11	LOUDSPEAKER (3,6.5X15CM)	46/52 inches
3	1-480-708-11	SWITCH UNIT		10	8-597-641-00	TUNER UNIT, DIGITAL BTD-HF411T	
4	1-474-099-11	SWITCHING REGULATOR G1D	32 inches	11	3-298-054-01	FRAME, VESA (BOTTOM)	32 inches
	*A-1548-233-A	IP5 BOARD, COMPLETE	40 inches		3-298-056-01	FRAME, VESA (BOTTOM)	40/46/52 inches
	*A-1548-234-A	IP5 BOARD, COMPLETE	46 inches	12	Δ 1-821-909-11	AC INLET	40/46/52 inches
	*A-1545-447-A	G5 BOARD, COMPLETE	52 inches	13	Δ 3-298-060-01	AC INLET BRACKET	40/46/52 inches

5-1. CHASSIS Cont.

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

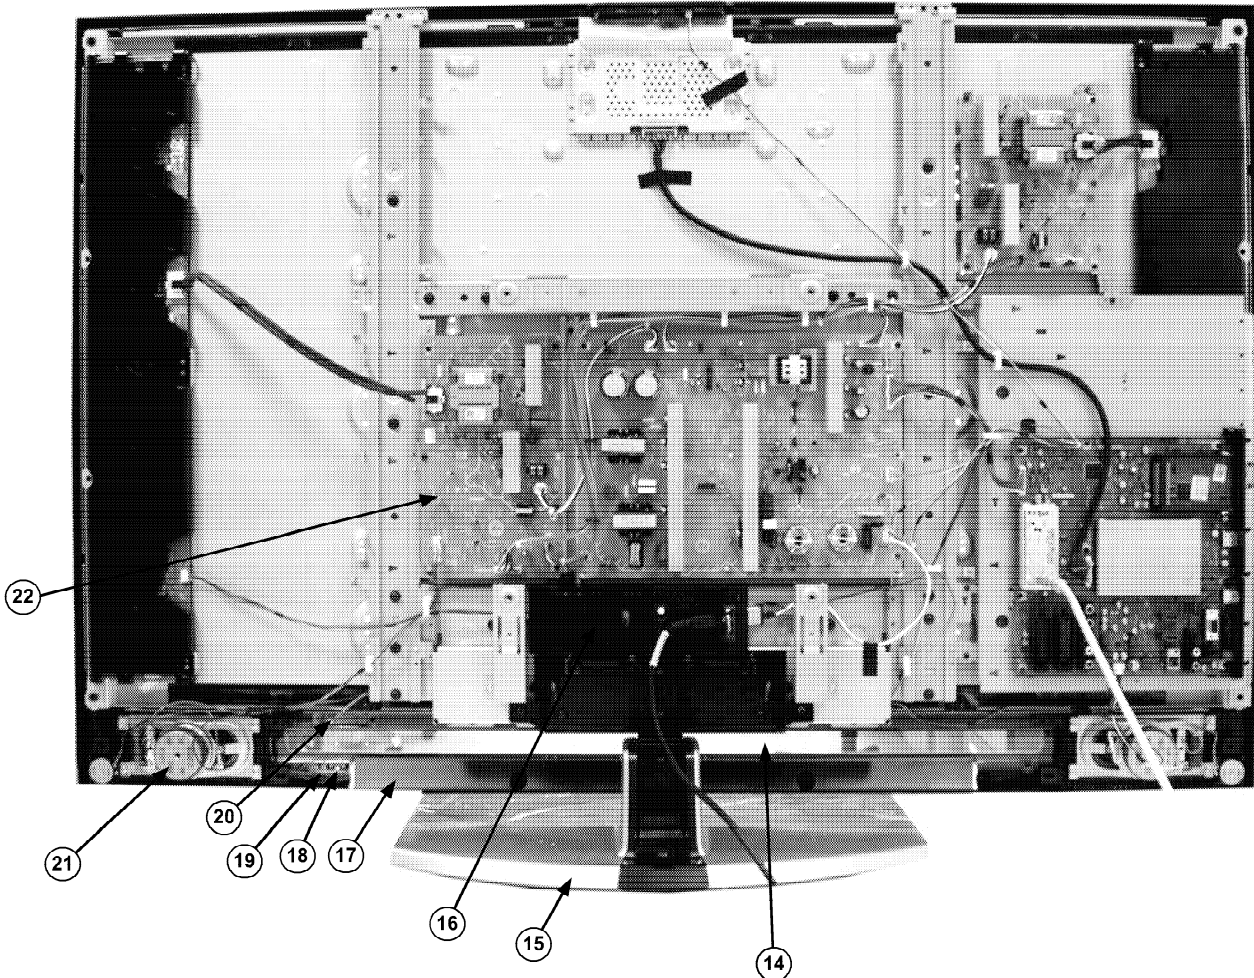


REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK	
14	X-2318-042-1	CLEAR PANEL (32EM)	PRINTED (32W4000)	16	3-298-224-01	COVER, UNDER (M)	32 inches	
	X-2318-043-1	CLEAR PANEL (40EM)	PRINTED (40W4000)		3-298-014-01	COVER, UNDER (L2)	40/46 inches	
	X-2318-044-1	CLEAR PANEL (46EM)	PRINTED (46W4000)		3-298-229-01	COVER, UNDER (LL)	52 inches	
	X-2318-045-1	CLEAR PANEL (52EM)	PRINTED (52W4000)		17	3-300-537-01	BAR, UNDER (M)	32 inches
	3-293-449-31	PANEL, CLEAR (32)	(32W4220)			3-298-013-01	BAR, UNDER (ML)	40 inches
	3-293-438-31	PANEL, CLEAR (40)	(40W4220)			3-298-029-01	BAR, UNDER (L)	46/52 inches
	X-2318-804-1	CLEAR PANEL (46EM)	PRINTED (46W4220)		18	3-298-012-01	GUIDE, LIGHT	
	X-2318-802-1	CLEAR PANEL (52EM)	PRINTED (52W4220)			19	*A-1510-350-A	H3E BOARD, COMPLETE
15	X-2190-378-1	STAND (M) ASSY	32 inches	20	*A-1510-351-A	H4 BOARD, COMPLETE		
	X-2189-410-1	STAND (ML) ASSY	40 inches	21	1-826-923-21	LOUDSPEAKER (5.5X12CM)	32 inches	
	X-2189-411-1	STAND (L) ASSY	46 inches		1-826-922-21	LOUDSPEAKER ASSY (3,5.8X12.6CM)	40 inches	
	X-2190-786-1	STAND (LL) ASSY	52 inches		1-826-921-21	LOUDSPEAKER (3,6.5X15CM)	46/52 inches	
				22	*A-1511-382-A	D4 BOARD, COMPLETE	52 inches	

5-2. BEZEL

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces du numéro spécifié.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

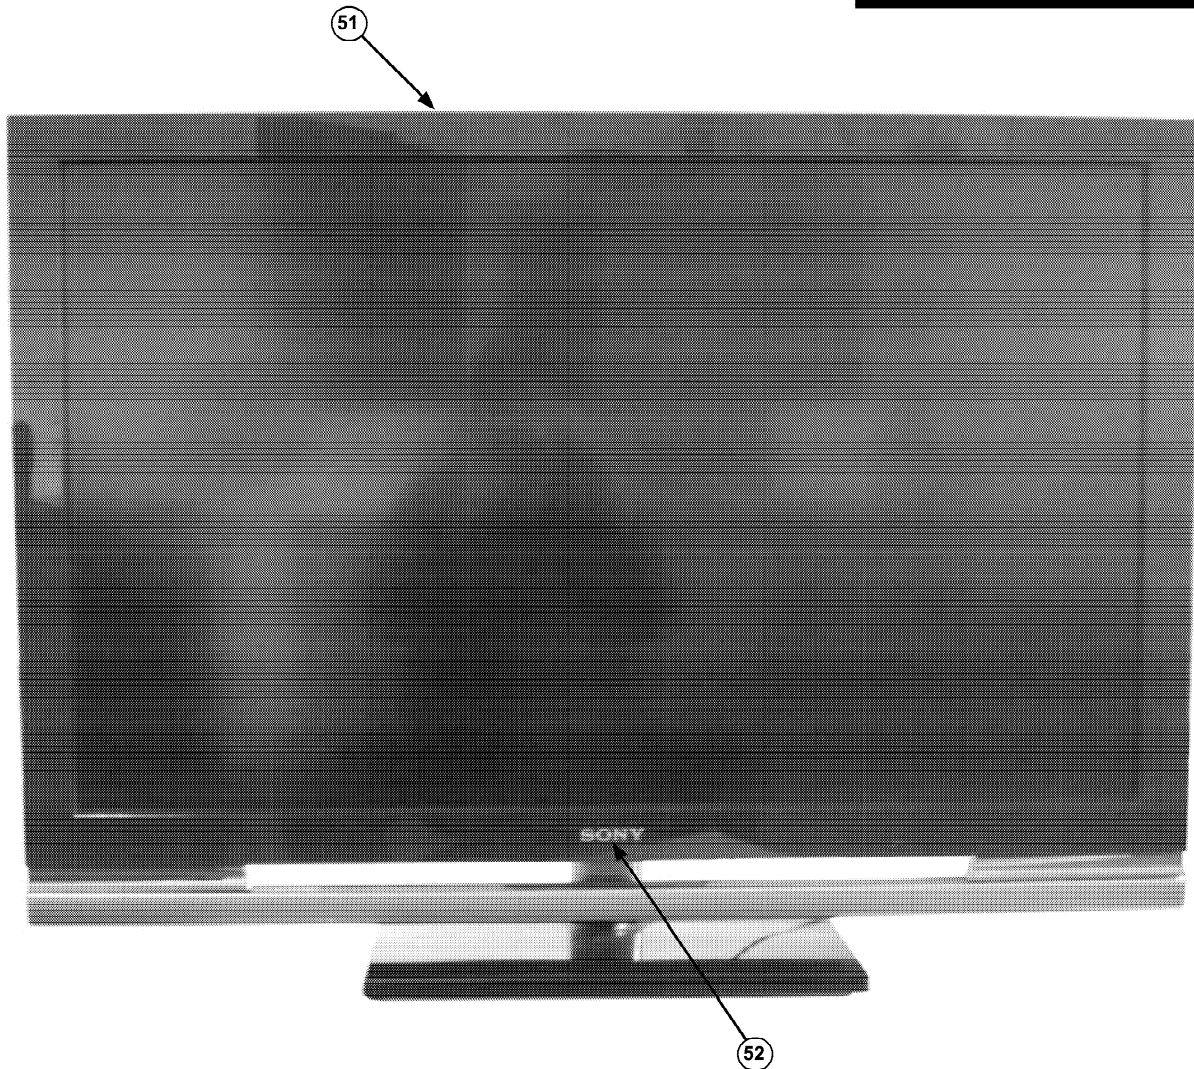

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-2190-993-1	BEZEL (32EM) ASSY	32 inches	52	1-480-680-11	ILLUMINATION MODULE	
	X-2190-997-1	BEZEL (40EM) ASSY	40 inches				
	X-2190-996-1	BEZEL (46EM) ASSY	46 inches				
	X-2190-995-1	BEZEL (52EM) ASSY	52 inches				




5-3. REAR COVER & POWER SUPPLY CORDS

NOTE :

If ordering item 101 (Rear cover) please order item 102 (Label, rear terminal) as well.

Note : Les composants indentifiés par une trame et par une marque Δ sont d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

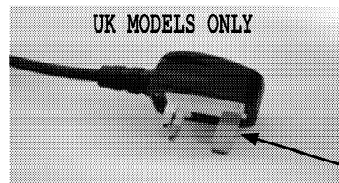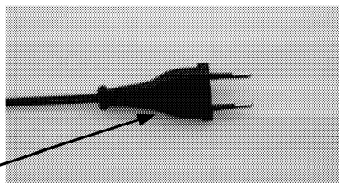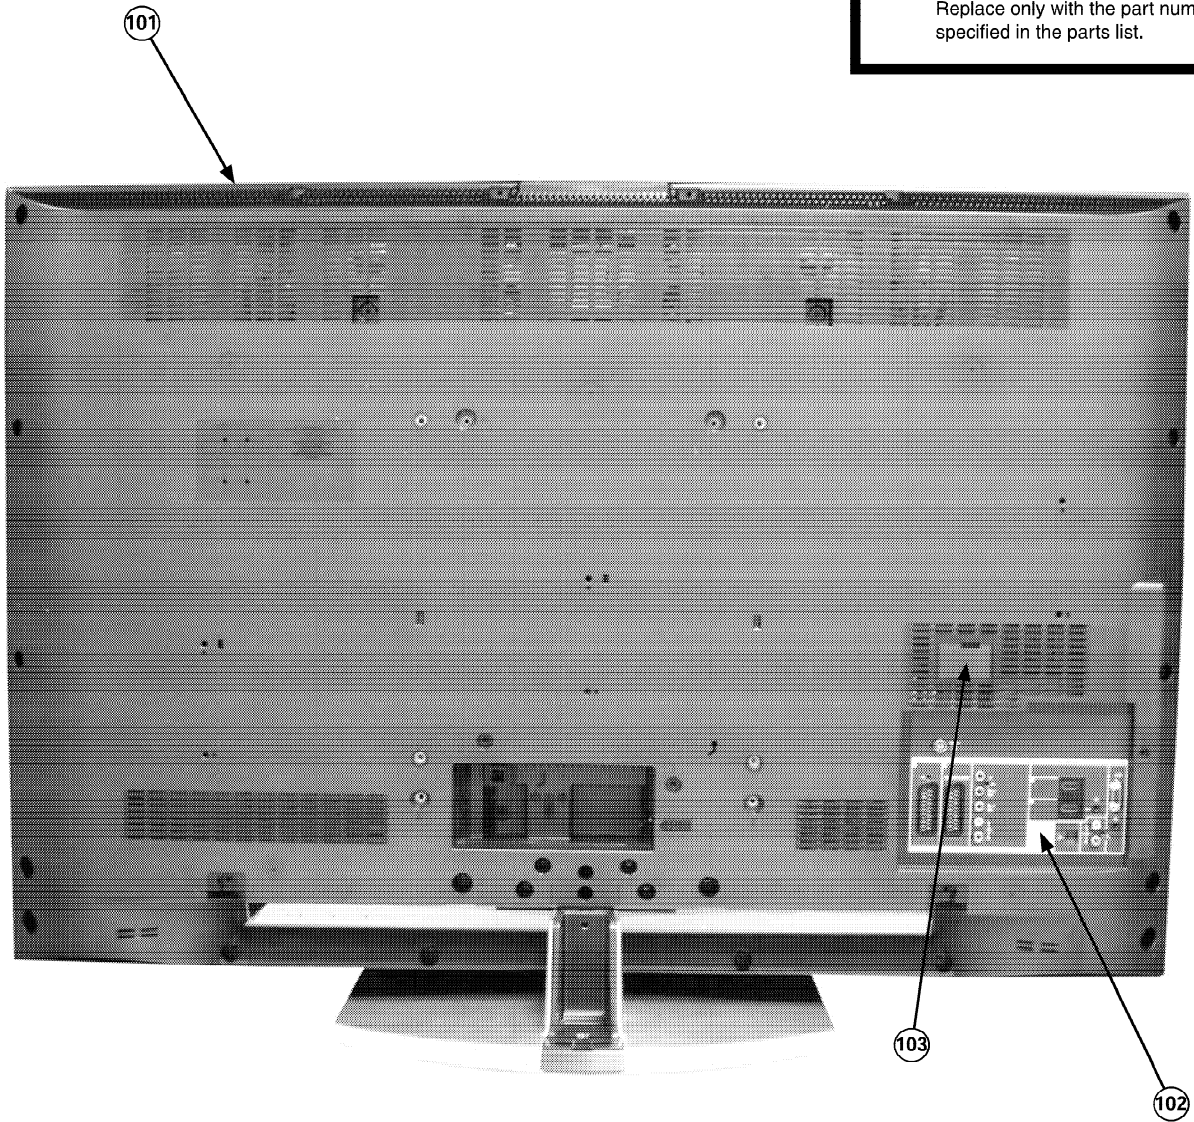

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
101	3-293-605-01	REAR COVER (32)	32 inches	103	3-106-546-01	COVER,ECS	
	3-293-589-01	REAR COVER (40)	40 inches	104	Δ 1-832-132-41	POWER SUPPLY CORD (32" AEP)	
	3-293-584-01	REAR COVER (46)	46 inches		Δ 1-835-200-11	POWER SUPPLY CORD (40/46/52" AEP)	
	3-293-622-01	REAR COVER (52)	52 inches	105	Δ 1-835-341-11	POWER SUPPLY CORD (UK PLUG) (32" UK)	(W4000)
102	*3-298-011-01	LABEL, REAR TERMINAL			Δ 1-835-165-11	POWER SUPPLY CORD (40/46/52" UK)	(W4000)


SECTION 6 ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS


	Page
BE1 BOARD COMPLETE Parts List :	50
H3E BOARD COMPLETE Parts List :	66
H4 BOARD COMPLETE Parts List :	66
ACCESSORIES AND CONNECTORS :	67
REMOTE COMMANDER :	67

Note: To ensure safety and reliability it is Sony policy that power supply boards should not be repaired at component level in the field as a result... The D4, D5, G1D, G5 and IP5 boards are regarded as non service items for exchange only and are not indicated in the parts list of this service manual

Note : Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : The components identified by mark  contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

BE1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
 * A-1544-103-A BE1 Board, Complete							
< CAPACITOR >							
C1001	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C2228	1-135-366-11	ELECT CHIP 100UF	20% 16V
C1002	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C2229	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V
C1003	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V	C2230	1-135-366-11	ELECT CHIP 100UF	20% 16V
C1004	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2231	1-162-968-11	CERAMIC CHIP 0.0047UF	10.00% 50V
C1006	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	C2236	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1009	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2237	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1010	1-114-324-11	CERAMIC CHIP 0.022UF	10% 50V	C2238	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1011	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2239	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1012	1-114-324-11	CERAMIC CHIP 0.022UF	10% 50V	C2240	1-100-904-11	CERAMIC CHIP 330PF	10% 50V
C1017	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C2244	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C1018	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C2245	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C1019	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C2246	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C1020	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2247	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1021	1-100-766-21	ELECT CHIP 47UF	20% 16V	C2249	1-112-161-21	ELECT CHIP 1000UF	20% 6.3V
C1022	1-100-766-21	ELECT CHIP 47UF	20% 16V	C2250	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1025	1-114-324-11	CERAMIC CHIP 0.022UF	10% 50V	C2251	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1026	1-114-324-11	CERAMIC CHIP 0.022UF	10% 50V	C2254	1-114-407-21	ELECT CHIP 4.7UF	20% 50V
C1027	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2255	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C1028	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2256	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1029	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2257	1-165-882-91	CERAMIC CHIP 2.2UF	50V
C1030	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C2258	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1031	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C2259	1-165-621-91	CERAMIC CHIP 0.1UF	50V
C1036	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C2260	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1037	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2261	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1038	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V	C2268	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1039	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2269	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1040	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C2270	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C2200	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C2275	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2201	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C3014	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2202	1-112-001-81	CERAMIC CHIP 270PF	5% 50V	C3026	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2205	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3027	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2206	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3028	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2208	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C3029	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2210	1-114-332-11	CERAMIC CHIP 22UF	10% 6.3V	C3030	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2211	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3031	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2212	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3032	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2215	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3033	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2216	1-114-332-11	CERAMIC CHIP 22UF	10% 6.3V	C3072	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2217	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C3073	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V
C2218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3075	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2219	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C3076	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C2220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C3077	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2223	1-135-366-11	ELECT CHIP 100UF	20% 16V	C3078	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2225	1-135-366-11	ELECT CHIP 100UF	20% 16V	C3079	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C2226	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V	C3406	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C2227	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C3407	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
				C3417	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
				C3418	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
				C3419	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
				C3420	1-112-781-11	CERAMIC CHIP 1UF	10% 10V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C3426	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4047	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3427	1-114-407-21	ELECT CHIP 4.7UF	20% 50V	C4049	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3428	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4051	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3429	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C4053	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3430	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4055	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3431	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4057	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3442	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4059	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3443	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4061	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3446	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C4063	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3447	1-114-193-11	ELECT CHIP 470UF	20% 25V	C4065	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3448	1-112-800-11	ELECT CHIP 100UF	20% 35V	C4067	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3449	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C4070	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3450	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4071	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3451	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4072	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3452	1-112-800-11	ELECT CHIP 100UF	20% 35V	C4073	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C3453	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V	C4074	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3458	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4075	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C3459	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4076	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C3464	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4077	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C3465	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4078	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3466	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4079	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3467	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V	C4502	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3469	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4510	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3470	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C4511	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3480	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C4516	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C3482	1-100-767-21	ELECT CHIP 220UF	20% 16V	C4517	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C3484	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V	C4518	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4003	1-135-366-11	ELECT CHIP 100UF	20% 16V	C4519	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4006	1-135-366-11	ELECT CHIP 100UF	20% 16V	C4520	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4007	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4521	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4009	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4522	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4012	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C4523	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4013	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4524	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4014	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4525	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4016	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C4527	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4017	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4528	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4019	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4529	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4021	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4532	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4023	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4533	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4025	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4534	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C4027	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4535	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4030	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4710	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C4031	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4711	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C4033	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4712	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C4035	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4718	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4038	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4723	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4039	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4724	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4042	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4726	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C4043	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4727	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C4046	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C4728	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C5505	1-164-842-11	CERAMIC CHIP 2PF	0.25PF 50V	C6429	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5506	1-164-843-11	CERAMIC CHIP 3PF	0.25PF 50V	C6430	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C5507	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6431	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5508	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	C6432	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C5509	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6434	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C5510	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6435	1-135-366-11	ELECT CHIP 100UF	20% 16V
C5511	1-104-905-11	DOUBLE LAYER 0.22F	5.5V	C6436	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5512	1-164-862-11	CERAMIC CHIP 33PF	5.00% 50V	C6437	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5513	1-164-862-11	CERAMIC CHIP 33PF	5.00% 50V	C6438	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V
C5514	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6439	1-114-415-21	ELECT CHIP 100UF	20% 6.3V
C5515	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6440	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5516	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6441	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5517	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6442	1-114-415-21	ELECT CHIP 100UF	20% 6.3V
C5519	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6445	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C5520	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C6447	1-127-772-81	CERAMIC CHIP 0.033UF	10% 10V
C5523	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6448	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C5524	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C6449	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V
C5525	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C6450	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C5526	1-162-927-11	CERAMIC CHIP 100PF	5.00% 50V	C6451	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C5527	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V	C6452	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C5528	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6454	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C5532	1-100-765-21	ELECT CHIP 10UF	20% 16V	C6456	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C5534	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6457	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C5542	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C6460	1-114-415-21	ELECT CHIP 100UF	20% 6.3V
C5543	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6470	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6400	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6471	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C6401	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C6472	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6402	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6474	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6403	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6476	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C6406	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		C6479	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6407	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6483	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6408	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6486	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6409	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C6487	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C6410	1-135-366-11	ELECT CHIP 100UF	20% 16V	C6488	1-135-366-11	ELECT CHIP 100UF	20% 16V
C6411	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6489	1-135-366-11	ELECT CHIP 100UF	20% 16V
C6412	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6494	1-112-786-11	ELECT CHIP 330UF	20% 4V
C6413	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C6498	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C6414	1-135-366-11	ELECT CHIP 100UF	20% 16V	C6499	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6415	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6501	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6416	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6502	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6417	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6505	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6418	1-164-940-11	CERAMIC CHIP 0.0033UF	10.00% 16V	C6514	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C6419	1-100-766-21	ELECT CHIP 47UF	20% 16V	C6516	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C6421	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6517	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C6422	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C6519	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C6423	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6522	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6424	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C6525	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6426	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C6530	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6427	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C6531	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C6428	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C6532	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C6535	1-112-786-11	ELECT CHIP 330UF	20% 4V	C7026	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6536	1-100-912-11	CERAMIC CHIP 1UF	10% 25V	C7027	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6537	1-114-415-21	ELECT CHIP 100UF	20% 6.3V	C7028	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6543	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7029	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6545	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7030	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6570	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C7034	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6571	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7035	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6572	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7036	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6573	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7037	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6574	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C7038	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6575	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7039	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6576	1-114-410-21	CERAMIC CHIP 680PF	2% 50V	C7040	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6577	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7041	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6578	1-114-327-11	CERAMIC CHIP 1UF	10% 16V	C7043	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6579	1-112-786-11	ELECT CHIP 330UF	20% 4V	C7044	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6580	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7045	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C6581	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7100	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6582	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V	C7101	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6584	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7102	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C6585	1-164-245-11	CERAMIC CHIP 0.015UF	10.00% 25V	C7103	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C6586	1-114-320-11	CERAMIC CHIP 0.22UF	10% 6.3V	C7104	1-164-849-11	CERAMIC CHIP 9PF	0.50PF 50V
C6587	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7105	1-164-849-11	CERAMIC CHIP 9PF	0.50PF 50V
C6596	1-164-882-11	CERAMIC CHIP 220PF	5.00% 16V	C7106	1-164-856-81	CERAMIC CHIP 18PF	5.00% 50V
C6597	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C7107	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6598	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V	C7108	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C6599	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C7109	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C6608	1-164-882-11	CERAMIC CHIP 220PF	5.00% 16V	C7110	1-164-854-11	CERAMIC CHIP 15PF	5.00% 50V
C7000	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7111	1-114-296-11	ELECT CHIP 820UF	20% 6.3V
C7001	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	C7112	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7002	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7113	1-100-767-21	ELECT CHIP 220UF	20% 16V
C7003	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7114	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7004	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7115	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7005	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7200	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7006	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7201	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7007	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7202	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7008	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7203	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7009	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7204	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7010	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7205	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7011	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7206	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7013	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7207	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7014	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7208	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7015	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7210	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7017	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7211	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7018	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7212	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7019	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7213	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7020	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7214	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7021	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7215	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7022	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7216	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7023	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7217	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7024	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C7218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
C7219	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8030	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C7220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8031	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C7221	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8032	1-114-320-11	CERAMIC CHIP 0.22UF	10% 6.3V
C7222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8035	1-135-366-11	ELECT CHIP 100UF	20% 16V
C7223	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8037	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7224	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8201	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7225	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8203	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7226	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8204	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7227	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8205	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7228	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8206	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7229	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8207	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7230	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8208	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7231	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8209	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7232	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C8216	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C7233	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7234	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7235	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8224	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7236	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8226	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C7237	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8227	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C7238	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8228	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C7239	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8229	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7240	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8230	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C7241	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8231	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7242	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8232	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7243	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8235	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C7244	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8237	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7245	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8238	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C7246	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C8239	1-114-327-11	CERAMIC CHIP 1UF	10% 16V
C7300	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C8240	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7301	1-112-781-11	CERAMIC CHIP 1UF	10% 10V	C8241	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7302	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V	C8242	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7400	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8243	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7401	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8244	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7402	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C8245	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7403	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C8246	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7404	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V	C8247	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7405	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8248	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7406	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8249	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7407	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V	C8250	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C7703	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8251	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7708	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8252	1-100-766-21	ELECT CHIP 47UF	20% 16V
C7709	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8253	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7710	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8254	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7711	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8256	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7712	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8258	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7713	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C8260	1-100-831-91	CERAMIC CHIP 0.001UF	2% 50V
C7714	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	< CONNECTOR >			
C7715	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V	CN1000	1-821-054-11	21PIN SOCKET	
C7716	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V				
C7717	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
CN1001	1-821-054-11	21PIN SOCKET		D3404	6-501-817-01	DIODE MA2J1110GLS0	
CN2200	1-779-884-11	CONNECTOR 4P		D3405	6-501-817-01	DIODE MA2J1110GLS0	
CN3001	1-821-013-11	D SUB CONNECTOR		D3406	6-501-619-01	DIODE PZU9.1B2	
CN3004	1-821-844-11	OPTICAL OUT CONNECTOR		D3407	6-502-172-01	DI UMZ5.6KTL	
CN3400	1-819-460-11	HEADER ASSEMBLY FOR PWB 4P		D4502	6-500-335-01	DIODE MC2838-T112-1	
CN4500	1-821-819-11	HDMI CONNECTOR		D4505	6-500-335-01	DIODE MC2838-T112-1	
CN4502	1-821-645-11	CONNECTOR, HDMI		D4506	6-500-335-01	DIODE MC2838-T112-1	
CN4503	1-821-819-11	HDMI CONNECTOR		D5501	6-501-817-01	DIODE MA2J1110GLS0	
CN5500	1-818-714-21	HEADER ASSEMBLY 20P		D5503	6-501-818-01	DIODE MA2J1130GLS0	
CN5502	1-784-254-11	CONNECTOR 10P		D5504	8-719-058-24	DIODE RB501V-40TE-17	
CN5503	1-779-936-51	CONNECTOR, FFC/FPC 18P		D5505	6-501-817-01	DIODE MA2J1110GLS0	
CN6401	1-819-797-11	HEADER ASSEMBLY FOR PWB 13P		D5506	6-501-817-01	DIODE MA2J1110GLS0	
CN6402	1-819-474-11	HEADER ASSEMBLY FOR PWB 6P		D5507	6-500-335-01	DIODE MC2838-T112-1	
CN7100	1-817-109-11	CONNECTOR, USB (A)		D5508	6-500-335-01	DIODE MC2838-T112-1	
CN7501	1-820-209-11	MEMORY STICK CONNECTOR		D5510	6-502-172-01	DI UMZ5.6KTL	
CN7700	*1-793-769-22	CONNECTOR, CARD (PCMCIA CARD)		D5520	6-501-614-01	DIODE PZU5.6B2	
CN8000	1-819-784-21	PIN, CONNECTOR 50P		D5521	6-500-335-01	DIODE MC2838-T112-1	
CN8001	1-784-254-11	CONNECTOR 10P		D5522	6-500-335-01	DIODE MC2838-T112-1	
< DIODE >				D5523	8-719-058-24	DIODE RB501V-40TE-17	
D1000	8-719-058-24	DIODE RB501V-40TE-17		D5524	8-719-058-24	DIODE RB501V-40TE-17	
D1001	6-502-177-01	DI UMZ9.1KTL		D5525	8-719-058-24	DIODE RB501V-40TE-17	
D1002	6-502-177-01	DI UMZ9.1KTL		D5526	8-719-058-24	DIODE RB501V-40TE-17	
D1003	6-502-177-01	DI UMZ9.1KTL		D6401	6-501-614-01	DIODE PZU5.6B2	
D1004	6-501-623-01	DIODE PZU13B2		D6404	6-500-334-01	DIODE MC2836-T112-1	
D1005	6-502-180-01	DI UMZ12KTL		D6406	6-501-528-01	DIODE 1SMA5915BT3G	
D1006	6-502-177-01	DI UMZ9.1KTL		D6407	6-501-528-01	DIODE 1SMA5915BT3G	
D1007	6-502-177-01	DI UMZ9.1KTL		D6408	6-501-817-01	DIODE MA2J1110GLS0	
D1008	6-502-177-01	DI UMZ9.1KTL		D6409	6-500-295-01	DIODE PTZ-TE25-5.6B	
D1009	6-502-177-01	DI UMZ9.1KTL		D6412	6-501-528-01	DIODE 1SMA5915BT3G	
D1010	6-501-623-01	DIODE PZU13B2		D6414	6-501-614-01	DIODE PZU5.6B2	
D1011	6-502-177-01	DI UMZ9.1KTL		D6418	6-500-334-01	DIODE MC2836-T112-1	
D1012	6-501-619-01	DIODE PZU9.1B2		D6431	6-501-528-01	DIODE 1SMA5915BT3G	
D1013	6-502-180-01	DI UMZ12KTL		D6432	6-500-334-01	DIODE MC2836-T112-1	
D1014	6-502-180-01	DI UMZ12KTL		D6433	6-500-334-01	DIODE MC2836-T112-1	
D3000	6-502-180-01	DI UMZ12KTL		D7100	6-500-335-01	DIODE MC2838-T112-1	
D3002	6-502-180-01	DI UMZ12KTL		D7101	6-500-701-01	DIODE PGB1010603NR	
D3011	6-501-614-01	DIODE PZU5.6B2		D7102	6-500-701-01	DIODE PGB1010603NR	
D3014	6-500-335-01	DIODE MC2838-T112-1		D7400	8-719-053-07	DIODE SML-310MTT86	
D3027	6-502-180-01	DI UMZ12KTL		D7401	8-719-053-07	DIODE SML-310MTT86	
D3029	6-502-180-01	DI UMZ12KTL		D7402	8-719-053-07	DIODE SML-310MTT86	
D3055	6-501-620-01	DIODE PZU10B2		D7403	8-719-053-07	DIODE SML-310MTT86	
D3056	6-502-180-01	DI UMZ12KTL		D8202	6-500-335-01	DIODE MC2838-T112-1	
D3057	6-502-177-01	DI UMZ9.1KTL		D8210	6-502-177-01	DI UMZ9.1KTL	
D3058	6-502-180-01	DI UMZ12KTL		D8212	6-502-177-01	DI UMZ9.1KTL	
D3059	6-502-180-01	DI UMZ12KTL		D8213	6-502-177-01	DI UMZ9.1KTL	
D3060	6-501-619-01	DIODE PZU9.1B2		ET2200	1-780-482-11	EARTH TERMINAL	
D3400	6-501-732-01	DIODE MAZ8056G0LS0		ET2201	1-780-482-11	EARTH TERMINAL	
D3401	6-501-732-01	DIODE MAZ8056G0LS0		ET5001	1-694-974-21	CONTACT TERMINAL	
D3403	6-500-335-01	DIODE MC2838-T112-1		ET5002	1-694-974-21	CONTACT TERMINAL	
				ET5003	1-694-974-21	CONTACT TERMINAL	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

BE1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ET5004	1-694-974-21	CONTACT TERMINAL		FB6405	1-400-834-11	FERRITE	OUH
ET5006	1-694-974-21	CONTACT TERMINAL		FB6406	1-400-089-21	FERRITE	OUH
ET6400	1-780-482-11	EARTH TERMINAL		FB6407	1-400-834-11	FERRITE	OUH
ET6401	1-780-482-11	EARTH TERMINAL		FB6409	1-400-089-21	FERRITE	OUH
ET6402	1-780-482-11	EARTH TERMINAL		FB6410	1-400-915-21	FERRITE	OUH
ET6403	1-780-482-11	EARTH TERMINAL		FB6411	1-400-915-21	FERRITE	OUH
ET6404	1-780-482-11	EARTH TERMINAL		FB6412	1-400-915-21	FERRITE	OUH
ET6405	1-780-482-11	EARTH TERMINAL		FB6413	1-400-089-21	FERRITE	OUH
ET6406	1-780-482-11	EARTH TERMINAL		FB6414	1-400-915-21	FERRITE	OUH
	< FUSE >			FB6415	1-400-915-21	FERRITE	OUH
F3000	Δ 1-576-646-11	FUSE	0.5A 50V	FB6417	1-400-089-21	FERRITE	OUH
F3401	Δ 1-576-933-21	FUSE	5A 24V	FB6418	1-400-915-21	FERRITE	OUH
	< FERRITE BEAD >			FB7100	1-400-382-11	FERRITE	OUH
FB2200	1-469-869-21	FERRITE	OUH	FB7101	1-400-382-11	FERRITE	OUH
FB2201	1-400-834-11	FERRITE	OUH	FB7102	1-400-382-11	FERRITE	OUH
FB2202	1-400-834-11	FERRITE	OUH				
FB2203	1-400-834-11	FERRITE	OUH	FB7500	1-400-807-21	FERRITE	OUH
FB2204	1-400-834-11	FERRITE	OUH	FB7709	1-469-869-21	FERRITE	OUH
				FB8200	1-414-760-21	FERRITE	OUH
					< FILTER >		
FB2205	1-400-834-11	FERRITE	OUH	FL5000	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2206	1-400-834-11	FERRITE	OUH	FL5003	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2207	1-400-834-11	FERRITE	OUH	FL5008	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2208	1-400-834-11	FERRITE	OUH	FL5010	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2209	1-400-834-11	FERRITE	OUH	FL5011	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2210	1-400-834-11	FERRITE	OUH	FL5012	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2211	1-400-834-11	FERRITE	OUH	FL5013	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2214	1-400-591-22	FERRITE	OUH	FL5015	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2215	1-400-834-11	FERRITE	OUH	FL5016	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2216	1-400-462-21	FERRITE	OUH	FL5019	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB2218	1-400-834-11	FERRITE	OUH	FL5023	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB3004	1-400-141-22	FERRITE	OUH	FL5024	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FB3006	1-400-834-11	FERRITE	OUH				
FB3007	1-400-244-11	FERRITE	OUH		< IC >		
FB3080	1-469-869-21	FERRITE	OUH	IC1000	6-701-173-01	IC MC74LVXT4053DTR2	
FB3406	1-400-089-21	FERRITE	OUH	IC2200	6-709-257-01	IC 74LVC4066PW	
FB3407	1-400-089-21	FERRITE	OUH	IC2202	6-709-932-01	IC MM3141CNRE	
FB3408	1-400-089-21	FERRITE	OUH	IC2203	6-709-607-01	IC LA5795T-TLM-E	
FB3409	1-400-089-21	FERRITE	OUH	IC3000	6-704-600-01	IC M24C02-WMN6T (B)	
FB4000	1-400-244-11	FERRITE	OUH				
FB4001	1-400-244-11	FERRITE	OUH	IC3004	8-759-242-64	IC TC4W53F	
FB4500	1-400-693-21	FERRITE	OUH	IC3400	6-710-904-01	IC TPA3100D2PHPR	
FB4502	1-400-693-21	FERRITE	OUH	IC4001	6-711-262-01	IC HYB18TC256160BF-3S	
FB4503	1-400-693-21	FERRITE	OUH	IC4002	6-711-262-01	IC HYB18TC256160BF-3S	
FB4504	1-400-141-22	FERRITE	OUH	IC4500	6-704-600-01	IC M24C02-WMN6T (B)	
FB6400	1-400-915-21	FERRITE	OUH	IC4504	6-704-600-01	IC M24C02-WMN6T (B)	
FB6401	1-400-089-21	FERRITE	OUH	IC4505	6-704-600-01	IC M24C02-WMN6T (B)	
FB6402	1-400-834-11	FERRITE	OUH	IC4508	8-753-282-08	IC CXB1444R-T6	
FB6403	1-400-089-21	FERRITE	OUH	IC4509	6-711-332-01	IC TC7SG17FU (TE85R,F)	
FB6404	1-400-834-11	FERRITE	OUH	IC5500	6-704-573-01	IC M24C32-WMN6T (B)	

Note : The components identified by shading and marked Δ are critical for safety. Replace only with the part numbers specified in the parts list.

BE1

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
IC5502	6-712-337-01	IC PCA8563T/4		L2212	1-469-555-21	INDUCTOR	10UH
IC5503	6-704-573-01	IC M24C32-WMN6T (B)		L3401	1-457-429-11	INDUCTOR	22UH
IC5504	6-703-175-01	IC PST3629UL		L3402	1-457-429-11	INDUCTOR	22UH
IC5505	6-804-648-01	IC MB90F334APMC-GE1		L3403	1-457-429-11	INDUCTOR	22UH
IC5507	6-712-527-01	IC MM3154XURE		L3406	1-457-429-11	INDUCTOR	22UH
IC6401	6-712-744-01	IC TK11190CSSL-G		L5502	1-414-754-11	INDUCTOR	10UH
IC6402	6-710-922-01	IC BD9853AFV-E2		L5503	1-412-054-21	INDUCTOR	2.2UH
IC6403	6-710-922-01	IC BD9853AFV-E2		L6400	1-457-455-11	INDUCTOR	10UH
IC6405	6-711-145-01	IC TPS51124RGER		L6401	1-457-455-11	INDUCTOR	10UH
IC6570	6-712-749-01	IC MM1701YHBE		L6402	1-414-398-11	INDUCTOR	10UH
IC6571	6-710-949-01	IC SN0608006PWPR		L6403	1-457-439-11	INDUCTOR	4.7UH
IC6572	6-712-787-01	IC MM1701VHBE		L6404	1-457-439-11	INDUCTOR	4.7UH
IC6573	6-706-419-01	IC LM393DT (A)		L6405	1-457-439-11	INDUCTOR	4.7UH
IC7000	6-712-788-01	IC UPD61300F1-220-LU2-A		L6406	1-457-455-11	INDUCTOR	10UH
IC7100	6-703-175-01	IC PST3629UL		L6407	1-457-439-11	INDUCTOR	4.7UH
IC7101	6-711-288-01	IC MIC2005-0.5YM6TR		L6408	1-457-455-11	INDUCTOR	10UH
IC7200	6-712-189-01	IC EDE5116AJBG-6E-E		L6409	1-457-455-11	INDUCTOR	10UH
IC7201	6-712-189-01	IC EDE5116AJBG-6E-E		L6410	1-457-455-11	INDUCTOR	10UH
IC7300	6-710-648-01	IC NAND256W3A2BN6F		L6411	1-457-455-11	INDUCTOR	10UH
IC7701	6-707-850-01	IC TC74LCX245FT (EKJ)		L6412	1-457-455-11	INDUCTOR	10UH
IC7704	6-707-853-01	IC TC74LCX541FT (EKJ)		L6413	1-457-455-11	INDUCTOR	10UH
IC7705	6-707-853-01	IC TC74LCX541FT (EKJ)		L6417	1-457-455-11	INDUCTOR	10UH
IC7706	6-707-853-01	IC TC74LCX541FT (EKJ)		L6418	1-457-455-11	INDUCTOR	10UH
IC7707	6-707-853-01	IC TC74LCX541FT (EKJ)		L6419	1-457-455-11	INDUCTOR	10UH
IC7708	6-707-853-01	IC TC74LCX541FT (EKJ)		L7100	1-457-374-21	INDUCTOR	0UH
IC7709	6-707-853-01	IC TC74LCX541FT (EKJ)		L7400	1-412-058-11	INDUCTOR	10UH
IC7710	6-711-288-01	IC MIC2005-0.5YM6TR		L8000	1-457-539-11	INDUCTOR	0UH
IC8200	8-753-299-00	IC CXA3767R-T6		L8001	1-457-539-11	INDUCTOR	0UH
	< SOCKET >			L8002	1-457-539-11	INDUCTOR	0UH
				L8003	1-457-539-11	INDUCTOR	0UH
J1000	1-821-055-12	PHONO JACK 5P		L8004	1-457-539-11	INDUCTOR	0UH
J3000	1-820-765-11	PHONO JACK 2P		L8005	1-457-539-11	INDUCTOR	0UH
J3001	1-821-826-11	JACK (SMALL TYPE)		L8012	1-400-180-21	FERRITE	0UH
J3002	1-821-826-11	JACK (SMALL TYPE)		L8200	1-412-058-11	INDUCTOR	10UH
J3005	1-821-115-11	PHONO JACK (RIGHT ANGLE) 3P		L8203	1-412-058-11	INDUCTOR	10UH
J8200	1-815-325-11	JACK		L8204	1-412-058-11	INDUCTOR	10UH
	< COIL >			L8205	1-412-058-11	INDUCTOR	10UH
				L8206	1-412-058-11	INDUCTOR	10UH
L2200	1-412-058-11	INDUCTOR	10UH			< PROTECTOR MODULE >	
L2201	1-469-549-21	INDUCTOR	1UH	PS6400 Δ	1-576-736-41	IC LINK	3.15A 24V
L2202	1-412-058-11	INDUCTOR	10UH	PS6401 Δ	1-576-736-41	IC LINK	3.15A 24V
L2203	1-412-058-11	INDUCTOR	10UH	PS6402 Δ	1-576-736-41	IC LINK	3.15A 24V
L2204	1-412-058-11	INDUCTOR	10UH	PS6403 Δ	1-576-736-41	IC LINK	3.15A 24V
L2206	1-412-058-11	INDUCTOR	10UH	PS6404 Δ	1-576-736-41	IC LINK	3.15A 24V
L2207	1-412-058-11	INDUCTOR	10UH				
L2208	1-412-058-11	INDUCTOR	10UH	PS6407 Δ	1-576-736-41	IC LINK	3.15A 24V
L2209	1-469-549-21	INDUCTOR	1UH			< TRANSISTOR >	
L2210	1-469-549-21	INDUCTOR	1UH				
L2211	1-469-549-21	INDUCTOR	1UH	Q1000	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
Q1001	8-729-029-14	TRANSISTOR DTC144EUA-T106		Q6419	8-729-028-96	TRANSISTOR DTC144EUA-T106	
Q1002	6-551-775-01	TR 2SA2122G0LS0		Q6421	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q1003	6-551-776-01	TR 2SC5950G0LS0		Q6423	8-729-028-96	TRANSISTOR DTC114EUA-T106	
Q1006	6-551-943-01	TR RT3XBBM-T111-1		Q6427	6-550-369-01	TRANSISTOR TPC8109 (TE12L)	
Q1007	6-551-775-01	TR 2SA2122G0LS0		Q6430	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q1008	6-551-776-01	TR 2SC5950G0LS0		Q6431	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q2201	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		Q6434	6-551-986-01	TR RT3DL1M-T111A-1F	
Q2202	6-551-904-01	TR RT3S03M-T111-1		Q6436	6-551-986-01	TR RT3DL1M-T111A-1F	
Q2203	6-551-904-01	TR RT3S03M-T111-1		Q6437	6-551-986-01	TR RT3DL1M-T111A-1F	
Q2204	6-551-904-01	TR RT3S03M-T111-1		Q6440	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q2205	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q6441	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q2207	6-550-871-01	TRANSISTOR 2SA2048TL QR		Q6443	6-551-986-01	TR RT3DL1M-T111A-1F	
Q2208	6-550-871-01	TRANSISTOR 2SA2048TL QR		Q6446	6-551-639-01	TRANSISTOR RTR040N03TL	
Q2209	8-729-027-44	TRANSISTOR DTC114TKA-T146		Q6447	6-551-639-01	TRANSISTOR RTR040N03TL	
Q2212	8-729-620-13	TRANSISTOR 2SC4154TP-1EF		Q7100	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q3400	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF		Q7101	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q3401	8-729-038-28	TRANSISTOR RT1N441C-TP-1		Q7400	6-550-232-01	TRANSISTOR 2SA2029FS6T2LQ/R	
Q4500	6-551-904-01	TR RT3S03M-T111-1		Q7401	6-550-232-01	TRANSISTOR 2SA2029FS6T2LQ/R	
Q4501	6-551-701-01	TRANSISTOR INK0003AC1-T112A-1		Q7402	6-550-232-01	TRANSISTOR 2SA2029FS6T2LQ/R	
Q4502	6-551-701-01	TRANSISTOR INK0003AC1-T112A-1		Q7403	6-550-232-01	TRANSISTOR 2SA2029FS6T2LQ/R	
Q4503	6-551-701-01	TRANSISTOR INK0003AC1-T112A-1		Q8000	8-729-028-96	TRANSISTOR DTC114EUA-T106	
Q4700	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		Q8200	6-551-943-01	TR RT3XBBM-T111-1	
Q4701	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		Q8210	6-551-943-01	TR RT3XBBM-T111-1	
Q4702	8-729-028-96	TRANSISTOR DTC114EUA-T106		Q8212	6-551-943-01	TR RT3XBBM-T111-1	
Q4703	8-729-028-86	TRANSISTOR DTA143EUA-T106					
Q5500	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF		< RESISTOR >			
Q5501	8-729-028-73	TRANSISTOR DTA114EUA-T106		R1000	1-218-957-11	RES-CHIP 2.2K 5% 1/16W	
Q5503	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R1001	1-218-965-11	RES-CHIP 10K 5% 1/16W	
Q5504	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R1002	1-218-965-11	RES-CHIP 10K 5% 1/16W	
Q5506	8-729-029-14	TRANSISTOR DTC144EUA-T106		R1016	1-218-953-11	RES-CHIP 1K 5% 1/16W	
Q5508	8-729-029-14	TRANSISTOR DTC144EUA-T106		R1017	1-218-953-11	RES-CHIP 1K 5% 1/16W	
Q5510	8-729-029-14	TRANSISTOR DTC144EUA-T106		R1018	1-208-860-81	METAL CHIP 75 0.5% 1/16W	
Q5511	6-551-776-01	TR 2SC5950G0LS0		R1020	1-211-990-11	METAL CHIP 75 0.5% 1/10W	
Q5512	6-551-776-01	TR 2SC5950G0LS0		R1021	1-216-809-11	METAL CHIP 100 5% 1/10W	
Q6400	8-729-028-73	TRANSISTOR DTA114EUA-T106		R1022	1-216-813-11	METAL CHIP 220 5% 1/10W	
Q6401	6-551-986-01	TR RT3DL1M-T111A-1F		R1023	1-216-853-11	METAL CHIP 470K 5% 1/10W	
Q6403	6-551-986-01	TR RT3DL1M-T111A-1F		R1024	1-216-853-11	METAL CHIP 470K 5% 1/10W	
Q6404	6-551-986-01	TR RT3DL1M-T111A-1F		R1025	1-216-853-11	METAL CHIP 470K 5% 1/10W	
Q6407	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R1026	1-216-811-11	METAL CHIP 150 5% 1/10W	
Q6408	6-551-456-01	TRANSISTOR RTR020P02TL		R1027	1-216-853-11	METAL CHIP 470K 5% 1/10W	
Q6409	6-551-123-01	TRANSISTOR RSS065N03FU7TB		R1028	1-218-949-11	RES-CHIP 470 5% 1/16W	
Q6410	6-550-718-01	TRANSISTOR RSR025N03TL		R1029	1-216-811-11	METAL CHIP 150 5% 1/10W	
Q6411	6-551-382-01	TRANSISTOR RSS040P03FD5TB		R1030	1-218-971-11	RES-CHIP 33K 5% 1/16W	
Q6412	6-551-123-01	TRANSISTOR RSS065N03FU7TB		R1031	1-218-965-11	RES-CHIP 10K 5% 1/16W	
Q6413	6-551-456-01	TRANSISTOR RTR020P02TL		R1033	1-208-860-81	METAL CHIP 75 0.5% 1/16W	
Q6414	8-729-620-13	TRANSISTOR 2SC4154TP-1EF		R1036	1-218-953-11	RES-CHIP 1K 5% 1/16W	
Q6415	6-550-718-01	TRANSISTOR RSR025N03TL		R1037	1-218-953-11	RES-CHIP 1K 5% 1/16W	
Q6416	8-729-028-28	TRANSISTOR 2SK2036 (TE85L)		R1038	1-211-990-11	METAL CHIP 75 0.5% 1/10W	
Q6417	6-551-775-01	TR 2SA2122G0LS0		R1039	1-216-809-11	METAL CHIP 100 5% 1/10W	
Q6418	6-551-986-01	TR RT3DL1M-T111A-1F		R1040	1-218-941-81	RES-CHIP 100 5% 1/16W	

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R1041	1-218-941-81	RES-CHIP	100 5% 1/16W	R2257	1-218-990-81	SHORT CHIP	0
R1042	1-218-941-81	RES-CHIP	100 5% 1/16W	R2258	1-218-990-81	SHORT CHIP	0
R1043	1-216-853-11	METAL CHIP	470K 5% 1/10W	R2259	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1044	1-216-813-11	METAL CHIP	220 5% 1/10W	R2266	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1045	1-218-985-11	RES-CHIP	470K 5% 1/16W	R3010	1-218-990-81	SHORT CHIP	0
R1046	1-218-985-11	RES-CHIP	470K 5% 1/16W	R3011	1-218-990-81	SHORT CHIP	0
R1047	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3012	1-218-990-81	SHORT CHIP	0
R1048	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3019	1-218-953-11	RES-CHIP	1K 5% 1/16W
R1049	1-216-811-11	METAL CHIP	150 5% 1/10W	R3029	1-218-953-11	RES-CHIP	1K 5% 1/16W
R1050	1-216-853-11	METAL CHIP	470K 5% 1/10W	R3035	1-218-977-11	RES-CHIP	100K 5% 1/16W
R1052	1-216-809-11	METAL CHIP	100 5% 1/10W	R3040	1-216-853-11	METAL CHIP	470K 5% 1/10W
R1054	1-218-949-11	RES-CHIP	470 5% 1/16W	R3041	1-216-853-11	METAL CHIP	470K 5% 1/10W
R1055	1-216-811-11	METAL CHIP	150 5% 1/10W	R3042	1-216-853-11	METAL CHIP	470K 5% 1/10W
R1056	1-218-953-11	RES-CHIP	1K 5% 1/16W	R3043	1-216-853-11	METAL CHIP	470K 5% 1/10W
R1057	1-218-953-11	RES-CHIP	1K 5% 1/16W	R3100	1-208-860-81	METAL CHIP	75 0.5% 1/16W
R1058	1-218-971-11	RES-CHIP	33K 5% 1/16W	R3101	1-218-941-81	RES-CHIP	100 5% 1/16W
R1059	1-218-965-11	RES-CHIP	10K 5% 1/16W	R3107	1-218-941-81	RES-CHIP	100 5% 1/16W
R1060	1-218-963-11	RES-CHIP	6.8K 5% 1/16W	R3108	1-216-853-11	METAL CHIP	470K 5% 1/10W
R1061	1-218-957-11	RES-CHIP	2.2K 5% 1/16W	R3109	1-216-853-11	METAL CHIP	470K 5% 1/10W
R1062	1-218-963-11	RES-CHIP	6.8K 5% 1/16W	R3110	1-216-853-11	METAL CHIP	470K 5% 1/10W
R1063	1-218-957-11	RES-CHIP	2.2K 5% 1/16W	R3111	1-216-853-11	METAL CHIP	470K 5% 1/10W
R1064	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3112	1-216-809-11	METAL CHIP	100 5% 1/10W
R1066	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3113	1-208-860-81	METAL CHIP	75 0.5% 1/16W
R1068	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3117	1-208-860-81	METAL CHIP	75 0.5% 1/16W
R1070	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3119	1-208-860-81	METAL CHIP	75 0.5% 1/16W
R1073	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3203	1-218-990-81	SHORT CHIP	0
R1074	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3204	1-218-990-81	SHORT CHIP	0
R1076	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3207	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1078	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3208	1-218-965-11	RES-CHIP	10K 5% 1/16W
R1081	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3407	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R1083	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3408	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R1085	1-208-860-81	METAL CHIP	75 0.5% 1/16W	R3415	1-218-971-11	RES-CHIP	33K 5% 1/16W
R2204	1-218-949-11	RES-CHIP	470 5% 1/16W	R3416	1-218-971-11	RES-CHIP	33K 5% 1/16W
R2207	1-218-969-11	RES-CHIP	22K 5% 1/16W	R3427	1-218-990-81	SHORT CHIP	0
R2208	1-218-981-91	RES-CHIP	220K 5% 1/16W	R3431	1-218-990-81	SHORT CHIP	0
R2213	1-218-965-11	RES-CHIP	10K 5% 1/16W	R3432	1-218-977-11	RES-CHIP	100K 5% 1/16W
R2216	1-218-971-11	RES-CHIP	33K 5% 1/16W	R3434	1-218-977-11	RES-CHIP	100K 5% 1/16W
R2218	1-218-971-11	RES-CHIP	33K 5% 1/16W	R3453	1-218-981-91	RES-CHIP	220K 5% 1/16W
R2219	1-218-965-11	RES-CHIP	10K 5% 1/16W	R3455	1-218-953-11	RES-CHIP	1K 5% 1/16W
R2222	1-218-969-11	RES-CHIP	22K 5% 1/16W	R3456	1-218-969-11	RES-CHIP	22K 5% 1/16W
R2225	1-218-965-11	RES-CHIP	10K 5% 1/16W	R3457	1-218-949-11	RES-CHIP	470 5% 1/16W
R2227	1-218-949-11	RES-CHIP	470 5% 1/16W	R3458	1-218-973-11	RES-CHIP	47K 5% 1/16W
R2229	1-218-949-11	RES-CHIP	470 5% 1/16W	R3459	1-218-941-81	RES-CHIP	100 5% 1/16W
R2233	1-218-969-11	RES-CHIP	22K 5% 1/16W	R3460	1-218-965-11	RES-CHIP	10K 5% 1/16W
R2234	1-218-965-11	RES-CHIP	10K 5% 1/16W	R4000	1-218-943-11	RES-CHIP	150 5% 1/16W
R2242	1-218-937-11	RES-CHIP	47 5% 1/16W	R4003	1-218-943-11	RES-CHIP	150 5% 1/16W
R2250	1-218-990-81	SHORT CHIP	0	R4010	1-218-933-11	RES-CHIP	22 5% 1/16W
R2251	1-218-941-81	RES-CHIP	100 5% 1/16W	R4011	1-218-933-11	RES-CHIP	22 5% 1/16W
R2253	1-216-864-11	SHORT CHIP	0	R4012	1-218-933-11	RES-CHIP	22 5% 1/16W
R2255	1-218-990-81	SHORT CHIP	0	R4013	1-218-933-11	RES-CHIP	22 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R4014	1-218-935-11	RES-CHIP	33 5% 1/16W	R5509	1-218-941-81	RES-CHIP	100 5% 1/16W
R4015	1-218-935-11	RES-CHIP	33 5% 1/16W	R5512	1-218-941-81	RES-CHIP	100 5% 1/16W
R4016	1-218-935-11	RES-CHIP	33 5% 1/16W	R5514	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4017	1-218-935-11	RES-CHIP	33 5% 1/16W	R5518	1-218-973-11	RES-CHIP	47K 5% 1/16W
R4018	1-218-935-11	RES-CHIP	33 5% 1/16W	R5522	1-218-973-11	RES-CHIP	47K 5% 1/16W
R4019	1-218-935-11	RES-CHIP	33 5% 1/16W	R5527	1-208-911-11	METAL CHIP	10K 0.5% 1/16W
R4020	1-218-933-11	RES-CHIP	22 5% 1/16W	R5528	1-243-975-11	METAL CHIP	4.7M 5% 1/16W
R4021	1-218-933-11	RES-CHIP	22 5% 1/16W	R5530	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4022	1-218-933-11	RES-CHIP	22 5% 1/16W	R5531	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4023	1-218-933-11	RES-CHIP	22 5% 1/16W	R5533	1-218-945-11	RES-CHIP	220 5% 1/16W
R4028	1-218-933-11	RES-CHIP	22 5% 1/16W	R5541	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4029	1-218-933-11	RES-CHIP	22 5% 1/16W	R5542	1-218-970-11	RES-CHIP	27K 5% 1/16W
R4032	1-208-671-11	METAL CHIP	330 0.5% 1/16W	R5544	1-218-990-81	SHORT CHIP	0
R4033	1-208-671-11	METAL CHIP	330 0.5% 1/16W	R5555	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4034	1-208-671-11	METAL CHIP	330 0.5% 1/16W	R5563	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R4035	1-208-671-11	METAL CHIP	330 0.5% 1/16W	R5568	1-218-941-81	RES-CHIP	100 5% 1/16W
R4500	1-218-953-11	RES-CHIP	1K 5% 1/16W	R5569	1-218-945-11	RES-CHIP	220 5% 1/16W
R4502	1-218-967-11	RES-CHIP	15K 5% 1/16W	R5570	1-218-941-81	RES-CHIP	100 5% 1/16W
R4512	1-218-953-11	RES-CHIP	1K 5% 1/16W	R5571	1-218-941-81	RES-CHIP	100 5% 1/16W
R4513	1-218-953-11	RES-CHIP	1K 5% 1/16W	R5572	1-218-933-11	RES-CHIP	22 5% 1/16W
R4514	1-218-967-11	RES-CHIP	15K 5% 1/16W	R5574	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4515	1-218-967-11	RES-CHIP	15K 5% 1/16W	R5576	1-218-941-81	RES-CHIP	100 5% 1/16W
R4525	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5578	1-218-941-81	RES-CHIP	100 5% 1/16W
R4528	1-218-977-11	RES-CHIP	100K 5% 1/16W	R5590	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4529	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	R5592	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
R4533	1-218-941-81	RES-CHIP	100 5% 1/16W	R5604	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4534	1-218-941-81	RES-CHIP	100 5% 1/16W	R5614	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
R4535	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5616	1-218-941-81	RES-CHIP	100 5% 1/16W
R4537	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5617	1-218-963-11	RES-CHIP	6.8K 5% 1/16W
R4538	1-218-981-91	RES-CHIP	220K 5% 1/16W	R5621	1-218-941-81	RES-CHIP	100 5% 1/16W
R4540	1-218-981-91	RES-CHIP	220K 5% 1/16W	R5623	1-218-941-81	RES-CHIP	100 5% 1/16W
R4541	1-218-981-91	RES-CHIP	220K 5% 1/16W	R5629	1-218-941-81	RES-CHIP	100 5% 1/16W
R4542	1-218-941-81	RES-CHIP	100 5% 1/16W	R5630	1-218-963-11	RES-CHIP	6.8K 5% 1/16W
R4708	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5631	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
R4709	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5639	1-218-941-81	RES-CHIP	100 5% 1/16W
R4728	1-218-990-81	SHORT CHIP	0	R5643	1-218-941-81	RES-CHIP	100 5% 1/16W
R4756	1-208-671-11	METAL CHIP	330 0.5% 1/16W	R5644	1-218-965-11	RES-CHIP	10K 5% 1/16W
R4757	1-208-671-11	METAL CHIP	330 0.5% 1/16W	R5646	1-218-941-81	RES-CHIP	100 5% 1/16W
R5016	1-216-864-11	SHORT CHIP	0	R5647	1-218-957-11	RES-CHIP	2.2K 5% 1/16W
R5020	1-216-864-11	SHORT CHIP	0	R5649	1-218-941-81	RES-CHIP	100 5% 1/16W
R5021	1-216-864-11	SHORT CHIP	0	R5655	1-218-965-11	RES-CHIP	10K 5% 1/16W
R5022	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R5656	1-218-949-11	RES-CHIP	470 5% 1/16W
R5024	1-208-635-11	METAL CHIP	10 0.5% 1/16W	R5669	1-218-969-11	RES-CHIP	22K 5% 1/16W
R5501	1-216-864-11	SHORT CHIP	0	R5670	1-218-965-11	RES-CHIP	10K 5% 1/16W
R5502	1-208-911-11	METAL CHIP	10K 0.5% 1/16W	R5671	1-218-965-11	RES-CHIP	10K 5% 1/16W
R5503	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5674	1-218-965-11	RES-CHIP	10K 5% 1/16W
R5504	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5675	1-218-953-11	RES-CHIP	1K 5% 1/16W
R5505	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5676	1-218-953-11	RES-CHIP	1K 5% 1/16W
R5506	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R5677	1-218-941-81	RES-CHIP	100 5% 1/16W
R5508	1-218-965-11	RES-CHIP	10K 5% 1/16W	R5678	1-218-941-81	RES-CHIP	100 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R5680	1-218-941-81	RES-CHIP	100 5% 1/16W	R6490	1-218-973-11	RES-CHIP	47K 5% 1/16W
R5684	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	R6491	1-218-965-11	RES-CHIP	10K 5% 1/16W
R5685	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	R6495	1-218-965-11	RES-CHIP	10K 5% 1/16W
R5686	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	R6496	1-218-965-11	RES-CHIP	10K 5% 1/16W
R5689	1-218-941-81	RES-CHIP	100 5% 1/16W	R6497	1-218-941-81	RES-CHIP	100 5% 1/16W
R5690	1-218-941-81	RES-CHIP	100 5% 1/16W	R6499	1-218-983-11	RES-CHIP	330K 5% 1/16W
R5700	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	R6500	1-218-973-11	RES-CHIP	47K 5% 1/16W
R5702	1-218-965-11	RES-CHIP	10K 5% 1/16W	R6508	1-208-931-11	METAL CHIP	68K 0.5% 1/16W
R6401	1-218-953-11	RES-CHIP	1K 5% 1/16W	R6509	1-218-977-11	RES-CHIP	100K 5% 1/16W
R6402	1-218-965-11	RES-CHIP	10K 5% 1/16W	R6524	1-218-961-11	RES-CHIP	4.7K 5% 1/16W
R6403	1-218-965-11	RES-CHIP	10K 5% 1/16W	R6533	1-218-953-11	RES-CHIP	1K 5% 1/16W
R6405	1-218-953-11	RES-CHIP	1K 5% 1/16W	R6538	1-208-931-11	METAL CHIP	68K 0.5% 1/16W
R6408	1-218-941-81	RES-CHIP	100 5% 1/16W	R6542	1-208-910-11	METAL CHIP	9.1K 0.5% 1/16W
R6409	1-218-969-11	RES-CHIP	22K 5% 1/16W	R6545	1-218-974-11	RES-CHIP	56K 5% 1/16W
R6411	1-216-809-11	METAL CHIP	100 5% 1/10W	R6551	1-218-965-11	RES-CHIP	10K 5% 1/16W
R6415	1-216-864-11	SHORT CHIP	0	R6553	1-216-791-11	METAL CHIP	3.3 5% 1/10W
R6416	1-218-949-11	RES-CHIP	470 5% 1/16W	R6554	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W
R6417	1-218-965-11	RES-CHIP	10K 5% 1/16W	R6555	1-208-721-11	METAL CHIP	39K 0.5% 1/16W
R6418	1-208-911-11	METAL CHIP	10K 0.5% 1/16W	R6561	1-208-695-11	METAL CHIP	3.3K 0.5% 1/16W
R6419	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	R6562	1-218-965-11	RES-CHIP	10K 5% 1/16W
R6420	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	R6565	1-208-911-11	METAL CHIP	10K 0.5% 1/16W
R6421	1-208-911-11	METAL CHIP	10K 0.5% 1/16W	R6568	1-218-941-11	RES-CHIP	100 5% 1/16W
R6423	1-218-965-11	RES-CHIP	10K 5% 1/16W	R6583	1-218-965-11	RES-CHIP	10K 5% 1/16W
R6424	1-218-943-11	RES-CHIP	150 5% 1/16W	R6585	1-218-982-11	RES-CHIP	270K 5% 1/16W
R6426	1-208-703-11	METAL CHIP	6.8K 0.5% 1/16W	R6603	1-218-953-11	RES-CHIP	1K 5% 1/16W
R6427	1-218-941-11	RES-CHIP	100 5% 1/16W	R6609	1-218-967-11	RES-CHIP	15K 5% 1/16W
R6428	1-208-890-11	METAL CHIP	1.3K 0.5% 1/16W	R6610	1-218-953-11	RES-CHIP	1K 5% 1/16W
R6430	1-218-965-11	RES-CHIP	10K 5% 1/16W	R6611	1-218-965-11	RES-CHIP	10K 5% 1/16W
R6432	1-218-957-11	RES-CHIP	2.2K 5% 1/16W	R6623	1-216-864-11	SHORT CHIP	0
R6437	1-218-990-81	SHORT CHIP	0	R6624	1-218-977-11	RES-CHIP	100K 5% 1/16W
R6439	1-218-967-11	RES-CHIP	15K 5% 1/16W	R6625	1-218-941-81	RES-CHIP	100 5% 1/16W
R6443	1-208-909-11	METAL CHIP	8.2K 0.5% 1/16W	R6630	1-216-791-11	METAL CHIP	3.3 5% 1/10W
R6454	1-218-941-81	RES-CHIP	100 5% 1/16W	R6631	1-208-931-11	METAL CHIP	68K 0.5% 1/16W
R6455	1-218-965-11	RES-CHIP	10K 5% 1/16W	R6632	1-208-683-11	METAL CHIP	1K 0.5% 1/16W
R6459	1-218-957-11	RES-CHIP	2.2K 5% 1/16W	R6633	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W
R6461	1-208-911-11	METAL CHIP	10K 0.5% 1/16W	R6634	1-218-941-81	RES-CHIP	100 5% 1/16W
R6462	1-218-941-11	RES-CHIP	100 5% 1/16W	R7100	1-218-941-81	RES-CHIP	100 5% 1/16W
R6463	1-208-699-11	METAL CHIP	4.7K 0.5% 1/16W	R7103	1-218-953-11	RES-CHIP	1K 5% 1/16W
R6466	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7104	1-218-941-81	RES-CHIP	100 5% 1/16W
R6467	1-208-671-11	METAL CHIP	330 0.5% 1/16W	R7107	1-218-949-11	RES-CHIP	470 5% 1/16W
R6468	1-208-883-81	METAL CHIP	680 0.5% 1/16W	R7108	1-218-937-11	RES-CHIP	47 5% 1/16W
R6469	1-218-957-11	RES-CHIP	2.2K 5% 1/16W	R7109	1-218-937-11	RES-CHIP	47 5% 1/16W
R6470	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7110	1-220-884-81	METAL CHIP	39 0.5% 1/16W
R6473	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7111	1-220-884-81	METAL CHIP	39 0.5% 1/16W
R6474	1-208-683-11	METAL CHIP	1K 0.5% 1/16W	R7112	1-218-949-11	RES-CHIP	470 5% 1/16W
R6475	1-208-683-11	METAL CHIP	1K 0.5% 1/16W	R7113	1-208-688-11	METAL CHIP	1.6K 0.5% 1/16W
R6476	1-208-905-11	METAL CHIP	5.6K 0.5% 1/16W	R7114	1-218-967-11	RES-CHIP	15K 5% 1/16W
R6477	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7115	1-218-967-11	RES-CHIP	15K 5% 1/16W
R6479	1-218-939-11	RES-CHIP	68 5% 1/16W	R7121	1-218-990-81	SHORT CHIP	0
R6489	1-218-961-11	RES-CHIP	4.7K 5% 1/16W	R7122	1-218-937-11	RES-CHIP	47 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R7202	1-218-943-11	RES-CHIP	150 5% 1/16W	R7503	1-218-937-11	RES-CHIP	47 5% 1/16W
R7203	1-208-663-11	METAL CHIP	150 0.5% 1/16W	R7507	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7204	1-208-663-11	METAL CHIP	150 0.5% 1/16W	R7509	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7205	1-218-933-11	RES-CHIP	22 5% 1/16W	R7510	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7206	1-218-933-11	RES-CHIP	22 5% 1/16W	R7513	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7207	1-218-933-11	RES-CHIP	22 5% 1/16W	R7516	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7208	1-218-933-11	RES-CHIP	22 5% 1/16W	R7518	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7209	1-218-933-11	RES-CHIP	22 5% 1/16W	R7520	1-218-937-11	RES-CHIP	47 5% 1/16W
R7211	1-218-943-11	RES-CHIP	150 5% 1/16W	R7522	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7215	1-218-943-11	RES-CHIP	150 5% 1/16W	R7523	1-218-937-11	RES-CHIP	47 5% 1/16W
R7219	1-218-929-11	RES-CHIP	10 5% 1/16W	R7524	1-218-937-11	RES-CHIP	47 5% 1/16W
R7220	1-218-929-11	RES-CHIP	10 5% 1/16W	R7525	1-218-937-11	RES-CHIP	47 5% 1/16W
R7300	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7526	1-218-937-11	RES-CHIP	47 5% 1/16W
R7302	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7530	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7305	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7531	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7306	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7712	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7308	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7718	1-218-937-11	RES-CHIP	47 5% 1/16W
R7310	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7722	1-218-941-81	RES-CHIP	100 5% 1/16W
R7312	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7723	1-218-941-81	RES-CHIP	100 5% 1/16W
R7313	1-218-949-11	RES-CHIP	470 5% 1/16W	R7724	1-218-941-81	RES-CHIP	100 5% 1/16W
R7315	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7725	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7317	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7726	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7319	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7727	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7321	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7729	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7324	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7730	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7326	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7731	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7328	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7733	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7329	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7734	1-218-937-11	RES-CHIP	47 5% 1/16W
R7330	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7735	1-218-953-11	RES-CHIP	1K 5% 1/16W
R7331	1-218-965-11	RES-CHIP	10K 5% 1/16W	R7736	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7333	1-218-965-11	RES-CHIP	10K 5% 1/16W	R8004	1-218-965-11	RES-CHIP	10K 5% 1/16W
R7334	1-218-965-11	RES-CHIP	10K 5% 1/16W	R8007	1-218-990-81	SHORT CHIP	0
R7337	1-218-965-11	RES-CHIP	10K 5% 1/16W	R8008	1-218-941-81	RES-CHIP	100 5% 1/16W
R7338	1-218-949-11	RES-CHIP	470 5% 1/16W	R8009	1-218-935-11	RES-CHIP	33 5% 1/16W
R7339	1-218-965-11	RES-CHIP	10K 5% 1/16W	R8010	1-218-935-11	RES-CHIP	33 5% 1/16W
R7341	1-218-949-11	RES-CHIP	470 5% 1/16W	R8011	1-218-935-11	RES-CHIP	33 5% 1/16W
R7400	1-218-948-11	RES-CHIP	390 5% 1/16W	R8012	1-218-935-11	RES-CHIP	33 5% 1/16W
R7401	1-218-948-11	RES-CHIP	390 5% 1/16W	R8013	1-218-935-11	RES-CHIP	33 5% 1/16W
R7402	1-218-948-11	RES-CHIP	390 5% 1/16W	R8014	1-218-935-11	RES-CHIP	33 5% 1/16W
R7403	1-218-948-11	RES-CHIP	390 5% 1/16W	R8015	1-218-935-11	RES-CHIP	33 5% 1/16W
R7404	1-218-941-81	RES-CHIP	100 5% 1/16W	R8016	1-218-935-11	RES-CHIP	33 5% 1/16W
R7405	1-218-941-81	RES-CHIP	100 5% 1/16W	R8017	1-218-935-11	RES-CHIP	33 5% 1/16W
R7406	1-218-941-81	RES-CHIP	100 5% 1/16W	R8018	1-218-935-11	RES-CHIP	33 5% 1/16W
R7407	1-218-941-81	RES-CHIP	100 5% 1/16W	R8019	1-218-935-11	RES-CHIP	33 5% 1/16W
R7408	1-220-180-11	RES-CHIP	620 5% 1/16W	R8020	1-218-935-11	RES-CHIP	33 5% 1/16W
R7409	1-220-174-11	RES-CHIP	200 5% 1/16W	R8021	1-218-935-11	RES-CHIP	33 5% 1/16W
R7410	1-220-174-11	RES-CHIP	200 5% 1/16W	R8022	1-218-935-11	RES-CHIP	33 5% 1/16W
R7411	1-220-174-11	RES-CHIP	200 5% 1/16W	R8023	1-218-935-11	RES-CHIP	33 5% 1/16W
R7412	1-208-866-11	METAL CHIP	130 0.5% 1/16W	R8024	1-218-935-11	RES-CHIP	33 5% 1/16W
R7414	1-218-990-81	SHORT CHIP	0	R8025	1-218-935-11	RES-CHIP	33 5% 1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
R8026	1-218-935-11	RES-CHIP	33 5% 1/16W	RB2200	1-239-670-81	RESISTOR, NETWORK 47	
R8027	1-218-935-11	RES-CHIP	33 5% 1/16W	RB2201	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
R8028	1-218-935-11	RES-CHIP	33 5% 1/16W	RB2202	1-239-674-81	RESISTOR, NETWORK 100	
R8029	1-218-935-11	RES-CHIP	33 5% 1/16W	RB2203	1-239-666-81	RESISTOR, NETWORK 22	
R8030	1-218-935-11	RES-CHIP	33 5% 1/16W	RB2263	1-239-694-81	RESISTOR, NETWORK 4.7K	
R8031	1-218-935-11	RES-CHIP	33 5% 1/16W	RB3005	1-239-698-11	RESISTOR, NETWORK 10K	
R8032	1-218-935-11	RES-CHIP	33 5% 1/16W	RB3006	1-239-674-81	RESISTOR, NETWORK 100	
R8033	1-218-935-11	RES-CHIP	33 5% 1/16W	RB3010	1-239-686-11	RESISTOR, NETWORK 1K	
R8034	1-218-935-11	RES-CHIP	33 5% 1/16W	RB3011	1-239-686-11	RESISTOR, NETWORK 1K	
R8035	1-218-935-11	RES-CHIP	33 5% 1/16W	RB3021	1-239-674-81	RESISTOR, NETWORK 100	
R8036	1-218-935-11	RES-CHIP	33 5% 1/16W	RB3023	1-239-686-11	RESISTOR, NETWORK 1K	
R8037	1-218-935-11	RES-CHIP	33 5% 1/16W	RB3024	1-239-678-81	RESISTOR, NETWORK 220	
R8038	1-218-935-11	RES-CHIP	33 5% 1/16W	RB3400	1-234-381-11	RES, NETWORK 100K	(1005X4)
R8039	1-218-941-81	RES-CHIP	100 5% 1/16W	RB3401	1-234-382-21	RES, NETWORK 220K	(1005X4)
R8042	1-218-941-81	RES-CHIP	100 5% 1/16W	RB3402	1-239-674-81	RESISTOR, NETWORK 100	
R8043	1-218-941-81	RES-CHIP	100 5% 1/16W	RB4012	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
R8048	1-218-937-11	RES-CHIP	47 5% 1/16W	RB4013	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
R8050	1-218-941-81	RES-CHIP	100 5% 1/16W	RB4014	1-242-963-21	RES, NETWORK 33	(1005X4)
R8051	1-218-941-81	RES-CHIP	100 5% 1/16W	RB4015	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
R8052	1-218-941-81	RES-CHIP	100 5% 1/16W	RB4016	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
R8078	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4017	1-234-370-21	RES, NETWORK 22	(1005X4)
R8081	1-218-963-11	RES-CHIP	6.8K 5% 1/16W	RB4018	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
R8082	1-218-963-11	RES-CHIP	6.8K 5% 1/16W	RB4019	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
R8086	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4020	1-234-370-21	RES, NETWORK 22	(1005X4)
R8089	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4501	1-239-674-81	RESISTOR, NETWORK 100	
R8092	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4502	1-239-700-81	RESISTOR, NETWORK 15K	
R8094	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4512	1-239-674-81	RESISTOR, NETWORK 100	
R8098	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4513	1-239-674-81	RESISTOR, NETWORK 100	
R8100	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4514	1-239-700-81	RESISTOR, NETWORK 15K	
R8102	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4515	1-239-700-81	RESISTOR, NETWORK 15K	
R8104	1-218-965-11	RES-CHIP	10K 5% 1/16W	RB4528	1-239-670-81	RESISTOR, NETWORK 47	
R8108	1-218-941-81	RES-CHIP	100 5% 1/16W	RB4529	1-239-686-11	RESISTOR, NETWORK 1K	
R8109	1-218-941-81	RES-CHIP	100 5% 1/16W	RB4702	1-239-674-81	RESISTOR, NETWORK 100	
R8207	1-208-695-11	METAL CHIP	3.3K 0.5% 1/16W	RB4703	1-239-674-81	RESISTOR, NETWORK 100	
R8208	1-218-941-81	RES-CHIP	100 5% 1/16W	RB4704	1-239-701-81	RESISTOR, NETWORK 18K	
R8215	1-218-949-11	RES-CHIP	470 5% 1/16W	RB4705	1-239-701-81	RESISTOR, NETWORK 18K	
R8216	1-218-949-11	RES-CHIP	470 5% 1/16W	RB4706	1-239-674-81	RESISTOR, NETWORK 100	
R8235	1-218-945-11	RES-CHIP	220 5% 1/16W	RB4707	1-234-723-11	RES, NETWORK 75	(1005X4)
R8236	1-218-945-11	RES-CHIP	220 5% 1/16W	RB4708	1-239-701-81	RESISTOR, NETWORK 18K	
R8237	1-218-945-11	RES-CHIP	220 5% 1/16W	RB4709	1-239-701-81	RESISTOR, NETWORK 18K	
< RESISTOR CHIP >				RB4711	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB1000	1-234-382-21	RES, NETWORK 220K	(1005X4)	RB4712	1-234-371-21	RES, NETWORK 47	(1005X4)
RB1001	1-234-382-21	RES, NETWORK 220K	(1005X4)	RB5001	1-239-674-81	RESISTOR, NETWORK 100	
RB1002	1-239-678-81	RESISTOR, NETWORK 220		RB5002	1-239-674-81	RESISTOR, NETWORK 100	
RB1005	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5003	1-239-674-81	RESISTOR, NETWORK 100	
RB1007	1-239-674-81	RESISTOR, NETWORK 100		RB5500	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1008	1-239-682-11	RESISTOR, NETWORK 470		RB5501	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1010	1-239-678-81	RESISTOR, NETWORK 220		RB5502	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1011	1-234-372-11	RES, NETWORK 100	(1005X4)	RB5503	1-234-372-11	RES, NETWORK 100	(1005X4)
				RB5504	1-234-377-21	RES, NETWORK 4.7K	(1005X4)

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
RB5506	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7506	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5507	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7508	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5508	1-234-376-11	RES, NETWORK 2.2K	(1005X4)	RB7509	1-239-670-81	RESISTOR, NETWORK 47	
RB5509	1-239-674-81	RESISTOR, NETWORK 100		RB7511	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5510	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7513	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5511	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7517	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5512	1-234-376-11	RES, NETWORK 2.2K	(1005X4)	RB7518	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5514	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7520	1-239-670-81	RESISTOR, NETWORK 47	
RB5515	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB7521	1-239-670-81	RESISTOR, NETWORK 47	
RB5516	1-239-674-81	RESISTOR, NETWORK 100		RB7522	1-239-670-81	RESISTOR, NETWORK 47	
RB5517	1-239-698-11	RESISTOR, NETWORK 10K		RB7523	1-239-698-11	RESISTOR, NETWORK 10K	
RB5518	1-239-674-81	RESISTOR, NETWORK 100		RB7524	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5520	1-239-674-81	RESISTOR, NETWORK 100		RB7706	1-239-698-11	RESISTOR, NETWORK 10K	
RB5521	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7707	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5522	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7709	1-239-698-11	RESISTOR, NETWORK 10K	
RB5523	1-239-690-81	RESISTOR, NETWORK 2.2K		RB7712	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5524	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7713	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5525	1-239-674-81	RESISTOR, NETWORK 100		RB7714	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5526	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7715	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5527	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7716	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5528	1-234-372-11	RES, NETWORK 100	(1005X4)	RB7717	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5530	1-234-376-11	RES, NETWORK 2.2K	(1005X4)	RB8005	1-239-674-81	RESISTOR, NETWORK 100	
RB6401	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)	RB8006	1-239-674-81	RESISTOR, NETWORK 100	
RB6403	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB8007	1-239-674-81	RESISTOR, NETWORK 100	
RB6404	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB8008	1-239-674-81	RESISTOR, NETWORK 100	
RB6405	1-239-698-11	RESISTOR, NETWORK 10K		RB8009	1-234-372-11	RES, NETWORK 100	(1005X4)
RB6406	1-239-698-11	RESISTOR, NETWORK 10K		RB8010	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7100	1-234-378-21	RES, NETWORK 10K	(1005X4)	RB8011	1-239-674-81	RESISTOR, NETWORK 100	
RB7103	1-239-698-11	RESISTOR, NETWORK 10K		RB8012	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7104	1-239-670-81	RESISTOR, NETWORK 47		RB8014	1-239-674-81	RESISTOR, NETWORK 100	
RB7105	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8015	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7200	1-234-370-21	RES, NETWORK 22	(1005X4)	RB8016	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7201	1-234-702-11	RES, NETWORK 68	(1005X4)	RB8017	1-239-674-81	RESISTOR, NETWORK 100	
RB7202	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB8018	1-239-690-81	RESISTOR, NETWORK 2.2K	
RB7203	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)	RB8201	1-239-674-81	RESISTOR, NETWORK 100	
RB7300	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8210	1-239-674-81	RESISTOR, NETWORK 100	
RB7301	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8213	1-239-674-81	RESISTOR, NETWORK 100	
RB7302	1-239-670-81	RESISTOR, NETWORK 47		RB8214	1-239-674-81	RESISTOR, NETWORK 100	
RB7303	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8215	1-239-674-81	RESISTOR, NETWORK 100	
RB7304	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8216	1-239-674-81	RESISTOR, NETWORK 100	
RB7305	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8217	1-239-674-81	RESISTOR, NETWORK 100	
RB7306	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8220	1-239-682-11	RESISTOR, NETWORK 470	
RB7400	1-239-694-81	RESISTOR, NETWORK 4.7K		RB8222	1-239-698-11	RESISTOR, NETWORK 10K	
RB7402	1-234-372-11	RES, NETWORK 100	(1005X4)	RB8223	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7404	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8224	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7500	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8225	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7501	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)	RB8226	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7503	1-239-670-81	RESISTOR, NETWORK 47		RB8227	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7504	1-234-371-21	RES, NETWORK 47	(1005X4)	RB8228	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7505	1-234-371-21	RES, NETWORK 47	(1005X4)				

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
TP6400	1-535-757-11	CHIP, CHECKER		D325	6-502-296-01	DI VYPY1105W-5C43A-TR	
TP6401	1-535-757-11	CHIP, CHECKER				< IC >	
		< VARISTOR >		IC301	6-600-680-01	PHOTO DIODE BH1690FVC-TR	
VD1000	1-802-078-11	VARISTOR (SMD)				< TRANSISTOR >	
VD1001	1-802-078-11	VARISTOR (SMD)		Q301	6-551-815-01	TR UNR52A1G0LS0	
VD1002	1-802-078-11	VARISTOR (SMD)		Q302	6-551-815-01	TR UNR52A1G0LS0	
VD3000	1-802-078-11	VARISTOR (SMD)		Q303	6-551-815-01	TR UNR52A1G0LS0	
VD3004	1-802-078-11	VARISTOR (SMD)		Q304	6-551-815-01	TR UNR52A1G0LS0	
VD3005	1-802-078-11	VARISTOR (SMD)		Q305	6-551-815-01	TR UNR52A1G0LS0	
VD3006	1-802-078-11	VARISTOR (SMD)		Q306	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF	
VD3007	1-802-493-21	VARISTOR, NETWORK (1005X2)				< RESISTOR >	
VD4500	1-802-078-11	VARISTOR (SMD)		R301	1-208-871-81	METAL CHIP 220 0.5% 1/16W	
VD4501	1-802-078-11	VARISTOR (SMD)		R302	1-208-885-11	METAL CHIP 820 0.5% 1/16W	
VD4502	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R303	1-208-663-11	METAL CHIP 150 0.5% 1/16W	
VD4503	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R304	1-208-683-11	METAL CHIP 1K 0.5% 1/16W	
VD4504	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R305	1-208-683-11	METAL CHIP 1K 0.5% 1/16W	
VD4505	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R306	1-218-990-81	SHORT CHIP 0	
VD4506	1-802-078-11	VARISTOR (SMD)		R307	1-218-953-11	RES-CHIP 1K 5% 1/16W	
VD4507	1-802-078-11	VARISTOR (SMD)		R309	1-218-990-81	SHORT CHIP 0	
VD4509	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R310	1-218-981-91	RES-CHIP 220K 5% 1/16W	
VD4510	1-802-481-11	ESD SUPPRESSOR (4 ARRAY)		R311	1-218-965-11	RES-CHIP 10K 5% 1/16W	
VD4511	1-802-078-11	VARISTOR (SMD)		R312	1-218-971-11	RES-CHIP 33K 5% 1/16W	
VD4512	1-802-078-11	VARISTOR (SMD)		R314	1-218-953-11	RES-CHIP 1K 5% 1/16W	
VD7100	1-804-988-21	VARISTOR, CHIP	(1608)				
		< CRYSTAL >					
X5500	1-813-784-21	VIBRATOR, CRYSTAL					
X5501	1-795-537-21	VIBRATOR, CRYSTAL					
X7100	1-814-145-11	QUARTS CRYSTAL UNIT					
X7101	1-813-990-11	QUARTS CRYSTAL 30MHZ					
X8000	1-781-867-21	VIBRATOR, CRYSTAL					
* A-1510-350-A H3E Board, Complete				* A-1510-351-A H4 Board, Complete			
		< CAPACITOR >				< CAPACITOR >	
C302	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V	C401	1-112-068-11	CERAMIC CHIP 220PF	10% 50V
C303	1-114-399-21	ELECT CHIP 47UF	20% 6.3V	C402	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C304	1-114-130-11	CERAMIC CHIP 1UF	6.3V			< CONNECTOR >	
		< CONNECTOR >		CN401	1-820-180-11	HEADER ASSEMBLY (PRINT PWB) 3P	
CN301	1-820-288-11	HEADER ASSEMBLY (PRINT PWB) 9P				< IC >	
		< DIODE >		IC401	6-600-681-01	IC RS-770N	
D302	8-719-036-94	DIODE RD5.6SB-T1				< RESISTOR >	
D308	6-502-297-01	DI FR1105W-730-TR		R401	1-218-949-11	RES-CHIP 470 5% 1/16W	
D322	6-502-297-01	DI FR1105W-730-TR		R402	1-218-937-11	RES-CHIP 47 5% 1/16W	
D323	6-502-296-01	DI VYPY1105W-5C43A-TR					
D324	6-502-297-01	DI FR1105W-730-TR					

REF.NO.	PART.NO	DESCRIPTION	REMARK	REF.NO.	PART.NO	DESCRIPTION	REMARK
ACCESSORIES AND CONNECTORS							
	*1-835-210-11	LVDS HARNESS (32) (TCON-CN8000 (BE1))	(32 inches)		*1-910-045-49	SP CONNECTOR ASSY 4 (CN3400 (BE1)-SP	(52 inches)
	*1-910-045-34	CONNECTOR ASSY 13P (CN6401 (BE1)- (G1D/IP5)	(32/40/46 inches)		*1-966-064-11	HARNESS WITH CONNECTOR (LVDS) (TCON-	CN8000 (BE1)) (52 inches)
	*1-910-045-37	CONNECTOR ASSY 14P (CN6402 (BE1)- (G1D)	-INVERTER (32 inches)		*1-910-045-57	CONNECTOR ASSY 20P (CN5500 (BE1)- CN301 (H3)-	CN401 (H4) - (CN101) SWITCH UNIT-LOGO BOARD)) (52 inches)
	*1-910-045-46	SP CONNECTOR ASSY 4 (CN3400 (BE1)-SP	(32 inches)		*3-298-243-11	INSTRUCTION MANUAL (UK) ENGLISH	
	*1-910-045-55	CONNECTOR ASSY 20P (CN5500 (BE1)- CN301 (H3)-	CN401 (H4) - (CN101) SWITCH UNIT-LOGO BOARD)) (32 inches)		*3-298-243-21	INSTRUCTION MANUAL (E)	GERMAN/FRENCH/ITALIAN/DUTCH
	*1-835-147-11	CONNECTOR ASSY, MDF61 (IP5-BALANCER)	(40 inches)		*3-298-243-31	INSTRUCTION MANUAL (E)	SPANISH/PORTUGUESE/GREEK
	*1-910-045-39	XA CONNECTOR ASSY 5P (CN6402 (BE1)-IP5/G5)	(40/46/52 inches)		*3-298-243-41	INSTRUCTION MANUAL (K) ENGLISH/RUSSIAN/	POLISH/CZECH/SLOVAK/HUNGARIAN
	*1-910-045-41	XA CONNECTOR ASSY 7P (IP5-BALANCER BOARD)	(40 inches)		*3-298-243-51	INSTRUCTION MANUAL (K) NORWEGIAN/SWEDISH/	FINNISH/DANISH/TURKISH
	*1-910-045-47	SP CONNECTOR ASSY 4 (CN3400 (BE1)-SP	(40/46 inches)		*3-298-243-61	INSTRUCTION MANUAL (K) ENGLISH/RUSSIAN	
	*1-966-061-11	HARNESS WITH CONNECTOR (LVDS) (TCON-	CN8000 (BE1)) (40 inches)		REMOTE COMMANDER		
	*1-910-045-56	CONNECTOR ASSY 20P (CN5500 (BE1)- CN301 (H3)-	CN401 (H4) - (CN101) SWITCH UNIT-LOGO BOARD)) (40 inches)		1-480-778-11	REMOTE COMMANDER (RM-ED011)	
	*1-835-148-11	CONNECTOR ASSY, MDF61 (IP5-BALANCER)	(46 inches)				
	*1-835-215-11	LVDS HARNESS (46) (TCON-CN8000 (BE1))	(46 inches)				
	*1-910-045-43	XA CONNECTOR ASSY 7P (IP5-BALANCER BOARD)	(46 inches)				
	*1-910-045-48	SP CONNECTOR ASSY 4 (CN3400 (BE1)-SP	(46 inches)				
	*1-910-046-61	CONNECTOR ASSY 20P (CN5500 (BE1)- CN301 (H3)-	CN401 (H4) - (CN101) SWITCH UNIT-LOGO BOARD)) (46 inches)				
	*1-835-146-11	CONNECTOR ASSY, MDF61 (D4-BALANCER)	(52 inches)				
	*1-835-149-11	CONNECTOR ASSY, MDF61 (D5-BALANCER)	(52 inches)				
	*1-835-228-11	CONNECTOR ASSY (CN6600 (D4)-CN6501 (G5))	(52 inches)				
	*1-835-301-11	CONNECTOR ASSY (CN6500 (G5)-CN6900 (D5))	(52 inches)				
	*1-910-045-35	CONNECTOR ASSY 13P (CN6401 (BE1)-G5	(52 inches)				
	*1-910-045-40	XA CONNECTOR ASSY 8P (CN6702 (D4)-CN6153 (G5))	(52 inches)				
	*1-910-045-44	XA CONNECTOR ASSY 9P (D4-BALANCER)	(52 inches)				
	*1-910-045-45	XA CONNECTOR ASSY 10P (CN6703 (D4)-	CN6950 (D5)) (52 inches)				

