

SECTION 10
REPAIR PARTS LIST

10-1. EXPLODED VIEWS

NOTE:

- XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts

Example:
KNOB, BALANCE (WHITE) ... (RED)

↓
Parts Color Cabinet's Color

Abbreviation

AEP : AEP Model
AR : Argentina Model
AUS : Australia New Zealand Model
BR : Brazilian Model
CND : Canadian Model
E : Latin America Model
EA : Middle East Model
IN : India Model

- Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories and packing materials are given in the last of the electrical parts list.

KS : Saudi Arabia Model
KR : Korea Model
RUS : Russian Model
TW : Taiwan Model
US : USA Model
UK : UK Model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark $\hat{\Delta}$ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

Les composants identifiés par la marque $\hat{\Delta}$ contiennent des informations confidentielles. Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.


10-1-1. CASE SECTION

ns: not supplied

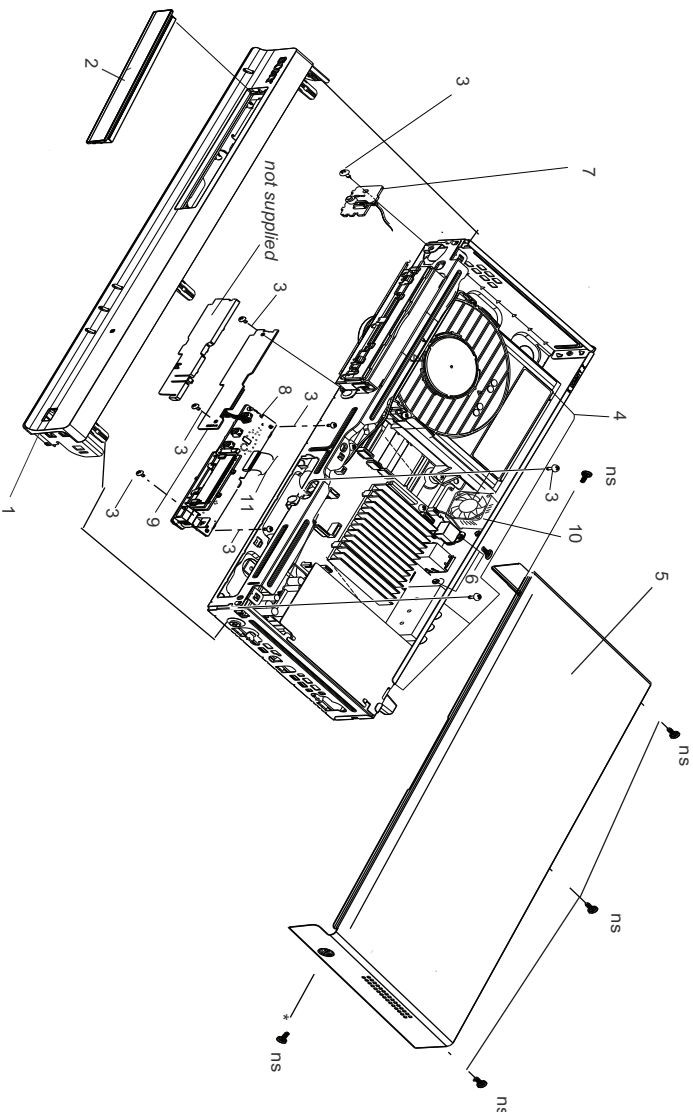

Ref. No	Part No.	Description	Remark	Ref. No	Part No.	Description	Remark
1	X-2560-659-1	PANEL ASSY, FRONT	(BDP-S480:US)	5	A-1797-171-A	SERVICE ASSY, CASE UPPER	
1	X-2560-656-1	PANEL ASSY, FRONT	(BDP-S480:EXCEPT US, CND)	5	A-1816-379-A	SERVICE ASSY, CASE UPPER (BDP-S480:BR)(BDP-S580:BR)	
1	X-2560-656-1	PANEL ASSY, FRONT	(BDP-S580:AEP, AUS, CND, UK)	6	7-682-144-01	SCREW +P 3X3	
1	X-2560-657-1	PANEL ASSY, FRONT	(BX58:US)	7	A-1800-284-A	SERVICE ASSY, FL (BDP-S480:EXCEPT BR/S483/S580:EXCEPT BR)	
1	X-2549-106-1	PANEL ASSY, FRONT	(BDP-S580:US)	7	A-1816-123-A	SERVICE ASSY, FL (BDP-S480: BR/S580: BR)	
1	X-2580-333-1	PANEL ASSY, FRONT	(BDP-S480:CND)	8	A-1816-122-A	SERVICE ASSY, IF (BDP-S580:BR)	
1	X-2560-660-1	PANEL ASSY, FRONT	(BDP-S483)	8	A-1821-466-A	SERVICE ASSY, IF (BDP-S480:BR)	
1	X-2580-966-1	PANEL ASSY, FRONT	(BDP-S580:RUS)	8	A-1800-283-A	SERVICE ASSY, IF (BDP-S480:EXCEPT BR/S483)	
1	X-2580-334-1	PANEL ASSY, FRONT	(BDP-BX58:CND)	8	A-1800-690-A	SERVICE ASSY, IF (BDP-S580:EXCEPT BR/BX58)	
1	A-1816-141-A	PANEL ASSY, FRONT	(BDP-S580:BR)	9	1-458-327-11	CARD, WIRELESS LAN (BDP-S580/BX58)	
1	A-1821-473-A	PANEL ASSY, FRONT	(BDP-S480:BR)	10	1-855-038-11	DC FAN	
2	X-2560-658-1	COVER TRAY, ASSY		11	1-838-620-11	FLEXIBLE FLAT CABLE (FIM-029)	
3	3-077-331-21	+BV3 (3-CR)					
4	3-077-331-41	+BV3 (3-CR)					

10-1-2. MAIN CHASSIS SECTION

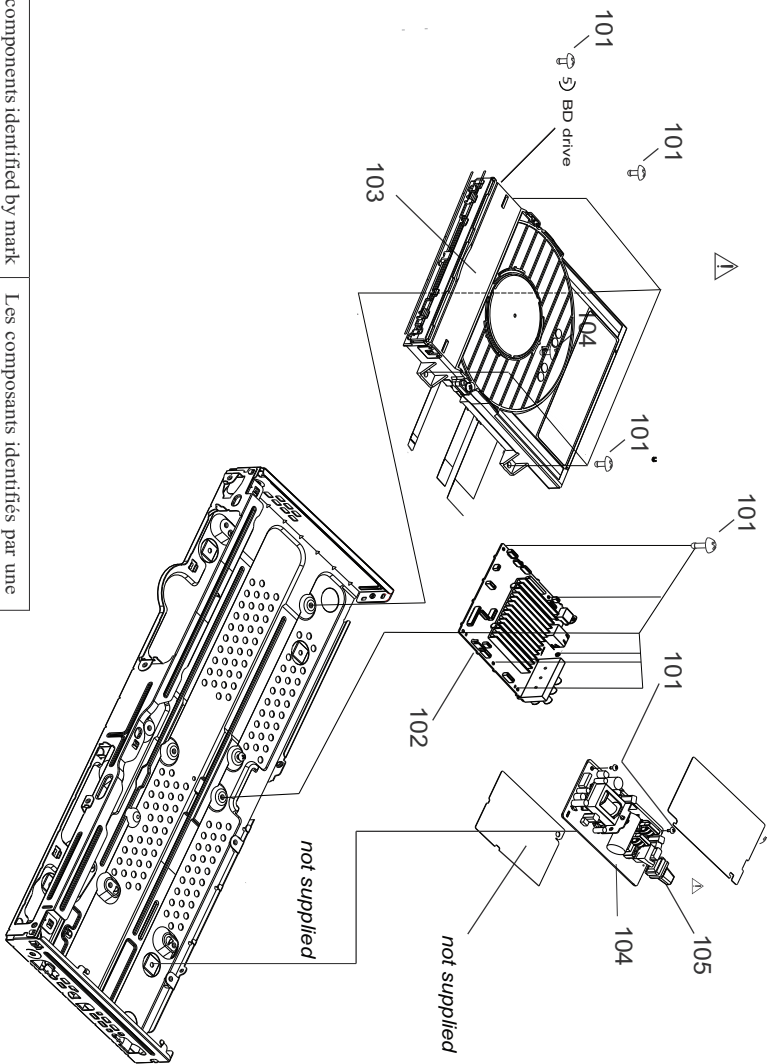


The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref.No.	Part No.	Description	Remark
Δ 101	3-077-331-21	+BV3 (3-CR)	
Δ 103	A-1750-926-A	LOADING FOR SERVICE	
Δ 102	A-1800-696-A	SERVICE ASSY, MB	(BDP-S480:US)
Δ 102	A-1800-933-A	SERVICE ASSY, MB	(BDP-S480:CND,UK,AEP,AUS,EA,KS)
Δ 102	A-1801-097-A	SERVICE ASSY, MB	(BDP-S480:IN,E,AR,KR,TW,MX/S483)
Δ 102	A-1800-688-A	SERVICE ASSY, MB	(BDP-S580:US/BX58:US)
Δ 102	A-1800-991-A	SERVICE ASSY, MB	(BDP-S580:CND,AEP,AUS,UK/BX58:CND)
Δ 102	A-1801-118-A	SERVICE ASSY, MB	(BDP-S580:RUS)
Δ 102	A-1816-121-A	SERVICE ASSY, MB	(BDP-S580:BR)
Δ 102	A-1821-465-A	SERVICE ASSY, MB	(BDP-S480:BR)
Δ 104	1-474-267-11	SWITCHING REGULATOR	(BDP-S480:EXCEPT US, CND)/(BDP-S580:EXCEPT US, CND)
Δ 104	1-474-266-11	SWITCHING REGULATOR	(BDP-S580:US, CND)/(BX58:US, CND)
Δ 105	1-828-845-21	POWER-SUPPLY CORD	(BDP-S480:TW)
Δ 105	1-835-682-21	POWER-SUPPLY CORD	(BDP-S480:AR)
Δ 105	1-835-683-21	POWER-SUPPLY CORD	(BDP-S480:E, AEP, EA)/(BDP-S483:E)/(BDP-S580:AEP, RUS)
Δ 105	1-835-684-21	POWER-SUPPLY CORD	(BDP-S480:US, CND)/(BDP-S580:US, CND)/(BDP-BX58: US, CND)
Δ 105	1-835-688-21	POWER-SUPPLY CORD	(BDP-S480:UK, KS)/(BDP-S483: UK)/(BDP-S580:UK)
Δ 105	1-835-689-21	POWER-SUPPLY CORD	(BDP-S480:KR)
Δ 105	1-835-093-11	POWER-SUPPLY CORD	(BDP-S480:E, AEP, EA)/(BDP-S483: E)/(BDP-S580:AEP, RUS)
Δ 105	1-836-410-11	POWER-SUPPLY CORD	(BDP-S480:IN)
Δ 105	1-835-690-22	POWER-SUPPLY CORD	(BDP-S480:AUS)
Δ 105	1-837-073-11	POWER-SUPPLY CORD	(BDP-S480:BR)



10-1-3. BD SECTION

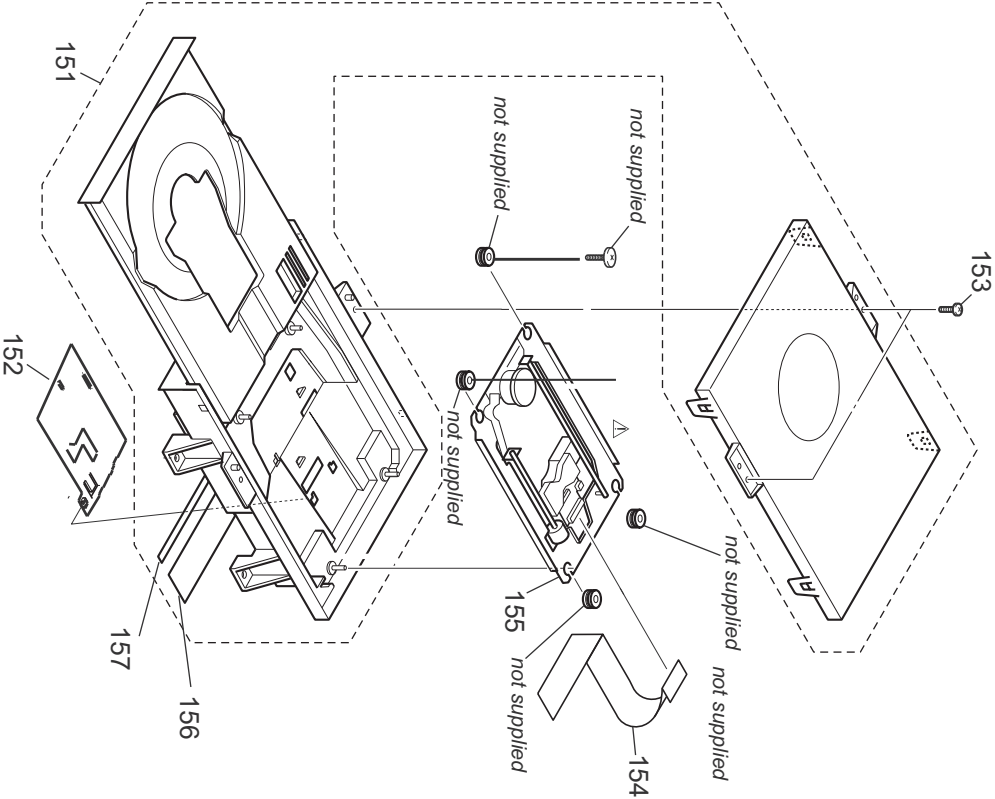

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
---	--

Ref. No	Part No.	Description	Remark
Δ 151	A-1750-926-A	LOADING FOR SERVICE	
152	4-167-321-01	HOLDER, FCC (RIGHT)	
153	3-087-053-11	+BVT/2.6 (3CR)	
154	1-838-616-11	FLEXIBLE FLAT CABLE (LDG-001)	
154	1-838-615-11	FLEXIBLE FLAT CABLE (OPT-001)	
154	1-838-617-11	FLEXIBLE FLAT CABLE (SPD-001)	
Δ 155	8-820-445-04	DEVICE, OPTICAL KEM-470AAAC2NP	(BDP-S580: AEP, RUS, AUS)(BX58: US, CND)

10-1-4. ACCESSORIES

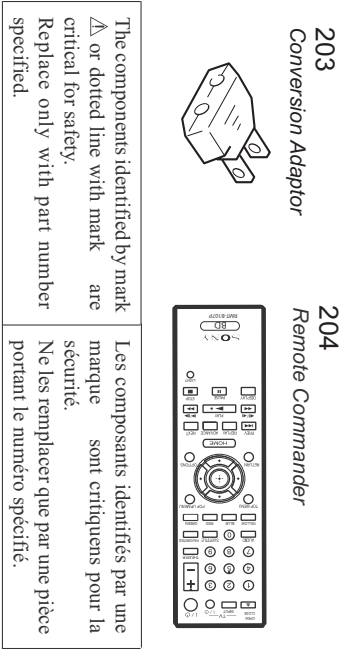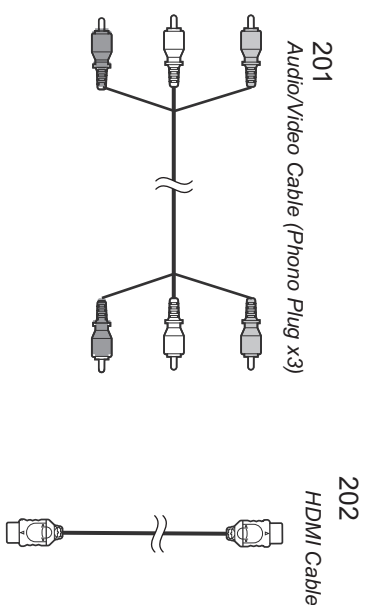

Ref. No.	Part No.	Description	Remark
201	1-751-271-71	CORD, CONNECTION (AV)	(BDP-S480:US, CND, KR, TW, AUS, EA, KS, IN) (BDP-S580:US, CND, RUS, AUS)(BDP-BX58:US, CND) (BDP-S480:US, CND, KR, TW, AUS, EA, KS, IN) (BDP-S580:US, CND, RUS, AUS)(BDP-BX58:US, CND)
201	1-837-797-21	CORD, CONNECTION (AV)	(BDP-S480:E, AR, KR, TW, EA, KS, IN)(BDP-S483:E)(BDP-BX58:US)
201	1-834-169-22	CORD, CONNECTION (HDMI CABLE)	
203	1-569-008-41	ADAPTOR, CONVERSION	(BDP-S480:E)(S483:E)
203	1-569-008-22	ADAPTOR, CONVERSION 2P	(BDP-S480:E)(S483:E)
204	1-489-399-11	REMOTE COMMANDER (RMT-B109A)	(BDP-S480:US, CND, E, AR, KR, TW)(BDP-S580:US, CND)
204	1-489-400-11	REMOTE COMMANDER (RMT-B109P)	(BDP-S480:UK, KS, IN)(BDP-S580:UK, AEP, RUS, AUS)
204	1-489-402-11	REMOTE COMMANDER (RMT-B110A)	(BDP-S483:UK)(BDP-BX-58:US, CND)
204	1-489-435-11	REMOTE COMMANDER (RMT-B110P)	(BDP-S483:E)
			(BDP-S480:KR) (KOREAN) (BDP-S480:TW) (CHINESE TRADITIONAL) (BDP-S480:EA, KS) (ENGLISH) (BDP-S480:EA, KS) (ARABIC)
	4-261-096-11	MANUAL, INSTRUCTION	(BDP-S480:UK, AUS, IN)(BDP-S483:UK)(S580:UK)(S580:AUS) (ENGLISH)
	4-261-096-21	MANUAL, INSTRUCTION	(BDP-S480:AEP)(BDP-S580:AEP) (FRENCH) (BDP-S480:AEP)(BDP-S580:AEP) (GERMAN) (BDP-S480:AEP)(BDP-S580:AEP) (ITALIAN)
	4-261-096-31	MANUAL, INSTRUCTION	(BDP-S480:AEP)(BDP-S580:AEP) (DUTCH) (BDP-S480:AEP)(BDP-S580:AEP) (SPANISH) (BDP-S480:AEP)(BDP-S580:AEP) (PORTUGUESE) (BDP-S480:AEP)(BDP-S580:AEP) (SWEDISH)
	4-261-097-41	MANUAL, INSTRUCTION	(BDP-S480:AEP)(BDP-S580:AEP) (DANISH) (BDP-S480:AEP)(BDP-S580:AEP) (FINNISH) (BDP-S580:RUS)(RUSSIAN) (BDP-S580:RUS)(UKRAINIAN)

10.2. ELECTRICAL PARTS LIST

NOTE:

Due to standardization, replacements in the

used on the set.

-XX and -X mean standardized parts, so

original one.

RESISTORS

All resistors are in ohms.

uA. . : μ A. . uFA. . : μ FA. .
uPB. . : μ PB. . uPC. . : μ PC. .
uPD. . : μ PD. .

CAPACITORS

uF: μ F
• COILS
uH: μ H

Abbreviation

AEP : AEP Model

AR : Argentina Model

AUS : Australia New Zealand Model

BR : Brazilian Model

CND : Canadian Model

E : Latin America Model

EA : Middle East Model

IN : India Model

KS : Saudi Arabia Model

RUS : Russian Model

KR : Korean Model

TH : Thailand Model

TW : Taiwan Model

US : USA Model

UK : UK Model

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board.

The components identified by mark Δ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

Not all of the parts for SWITCHING REGULATOR are listed.

Items marked * are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

SEMICONDUCTORS

In each case, u: μ , for example:

A-1816-123-A

SERVICE ASSY, FL

A-1800-284-A

(BDP-S480: BR/S580: BR)
SERVICE ASSY, FL
(BDP-S480: EXCEPT BR/S483 /S580: EXCEPT BR)

IC702 6-701-729-01

* IC703 6-600-626-01

<IC>

IC PT6315

IC GP1UM254QKC1

<JUMPER RESISTOR>

Ref.No.	Part No.	Part Description E
CN331	1-564-012-11	PIN, CONNECTOR 2P
S331	1-771-874-11	SWITCH, TACTILE

A-1816-122-A SERVICE ASSY, IF (BDP-S580BR)
A-1821-466-A SERVICE ASSY, IF (BDP-S480BR)
A-1800-283-A SERVICE ASSY, IF
(BDP-S480: EXCEPT BR/S483)
A-1800-690-A SERVICE ASSY, IF
(BDP-S580: EXCEPT BR/BX58)

Ref.No.	Part No.	Part Description E
<CAPACITOR>		

* C201 1-112-298-91 CERAMIC CHIP 1UF 10% 16V
C202 1-162-910-91 CERAMIC CHIP 5PF 0.25PF 50V
C203 1-162-910-91 CERAMIC CHIP 5PF 0.25PF 50V
C703 1-125-972-91 ELECT 100UF 20.00% 16V
C704 1-124-236-91 ELECT 47UF 20.00% 16V
C707 1-107-726-91 CERAMIC CHIP 0.01UF 10.00% 16V
C712 1-128-131-91 ELECT 22UF 20.00% 50V
C714 1-107-726-91 CERAMIC CHIP 0.01UF 10.00% 16V
C715 1-107-726-91 CERAMIC CHIP 0.01UF 10.00% 16V
C719 1-163-015-91 CERAMIC CHIP 0.0033UF 10.00% 50V
C720 1-163-015-91 CERAMIC CHIP 0.0033UF 10.00% 50V

CN201 1-842-603-11 <CONNECTOR>
USB CONNECTOR (A)

JFR717 1-216-296-91 SHORT CHIP 0
JFR718 1-216-296-91 SHORT CHIP 0
JFR719 1-216-296-91 SHORT CHIP 0
JFR720 1-216-296-91 SHORT CHIP 0
JFR721 1-216-296-91 SHORT CHIP 0
JFR722 1-216-296-91 SHORT CHIP 0
JFR723 1-216-296-91 SHORT CHIP 0
JFR724 1-216-296-91 SHORT CHIP 0
JFR726 1-216-296-91 SHORT CHIP 0
JFR728 1-216-296-91 SHORT CHIP 0
L702 1-414-857-51 <INDUCTOR>
INDUCTOR 100UH

ND701 1-483-325-11 <DISPLAY>
VACUUM FLUORESCENT DISPLAYS

D705 6-502-961-01 DI DA2J10100L <DIODE>
D706 6-502-961-01 DI DA2J10100L
D709 6-503-465-01 DI 1L034XM3440CT501 <TRANSISTOR>
TR 25C08046-T112-1W
TR 25C08046-T112-1W
TR 25C08046-T112-1W

10-6

C306	1-112-288-91	CERAMIC CHIP 1UF	10%	16V	C443	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C307	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C446	1-164-850-81	CERAMIC CHIP 10PF	0.50PF	50V
C308	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C447	1-164-852-81	CERAMIC CHIP 12PF	5.00%	50V
C309	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C448	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C310	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C450	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C311	1-100-966-91	CERAMIC CHIP 10UF	20%	10V	C454	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C314	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C457	1-162-910-91	CERAMIC CHIP 5PF	0.25PF	50V
C317	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C457	1-216-864-91	SHORT CHIP 0		
C318	1-100-159-91	CERAMIC CHIP 22UF	10%	6.3V	C457	1-216-864-91	SS80/BX58/BR4		
C321	1-114-553-11	CERAMIC CHIP 10UF	10%	16V	C458	1-162-910-91	CERAMIC CHIP 5PF	0.25PF	50V
C323	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C459	1-162-910-91	CERAMIC CHIP 5PF	0.25PF	50V
C327	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C460	1-162-910-91	CERAMIC CHIP 5PF	0.25PF	50V
C330	1-112-815-91	CERAMIC CHIP 10UF	20%	6.3V	C504	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C331	1-112-778-11	CERAMIC CHIP 0.022UF	10%	25V	C507	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C332	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C605	1-165-908-91	CERAMIC CHIP 1UF	10%	10V
C335	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C606	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C336	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C608	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C337	1-100-159-91	CERAMIC CHIP 22UF	10%	6.3V	C611	1-165-908-91	CERAMIC CHIP 1UF	10%	10V
C338	1-100-159-91	CERAMIC CHIP 22UF	10%	6.3V	C616	1-128-394-21	ELECT CHIP 220UF	20%	10V
C340	1-114-553-11	CERAMIC CHIP 10UF	10%	16V	C617	1-165-908-91	CERAMIC CHIP 1UF	10%	10V
C341	1-114-553-11	CERAMIC CHIP 10UF	10%	16V	C619	1-165-908-91	CERAMIC CHIP 1UF	10%	10V
C343	1-114-553-11	CERAMIC CHIP 10UF	10%	16V	C620	1-128-394-21	ELECT CHIP 220UF	20%	10V
C346	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C621	1-112-300-91	CERAMIC CHIP 4.7UF	10%	10V
C347	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C621	1-112-300-91	SS80/BX58/BR4		
C348	1-114-802-11	CERAMIC CHIP 0.0033UF	10%	50V	C623	1-112-300-91	CERAMIC CHIP 4.7UF	10%	10V
C349	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C625	1-164-850-81	CERAMIC CHIP 10PF	0.50PF	50V
C350	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C628	1-164-850-81	CERAMIC CHIP 10PF	0.50PF	50V
C351	1-100-159-91	CERAMIC CHIP 22UF	10%	6.3V	C631	1-100-966-91	CERAMIC CHIP 10UF	20%	10V
C352	1-100-159-91	CERAMIC CHIP 22UF	10%	6.3V	C632	1-100-966-91	CERAMIC CHIP 10UF	20%	10V
C353	1-100-159-91	CERAMIC CHIP 22UF	10%	6.3V	C702	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C365	1-114-553-11	CERAMIC CHIP 10UF	10%	16V	C713	1-115-467-91	CERAMIC CHIP 0.22UF	10.00%	10V
C366	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C715	1-115-467-91	CERAMIC CHIP 0.22UF	10.00%	10V
C367	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C716	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C369	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C717	1-115-467-91	CERAMIC CHIP 0.22UF	10.00%	10V
C371	1-114-553-11	CERAMIC CHIP 10UF	10%	16V	C719	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C373	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C720	1-115-467-91	CERAMIC CHIP 0.22UF	10.00%	10V
C377	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C723	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C379	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C726	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C381	1-165-908-91	CERAMIC CHIP 1UF	10%	10V	C728	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C382	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C801	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C383	1-114-553-11	CERAMIC CHIP 10UF	10%	16V	C808	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C403	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C809	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C405	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C810	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C415	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C811	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C417	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C827	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C422	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C907	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C423	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C918	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C424	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C923	1-165-908-91	CERAMIC CHIP 1UF	10%	10V
C425	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C926	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C426	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C932	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C428	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C933	1-114-889-11	CERAMIC CHIP 2.2UF	10%	6.3V
C429	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C938	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V
C430	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C939	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V
C431	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C946	1-164-852-81	CERAMIC CHIP 33PF	5.00%	50V
C440	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V					

C1001	1-128-994-21	ELECT CHIP 47UF	20%	10V	C2402	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1002	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	* C2404	1-112-298-91	CERAMIC CHIP 1UF	10%	16V
C1012	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C2405	1-117-681-21	ELECT CHIP 100UF	20.00%	16V
C1014	1-128-994-21	ELECT CHIP 47UF	20%	10V	C2406	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1017	1-100-966-91	CERAMIC CHIP 10UF	20%	10V	C2412	1-117-681-21	ELECT CHIP 100UF	20.00%	16V
C1022	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C2426	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1023	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C2432	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1024	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C2433	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1025	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	* C2438	1-112-298-91	CERAMIC CHIP 1UF	10%	16V
C1208	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C2439	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1209	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C2440	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1210	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C2441	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1213	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C2450	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1214	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	* C2454	1-112-298-91	CERAMIC CHIP 1UF	10%	16V
C1216	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C2460	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1218	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C2470	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1219	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	* C2481	1-112-298-91	CERAMIC CHIP 1UF	10%	16V
C1229	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	* C2486	1-112-298-91	CERAMIC CHIP 1UF	10%	16V
C1301	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	* C2495	1-112-298-91	CERAMIC CHIP 1UF	10%	16V
C1302	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	<CONNECTOR>				
C1305	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	CN301	1-506-472-11	PIN, CONNECTOR 7P		
C1306	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	CN604	1-842-128-11	USB CONNECTOR		
C1310	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	CN701	1-820-735-31	HDMI CONNECTOR		
C1312	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	CN801	1-819-875-31	ETHERNET CONNECTOR (8P)		
C1318	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	CN1101	1-779-336-51	CONNECTOR, FFC/FFC 24P		
					S580;BR4				
C1322	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	CN1102	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD)6P		
C1323	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	CN1202	1-764-177-21	PIN, CONNECTOR (SMD)(1.5MM) 7P		
C1325	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	* CN1203	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P		
C1326	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	CN1204	1-820-121-51	CONNECTOR, FFC/FFC 23P		
C1329	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	* CN1503	1-695-320-21	PIN, CONNECTOR (1.5MM)(SMD) 2P		
C1334	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	<DIODE>				
C1357	1-137-765-21	ELECT CHIP 47UF	20%	16V	D302	6-502-966-01	DI DZ2J056M0L		
* C1362	1-112-298-91	CERAMIC CHIP 1UF	10%	16V	D303	6-502-248-01	DI KDZTR3.9B		
C1363	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	D304	6-502-248-01	DI KDZTR3.9B		
* C1365	1-112-298-91	CERAMIC CHIP 1UF	10%	16V	D305	6-500-220-01	DIODE RB161M-20TR		
C1366	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	D312	6-502-966-01	DI DZ2J056M0L		
C1373	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	<FERRITE BEAD>				
* C1374	1-112-298-91	CERAMIC CHIP 1UF	10%	16V	D601	6-502-961-01	DI DA2J10100L		
C1375	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	D602	6-502-961-01	DI DA2J10100L		
* C1376	1-112-298-91	CERAMIC CHIP 1UF	10%	16V	<FERRITE BEAD>				
C1377	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	FB703	1-469-112-21	FERRITE 0UH		
C1378	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	FB704	1-469-112-21	FERRITE 0UH		
C1387	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	FB705	1-469-112-21	FERRITE 0UH		
C1390	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	FB706	1-469-112-21	FERRITE 0UH		
C1400	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	FB901	1-400-940-21	FERRITE 0UH		
C1405	1-117-681-21	ELECT CHIP 100UF	20.00%	16V	FB1361	1-216-864-91	SHORT CHIP 0		
C1412	1-117-681-21	ELECT CHIP 100UF	20.00%	16V	FB1365	1-216-864-91	SHORT CHIP 0		
C1414	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	FB1371	1-216-864-91	SHORT CHIP 0		
* C1464	1-112-298-91	CERAMIC CHIP 1UF	10%	16V	FB1380	1-216-864-91	SHORT CHIP 0		
* C1501	1-112-298-91	CERAMIC CHIP 1UF	10%	16V	FB1390	1-216-864-91	SHORT CHIP 0		
* C1504	1-112-298-91	CERAMIC CHIP 1UF	10%	16V	FB1399	1-216-864-91	SHORT CHIP 0		
C1701	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	FB1400	1-244-161-81	METAL CHIP 2.2 5%	1/16W	
C1702	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	FB1450	1-216-295-91	SHORT CHIP 0		
C2400	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	FB1454	1-216-295-91	SHORT CHIP 0		
C2401	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	FB1456	1-216-295-91	SHORT CHIP 0		

FB1458	1-216-295-91	SHORT CHIP	0				<TRANSISTOR> TR DRC5114EOL
FB1460	1-216-295-91	SHORT CHIP	0	Q301	6-552-430-01		TR DRC5114EOL
FB1462	1-216-295-91	SHORT CHIP	0	Q302	6-551-184-01		TRANSISTOR MCH6305-TL-E-S
FB1466	1-216-295-91	SHORT CHIP	0	Q303	6-552-430-01		TR DRC5114EOL
FB2400	1-244-161-81	METAL CHIP	22 5% 1/16W	Q304	6-552-430-01		TR DRC5114EOL
				Q305	6-552-430-01		TR DRC5114EOL
		<FILTER>					
FL301	1-234-939-21	FILTER, EMI REMOVAL (SMD)		Q702	6-551-714-01		TR INK0001AC1-T112-1
FL302	1-234-939-21	FILTER, EMI REMOVAL (SMD)		Q1501	6-551-690-01		TRANSISTOR RT3N11M-TP-1
				Q1502	6-552-430-01		TR DRC5114EOL
		<IC>					
IC301	6-705-312-01	IC S-T111B33MC-OGSTFG		R102	1-208-887-81		<RESISTOR> METAL CHIP 1K 0.5% 1/16W
IC302	6-716-781-01	IC RT18252ALGSP		R103	1-208-887-81		METAL CHIP 1K 0.5% 1/16W
IC303	6-705-313-01	IC S-T111B50MC-OHJTFG		R106	1-218-941-81		METAL CHIP 100 5% 1/16W
IC305	6-705-312-01	IC S-T111B33MC-OGSTFG		R107	1-218-941-81		METAL CHIP 100 5% 1/16W
IC306	6-702-302-01	IC TK11133CSQL-G		R108	1-208-668-11		RES, METAL FILM CHIP 240(1005)
IC308	6-714-935-01	IC TFS54225FMPFR		R109	1-208-668-11		RES, METAL FILM CHIP 240(1005)
IC309	6-714-890-01	IC MM11855AHBE		R110	1-216-884-91		SHORT CHIP 0
IC501	6-710-563-01	IC K9F2G08U0A-PCBOT		R206	1-218-941-81		METAL CHIP 100 5% 1/16W
IC501	6-713-909-01	IC HY2JUF082G2B-TPCBDR		R207	1-218-941-81		METAL CHIP 100 5% 1/16W
IC601	6-716-739-01	IC BD00GC0WEFJSE2		R208	1-208-668-11		RES, METAL FILM CHIP 240(1005)
IC603	6-716-739-01	IC BD00GC0WEFJSE2		R302	1-218-977-81		METAL CHIP 100K 5% 1/16W
IC604	6-711-050-01	IC S-1170B50UC-OHJTFG		R304	1-218-953-81		METAL CHIP 1K 5% 1/16W
IC704	6-702-302-01	IC TK11133CSQL-G		R305	1-218-953-81		METAL CHIP 1K 5% 1/16W
IC705	6-705-337-01	IC TK11150CSQL-G		R307	1-218-953-81		METAL CHIP 1K 5% 1/16W
IC903	6-714-846-01	IC WM8524GEDT/R		R309	1-218-953-81		METAL CHIP 1K 5% 1/16W
IC1003	6-716-592-01	IC BHT6071FL-E2		R312	1-208-715-11		RES, METAL FILM CHIP 22K(1005)
IC1203	6-716-778-01	IC R5F21357CN101FP		R316	1-218-990-81		SHORT CHIP 0
IC1361	6-716-786-01	IC MM11685YNRE		R321	1-208-923-81		METAL CHIP 33K 0.5% 1/16W
IC1401	6-714-902-01	IC TPIIC1391DBTRG4		R322	1-208-909-81		METAL CHIP 8.2K 0.5% 1/16W
IC1501	6-708-762-01	IC PQ200WMA1ZPH		R323	1-208-881-81		METAL CHIP 560 0.5% 1/16W
IC2401	6-716-779-01	IC TPIC1405ADFDRG4					
		<JACK>					
J901	1-842-473-11	PIN JACK BLOCK 7P		R327	1-218-953-81		METAL CHIP 1K 5% 1/16W
				R330	1-208-899-81		METAL CHIP 3.3K 0.5% 1/16W
				R331	1-208-911-81		METAL CHIP 10K 0.5% 1/16W
				R332	1-208-891-81		METAL CHIP 1.5K 0.5% 1/16W
				R333	1-208-899-81		METAL CHIP 3.3K 0.5% 1/16W
		<INDUCTOR>					
L302	1-400-789-21	INDUCTOR 2.2UH		R334	1-208-899-81		METAL CHIP 3.3K 0.5% 1/16W
L303	1-457-995-11	INDUCTOR 10UH		R335	1-208-859-81		METAL CHIP 68 0.5% 1/16W
L305	1-400-789-21	INDUCTOR 2.2UH		R336	1-218-967-81		METAL CHIP 15K 5% 1/16W
L306	1-400-789-21	INDUCTOR 2.2UH		R337	1-218-953-81		METAL CHIP 1K 5% 1/16W
L308	1-400-788-21	INDUCTOR 1UH		R339	1-218-990-81		SHORT CHIP 0
L601	1-457-223-11	INDUCTOR 0UH		R340	1-218-953-81		METAL CHIP 1K 5% 1/16W
L602	1-457-223-11	INDUCTOR 0UH		R343	1-218-953-81		METAL CHIP 1K 5% 1/16W
L701	1-457-374-21	INDUCTOR 0UH		R345	1-218-990-81		SHORT CHIP 0
L702	1-457-374-21	INDUCTOR 0UH		R346	1-218-990-81		SHORT CHIP 0
L703	1-457-374-21	INDUCTOR 0UH		R347	1-218-967-81		METAL CHIP 15K 5% 1/16W
L704	1-457-374-21	INDUCTOR 0UH					
		<FUSE>					
PS301	1-523-134-31	FUSE 2A 50V		R350	1-208-929-81		METAL CHIP 56K 0.5% 1/16W
PS302	1-523-135-31	FUSE 3.15A 32V		R351	1-208-911-81		METAL CHIP 10K 0.5% 1/16W
PS1201	1-523-130-31	FUSE 0.5A 50V		R352	1-208-871-81		METAL CHIP 220 0.5% 1/16W
				R362	1-216-825-91		METAL CHIP 2.2K 5% 1/10W
				R363	1-216-825-91		METAL CHIP 2.2K 5% 1/10W
		<CONTACT TERMINAL>					
PT403	1-780-729-12	CONTACT TERMINAL		R370	1-208-891-81		METAL CHIP 1.5K 0.5% 1/16W
				R371	1-218-957-81		METAL CHIP 2.2K 5% 1/16W
PT406	1-780-729-12	CONTACT TERMINAL		R374	1-218-971-81		METAL CHIP 33K 5% 1/16W
				R375	1-218-971-81		METAL CHIP 33K 5% 1/16W
				R376	1-218-953-81		METAL CHIP 1K 5% 1/16W

R404	1-218-962-81	METAL CHIP	820	5%	1/16W	R1012	1-208-867-81	METAL CHIP	150	0.5%	1/16W
R405	1-218-977-81	METAL CHIP	100K	5%	1/16W	R1028	1-220-169-81	METAL CHIP	75	5%	1/16W
R406	1-216-864-91	SHORT CHIP	0			R1029	1-220-169-81	METAL CHIP	75	5%	1/16W
R508	1-218-990-81	SHORT CHIP	0			R1030	1-220-169-81	METAL CHIP	75	5%	1/16W
R518	1-218-990-81	SHORT CHIP	0			R1031	1-220-169-81	METAL CHIP	75	5%	1/16W
R523	1-218-969-81	METAL CHIP	3.3K	5%	1/16W	R1032	1-218-990-81	SHORT CHIP	0		
R533	1-218-990-81	SHORT CHIP	0			R1033	1-218-990-81	SHORT CHIP	0		
R603	1-216-864-91	SHORT CHIP	0			R1034	1-218-990-81	SHORT CHIP	0		
R605	1-218-970-11	RES, CHIP 27K				R1035	1-218-990-81	SHORT CHIP	0		
R606	1-218-970-11	RES, CHIP 27K				R1043	1-218-990-81	SHORT CHIP	0		
R607	1-208-911-81	METAL CHIP	10K	0.5%	1/16W	R1044	1-218-990-81	SHORT CHIP	0		
R609	1-218-864-11	RES, CHIP 5.1K		(1608)		R1045	1-218-990-81	SHORT CHIP	0		
R610	1-218-864-11	RES, CHIP 5.1K		(1608)		R1046	1-218-990-81	SHORT CHIP	0		
R611	1-218-965-81	METAL CHIP	10K	5%	1/16W	R1110	1-218-965-81	METAL CHIP	10K	5%	1/16W
R612	1-218-970-11	RES, CHIP 27K				R1138	1-218-965-81	METAL CHIP	10K	5%	1/16W
R613	1-218-970-11	RES, CHIP 27K				R1142	1-218-965-81	METAL CHIP	10K	5%	1/16W
R614	1-208-911-81	METAL CHIP	10K	0.5%	1/16W	R1143	1-218-965-81	METAL CHIP	10K	5%	1/16W
R616	1-218-965-81	METAL CHIP	10K	5%	1/16W	R1144	1-218-965-81	METAL CHIP	10K	5%	1/16W
R621	1-218-990-81	SHORT CHIP	0	S580/BX58/BR4		R1146	1-218-965-81	METAL CHIP	10K	5%	1/16W
R622	1-218-990-81	SHORT CHIP	0	S580/BX58/BR4		R1150	1-218-965-81	METAL CHIP	10K	5%	1/16W
R641	1-218-965-81	METAL CHIP	10K	5%	1/16W	R1156	1-218-990-81	SHORT CHIP	0		
R702	1-208-887-81	S580/BX58/BR4				R1160	1-218-990-81	SHORT CHIP	0		
R703	1-208-891-81	METAL CHIP	1K	0.5%	1/16W	R1161	1-218-965-81	METAL CHIP	10K	5%	1/16W
R730	1-218-973-81	METAL CHIP	1.5K	0.5%	1/16W	R1162	1-218-965-81	METAL CHIP	10K	5%	1/16W
R734	1-218-965-81	METAL CHIP	47K	5%	1/16W	R1163	1-218-965-81	METAL CHIP	10K	5%	1/16W
R735	1-218-965-81	METAL CHIP	10K	5%	1/16W	R1165	1-218-965-81	METAL CHIP	10K	5%	1/16W
R736	1-218-965-81	METAL CHIP	1.8K	5%	1/16W	R1169	1-218-965-81	METAL CHIP	10K	5%	1/16W
R738	1-218-965-81	METAL CHIP	1.8K	5%	1/16W	R1171	1-218-965-81	METAL CHIP	10K	5%	1/16W
R747	1-218-990-81	METAL CHIP	10K	5%	1/16W			S580: BR4			
R755	1-208-715-11	SHORT CHIP	0			R1180	1-218-963-81	METAL CHIP	1K	5%	1/16W
		RES, METAL FILM CHIP 22K(1005)						S580: BR4			
R756	1-208-715-11	RES, METAL FILM CHIP 22K(1005)				R1189	1-218-977-81	METAL CHIP	100K	5%	1/16W
R806	1-208-920-81	METAL CHIP	24K	0.5%	1/16W	R1194	1-218-965-81	METAL CHIP	10K	5%	1/16W
R903	1-218-941-81	METAL CHIP	100	5%	1/16W						
R916	1-218-949-81	METAL CHIP	470	5%	1/16W	R1195	1-218-990-81	SHORT CHIP	0		
R917	1-218-949-81	METAL CHIP	470	5%	1/16W	R1198	1-208-903-81	METAL CHIP	4.7K	0.5%	1/16W
						R1199	1-208-903-81	METAL CHIP	4.7K	0.5%	1/16W
R922	1-218-944-81	METAL CHIP	180	5%	1/16W	R1202	1-218-941-81	METAL CHIP	100	5%	1/16W
R935	1-218-990-81	SHORT CHIP	0			R1203	1-218-965-81	METAL CHIP	10K	5%	1/16W
R936	1-216-864-91	SHORT CHIP	0			R1206	1-218-970-11	RES, CHIP 27K			
R938	1-218-990-81	SHORT CHIP	0			R1208	1-218-965-81	METAL CHIP	10K	5%	1/16W
R939	1-218-990-81	SHORT CHIP	0			R1212	1-218-981-81	METAL CHIP	220K	5%	1/16W
						R1213	1-218-965-81	METAL CHIP	10K	5%	1/16W
R940	1-469-082-21	FERRITE	0UH								
R942	1-218-990-81	SHORT CHIP	0			R1220	1-218-961-81	METAL CHIP	4.7K	5%	1/16W
R944	1-218-990-81	SHORT CHIP	0			R1221	1-218-941-81	METAL CHIP	100	5%	1/16W
R952	1-218-990-81	SHORT CHIP	0			R1224	1-218-965-81	METAL CHIP	10K	5%	1/16W
R954	1-218-990-81	SHORT CHIP	0			R1233	1-218-941-81	METAL CHIP	100	5%	1/16W
						R1234	1-218-941-81	METAL CHIP	100	5%	1/16W
R955	1-242-967-81	METAL CHIP	1	5%	1/16W						
R964	1-208-879-81	METAL CHIP	470	0.5%	1/16W	R1235	1-218-977-81	METAL CHIP	100K	5%	1/16W
R965	1-218-990-81	SHORT CHIP	0			R1236	1-218-977-81	METAL CHIP	100K	5%	1/16W
R966	1-208-879-81	METAL CHIP	470	0.5%	1/16W	R1238	1-218-977-81	METAL CHIP	100K	5%	1/16W
R976	1-218-973-81	METAL CHIP	47K	5%	1/16W	R1240	1-218-941-81	METAL CHIP	100	5%	1/16W
						R1242	1-218-941-81	METAL CHIP	100	5%	1/16W
R977	1-218-973-81	METAL CHIP	47K	5%	1/16W						
R985	1-218-990-81	SHORT CHIP	0			R1243	1-218-965-81	METAL CHIP	10K	5%	1/16W
R1005	1-208-881-81	METAL CHIP	560	0.5%	1/16W	R1244	1-218-977-81	METAL CHIP	100K	5%	1/16W
R1007	1-208-867-81	METAL CHIP	150	0.5%	1/16W	R1246	1-218-965-81	METAL CHIP	10K	5%	1/16W
R1008	1-208-867-81	METAL CHIP	150	0.5%	1/16W	R1249	1-218-965-81	METAL CHIP	10K	5%	1/16W
						R1251	1-218-977-81	METAL CHIP	100K	5%	1/16W
R1009	1-208-867-81	METAL CHIP	150	0.5%	1/16W						

R1256	1-208-897-81	METAL CHIP	2.7K 0.5% 1/16W
R1261	1-218-965-81	METAL CHIP	10K 5% 1/16W
R1262	1-218-977-81	METAL CHIP	100K 5% 1/16W
R1263	1-218-977-81	METAL CHIP	100K 5% 1/16W
R1264	1-218-981-81	METAL CHIP	220K 5% 1/16W
R1300	1-208-920-81	METAL CHIP	24K 0.5% 1/16W
R1310	1-218-957-81	METAL CHIP	2.2K 5% 1/16W
R1312	1-218-961-81	METAL CHIP	4.7K 5% 1/16W
R1334	1-208-911-81	METAL CHIP	10K 0.5% 1/16W
R1345	1-218-990-81	SHORT CHIP	0
R1363	1-218-965-81	METAL CHIP	10K 5% 1/16W
R1386	1-218-965-81	METAL CHIP	10K 5% 1/16W
R1389	1-216-864-91	SHORT CHIP	0
R1391	1-218-953-81	METAL CHIP	1K 5% 1/16W
R1392	1-218-954-81	METAL CHIP	1.2K 5% 1/16W
R1398	1-218-990-81	SHORT CHIP	0
R1407	1-218-973-81	METAL CHIP	47K 5% 1/16W
R1412	1-218-973-81	METAL CHIP	47K 5% 1/16W
R1504	1-218-953-81	METAL CHIP	1K 5% 1/16W
R1507	1-208-899-81	METAL CHIP	3.3K 0.5% 1/16W
R1508	1-218-948-11	RES. CHIP 390	
R1509	1-208-683-11	RES,METAL FILM CHIP 1.0K(1005)	
R1510	1-208-889-81	METAL CHIP	1.2K 0.5% 1/16W
R1525	1-208-888-81	METAL CHIP	1.1K 0.5% 1/16W
R1602	1-218-990-81	SHORT CHIP	0
R1603	1-218-990-81	SHORT CHIP	0
R2442	1-218-853-91	METAL CHIP	1.8K 0.5% 1/10W
R2444	1-218-853-91	METAL CHIP	1.8K 0.5% 1/10W
R2446	1-218-853-91	METAL CHIP	1.8K 0.5% 1/10W
R2447	1-248-476-11	RES-CHIP	0.16 1% 1/3W
R2492	1-218-853-91	METAL CHIP	1.8K 0.5% 1/10W
R2494	1-218-853-91	METAL CHIP	1.8K 0.5% 1/10W
R2496	1-218-853-91	METAL CHIP	1.8K 0.5% 1/10W
RB1101	1-234-378-21	<VARIABLE RESISTOR>	
RB1102	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1201	1-234-372-21	RES, NETWORK 10K	(1005X4)
RB1202	1-234-378-21	RES, NETWORK 100	(1005X4)
		RES, NETWORK 10K	(1005X4)
S1201	1-786-675-11	<SWITCH>	
		TACTILE SWITCH	
		S580. BR4	
TH1201	1-804-949-11	<THERMISTOR>	
		THERMISTOR, NTC (SMD)	

REVISION HISTORY

[illegible]