

SECTION 10
REPAIR PARTS LIST

10-1. EXPLODED VIEWS

NOTE:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE) ... (RED)
↓ ↓
Parts Color Cabinet's Color

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Accessories and packing materials are given in the last of the electrical parts list.
- Abbreviation
AUS : Australian/New Zealand model
CND : Canadian model
US : USA model
UK : UK model
AEP : AE1,AE2 model


The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark $\triangle$ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.


Les composants identifiés par la marque $\triangle$ contiennent des informations confidentielles. Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

10-1-1. CASE SECTION

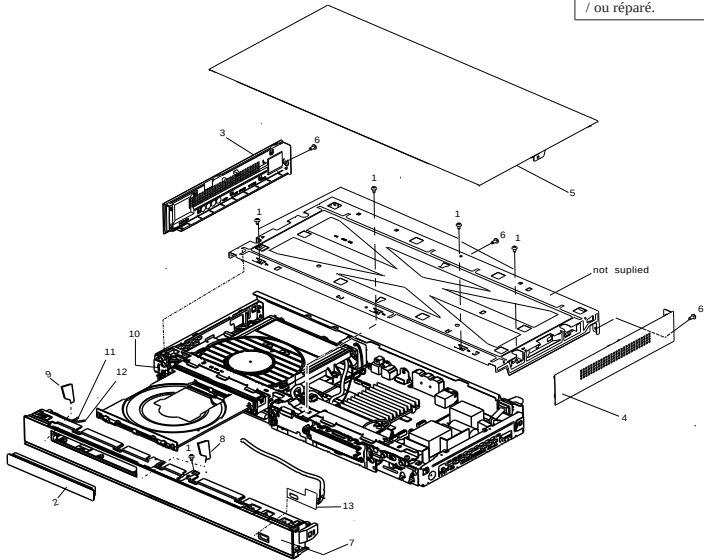


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-077-331-21	+BV3 (3-CR)		8	A-1759-423-A	ANT-008SM(U) MOUNT	
2	X-2548-620-1	COVER TRAY ASSY		9	A-1759-421-A	ANT-007SM(U) MOUNT	
3	4-184-188-01	PANEL, SIDE (L)		10	A-1787-901-A	SERVICE ASSY, FL	
4	4-184-189-01	PANEL, SIDE (R)		11	1-837-578-11	CABLE, COAXIAL (WITH U.F.L CN)	
5	4-184-187-01	PANEL, TOP		12	1-837-579-11	CABLE, COAXIAL (WITH U.F.L CN)	
6	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3		13	A-1782-359-A	USB-026(0059NA) MOUNT	
7	X-2548-618-1	PANEL ASSY, FRONT (BDP-S770)					
	X-2548-619-1	PANEL ASSY, FRONT (BDP-S1700ES)					

10-1-2. FRONT/REAR CHASSIS SECTION

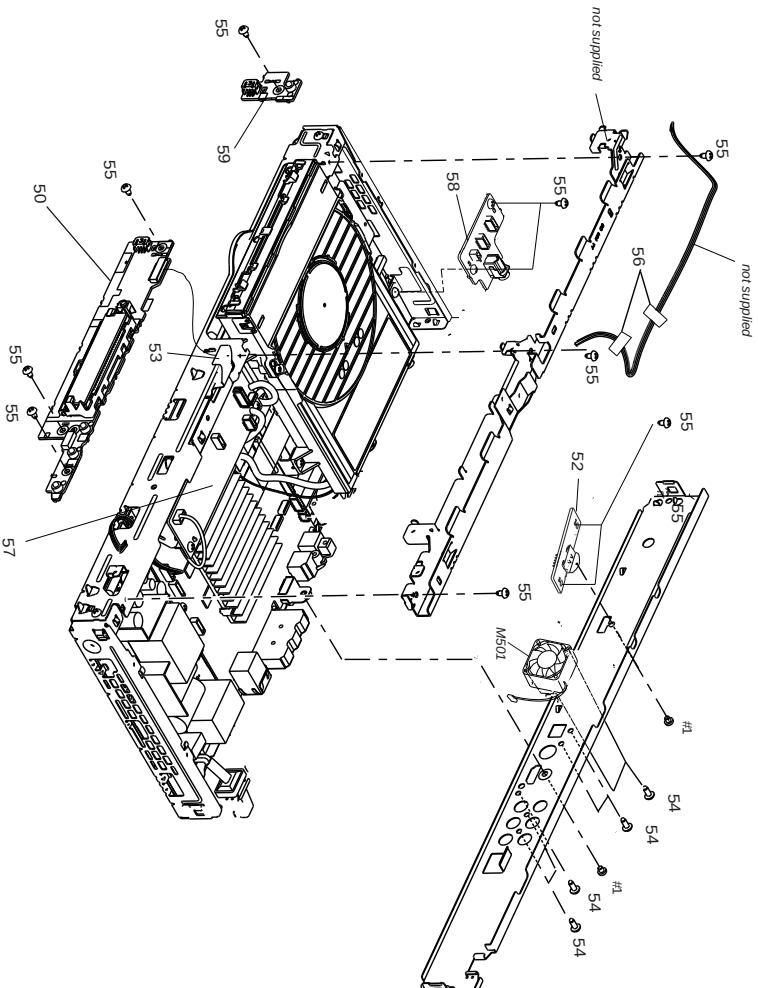


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
50	A-1787-902-A	SERVICE ASSY FR		56	3-087-220-01	TAPE, NON-HALOGENE	
52	A-1787-900-A	SERVICE ASSY USB		57	A-1779-307-A	SERVICE ASSY HU	
53	1-887-200-21	FLEXIBLE FLAT CABLE (FMA027)		58	A-1787-903-A	SERVICE ASSY IR	
54	7-685-046-79	SCREW +BVP 3x8 TYPE2 IT-3		59	A-1787-901-A	SERVICE ASSY FL	
55	3-077-331-21	+BV3(3-CF)		M501	1-787-952-11	FAN, DC	
				#1	7-682-144-01	SCREW +P 3x3	

10-1-3. MAIN CHASSIS SECTION

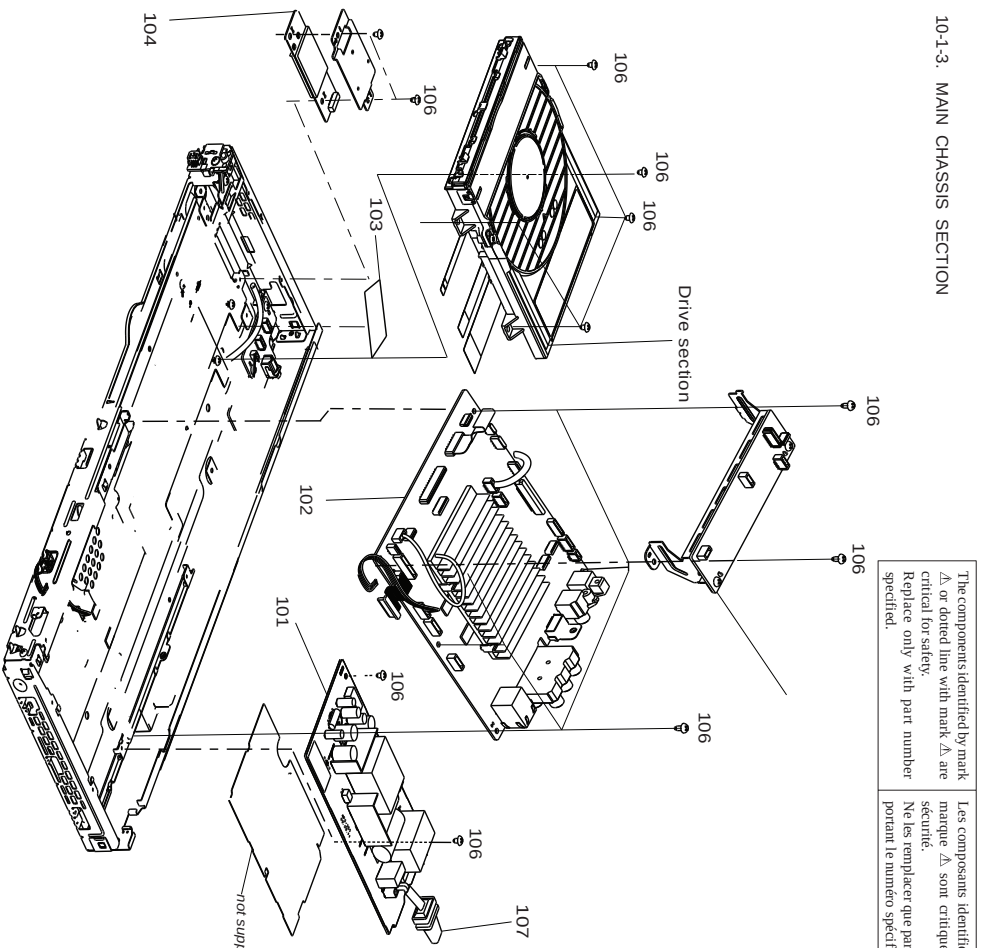

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Δ 101	1-474-194-11	SWITCHING REGULATOR (APS-257) (BDP-S770AEP-UK/AUS)		104	1-487-419-11	CARD WIRELESS LAN	
Δ 101	1-474-195-11	SWITCHING REGULATOR(SRV2206LC) (BDP-S170ES/S770US/CND)		106	3-077-331-21	+BV3(3-CR)	
⊠ 102	A-1787-889-A	SERVICE ASSY. MB (BDP-S170ES)		107	1-835-684-21	POWER SUPPLY CORD (BDP-S170ES/S770US/CND)	
⊠ 102	A-1787-895-A	SERVICE ASSY. MB (BDP-S770US)			1-835-688-21	POWER SUPPLY CORD (BDP-S770UK)	
⊠ 102	A-1787-896-A	SERVICE ASSY. MB (BDP-S770CND)		Δ 107	1-835-683-21	POWER SUPPLY CORD (BDP-S770AEP)	
⊠ 102	A-1787-896-A	SERVICE ASSY. MB (BDP-S770UK)					
⊠ 102	A-1787-898-A	SERVICE ASSY. MB (BDP-S770AUS)					
103	A-1779-305-A	SERVICE ASSY. EM (BDP-S770 ONLY)					

10-1-4. BD SECTION


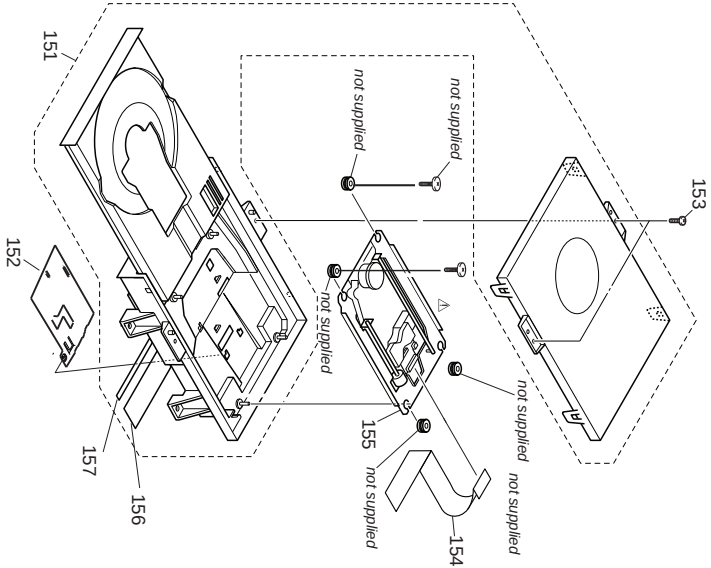


Ref. No.	Part No.	Description
Δ 151	A-1730-926-A	LOADING FOR SERVICE
152	4-16/321-01	HOLDER, FPC (RIGHT)
153	3-087-053-11	+BVTP2.6 (3CR)
154	1-837-494-11	CABLE, FLEXIBLE FLAT

Remark	Ref. No.	Part No.	Description	Remark
	Δ 155	8-820-430-02	DEVICE OPTICAL KEM-460AAAC2RP	
	156	1-837-485-11	CABLE, FLEXIBLE FLAT	
	157	1-837-486-11	CABLE, FLEXIBLE FLAT	

The components identified by mark Δ, or dotted line with mark Δ, are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifique.
---	---

10-1-5. ACCESSORIES

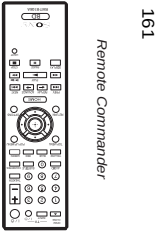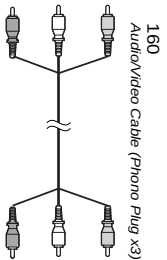

Ref. No.	Part No.	Description	Remark
160	1-751-271-71	CORD. CONNECTION (AV)	
161	1-487-688-11	REMOTE COMMANDER (RMT-B108A) (BDP-S1700ES1770.US.CND)	(BDP-S1700ES- US) (ENGLISH) (BDP-S770US.CND) (ENGLISH) (BDP-S770.CND) (FRENCH) (BDP-S770.CEK.AU2) (ENGLISH) (BDP-S770.AE1) (FRENCH) (BDP-S770.AE1) (GERMAN) (BDP-S770.AE1) (ITALIAN) (BDP-S770.AE1) (DUTCH) (BDP-S770.AE2) (SPANISH) (BDP-S770.AE2) (PORTUGUESE) (BDP-S770.AE2) (DANISH) (BDP-S770.AE2) (FINNISH)
161	1-487-684-11	REMOTE COMMANDER (RMT-B108P) (BDP-S770.AEP.UK.AUS)	(BDP-S1700ES- US) (ENGLISH) (BDP-S770US.CND) (ENGLISH) (BDP-S770.CND) (FRENCH) (BDP-S770.CEK.AU2) (ENGLISH) (BDP-S770.AE1) (FRENCH) (BDP-S770.AE1) (GERMAN) (BDP-S770.AE1) (ITALIAN) (BDP-S770.AE1) (DUTCH) (BDP-S770.AE2) (SPANISH) (BDP-S770.AE2) (PORTUGUESE) (BDP-S770.AE2) (DANISH) (BDP-S770.AE2) (FINNISH)
*	4-188-208-11	MANUAL, INSTRUCTION	(BDP-S1700ES- US) (ENGLISH)
*	4-188-208-11	MANUAL, INSTRUCTION	(BDP-S770US.CND) (ENGLISH)
*	4-188-208-21	MANUAL, INSTRUCTION	(BDP-S770.CND) (FRENCH)
*	4-188-206-11	MANUAL, INSTRUCTION	(BDP-S770.CEK.AU2) (ENGLISH)
*	4-188-206-21	MANUAL, INSTRUCTION	(BDP-S770.AE1) (FRENCH)
*	4-188-206-31	MANUAL, INSTRUCTION	(BDP-S770.AE1) (GERMAN)
*	4-188-206-41	MANUAL, INSTRUCTION	(BDP-S770.AE1) (ITALIAN)
*	4-188-206-51	MANUAL, INSTRUCTION	(BDP-S770.AE1) (DUTCH)
*	4-188-207-11	MANUAL, INSTRUCTION	(BDP-S770.AE2) (SPANISH)
*	4-188-207-21	MANUAL, INSTRUCTION	(BDP-S770.AE2) (PORTUGUESE)
*	4-188-207-31	MANUAL, INSTRUCTION	(BDP-S770.AE2) (DANISH)
*	4-188-207-41	MANUAL, INSTRUCTION	(BDP-S770.AE2) (FINNISH)
*	4-188-207-51	MANUAL, INSTRUCTION	(BDP-S770.AE2) (FINNISH)

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.	Les composants identifiés par marque  sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

10-2 ELECTRICAL PARTS LIST

The components identified by mark Ⓐ or dotted line with mark Ⓐ are critical to assembly. Do not replace unless instructed. Replace only with part number specified.

When indicating parts by reference number, please include the board.

The components identified by mark Ⓑ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

- NOTE
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
 - -XX and -X mean standardized parts, so they may have some difference from the original one.
 - **RESISTORS**
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
 - Not all of the parts for **SWITCHING**
REGULATOR are listed.
 - Items marked * are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
 - **SEMICONDUCTORS**
In each case, u: U, for example:
- uA: : uPA.
 - uPB: : uPB.
 - uPD: : uPD.
 - uPC: : uPC.
 - **CAPACITORS**
uF: uF
 - COILS
uH: uH
 - Abbreviation
AEP: AEP Model
AUS: Australia New / Zealand Model
CND: Canadian Model
US: USA Model
UK: UK Model

Part No. Part Description Remarks

A-1759-421-A ANT-007SM(U) MOUNT *****

CN201 1-818-381-11 < CONNECTOR> CONNECTOR, COAXIAL

A-1759-423-A ANT-008SM(U) MOUNT *****

CN301 1-818-381-11 < CONNECTOR> CONNECTOR, COAXIAL

A-1771-723-A EM-002SM(U) MOUNT *****

C401 1-164-845-11 CERAMIC CHIP 5PF 0.25PF 50V
C402 1-164-845-11 CERAMIC CHIP 5PF 0.25PF 50V
C405 1-164-872-11 CERAMIC CHIP 82PF 5.00% 50V

<CAPASITOR>
CERAMIC CHIP 5PF 0.25PF 50V
CERAMIC CHIP 5PF 0.25PF 50V
CERAMIC CHIP 82PF 5.00% 50V

<CONNECTOR>
HEADER ASSEMBLY FOR PWM 8P
HEADER ASSEMBLY FOR PWM 8P
<INDUCTOR>
INDUCTOR 0UH
<RESISTOR>
SHORT CHIP 0

A-1759-419-A HU-015SM(U) MOUNT *****

C104 1-137-893-11 ELECT CHIP 22UF 20% 16V
C105 1-137-893-11 ELECT CHIP 22UF 20% 16V
C107 1-100-766-21 ELECT CHIP 47UF 20% 16V
C109 1-100-766-21 ELECT CHIP 47UF 20% 16V
C112 1-137-893-11 ELECT CHIP 22UF 20% 16V

Part No.

Part Description

Remarks

C113 1-164-852-11 CERAMIC CHIP 12PF 5.00% 50V
C114 1-164-852-11 CERAMIC CHIP 12PF 5.00% 50V
C115 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V
C116 1-112-298-91 CERAMIC CHIP 1UF 10% 16V
C117 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V

C118 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V
C119 1-112-300-91 CERAMIC CHIP 4.7UF 10% 10V
C121 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V
C122 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V
C123 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V

C124 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V
C125 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V
C126 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V
C127 1-112-298-91 CERAMIC CHIP 1UF 10% 16V
C128 1-100-766-21 ELECT CHIP 47UF 20% 16V

C129 1-128-384-11 ELECT CHIP 220UF 20% 10V
C130 1-165-492-21 ELECT CHIP 100UF 20% 10V
C132 1-100-916-11 CERAMIC CHIP 0.1UF 10% 16V
C143 1-125-77-11 CERAMIC CHIP 10UF 10.00% 10V
C153 1-112-692-11 CERAMIC CHIP 1000PF 5% 50V
C154 1-112-692-11 CERAMIC CHIP 1000PF 5% 50V

CN101 1-819-476-11 <CONNECTOR>
HEADER ASSEMBLY FOR PWM 8P
CN102 1-173-280-21 PIN, CONNECTOR (1.5MM) (SMD)AP
CN103 1-173-768-61 PIN, CONNECTOR (1.5MM) (SMD)SP
CN104 1-173-768-41 PIN, CONNECTOR (1.5MM) (SMD)SP

<DIODE>
D106 6-500-701-01 DIODE PGB101063NR
D107 6-500-701-01 DIODE PGB101063NR
D109 6-502-961-01 DIODE PGB101063NR
D110 6-502-961-01 DIODE PGB101063NR
D111 6-502-961-01 DIODE PGB101063NR

FB101 1-400-382-11 <FERRITE BEAD>
FB102 1-457-421-21 FERRITE 0UH
FERRITE 0UH

IC102 6-712-613-01 IC S1-3010KM-TLS

HU-015FR-312FL-201			
Ref.No.	Part No.	Part Description	Remarks
IC103	6-712-613-01	ICSI-3010KM-TLS	
IC104	6-714-034-01	ICUSB2512A-MEZ6	
IC105	6-712-613-01	ICSI-3010KM-TLS	
<INDUCTOR>			
L101	1-457-223-11	INDUCTOR 00H	
L102	1-457-223-11	INDUCTOR 00H	
L103	1-414-843-21	INDUCTOR 18NH	
L104	1-414-843-21	INDUCTOR 18NH	
L105	1-414-840-21	INDUCTOR 10NH	
L106	1-414-840-21	INDUCTOR 10NH	
<RESISTOR>			
R104	1-216-864-11	SHORT CHIP 0	
R108	1-208-887-11	METAL CHIP 1K 0.5% 1/16W	
R109	1-208-933-11	METAL CHIP 82K 0.5% 1/16W	
R110	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R112	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R118	1-218-977-11	METAL CHIP 100K 5% 1/16W	
R119	1-208-913-11	METAL CHIP 12K 0.5% 1/16W	
R120	1-218-889-11	METAL CHIP 1M 5% 1/16W	
R125	1-218-977-11	METAL CHIP 100K 5% 1/16W	
R126	1-218-977-11	METAL CHIP 100K 5% 1/16W	
R128	1-218-977-11	METAL CHIP 100K 5% 1/16W	
R130	1-218-977-11	METAL CHIP 100K 5% 1/16W	
R134	1-218-977-11	METAL CHIP 100K 5% 1/16W	
R143	1-216-864-11	SHORT CHIP 0	
R145	1-208-933-11	METAL CHIP 82K 0.5% 1/16W	
R146	1-208-919-11	METAL CHIP 22K 0.5% 1/16W	
R148	1-208-933-11	METAL CHIP 82K 0.5% 1/16W	
R149	1-208-933-11	METAL CHIP 82K 0.5% 1/16W	
R150	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R160	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R165	1-216-864-11	SHORT CHIP 0	
X101	1-813-082-11	<CRYSTAL> VIBRATOR, CRYSTAL (24.000MHZ)	
A-1787-902-A SERVICE ASSY, FR			
<CAPASITOR>			
C701	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V	
C703	1-125-972-91	ELECT 100UF 20.00% 16V	
C704	1-124-236-91	ELECT 47UF 20.00% 16V	
C707	1-107-726-91	CERAMIC CHIP 0.01UF 10.00% 50V	
C712	1-128-131-11	ELECT 22UF 20.00% 50V	
C714	1-107-726-91	CERAMIC CHIP 0.01UF 10.00% 16V	
C715	1-107-726-91	CERAMIC CHIP 0.01UF 10.00% 16V	
C716	1-115-339-11	CERAMIC CHIP 0.1UF 10.00% 50V	
C718	1-164-217-11	CERAMIC CHIP 150PF 5.00% 50V	
C702	1-842-042-51	<CONNECTOR> CONNECTOR, FCC/PC 1P	
C704	1-774-730-21	PIN, CONNECTOR (PC BOARD) 3P	
<DIODE>			
D702	6-502-395-01	DI SL-194S-WS-SD-T	
D705	8-719-988-61	DIODE1SS35TE-17	
A-1787-901-A SERVICE ASSY, FR			
<TRANSFORMER>			
T701	1-445-182-11	DC-DC CONVERTER TRANSFORMER	
<SWITCH>			
S701	1-771-874-11	SWITCH TACTILE	
S702	1-771-874-11	SWITCH TACTILE	
S703	1-771-874-11	SWITCH TACTILE	
<CONNECTOR>			
C631	1-774-730-21	PIN, CONNECTOR (PC BOARD)	
S332	1-771-410-21	SWITCH TACTILE	

BDP-S770/S1700

MB-13

Ref.No.	Part No.	Part Description	Remarks
a)	A-1787-889-A	SERVICE ASSY, MB	(BDP-S700ES)
	A-1787-885-A	SERVICE ASSY, MB	(BDP-S700S)
	A-1787-886-A	SERVICE ASSY, MB	(BDP-S700ND)
	A-1787-887-A	SERVICE ASSY, MB	(BDP-S700UK)
	A-1787-888-A	SERVICE ASSY, MB	(BDP-S700US)

	<DP870R>		
C102	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C103	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C104	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C105	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C106	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C107	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C108	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C109	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C110	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C111	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C112	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C113	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C114	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C115	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C116	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C117	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C118	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C119	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C120	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C121	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C122	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C123	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C124	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C125	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C126	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C127	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C128	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C129	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C130	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C131	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C132	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C133	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C134	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C135	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C136	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C137	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C138	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C139	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C140	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C141	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C142	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C143	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C144	1-144-133-11	CERAMIC CHIP 1UF	10% 6.3V
C145	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C146	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C147	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C148	1-144-133-11	CERAMIC CHIP 1UF	10% 6.3V
C149	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C150	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V

Ref.No.	Part No.	Part Description	
C151	1-144-130-11	CERAMIC CHIP 1UF	10% 6.3V
C152	1-144-130-11	CERAMIC CHIP 1UF	10% 6.3V
C153	1-144-130-11	CERAMIC CHIP 1UF	10% 6.3V
C154	1-144-130-11	CERAMIC CHIP 1UF	10% 6.3V
C155	1-144-130-11	CERAMIC CHIP 1UF	10% 6.3V
C159	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C161	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C162	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C164	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C165	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C166	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C167	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C172	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C173	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C174	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C175	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C176	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C177	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C178	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C179	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C180	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C181	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C211	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C212	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C214	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C215	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C216	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C217	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C219	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C221	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C223	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C225	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C226	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C227	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C228	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C229	1-144-130-11	CERAMIC CHIP 1UF	10% 6.3V
C230	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C231	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C232	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C233	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C234	1-144-130-11	CERAMIC CHIP 1UF	10% 6.3V
C235	1-142-777-11	CERAMIC CHIP 0.01UF	10% 25V
C236	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C238	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C239	1-164-803-81	CERAMIC CHIP 10PF	0.50PF-50V
C240	1-144-130-11	CERAMIC CHIP 1UF	10% 6.3V

[illegible]

[illegible]

BDP-S770/S170C

MB-1

Ref. No.	Part No.	Part Description	Remark	Ref.No.	Part No.	Part Description
R217	1-208-941-81	METAL CHIP 100 5% 116W		R145	1-208-656-81	METAL CHIP 750K 0.5% 116W
R221	1-208-941-81	METAL CHIP 100 5% 116W		R146	1-208-973-81	METAL CHIP 47K 5% 116W
R223	1-208-901-81	SHORT CHIP 0		R140	1-208-888-81	METAL CHIP 1.2K 0.5% 116W
R222	1-208-901-81	SHORT CHIP 0		R141	1-208-931-81	METAL CHIP 22K 0.5% 116W
R233	1-208-901-81	SHORT CHIP 0		R151	1-208-901-81	SHORT CHIP 0
R234	1-208-901-81	SHORT CHIP 0		R152	1-208-656-81	METAL CHIP 10K 5% 116W
R235	1-208-901-81	SHORT CHIP 0		R153	1-208-656-81	METAL CHIP 10K 5% 116W
R236	1-208-901-81	SHORT CHIP 0		R154	1-208-656-81	METAL CHIP 10K 5% 116W
R237	1-208-901-81	SHORT CHIP 0		R157	1-208-991-81	METAL CHIP 3.3K 0.5% 116W
R238	1-208-901-81	SHORT CHIP 0		R158	1-208-971-81	METAL CHIP 390 0.5% 116W
R239	1-208-901-81	SHORT CHIP 0		R159	1-208-881-81	METAL CHIP 1K 0.5% 116W
R240	1-208-901-81	SHORT CHIP 0		R161	1-208-941-81	METAL CHIP 100 5% 116W
R241	1-208-901-81	SHORT CHIP 0		R162	1-208-941-81	METAL CHIP 100 5% 116W
R242	1-208-901-81	SHORT CHIP 0		R163	1-208-941-81	METAL CHIP 100 5% 116W
R243	1-208-901-81	SHORT CHIP 10K 0.5% 116W		R164	1-208-941-81	METAL CHIP 100 5% 116W
R245	1-208-901-81	METAL CHIP 10 5% 116W		R165	1-208-941-81	METAL CHIP 100 5% 116W
R246	1-208-933-81	METAL CHIP 3K 0.5% 116W		R166	1-208-941-81	METAL CHIP 100 5% 116W
R247	1-208-941-81	METAL CHIP 10K 5% 116W		R167	1-208-941-81	METAL CHIP 100 5% 116W
R248	1-208-955-81	METAL CHIP 10K 5% 116W		R168	1-208-941-81	METAL CHIP 10K 5% 116W
R249	1-208-955-81	METAL CHIP 10K 5% 116W		R169	1-208-955-81	METAL CHIP 10K 5% 116W
R250	1-208-977-81	METAL CHIP 10K 5% 116W		R170	1-208-977-81	METAL CHIP 10K 5% 116W
R251	1-208-941-81	METAL CHIP 10K 5% 116W		R171	1-208-941-81	METAL CHIP 100 5% 116W
R252	1-208-955-81	METAL CHIP 10K 5% 116W		R172	1-208-955-81	METAL CHIP 10K 5% 116W
R253	1-208-955-81	METAL CHIP 10K 5% 116W		R173	1-208-955-81	METAL CHIP 10K 5% 116W
R254	1-208-955-81	METAL CHIP 10K 5% 116W		R174	1-208-955-81	METAL CHIP 10K 5% 116W
R255	1-208-955-81	METAL CHIP 10K 5% 116W		R175	1-208-955-81	METAL CHIP 10K 5% 116W
R256	1-208-955-81	METAL CHIP 10K 5% 116W		R176	1-208-955-81	METAL CHIP 10K 5% 116W
R257	1-208-955-81	METAL CHIP 10K 5% 116W		R177	1-208-955-81	METAL CHIP 10K 5% 116W
R258	1-208-955-81	METAL CHIP 10K 5% 116W		R178	1-208-955-81	METAL CHIP 10K 5% 116W
R259	1-208-955-81	METAL CHIP 10K 5% 116W		R179	1-208-955-81	METAL CHIP 10K 5% 116W
R260	1-208-955-81	METAL CHIP 10K 5% 116W		R180	1-208-955-81	METAL CHIP 10K 5% 116W
R261	1-208-955-81	METAL CHIP 10K 5% 116W		R181	1-208-955-81	METAL CHIP 10K 5% 116W
R262	1-208-955-81	METAL CHIP 10K 5% 116W		R182	1-208-955-81	METAL CHIP 10K 5% 116W
R263	1-208-955-81	METAL CHIP 10K 5% 116W		R183	1-208-955-81	METAL CHIP 10K 5% 116W
R264	1-208-955-81	METAL CHIP 10K 5% 116W		R184	1-208-955-81	METAL CHIP 10K 5% 116W
R265	1-208-955-81	METAL CHIP 10K 5% 116W		R185	1-208-955-81	METAL CHIP 10K 5% 116W
R266	1-208-955-81	METAL CHIP 10K 5% 116W		R186	1-208-955-81	METAL CHIP 10K 5% 116W
R267	1-208-955-81	METAL CHIP 10K 5% 116W		R187	1-208-955-81	METAL CHIP 10K 5% 116W
R268	1-208-955-81	METAL CHIP 10K 5% 116W		R188	1-208-955-81	METAL CHIP 10K 5% 116W
R269	1-208-955-81	METAL CHIP 10K 5% 116W		R189	1-208-955-81	METAL CHIP 10K 5% 116W
R270	1-208-955-81	METAL CHIP 10K 5% 116W		R190	1-208-955-81	METAL CHIP 10K 5% 116W
R271	1-208-955-81	METAL CHIP 10K 5% 116W		R191	1-208-955-81	METAL CHIP 10K 5% 116W
R272	1-208-955-81	METAL CHIP 10K 5% 116W		R192	1-208-955-81	METAL CHIP 10K 5% 116W
R273	1-208-955-81	METAL CHIP 10K 5% 116W		R193	1-208-955-81	METAL CHIP 10K 5% 116W
R274	1-208-955-81	METAL CHIP 10K 5% 116W		R194	1-208-955-81	METAL CHIP 10K 5% 116W
R275	1-208-955-81	METAL CHIP 10K 5% 116W		R195	1-208-955-81	METAL CHIP 10K 5% 116W
R276	1-208-955-81	METAL CHIP 10K 5% 116W		R196	1-208-955-81	METAL CHIP 10K 5% 116W
R277	1-208-955-81	METAL CHIP 10K 5% 116W		R197	1-208-955-81	METAL CHIP 10K 5% 116W
R278	1-208-955-81	METAL CHIP 10K 5% 116W		R198	1-208-955-81	METAL CHIP 10K 5% 116W
R279	1-208-955-81	METAL CHIP 10K 5% 116W		R199	1-208-955-81	METAL CHIP 10K 5% 116W
R280	1-208-955-81	METAL CHIP 10K 5% 116W		R200	1-208-955-81	METAL CHIP 10K 5% 116W
R281	1-208-955-81	METAL CHIP 10K 5% 116W		R201	1-208-955-81	METAL CHIP 10K 5% 116W
R282	1-208-955-81	METAL CHIP 10K 5% 116W		R202	1-208-955-81	METAL CHIP 10K 5% 116W
R283	1-208-955-81	METAL CHIP 10K 5% 116W		R203	1-208-955-81	METAL CHIP 10K 5% 116W
R284	1-208-955-81	METAL CHIP 10K 5% 116W		R204	1-208-955-81	METAL CHIP 10K 5% 116W
R285	1-208-955-81	METAL CHIP 10K 5% 116W		R205	1-208-955-81	METAL CHIP 10K 5% 116W
R286	1-208-955-81	METAL CHIP 10K 5% 116W		R206	1-208-955-81	METAL CHIP 10K 5% 116W
R287	1-208-955-81	METAL CHIP 10K 5% 116W		R207	1-208-955-81	METAL CHIP 10K 5% 116W
R288	1-208-955-81	METAL CHIP 10K 5% 116W		R208	1-208-955-81	METAL CHIP 10K 5% 116W
R289	1-208-955-81	METAL CHIP 10K 5% 116W		R209	1-208-955-81	METAL CHIP 10K 5% 116W
R290	1-208-955-81	METAL CHIP 10K 5% 116W		R210	1-208-955-81	METAL CHIP 10K 5% 116W
R291	1-208-955-81	METAL CHIP 10K 5% 116W		R211	1-208-955-81	METAL CHIP 10K 5% 116W
R292	1-208-955-81	METAL CHIP 10K 5% 116W		R212	1-208-955-81	METAL CHIP 10K 5% 116W
R293	1-208-955-81	METAL CHIP 10K 5% 116W		R213	1-208-955-81	METAL CHIP 10K 5% 116W
R294	1-208-955-81	METAL CHIP 10K 5% 116W		R214	1-208-955-81	METAL CHIP 10K 5% 116W
R295	1-208-955-81	METAL CHIP 10K 5% 116W		R215	1-208-955-81	METAL CHIP 10K 5% 116W
R296	1-208-955-81	METAL CHIP 10K 5% 116W		R216	1-208-955-81	METAL CHIP 10K 5% 116W
R297	1-208-955-81	METAL CHIP 10K 5% 116W		R217	1-208-955-81	METAL CHIP 10K 5% 116W
R298	1-208-955-81	METAL CHIP 10K 5% 116W		R218	1-208-955-81	METAL CHIP 10K 5% 116W
R299	1-208-955-81	METAL CHIP 10K 5% 116W		R219	1-208-955-81	METAL CHIP 10K 5% 116W
R300	1-208-955-81	METAL CHIP 10K 5% 116W		R220	1-208-955-81	METAL CHIP 10K 5% 116W
R301	1-208-955-81	METAL CHIP 10K 5% 116W		R221	1-208-955-81	METAL CHIP 10K 5% 116W
R302	1-208-955-81	METAL CHIP 10K 5% 116W		R222	1-208-955-81	METAL CHIP 10K 5% 116W
R303	1-208-955-81	METAL CHIP 10K 5% 116W		R223	1-208-955-81	METAL CHIP 10K 5% 116W
R304	1-208-955-81	METAL CHIP 10K 5% 116W		R224	1-208-955-81	METAL CHIP 10K 5% 116W
R305	1-208-955-81	METAL CHIP 10K 5% 116W		R225	1-208-955-81	METAL CHIP 10K 5% 116W
R306	1-208-955-81	METAL CHIP 10K 5% 116W		R226	1-208-955-81	METAL CHIP 10K 5% 116W
R307	1-208-955-81	METAL CHIP 10K 5% 116W		R227	1-208-955-81	METAL CHIP 10K 5% 116W
R308	1-208-955-81	METAL CHIP 10K 5% 116W		R228	1-208-955-81	METAL CHIP 10K 5% 116W
R309	1-208-955-81	METAL CHIP 10K 5% 116W		R229	1-208-955-81	METAL CHIP 10K 5% 116W
R310	1-208-955-81	METAL CHIP 10K 5% 116W		R230	1-208-955-81	METAL CHIP 10K 5% 116W
R311	1-208-955-81	METAL CHIP 10K 5% 116W		R231	1-208-955-81	METAL CHIP 10K 5% 116W
R312	1-208-955-81	METAL CHIP 10K 5% 116W		R232	1-208-955-81	METAL CHIP 10K 5% 116W
R313	1-208-955-81	METAL CHIP 10K 5% 116W		R233	1-208-955-81	METAL CHIP 10K 5% 116W
R314	1-208-955-81	METAL CHIP 10K 5% 116W		R234	1-208-955-81	METAL CHIP 10K 5% 116W
R315	1-208-955-81	METAL CHIP 10K 5% 116W		R235	1-208-955-81	METAL CHIP 10K 5% 116W
R316	1-208-955-81	METAL CHIP 10K 5% 116W		R236	1-208-955-81	METAL CHIP 10K 5% 116W
R317	1-208-955-81	METAL CHIP 10K 5% 116W		R237	1-208-955-81	METAL CHIP 10K 5% 116W
R318	1-208-955-81	METAL CHIP 10K 5% 116W		R238	1-208-955-81	METAL CHIP 10K 5% 116W
R319	1-208-955-81	METAL CHIP 10K 5% 116W		R239	1-208-955-81	METAL CHIP 10K 5% 116W
R320	1-208-955-81	METAL CHIP 10K 5% 116W		R240	1-208-955-81	METAL CHIP 10K 5% 116W
R321	1-208-955-81	METAL CHIP 10K 5% 116W		R241	1-208-955-81	METAL CHIP 10K 5% 116W
R322	1-208-955-81	METAL CHIP 10K 5% 116W		R242	1-208-955-81	METAL CHIP 10K 5% 116W
R323	1-208-955-81	METAL CHIP 10K 5% 116W		R243	1-208-955-81	METAL CHIP 10K 5% 116W
R324	1-208-955-81	METAL CHIP 10K 5% 116W		R244	1-208-955-81	METAL CHIP 10K 5% 116W
R325	1-208-955-81	METAL CHIP 10K 5% 116W		R245	1-208-955-81	METAL CHIP 10K 5% 116W
R326	1-208-955-81	METAL CHIP 10K 5% 116W		R246	1-208-955-81	METAL CHIP 10K 5% 116W
R327	1-208-955-81	METAL CHIP 10K 5% 116W		R247	1-208-955-81	METAL CHIP 10K 5% 116W
R328	1-208-955-81	METAL CHIP 10K 5% 116W		R248	1-208-955-81	METAL CHIP 10K 5% 116W
R329	1-208-955-81	METAL CHIP 10K 5% 116W		R249	1-208-955-81	METAL CHIP 10K 5% 116W
R330	1-208-955-81	METAL CHIP 10K 5% 116W		R250	1-208-955-81	METAL CHIP 10K 5% 116W
R331	1-208-955-81	METAL CHIP 10K 5% 116W		R251	1-208-955-81	METAL CHIP 10K 5% 116W
R332	1-208-955-81	METAL CHIP 10K 5% 116W		R252	1-208-955-81	METAL CHIP 10K 5% 116W
R333	1-208-955-81	METAL CHIP 10K 5% 116W		R253	1-208-955-81	METAL CHIP 10K 5% 116W
R334	1-208-955-81	METAL CHIP 10K 5% 116W		R254	1-208-955-81	METAL CHIP 10K 5% 116W
R335	1-208-955-81	METAL CHIP 10K 5% 116W		R255	1-208-955-81	METAL CHIP 10K 5% 116W
R336	1-208-955-81	METAL CHIP 10K 5% 116W		R256	1-208-955-81	METAL CHIP 10K 5% 116W
R337	1-208-955-81	METAL CHIP 10K 5% 116W		R257	1-208-955-81	METAL CHIP 10K 5% 116W
R338	1-208-955-81	METAL CHIP 10K 5% 116W		R258	1-208-955-81	METAL CHIP 10K 5% 116W
R339	1-208-955-81	METAL CHIP 10K 5% 116W		R259	1-208-955-81	METAL CHIP 10K 5% 116W
R340	1-208-955-81	METAL CHIP 10K 5% 116W		R260	1-208-955-81	METAL CHIP 10K 5% 116W
R341	1-208-955-81	METAL CHIP 10K 5% 116W		R261	1-208-955-81	METAL CHIP 10K 5% 116W
R342	1-208-955-81	METAL CHIP 10K 5% 116W		R262	1-208-955-81	METAL CHIP 10K 5% 116W
R343	1-208-955-81	METAL CHIP 10K 5% 116W		R263	1-208-955-81	METAL CHIP 10K 5% 116W
R344	1-208-955-81	METAL CHIP 10K 5% 116W		R264	1-208-955-81	METAL CHIP 10K 5% 116W
R345	1-208-955-81	METAL CHIP 10K 5% 116W		R265	1-208-955-81	METAL CHIP 10K 5% 116W
R346	1-208-955-81	METAL CHIP 10K 5% 116W		R266	1-208-955-81	METAL CHIP 10K 5% 116W
R347	1-208-955-81	METAL CHIP 10K 5% 116W		R267	1-208-955-81	METAL CHIP 10K 5% 116W
R348	1-208-955-81	METAL CHIP 10K 5% 116W		R268	1-208-955-81	METAL CHIP 10K 5% 116W
R349	1-208-955-81	METAL CHIP 10K 5% 116W		R269	1-208-955-81	METAL CHIP 10K 5% 116W
R350	1-208-955-81	METAL CHIP 10K 5% 116W		R270	1-208-955-81	METAL CHIP 10K 5% 116W
R351	1-208-955-81	METAL CHIP 10K 5% 116W		R271	1-208-955-81	METAL CHIP 10K 5% 116W
R352	1-208-955-81	METAL CHIP 10K 5% 116W		R272	1-208-955-81	METAL CHIP 10K 5% 116W
R353	1-208-955-81	METAL CHIP 10K 5% 116W		R273	1-208-955-81	METAL CHIP 10K 5% 116W
R354	1-208-955-81	METAL CHIP 10K 5% 116W		R274	1-208-955-81	METAL CHIP 10K 5% 116W
R355	1-208-955-81	METAL CHIP 10K 5% 116W		R275	1-208-955-81	METAL CHIP 10K 5% 116W
R356	1-208-955-81	METAL CHIP 10K 5% 116W		R276	1-208-955-81	METAL CHIP 10K 5% 116W
R357						

BDP-S70/S1700

Ref.No.	Part No.	Part Description	Remarks
---------	----------	------------------	---------

R242	1-20-971-81	METAL CHIP 3K 5% 110W	
R246	1-20-201-81	METAL CHIP 3K 5% 110W	
R247	1-20-201-81	METAL CHIP 3K 5% 110W	
R248	1-20-955-81	METAL CHIP 1K 5% 110W	

R249	1-20-990-81	SHORT CHIP 0	
R2420	1-220-203-81	METAL CHIP 51K 5% 110W	
R2421	1-220-205-81	METAL CHIP 91K 5% 110W	
R2422	1-220-205-81	METAL CHIP 91K 5% 110W	
R242	1-20-853-81	METAL CHIP 1.8K 0.5% 110W	

R244	1-20-853-81	METAL CHIP 1.8K 0.5% 110W	
R246	1-20-853-81	METAL CHIP 1.8K 0.5% 110W	
R248	1-20-990-81	SHORT CHIP 0	
R2487	1-20-990-81	SHORT CHIP 0	
R2492	1-20-853-81	METAL CHIP 1.8K 0.5% 110W	

R2494	1-20-853-81	METAL CHIP 1.8K 0.5% 110W	
R2495	1-20-853-81	METAL CHIP 1.8K 0.5% 110W	

<VARIABLE RESISTOR>

R201	1-24-372-21	RES NETWORK 100 (00534)	
R202	1-24-372-21	RES NETWORK 100 (00534)	
R203	1-24-372-21	RES NETWORK 100 (00534)	
R204	1-24-372-21	RES NETWORK 100 (00534)	

R205	1-24-372-21	RES NETWORK 100 (00534)	
R206	1-24-372-21	RES NETWORK 100 (00534)	
R2011	1-24-378-21	RES NETWORK 10K (00534)	
R2012	1-24-378-21	RES NETWORK 10K (00534)	
R203	1-24-372-21	RES NETWORK 100 (00534)	
R204	1-24-372-21	RES NETWORK 100 (00534)	

R205	1-24-372-21	RES NETWORK 100 (00534)	
R206	1-24-372-21	RES NETWORK 100 (00534)	
R2011	1-24-378-21	RES NETWORK 10K (00534)	
R2012	1-24-378-21	RES NETWORK 10K (00534)	
R203	1-24-372-21	RES NETWORK 100 (00534)	
R204	1-24-372-21	RES NETWORK 100 (00534)	

R201	1-24-372-21	RES NETWORK 100 (00534)	
R2011	1-24-372-21	RES NETWORK 100 (00534)	
R2012	1-24-372-21	RES NETWORK 100 (00534)	
R203	1-24-372-21	RES NETWORK 100 (00534)	

<THERMISTOR>

TH501	1-04-999-1	THERMISTOR NTC(SMD)	
-------	------------	---------------------	--

A-1782-361-A	USB-026(0059NA) MOUNT	
--------------	-----------------------	--

C08	1-12-298-91	CERAMIC CHIP 1UF 10% 16V	
-----	-------------	--------------------------	--

CN01	1-822-289-21	USB CONNECTOR	
CN02	1-564-721-11	PIN CONNECTOR (SMALL TYPE) 5P	

FB01	1-400-382-11	FERRITE 0UH	
------	--------------	-------------	--

MB-134	USB-026	IR-071	USB-C
--------	---------	--------	-------

A-1787-903-A	SER VICE ASSY, IR		
--------------	-------------------	--	--

C401	1-164-872-81	CERAMIC CHIP 82PF 5.00% 50V	
C402	1-164-845-81	CERAMIC CHIP 5PF 0.25PF 50V	
C403	1-164-845-81	CERAMIC CHIP 5PF 0.25PF 50V	

CN401	1-695-320-21	PIN CONNECTOR (1.5MM)(SMD) 2P	
-------	--------------	-------------------------------	--

D401	8-719-067-40	DIODE S176.8N-T146	
------	--------------	--------------------	--

J401	1-764-188-31	JACK (SMALL TYPE) (DIA. 3.5)	
------	--------------	------------------------------	--

L401	1-457-223-11	INDUCTOR 0UH	
------	--------------	--------------	--

R402	1-216-864-91	SHORT CHIP 0	
------	--------------	--------------	--

A-1782-361-A	USB-027(0059NA) MOUNT	
--------------	-----------------------	--

CN201	1-820-034-11	CONNECTOR, USB (A)	
CN202	1-564-707-11	PIN CONNECTOR (SMALL TYPE) 5P	

ACCESSORIES

1-751-271-71	CORD, CONNECTION (AV) (BDP-S1700ES) S770-US C		
4-188-208-11	MANUAL, INSTRUCTION (BDP-S1700ES-US)(ENGLISH)		
4-188-205-11	MANUAL, INSTRUCTION (BDP-S770-US-CND)(ENGLISH)		
4-188-205-21	MANUAL, INSTRUCTION (BDP-S770-CND)(FRENCH)		
4-188-205-11	MANUAL, INSTRUCTION (BDP-S770-CEK-AU2)(ENGLISH)		
4-188-206-21	MANUAL, INSTRUCTION (BDP-S770-AE1)(FRENCH)		
4-188-206-31	MANUAL, INSTRUCTION (BDP-S770-AE1)(GERMAN)		
4-188-206-41	MANUAL, INSTRUCTION (BDP-S770-AE1)(ITALIAN)		
4-188-206-51	MANUAL, INSTRUCTION (BDP-S770-AE1)(JUTCH)		
4-188-207-11	MANUAL, INSTRUCTION (BDP-S770-AE2)(SPANISH)		
4-188-207-21	MANUAL, INSTRUCTION (BDP-S770-AE2)(SWEDISH)		
4-188-207-31	MANUAL, INSTRUCTION (BDP-S770-AE2)(PORTUGUE		
4-188-207-41	MANUAL, INSTRUCTION (BDP-S770-AE2)(DANISH)		
4-188-207-51	MANUAL, INSTRUCTION (BDP-S770-AE2)(FINNIS		
1-487-683-11	REMOTE COMMANDER (RMT-B108A)		
1-487-684-11	REMOTE COMMANDER (RMT-B108P)		
	(BDP-S1700ES S770-US C		
	(BDP-S770-AEP, UK, AUS		

BDP-S770/S170C

REVISION HISTORY

[illegible]