

SECTION 6

EXPLODED VIEWS

Note:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "X" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE) . . . (RED)

KNOB, BALANCE (WHITE) . . . (RED)

[illegible]

- Abbreviation
 - AUS : Australian model
 - CH : Chinese model
 - CND : Canadian model
 - IT : Italian model
 - MX : Mexican model

The components identified by mark  or dotted line with mark  are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque  sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

原理图和零件清单中标有△记号的零部件，或带有△记号的虚线所圈示的零部件，对于维系安全至关重要。因此只能以指定号码的零部件来更换。

The components identified by mark  contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.


Les composants identifiés par la marque  contiennent des informations confidentielles.

Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

标识有 的元件包含机密信息。



更换或维修元件时请严格遵守指示。

6-1. STAND SECTION

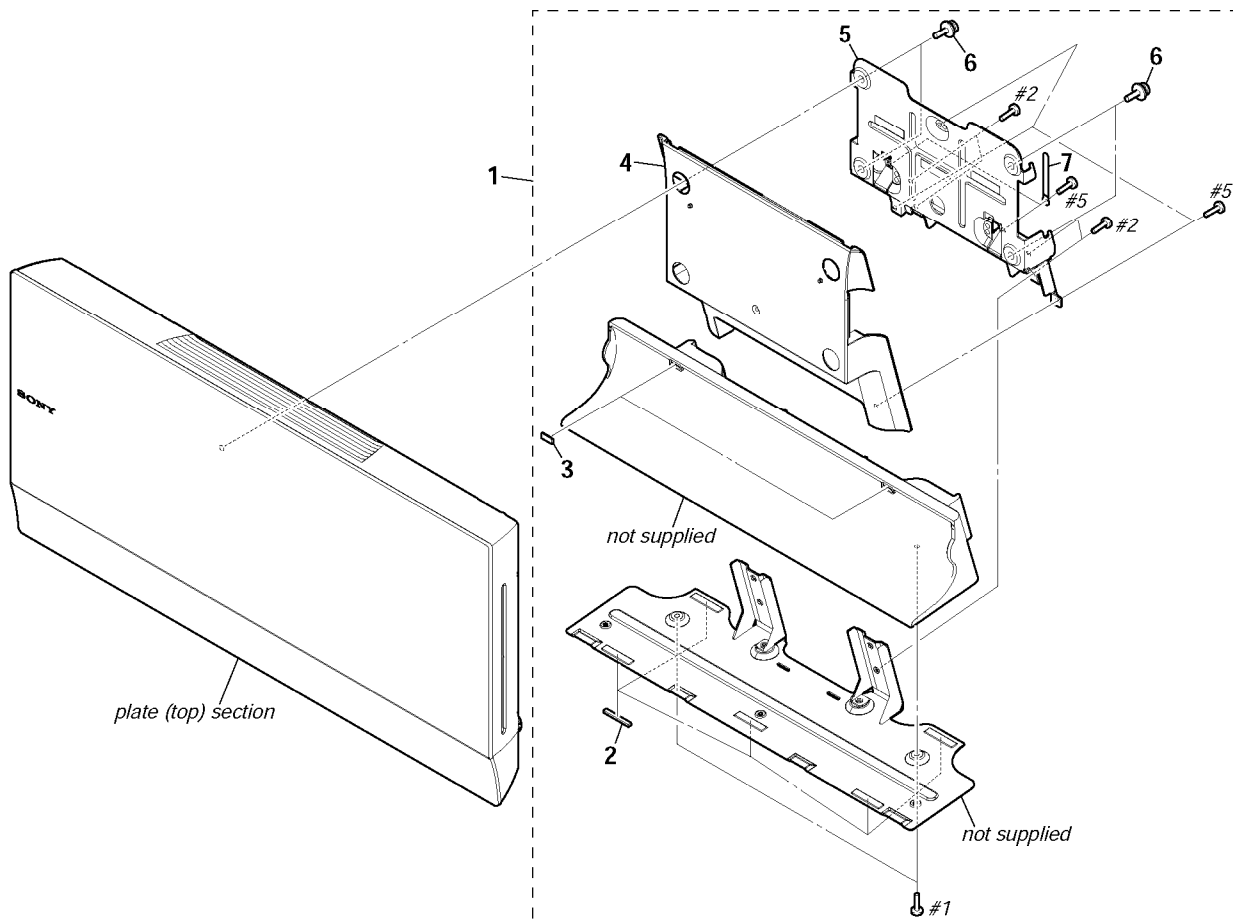

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	A-1805-924-A	STAND ASSY		6	4-263-067-01	SCREW (WALL)	
2	4-263-048-01	FOOT (RUBBER)		* 7	3-703-150-11	CLAMP	
3	4-278-120-01	CUSHION (STAND)		#1	7-685-645-71	SCRFW +BVTP 3X6 TYPE2 IT-3	
4	4-263-072-01	STAND (COVER-A)		#2	7-682-146-09	SCREW +P 3X5	
5	X-2582-424-1	STAND (BRACKET-A) ASSY		#5	7-685-645-79	SCREW +BVTP 3X6 TYPE2 IT-3	

6-2. PLATE (TOP) SECTION

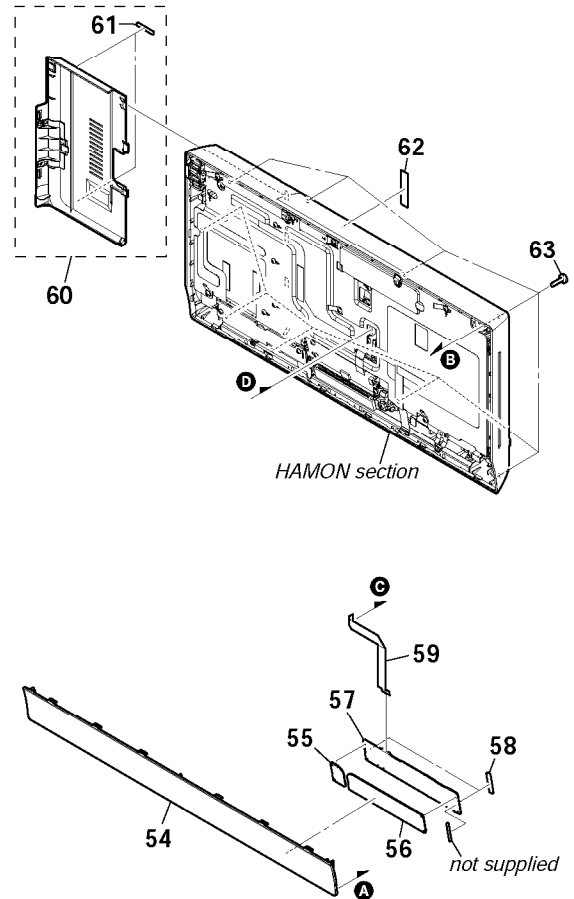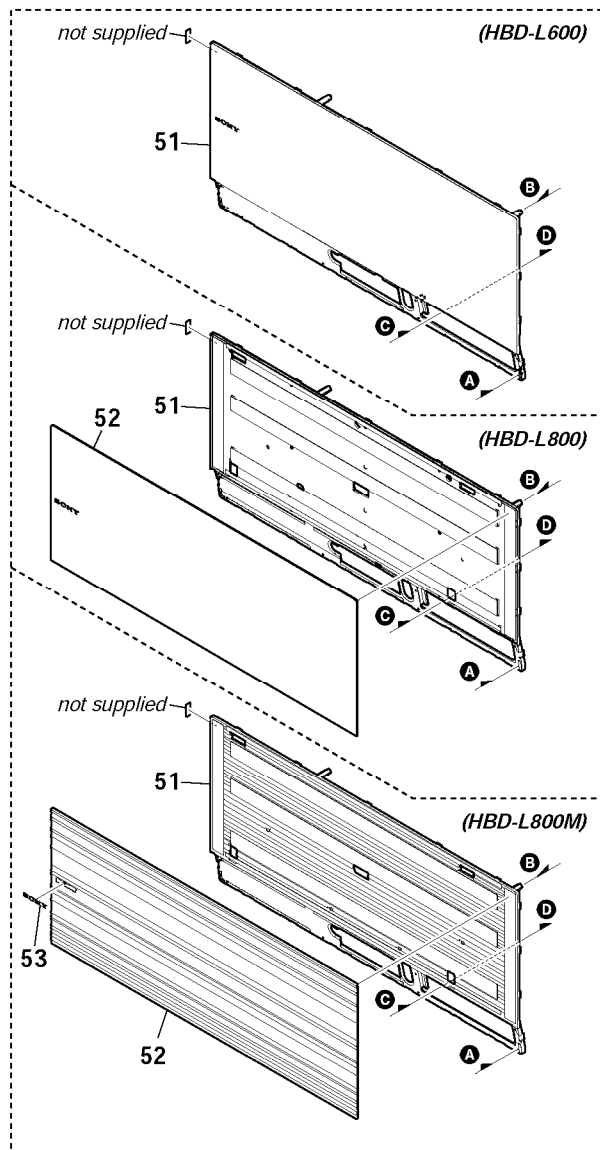


Note: Wires (flat type) for service is all straight.
Please bend it referring go "2-19. HOW TO BEND FFC" on page 22 when you install it in the set.

Ref. No.	Part No.	Description	Remark
51	X-2581-535-2	PLATE (TOP) ASSY (L600) (HBD-L600)	
51	X-2581-536-2	PLATE (TOP) ASSY (L800) (HBD-L800)	
51	X-2581-841-2	PLATE TOP ASSY L800M (HBD-L800M)	
52	4-263-042-01	WINDOW (TOP-METAL) (HBD-L800)	
52	4-279-173-01	WINDOW (AL) (HBD-L800M)	
53	3-215-529-31	EMBLEM (No.5), SONY (HBD-L800M)	
54	X-2581-780-1	SERVICE ASSY, WINDOW (FRONT)	
55	X-2560-544-1	INDICATOR (TOUCH-PLAY) ASSY	
56	X-2560-543-1	INDICATOR (TOUCH) ASSY	

Ref. No.	Part No.	Description	Remark
57	A-1805-234-A	TOUCH BOARD, COMPLETE	
58	4-263-053-01	SPACER (TOUCH)	
59	1-828-311-51	WIRE (FLAT TYPE) (9 CORE)	
60	X-2581-840-1	LID BOTTOM ASSY	
61	4-263-048-01	FOOT (RUBBER)	
62	4-278-251-01	SHEET (REAR COVER)	
63	4-279-245-01	SCREW (DIA. 2.6X8) (BLACK), +BV	


6-3. HAMON SECTION

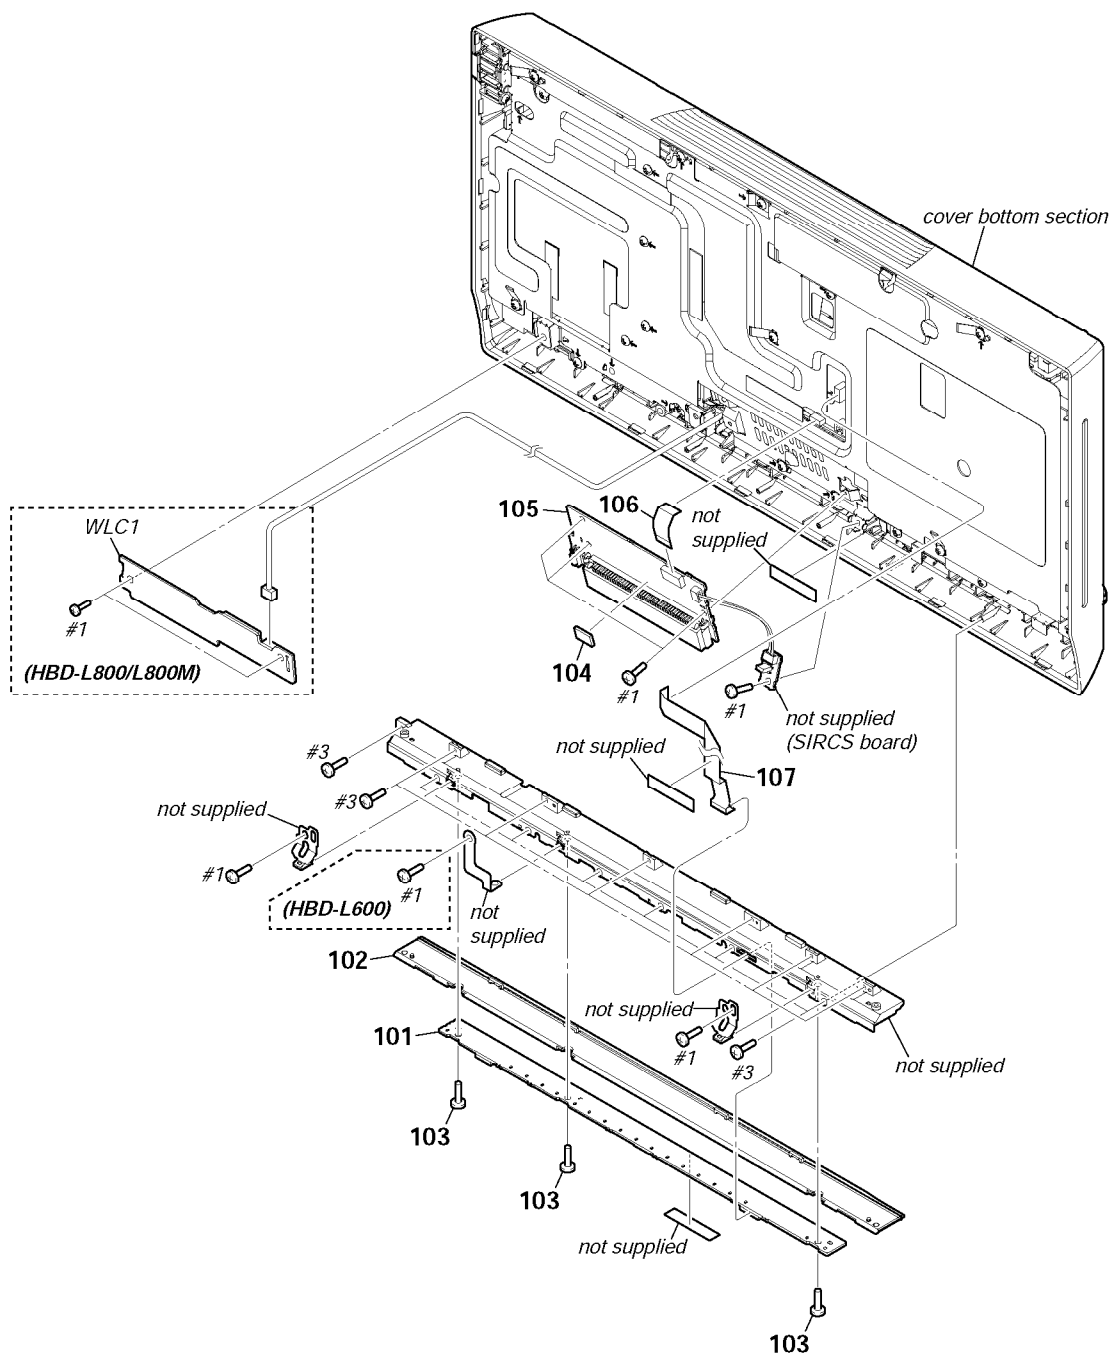

Note: Wires (flat type) for service is all straight.
Please bend it referring go "2-19. HOW TO BEND FFC" on page 22 when you install it in the set.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	A-1805-235-A	HAMON LED BOARD, COMPLETE (HBD-L600)		106	1-828-315-51	WIRE (FLAT TYPE) (11 CORE)	
101	A-1805-238-A	HAMON LED BOARD, COMPLETE (HBD-L800/L800M)		107	1-823-661-61	WIRE (FLAT TYPE) (10 CORE)	
102	4-263-056-01	INDICATOR (HAMON)		WLC1	1-458-327-11	CARD, WIRELESS LAN (HBD-L800/L800M)	
103	3-087-053-01	+BVTP2.6 (3CR)		#1	7-685-645-71	SCREW +BVTP 3X6 TYPE2 IT-3	
104	4 977 358 01	CUSHION		#3	7 685 104 19	SCREW 1 P 2X6 TYPE2 NON SLIT	
105	A-1805-243-A	FL BOARD, COMPLETE					

6-4. COVER BOTTOM SECTION

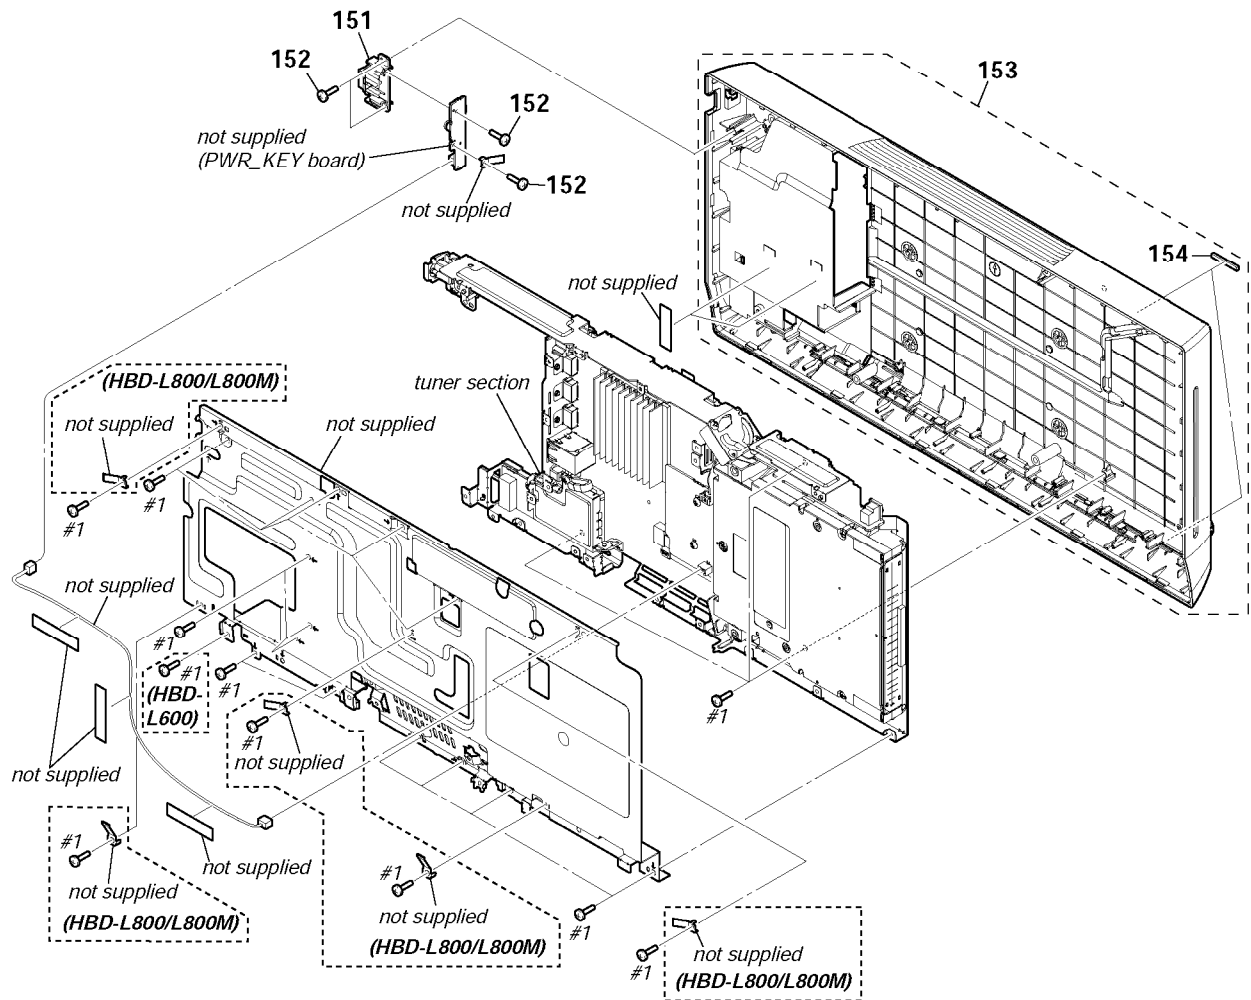

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	4-263-054-01	BUTTON (POWER) (㏻)		153	X-2581-839-3	COVER BOTTOM ASSY L800M (HBD-L800M)	
152	3-087-053-01	+BVTP2 6 (3CR)					
153	X-2581-837-3	COVER BOTTOM ASSY L800 (HBD-L800)		154	4-263-048-01	FOOT (RUBBER)	
153	X-2581-838-3	COVER BOTTOM ASSY L600 (HBD-L600)		#1	7-685-645-71	SCREW +BVTP 3X6 TYPE2 IT-3	


6-5. TUNER SECTION

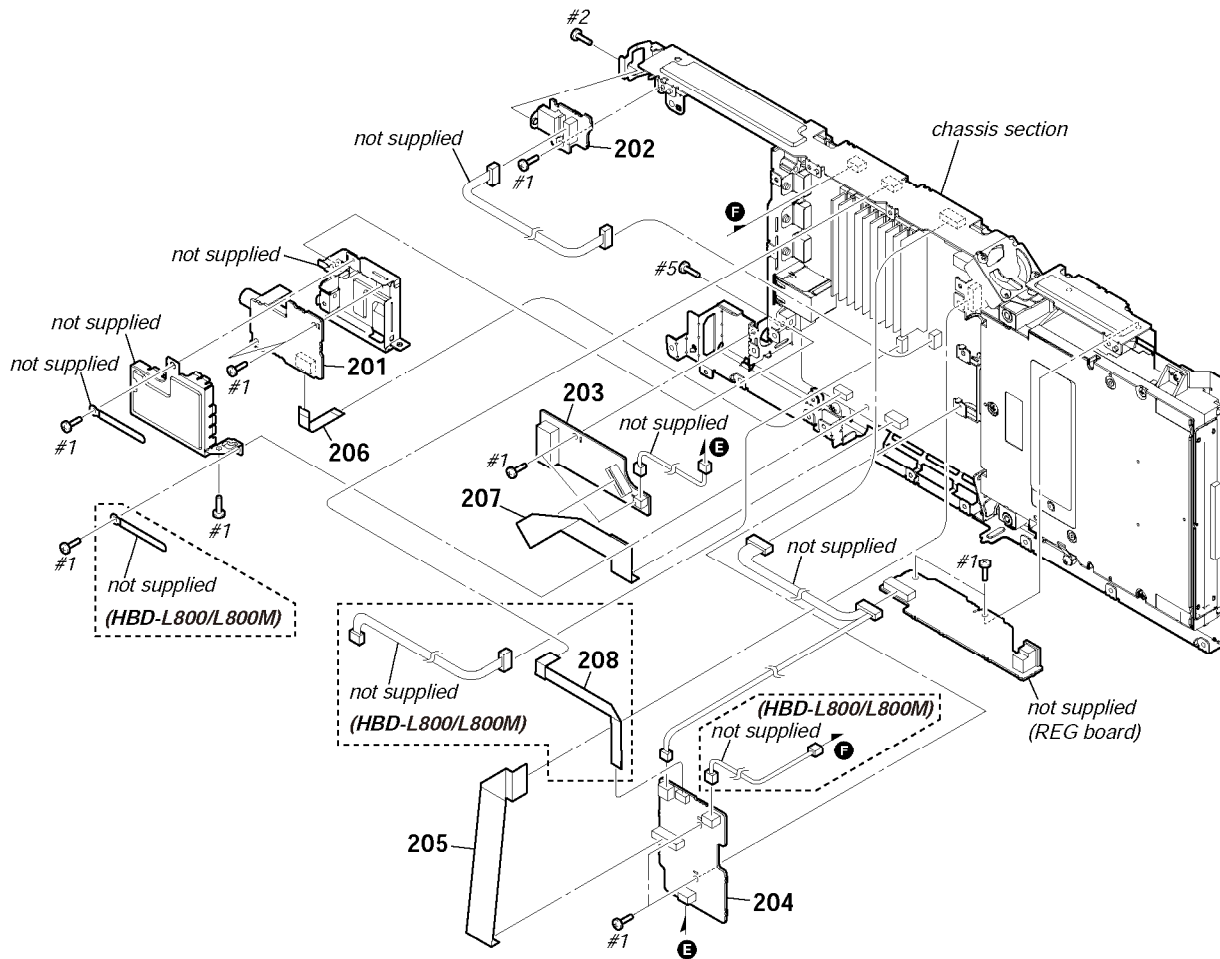

Note: Wires (flat type) for service is all straight.
Please bend it referring go "2-19. HOW TO BEND
FFC" on page 22 when you install it in the set.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	A-1805-249-A	TUNER BOARD, COMPLETE (HBD-L600: AEP, IT, UK/L800: AEP, IT, UK/L800M)		205	1-828-358-61	WIRE (FLAT TYPE) (19 CORE)	
201	A-1805-253-A	TUNER BOARD, COMPLETE (HBD-L600: CH, MX/L800: AUS)		206	1-828-296-51	WIRE (FLAT TYPE) (7 CORE)	
201	A-1805-255-A	TUNER BOARD, COMPLETE (HBD-L600: CND)		207	1-828-340-61	WIRE (FLAT TYPE) (15 CORE)	
202	A-1805-247-A	USB BOARD, COMPLETE		208	1-839-236-11	CABLE, FLAT (14 CORE) (HBD-L800/L800M)	
203	A-1805-251-A	WS_P BOARD, COMPLETE		#1	7-685-645-71	SCREW +BVTP 3X6 TYPE2 IT-3	
204	A-1805-236-A	CONNECT BOARD, COMPLETE (HBD-L600)		#2	7-682-146-09	SCREW +P 3X5	
204	A-1805-237-A	CONNECT BOARD, COMPLETE (HBD-L800/L800M)		#5	7-685-645-79	SCREW +BVTP 3X6 TYPE2 IT-3	


6-6. CHASSIS SECTION

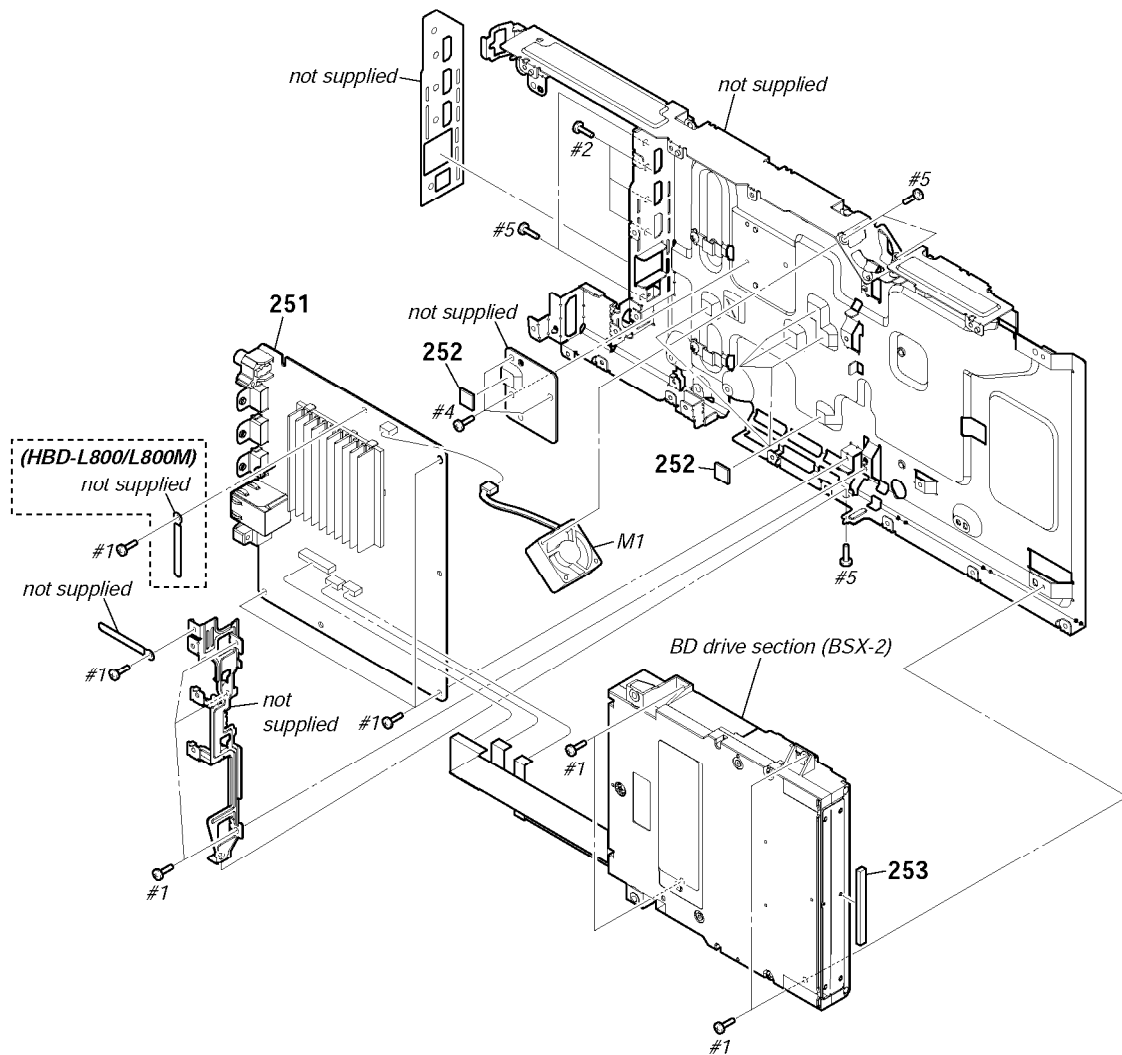

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	A-1821-652-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L600: AEP)		251	A-1833-230-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L800: UK)	
251	A-1821-653-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L600: UK)		251	A-1833-231-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L600: IT)	
251	A-1821-655-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L600: MX)		251	A-1833-232-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L800: IT)	
251	A-1821-656-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L600: CH)		251	A-1833-233-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L800M: IT)	
251	A-1821-657-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L800: AEP)		252	4-263-064-01	SHEET (RADIATION)	
251	A-1821-658-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L800: AUS)		253	4-263-048-11	FOOT (RUBBER)	
251	A-1821-659-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L800M: AEP)		M1	1-855-051-11	FAN, DC	
251	A-1822-767-A	MB-141 BOARD, COMPLETE (for SERVICE) (HBD-L600: CND)		#1	7-685-645-71	SCREW +BVTP 3X6 TYPE2 IT-3	
				#2	7-682-146-09	SCREW +P 3X5	
				#4	7-685-870-01	SCREW +BVTT 3X5 (S)	
				#5	7-685-645-79	SCREW +BVTP 3X6 TYPE2 IT-3	

6-7. BD DRIVE SECTION (BSX-2)


- Rear side view

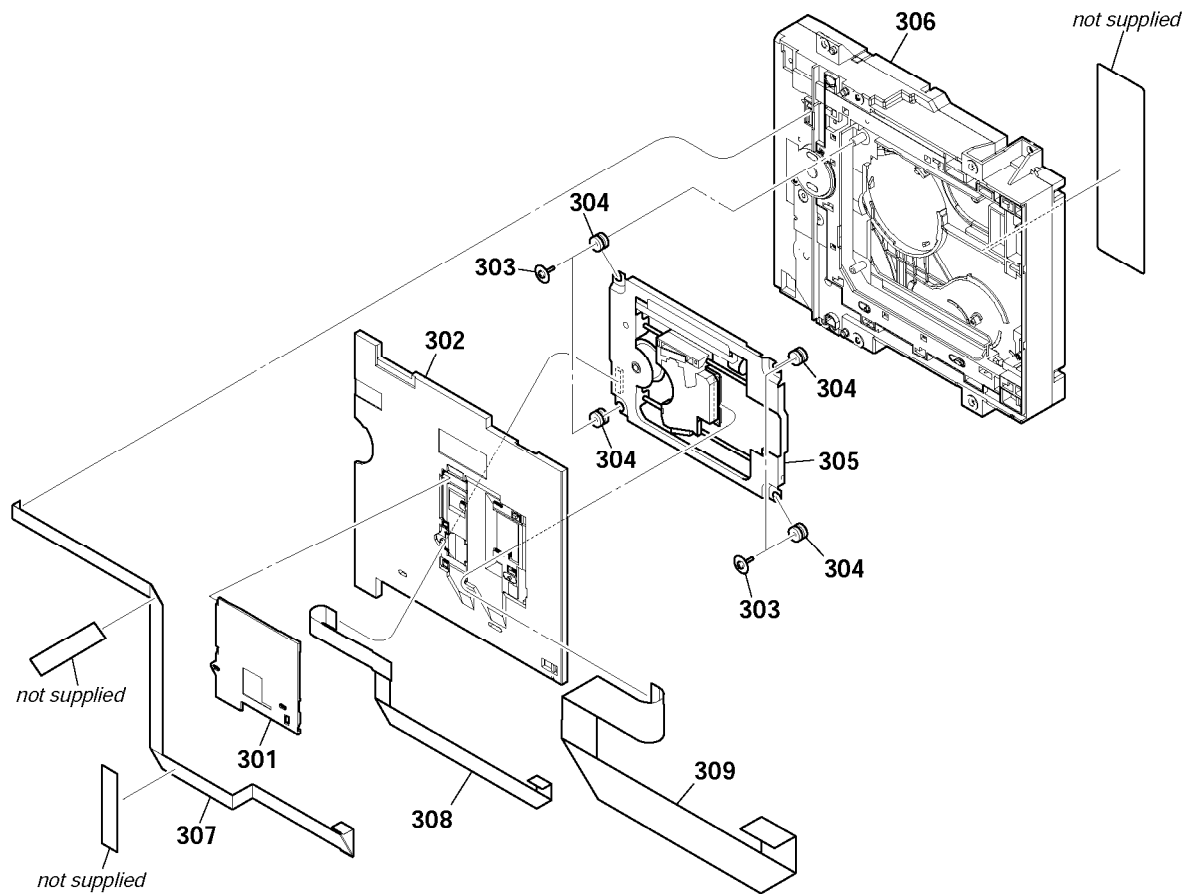

Note: Flexible flat cable for service is all straight.
Please bend it referring go "2-19. HOW TO BEND FFC" on page 22 when you install it in the set.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	4-263-634-01	GUIDE, FFC		306	A-1799-044-A	LOADING ASSY (G)	
302	4-263-633-01	COVER, BOTTOM		307	1-838-110-11	FLEXIBLE FLAT CABLE (7 PIN)	
303	2-345-115-01	SCRFW (S), FFC		308	1-838-109-11	FLEXIBLE FLAT CABLE (9 PIN)	
304	4-175-937-21	INSULATOR		309	1-839-235-11	CABLE, FLEXIBLE FLAT (45 CORE)	
▲ 305	8-820-445-04	OPTICAL PICK-UP (KEM-470AAA/C2RP)					

SS-TSL800

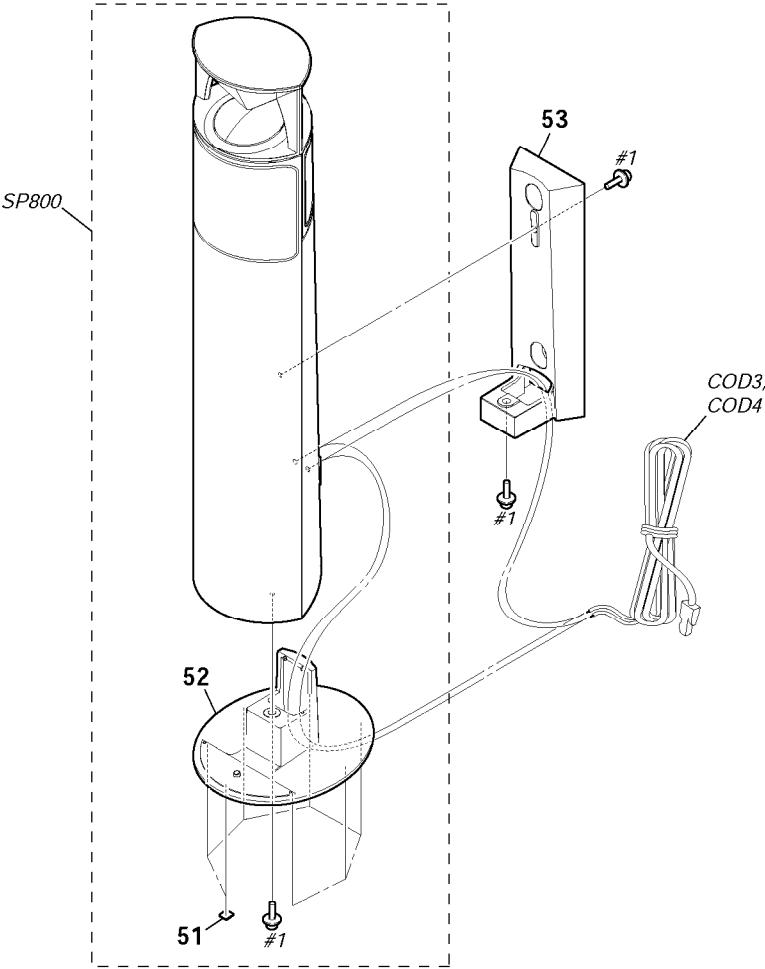

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
51	2-893-646-01	FOOT	
52	4-267-217-01	STAND (G)	
53	A-1824-967-A	SP WALL BRACKET ASSY (Speaker stand)	
COD3	1-838-634-11	CORD (WITH CONNECTOR) (SPEAKER) (White)	(for FRONT L)

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
COD4	1-838-635-11	CORD (WITH CONNECTOR) (SPEAKER) (Red)	(for FRONT R)
SP800	A-1798-012-A	OVERALL ASSY (SS-TSL800)	
#1	7-682-973-31	SCREW +PSW 5X14	