

CCD-TR86/TR96/TR506/TR506PK/TR507/TR916(NTSC) CCD-TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E(PAL)

SECTION 5 REPAIR PARTS LIST

5-1. EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

The components identified by mark $\triangle$ or dotted line with mark $\triangle$ are critical for safety. Replace only with part number specified.


Les composants identifiés par une marque $\triangle$ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-1-1. OVERALL SECTION

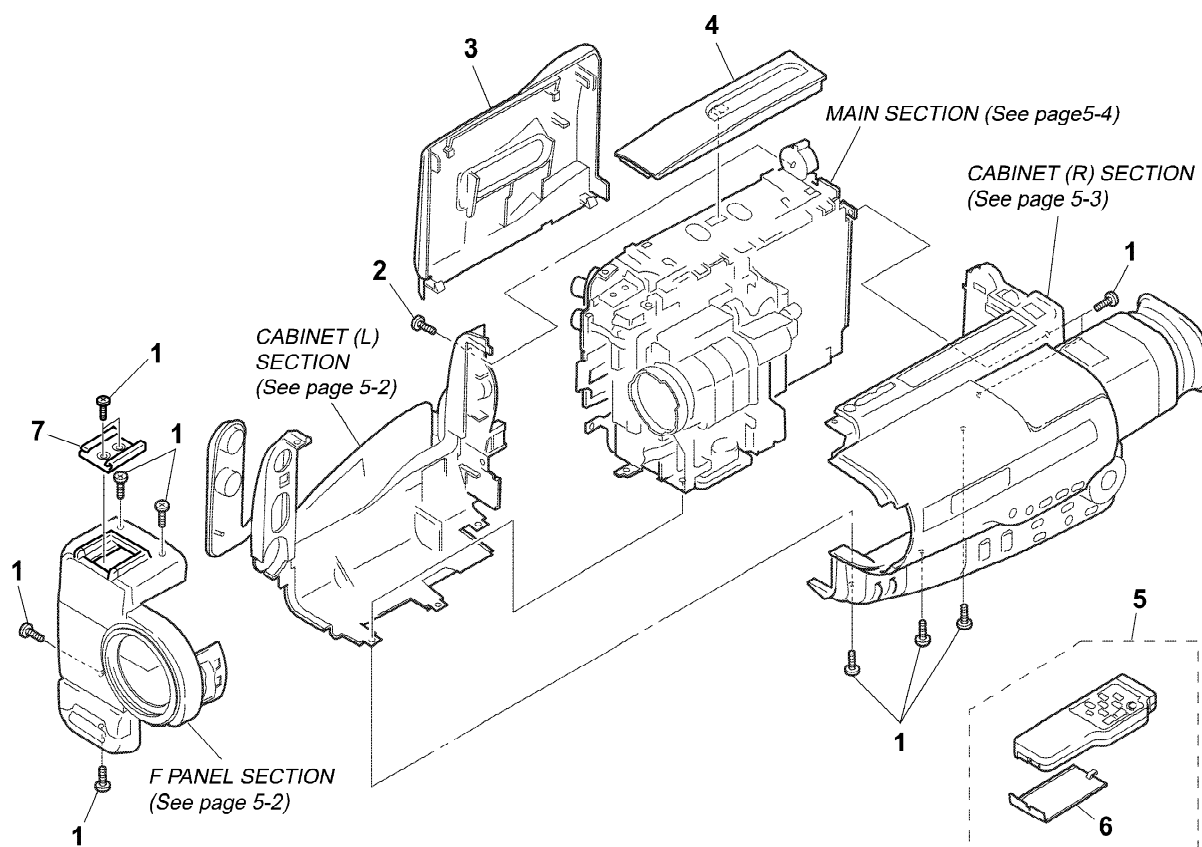


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	3-962-826-01	SCREW (2X4)		4	3-975-365-01	LID, LS (EXCEPT TR916/TR501E)	
2	3-713-786-21	SCREW (M2X3)		4	3-975-365-11	LID, LS (TR916/TR501E)	
3	X-3945-446-4	LID ASSY, CASSETTE (TR916/TR501E)		5	1-473-342-11	REMOTE COMMANDER (RMT-713)	
3	X-3947-229-1	LID ASSY (G), CASSETTE (EXCEPT TR916/TR501E)		6	3-958-131-01	COVER, BATTERY REMOCON	
				7	3-975-363-01	SHOE, ACCESSORY	

5-1-2. CABINET (L), F PANEL SECTION

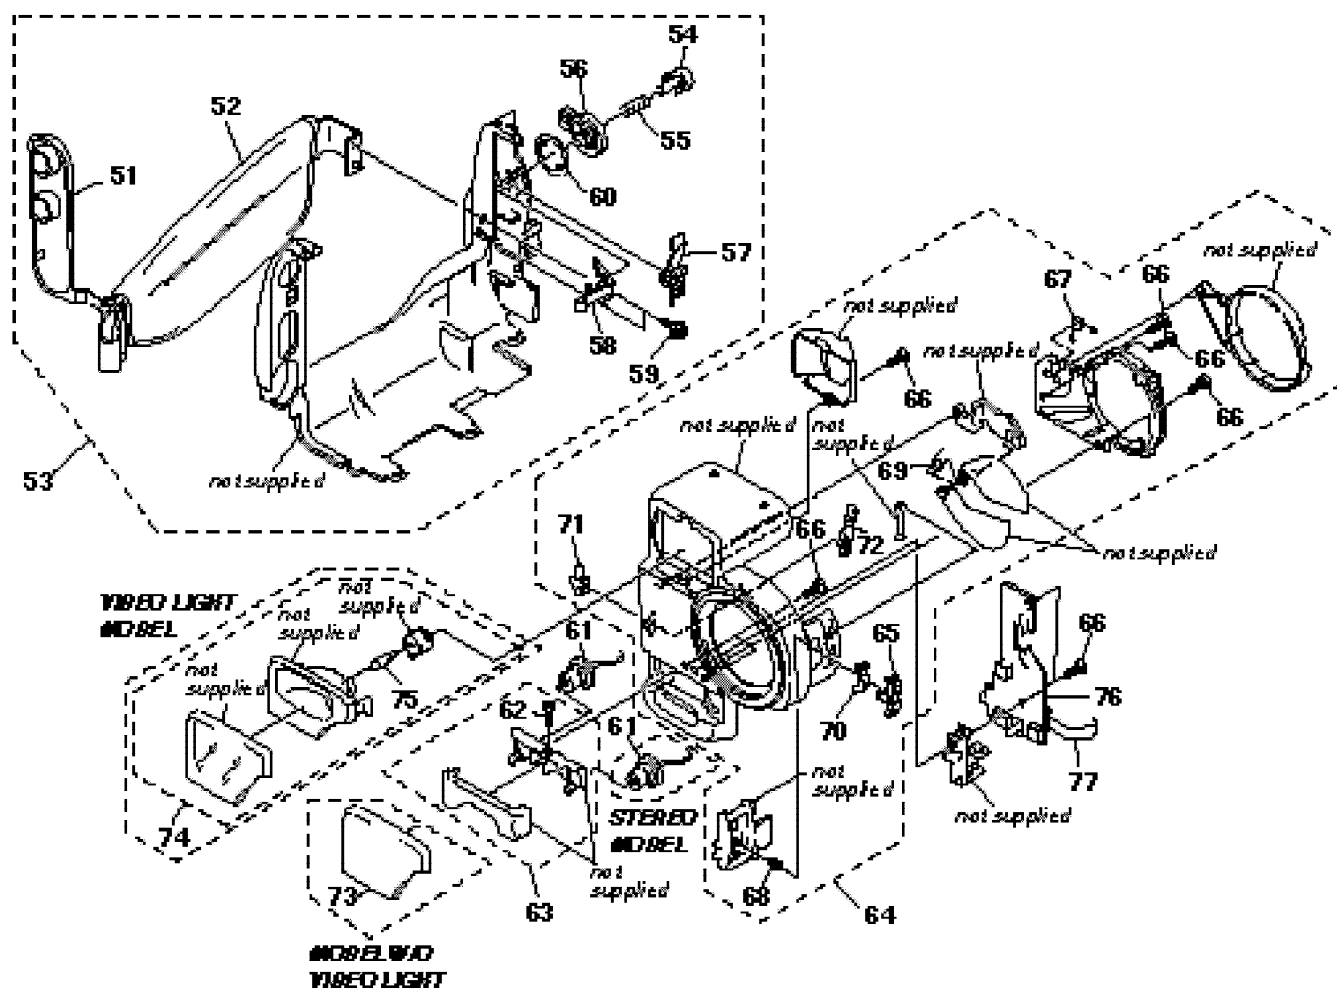


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	3-965-888-01	COVER, JACK		64	X-3947-344-1	PANEL ASSY (LC), FRONT (TR506/TR506E/TR720E)	
51	3-965-888-21	COVER, JACK (EXCEPT TR916/TR501E)		64	X-3947-347-1	PANEL ASSY (SVL), FRONT (TR507/TR740E)	
52	3-969-339-01	BELT, GRIP		64	X-3947-405-1	PANEL ASSY (BG), FRONT (TR916)	
53	X-3947-072-1	CABINET (L) ASSY (TR916/TR501E:E)		65	3-974-899-01	KNOB, POWER	
53	X-3947-256-1	CABINET (L) ASSY (TR506/TR507/TR506E/TR720E/TR740E)		66	3-719-601-01	SCREW (B2X5), TAPPING	
53	X-3947-340-1	CABINET (L) ASSY (G) (TR86/TR96/TR502E/TR503E/TR620E)		67	3-961-823-01	SPRING, L COVER	
53	X-3947-418-1	CABINET (L) ASSY (I) (R501E:AEP)		68	3-965-034-01	SPRING, COMPRESSION	
54	3-965-844-01	BUTTON, S/S		69	3-976-801-01	SPRING, SWITCHING	
55	3-965-830-01	SPRING, COMPRESSION		70	3-974-215-01	BUTTON, P LOCK	
56	3-942-985-01	KNOB, STAND-BY		71	3-974-222-01	VIDEO (LIGHT SW) (TR86/TR96/TR916)	
57	3-965-870-01	PLATE, S/S JOINT		72	3-974-223-01	SLIDER, VIDEO (LIGHT) (TR86/TR96/TR916)	
58	3-965-869-01	HOLDER, KNOB		73	3-974-901-01	PLATE, F ORNAMENTAL	
59	3-730-107-01	SCREW (M2X2.2)		74	1-517-530-21	LIGHT, VIDEO (TR86/TR96/TR916)	
60	3-736-364-01	SPRING		75	1-517-531-11	LAMP	
61	1-542-315-11	MICROPHONE		76	A-7073-073-A	MA-295 BOARD, COMPLETE (TR501E/TR502E/TR503E/TR620E)	
62	3-713-791-51	SCREW (M1.7X3.5), TAPPING, P2		76	A-7073-079-A	MA-295 BOARD, COMPLETE (TR86/TR96/TR916)	
63	X-3946-321-1	GRILLE ASSY, MICROPHONE		76	A-7073-126-A	MA-295 BOARD, COMPLETE (TR506/TR506E/TR720E)	
64	X-3946-890-1	PANEL ASSY, FRONT (TR501E)		76	A-7073-140-A	MA-295 BOARD, COMPLETE (TR507/TR740E)	
64	X-3947-261-1	PANEL ASSY (VL), FRONT (TR86/TR96)		77	1-782-154-11	CABLE, FLEXIBLE FLAT 12P	
64	X-3947-317-1	PANEL ASSY (C), FRONT (TR502E/TR503E/TR620E)					

5-1-3. CABINET (R) SECTION

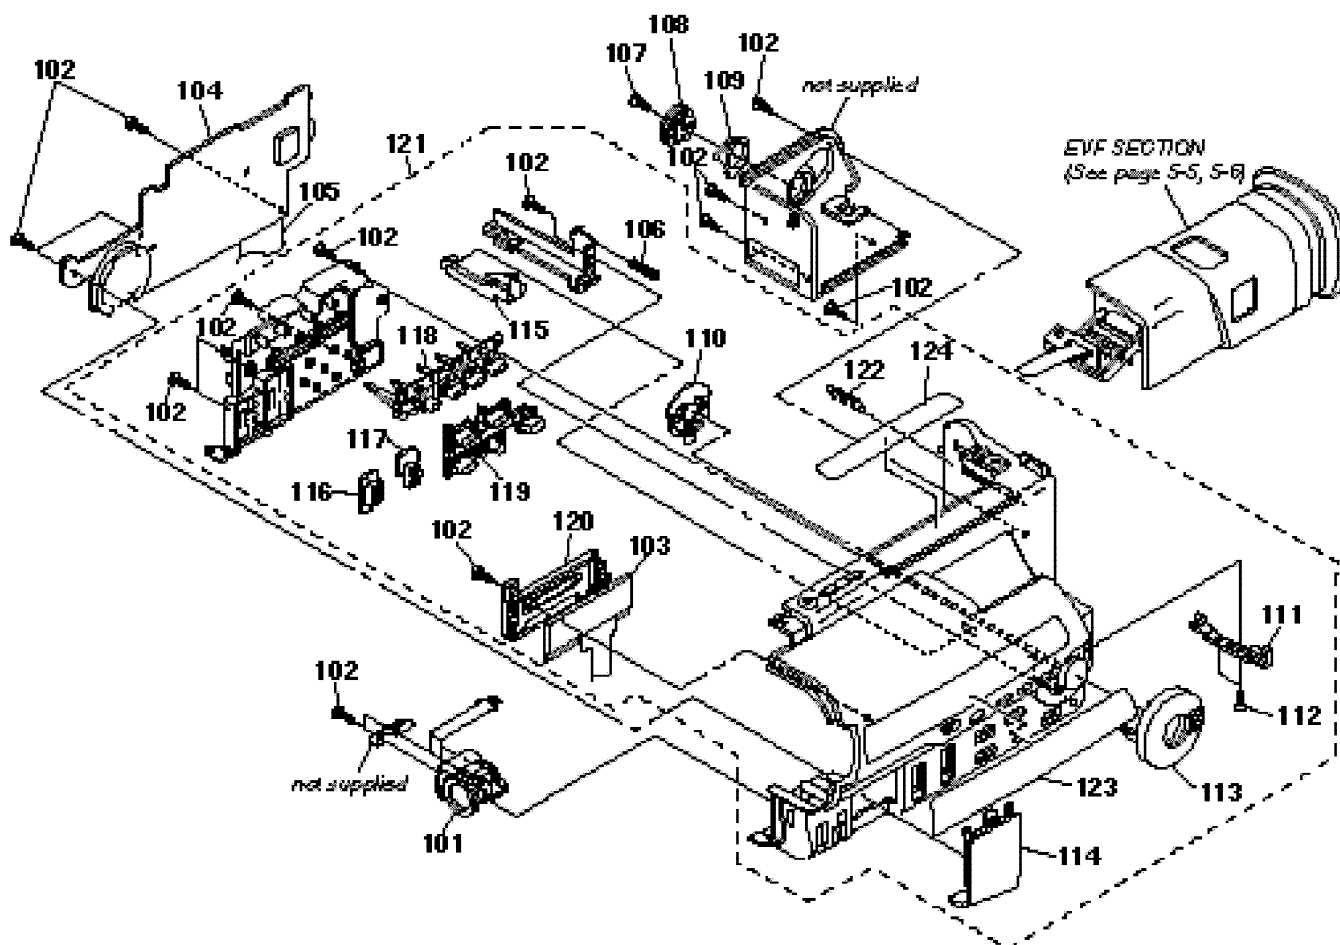


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
101	1-475-068-11	SWITCH BLOCK, CONTROL(MF-7800)		118	3-974-202-01	BUTTON (1), CF (TR501E/TR503E)	
102	3-719-601-01	SCREW (B2X5), TAPPING		118	3-974-202-11	BUTTON (1), CF (EXCEPT TR501E/TR503E)	
103	1-801-697-21	DISPLAY PANEL, LIQUID CRYSTAL		119	3-974-203-01	BUTTON (2), CF	
104	A-7093-256-A	CF-44 BOARD, COMPLETE (TR503E)				(TR506/TR501E/TR502E/TR503E/TR506E)	
104	A-7093-254-A	CF-44 BOARD, COMPLETE (TR501E)		119	3-974-203-11	BUTTON (2), CF	
						(TR86/TR96/TR507/TR916/TR620E/TR720E/TR740E)	
104	A-7093-260-A	CF-44 BOARD, COMPLETE (TR96/TR916)		* 120	3-944-328-01	COVER, LIQUID CRYSTAL (TR916)	
104	A-7093-258-A	CF-44 BOARD, COMPLETE					
		(TR506/TR507/TR506E)		121	X-3946-889-1	CABINET (R) ASSY (TR501E)	
104	A-7093-257-A	CF-44 BOARD, COMPLETE (TR86)		121	X-3947-260-1	CABINET (R) ASSY (MM) (TR620E/TR720E)	
104	A-7093-261-A	CF-44 BOARD, COMPLETE (TR720E/TR740E)		121	X-3947-262-1	CABINET (R) ASSY (GS) (TR96/TR740E)	
104	A-7093-259-A	CF-44 BOARD, COMPLETE (TR620E)		121	X-3947-316-1	CABINET (R) ASSY (G) (TR503E)	
				121	X-3947-345-1	CABINET (R) ASSY (LC)	
						(TR506/TR502E/TR506E)	
104	A-7093-255-A	CF-44 BOARD, COMPLETE (TR502E)		121	X-3947-371-1	CABINET (R) ASSY (W1) (TR86/TR507)	
105	1-782-153-11	CABLE, FLEXIBLE FLAT 45P		121	X-3947-435-1	CABINET (R) ASSY (BG) (TR916)	
106	3-965-846-01	SPRING, COMPRESSION		122	3-976-957-01	SPRING, TENSION	
107	3-713-790-31	SCREW (M2X8), TAPPING, P3		123	3-974-216-01	WINDOW, LCD (TR501E)	
108	3-974-325-01	FLANGE, ROTARY		123	3-974-216-11	WINDOW, LCD (TR96)	
109	3-974-326-01	FLANGE, SLIDER		123	3-974-216-21	WINDOW, LCD (TR503E)	
110	3-974-220-01	HOLDER, AE		123	3-974-216-31	WINDOW, LCD (TR506E)	
111	3-965-854-01	CLAW, BT LOCK		123	3-974-216-41	WINDOW, LCD (TR740E)	
112	3-966-178-01	SCREW (1.7)		123	3-974-216-51	WINDOW, LCD (TR86)	
113	3-974-219-01	DIAL, AE		123	3-974-216-61	WINDOW, LCD (TR620E)	
114	3-974-221-01	LID, LITHIUM (TR96/TR501E/TR740E)		123	3-974-216-81	WINDOW, LCD (TR502E)	
114	3-974-221-11	LID, LITHIUM		123	3-976-623-01	WINDOW, LCD (TR506)	
		(TR86/TR506/TR507/TR916/TR502E/		123	3-976-623-11	WINDOW, LCD (TR507)	
		TR503E/TR506E/TR620E/TR720E)		123	3-976-623-21	WINDOW, LCD (TR720E)	
115	3-965-879-01	SLIDER, BT		123	3-976-623-31	WINDOW, LCD (TR916)	
116	3-974-205-01	KNOB, 2P		124	3-975-376-01	SHEET, LETTER	
		(TR96/TR916/TR620E/TR720E/TR740)					
117	3-974-204-01	KNOB, 3P					

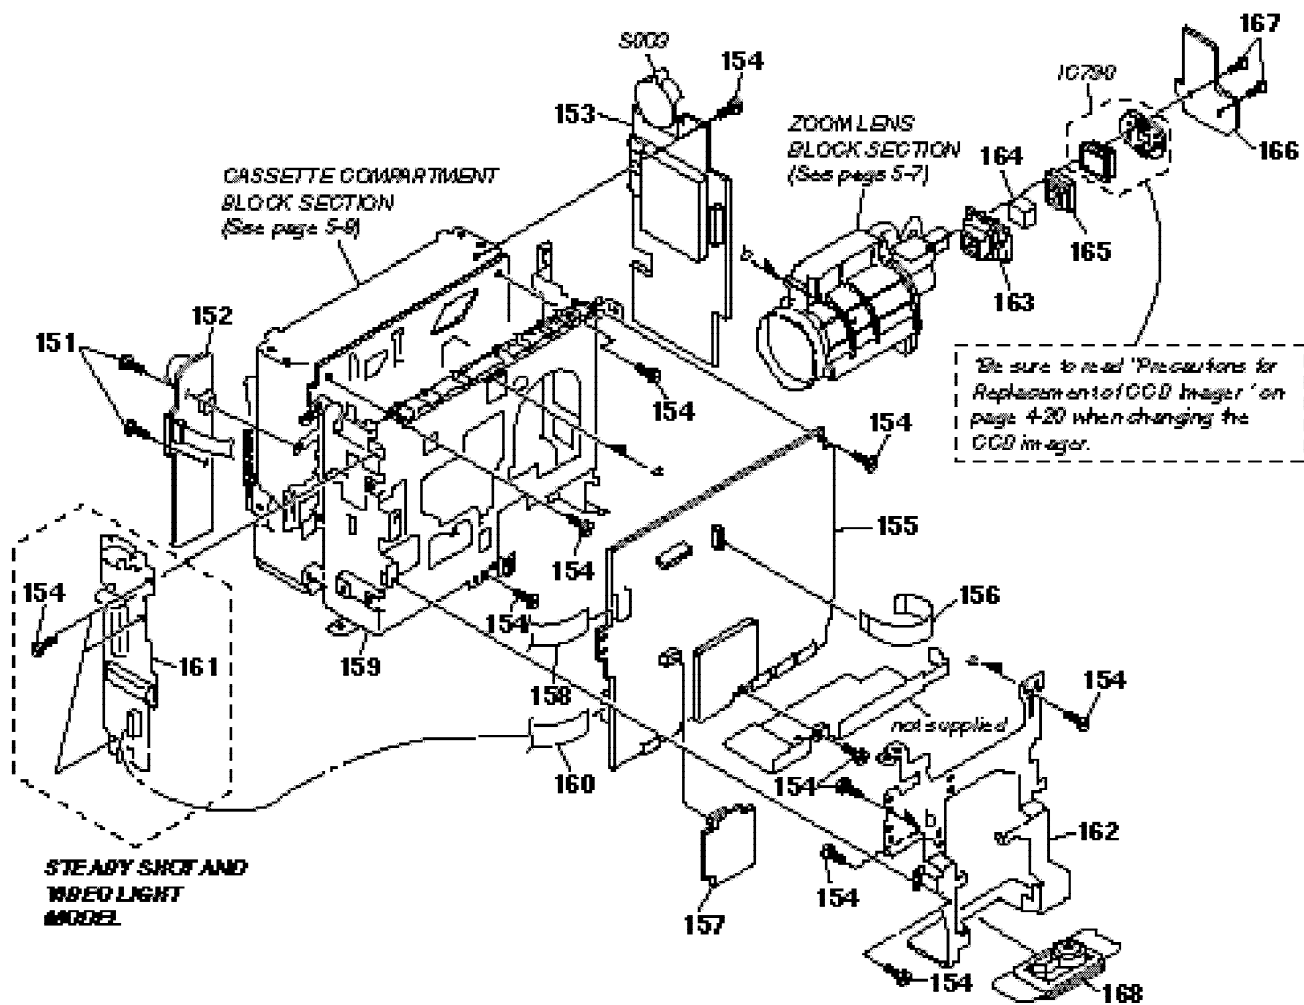


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
151	3-968-729-01	SCREW (M2), LOCK ACE, P2		161	A-7073-087-A	SE-60 BOARD, COMPLETE (TR96/TR916)	
152	A-7073-071-A	JK-153 BOARD, COMPLETE (TR501E:E/TR503E)		161	A-7073-129-A	SE-60 BOARD, COMPLETE (TR86)	
152	A-7073-076-A	JK-153 BOARD, COMPLETE (TR501E:AEP/TR502E/TR620E)		161	A-7073-145-A	SE-60 BOARD, COMPLETE (TR620E/TR720E/TR740E)	
152	A-7073-082-A	JK-153 BOARD, COMPLETE (TR86/TR96/TR916)		* 162	3-975-366-11	FRAME, LENS	
152	A-7073-125-A	JK-153 BOARD, COMPLETE (TR506/TR507/TR506E/TR720E/TR740E)		163	3-963-467-11	ADAPTOR (FH), CCD FITTING	
153	A-7093-251-A	DD-94 BOARD, COMPLETE (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		164	1-547-787-41	FILTER BLOCK, OPTICAL (TR96/TR916/TR620E/TR720E/TR740E)	
153	A-7093-252-A	DD-94 BOARD, COMPLETE (TR86/TR96/TR916)		164	1-547-924-41	FILTER BLOCK, OPTICAL (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
153	A-7093-253-A	DD-94 BOARD, COMPLETE (TR506/TR507)		165	3-961-192-01	RUBBER (FH), SEAL	
154	3-713-786-21	SCREW (M2X3)		165	3-968-054-11	RUBBER (FM), SHIELD (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
155	A-7093-241-A	VC-188 BOARD, COMPLETE (TR501E/TR503E)		166	A-7073-072-A	CD-163 BOARD, COMPLETE	
155	A-7093-249-A	VC-188 BOARD, COMPLETE (TR96/TR916)		167	3-318-203-11	SCREW (B1.7X6), TAPPING	
155	A-7093-243-A	VC-188 BOARD, COMPLETE (TR86)		168	3-965-871-01	SCREW, TRIPOD	
155	A-7093-250-A	VC-188 BOARD, COMPLETE (TR740E)		IC790	A-7030-638-A	CCD BLOCK ASSY(MN37240FP) (TR96/TR916)	
155	A-7093-245-A	VC-188 BOARD, COMPLETE (TR506E)		IC790	A-7030-779-A	CCD BLOCK ASSY(ICX207AK-13) (TR501E/TR503E)	
155	A-7093-247-A	VC-188 BOARD, COMPLETE (TR620E)		IC790	A-7030-782-A	CCD BLOCK ASSY(ICX211AK-43) (TR620E/TR720E/TR740E)	
155	A-7093-246-A	VC-188 BOARD, COMPLETE (TR507)		IC790	A-7030-785-A	CCD BLOCK ASSY(ICX206AK-43) (TR506/TR507)	
155	A-7093-244-A	VC-188 BOARD, COMPLETE (TR506)		IC790	A-7030-788-A	CCD BLOCK ASSY(ICX207AK-43) (TR502E/TR506E)	
155	A-7093-242-A	VC-188 BOARD, COMPLETE (TR502E)		IC790	A-7030-794-A	CCD BLOCK ASSY(MN37113FP) (TR86)	
155	A-7093-290-A	VC-188 BOARD, COMPLETE (TR720E)		S003	1-762-441-21	SWITCH, ROTARY (ZOOM SW)	
156	1-782-155-11	CABLE, FLEXIBLE FLAT 16P					
157	A-7073-091-A	IR-28 BOARD, COMPLETE (TR86/TR96/TR507/TR916)					
157	A-7073-142-A	IR-28 BOARD, COMPLETE (TR740E)					
158	1-665-151-11	FP-550 FLEXIBLE BOARD					
* 159	3-975-367-01	FRAME, MD					
160	1-665-150-11	FP-549 FLEXIBLE BOARD (TR86/TR96/TR916/TR620E/TR720E/TR740E)					

5-1-5. EVF SECTION (COLOR EVF MODEL)

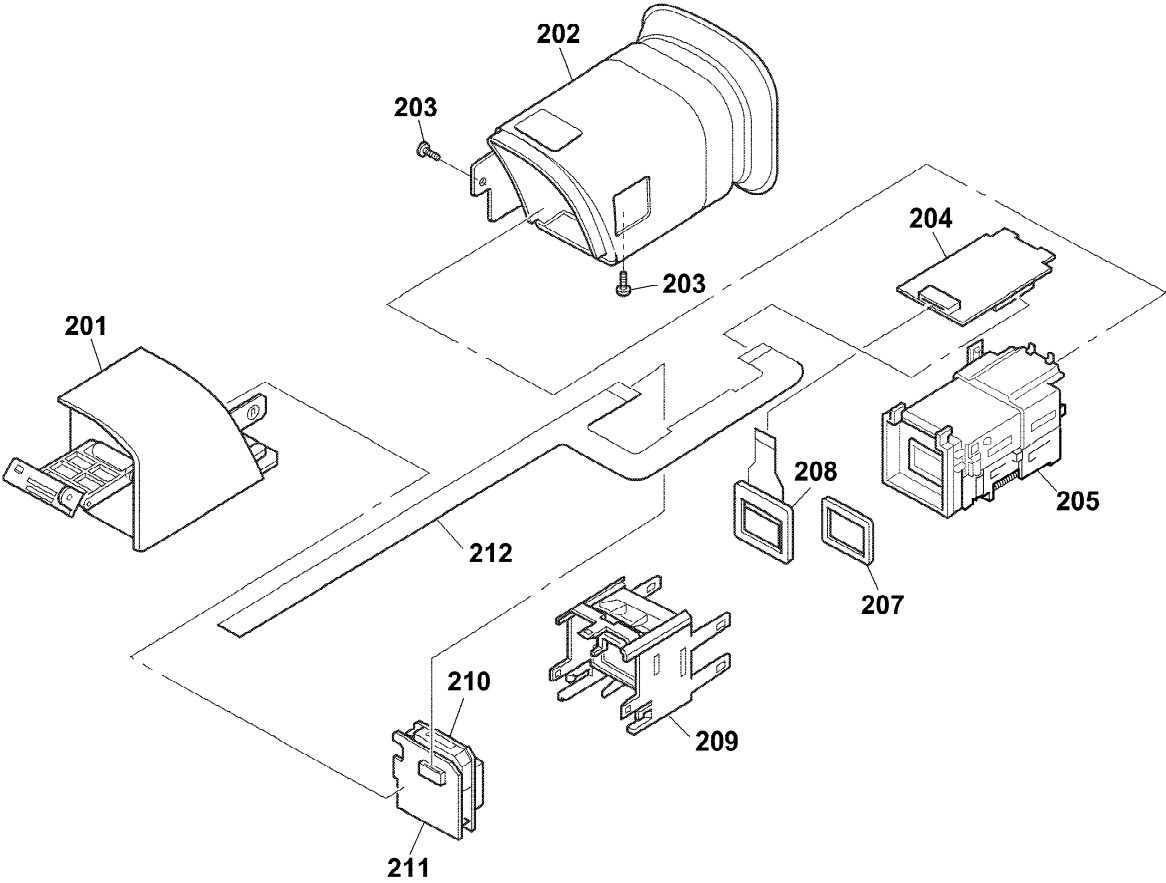

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
201	X-3946-884-1	CABINET (FRONT)(C)ASSY,EVF(EXCEPT TR916)		209	X-3946-886-1	HOLDER ASSY, PRISM	
201	X-3947-442-1	CABINET (FRONT)(G)ASSY,EVF(TR916)		210	A-7073-086-A	LB-49 BOARD, COMPLETE (TR86/TR96/TR506/TR507/TR916)	
202	X-3946-885-1	CABINET (REAR) ASSY, EVF (EXCEPT TR916)		210	A-7073-090-A	LB-49 BOARD, COMPLETE (TR503E/TR506E/TR720E/TR740E)	
202	X-3947-443-1	CABINET (REAR) (B)ASSY,EVF(TR916)		211	A-7073-084-A	VF-109 BOARD, COMPLETE (TR86/TR96/TR506/TR507/TR916)	
203	3-948-339-01	SCREW, TAPPING		211	A-7073-088-A	VF-109 BOARD, COMPLETE (TR503E/TR506E/TR720E/TR740E)	
204	A-7073-085-A	VF-110 BOARD, COMPLETE (TR86/TR96/TR506/TR507/TR916)		212	1-665-152-11	FP-551 FLEXIBLE BOARD	
204	A-7073-089-A	VF-110 BOARD, COMPLETE (TR503E/TR506E/TR720E/TR740E)					
205	X-3946-887-1	VF LENS ASSY					
* 207	3-960-302-11	CUSHION (1), LCD					
208	8-756-016-10	LCX005BK-5					

5-1-6. EVF SECTION (B/W EVF MODEL)

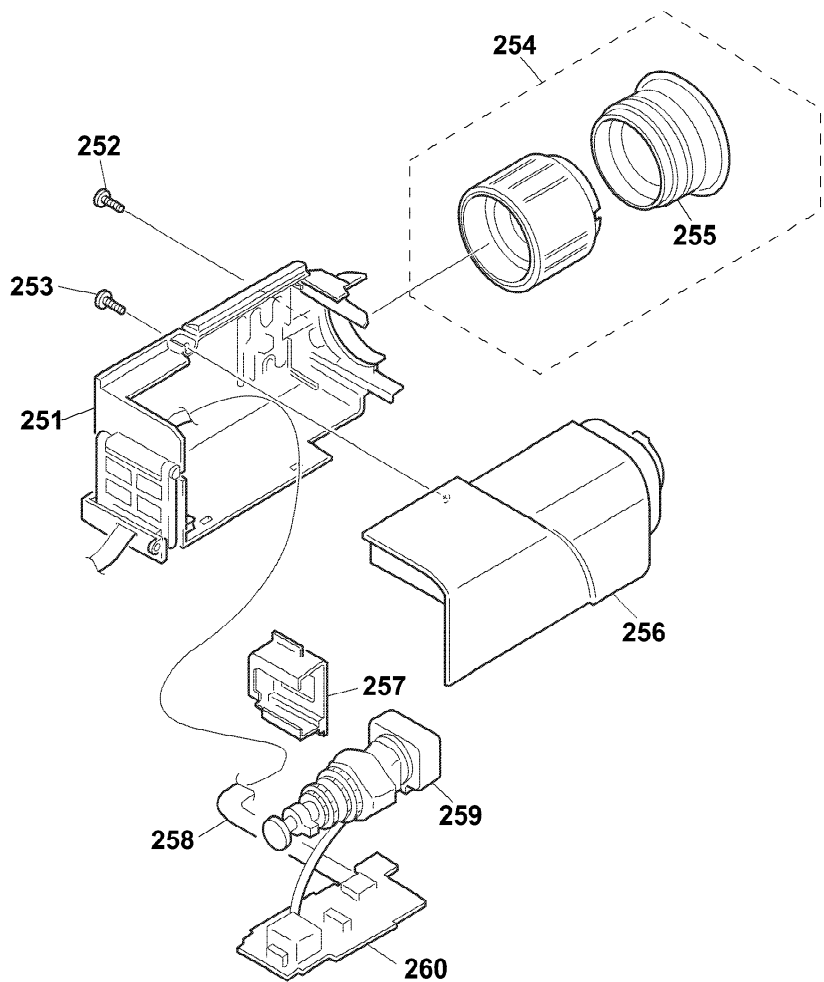


Ref. No.	Part No.	Description	Remarks
251	X-3946-883-1	CABINET (L) ASSY, EVF (TR502E/TR620E)	
251	X-3947-320-1	CABINET (L) ASSY, EVF (TR501E)	
252	3-975-898-01	SCREW(T), F LOCK	
253	3-948-339-01	SCREW, TAPPING	
254	X-3944-966-1	FINDER ASSY	
255	3-963-391-01	CUP, EYE	
256	3-974-155-01	CABINET (R), EVF (TR502E/TR620E)	

Ref. No.	Part No.	Description	Remarks
256	3-974-155-11	CABINET (R), EVF (TR501E)	
* 257	X-3947-303-1	COVER ASSY, CRT	
258	1-782-156-11	CABLE, FLEXIBLE FLAT 5P	
△ 259	1-452-673-31	CRT ASSY (M01KXX90WB)	
		(TR501E/TR502E/TR620E)	
260	A-7073-078-A	VF-102 BOARD, COMPLETE	

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.


Note :
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

5-1-7. ZOOM LENS BLOCK SECTION (LSV-510A)

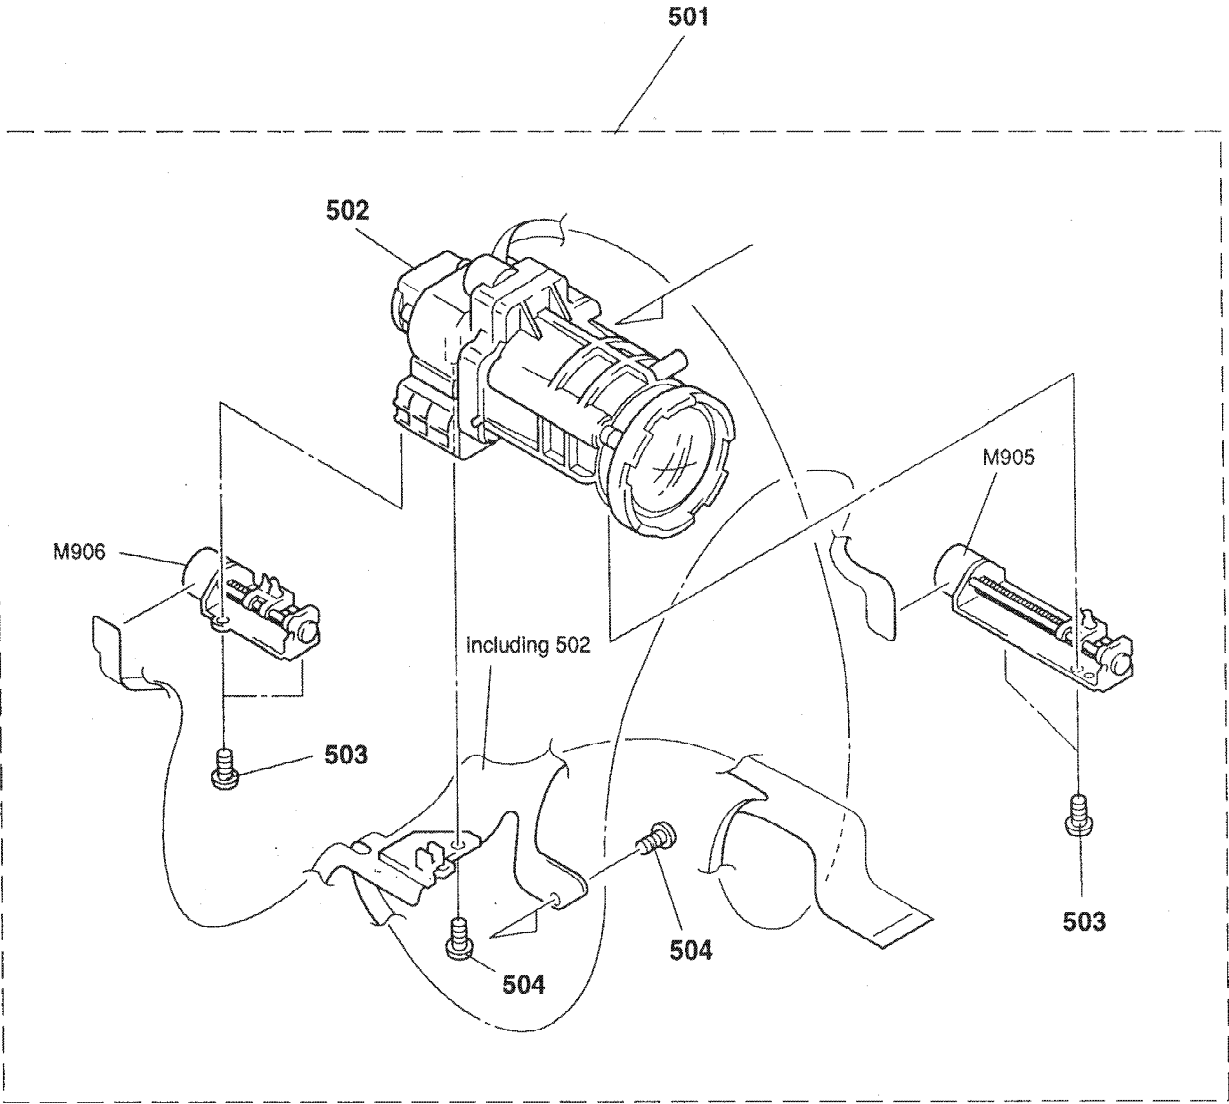


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
501	8-848-710-01	LENS, ZOOM (LSV-510A)		504	3-708-302-01	SCREW (BT3 P1.7X4C)	
502	A-4910-808-A	LSV-510A LENS DEVICE		M905	1-698-760-01	STEPPING MOTOR (FOCUS)	
503	3-713-791-41	SCREW (M1.7X5), TAPPING, P2		M906	1-698-759-01	STEPPING MOTOR (ZOOM)	

5-1-8. CASSETTE COMPARTMENT BLOCK SECTION

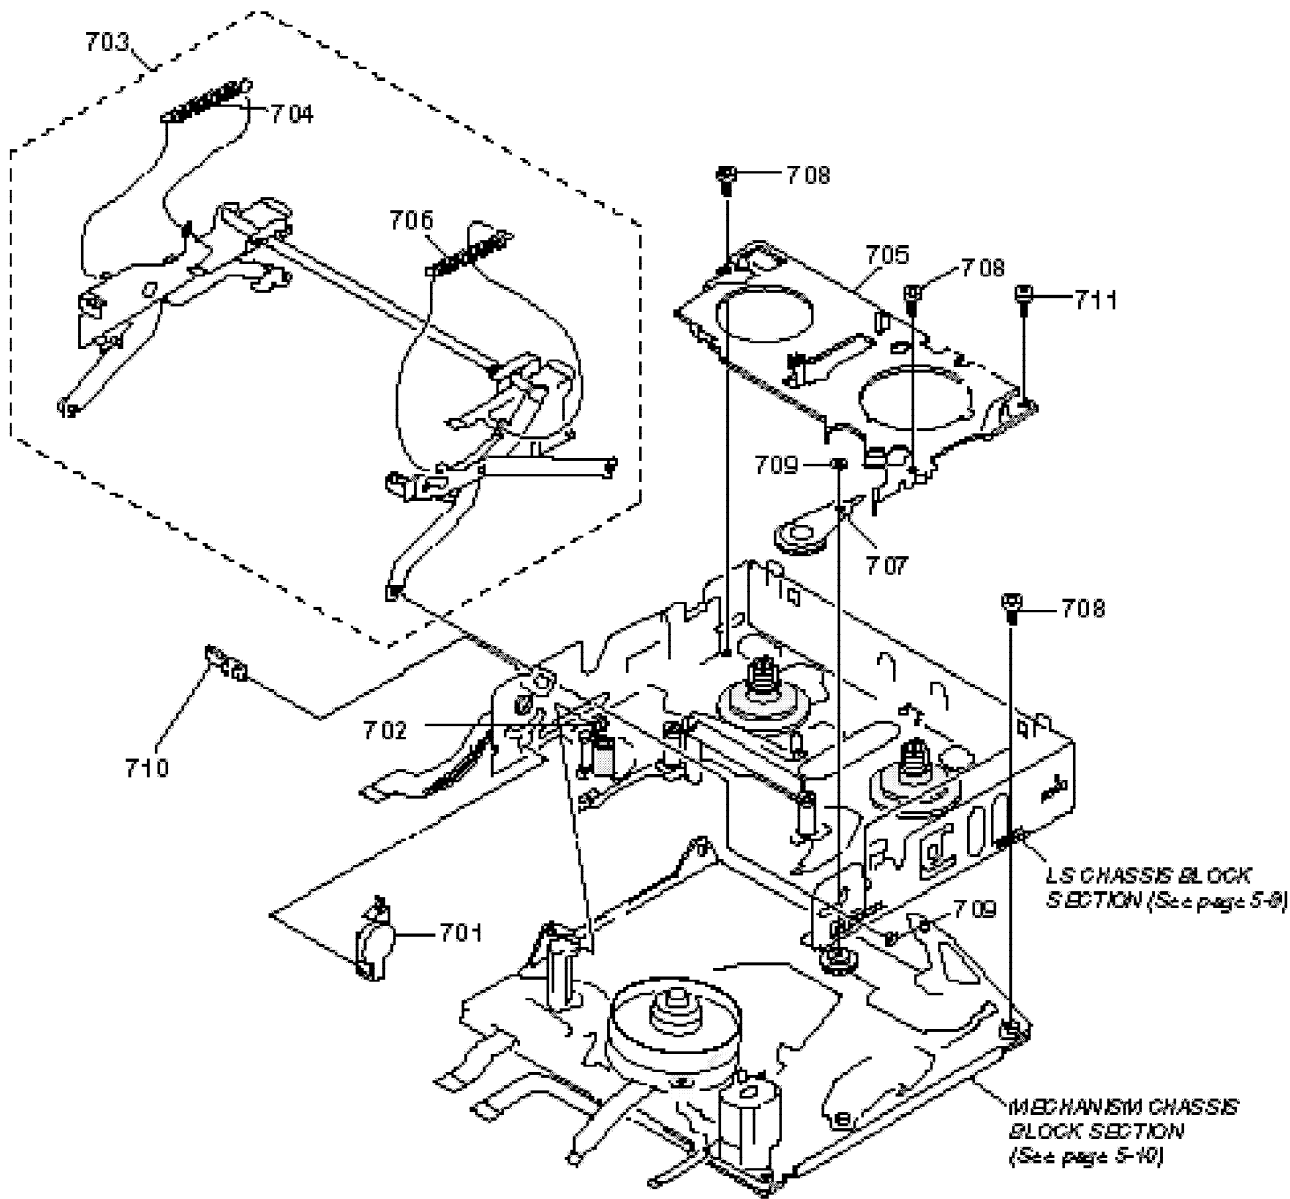


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
701	A-7040-421-A	DAMPER ASSY		707	X-3945-399-1	GEAR ASSY, GOOSENECK	
702	7-624-102-04	STOP RING 1.5, TYPE -E		708	3-947-503-01	SCREW (M1.4X2.5)	
703	X-3945-400-1	CASSETTE COMPARTMENT ASSY		709	3-727-176-01	WASHER	
704	3-965-587-03	SPRING, TENSION		710	3-971-076-01	FASTENER, D	
705	3-965-584-01	RETAINER, GOOSENECK		711	3-976-055-01	SCREW (M1.4X1)	
706	3-973-268-01	SPRING, TENSION					

5-1-9. LS CHASSIS BLOCK SECTION

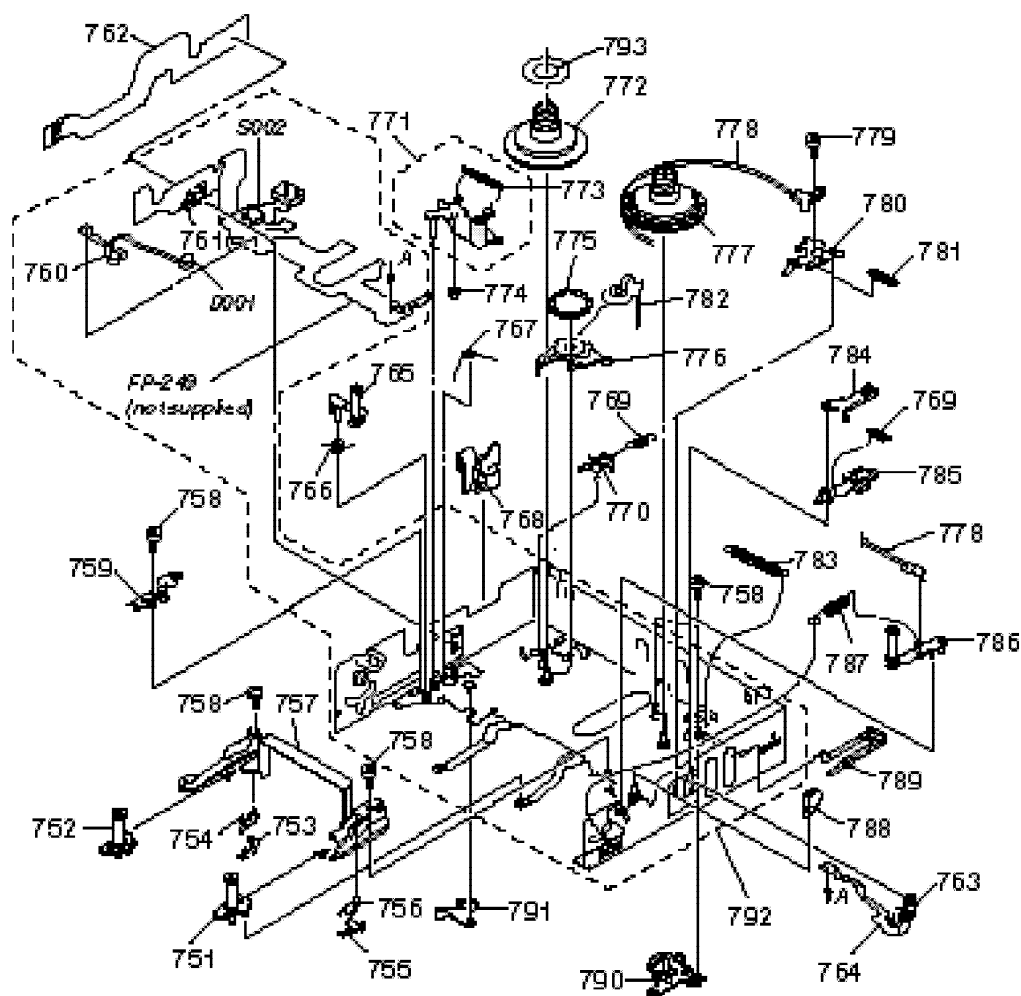

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
751	A-7040-419-A	BASE (S) BLOCK ASSY, GUIDE		773	3-965-648-01	SPRING (PINCH), TENSION	
752	A-7040-418-B	BASE (T) BLOCK ASSY, GUIDE		774	3-965-579-01	ROLLER, PINCH PRESS	
753	3-965-559-01	STOPPER (T)		775	3-965-563-01	GEAR, T SOFT	
754	3-965-557-01	STOPPER (T), GB		776	3-965-565-01	CLAW, T SOFT	
755	3-965-558-01	STOPPER (S)		777	X-3945-397-1	DECK ASSY, REEL, S	
756	3-965-556-01	STOPPER (S), GB		778	X-3945-396-1	BAND ASSY, TENSION REGULATOR	
757	3-965-553-01	RAIL, GUIDE		779	3-945-756-01	SCREW (M1.4X3)	
758	3-947-503-01	SCREW (M1.4X2.5)		780	3-965-583-01	ARM, RVS	
759	3-965-573-01	RETAINER, TG4		781	3-965-580-01	SPRING, TENSION	
760	1-658-213-11	FP-355 FLEXIBLE PRINT BOARD		782	3-966-384-01	SPRING, T SOFT	
761	3-965-552-01	HOLDER (T), SENSOR		783	3-965-578-01	SPRING, TENSION	
762	1-657-786-11	FP-221 FLEXIBLE BOARD		784	3-965-560-01	RATCHET, S	
763	3-965-551-01	HOLDER (S), SENSOR		785	3-965-561-01	PLATE, RELEASE, S RATCHET	
764	1-658-214-11	FP-356 FLEXIBLE PRINT BOARD		786	X-3945-395-1	ARM ASSY, TG1	
765	A-7040-417-A	ARM BLOCK ASSY, TG4		787	3-965-576-01	SPRING (TG1), TENSION	
766	3-965-574-01	SPRING, TORSION		788	3-965-567-01	LID OPEN	
767	3-965-575-01	SPRING (PINCH), TORSION		789	3-965-566-01	COVER, LS GUIDE	
768	3-965-568-01	GUIDE, LOCK		* 790	3-965-577-01	PLATE, CAM, LS	
769	3-965-562-01	SPRING (RATCHET), TENSION		791	3-965-569-01	ARM, EJ	
770	3-965-581-01	RATCHET, T		792	A-7040-427-A	CHASSIS (S1) ASSY, LS	
771	X-3945-394-1	ARM ASSY, PINCH		* 793	3-972-838-01	SPACER, REEL	
772	X-3945-398-1	DECK ASSY, REEL, T		D001	8-719-988-42	DIODE GL453	
				S002	1-572-688-11	SWITCH, PUSH (1 KEY)(C.C.LOCK)	

5-1-10. MECHANISM CHASSIS BLOCK SECTION

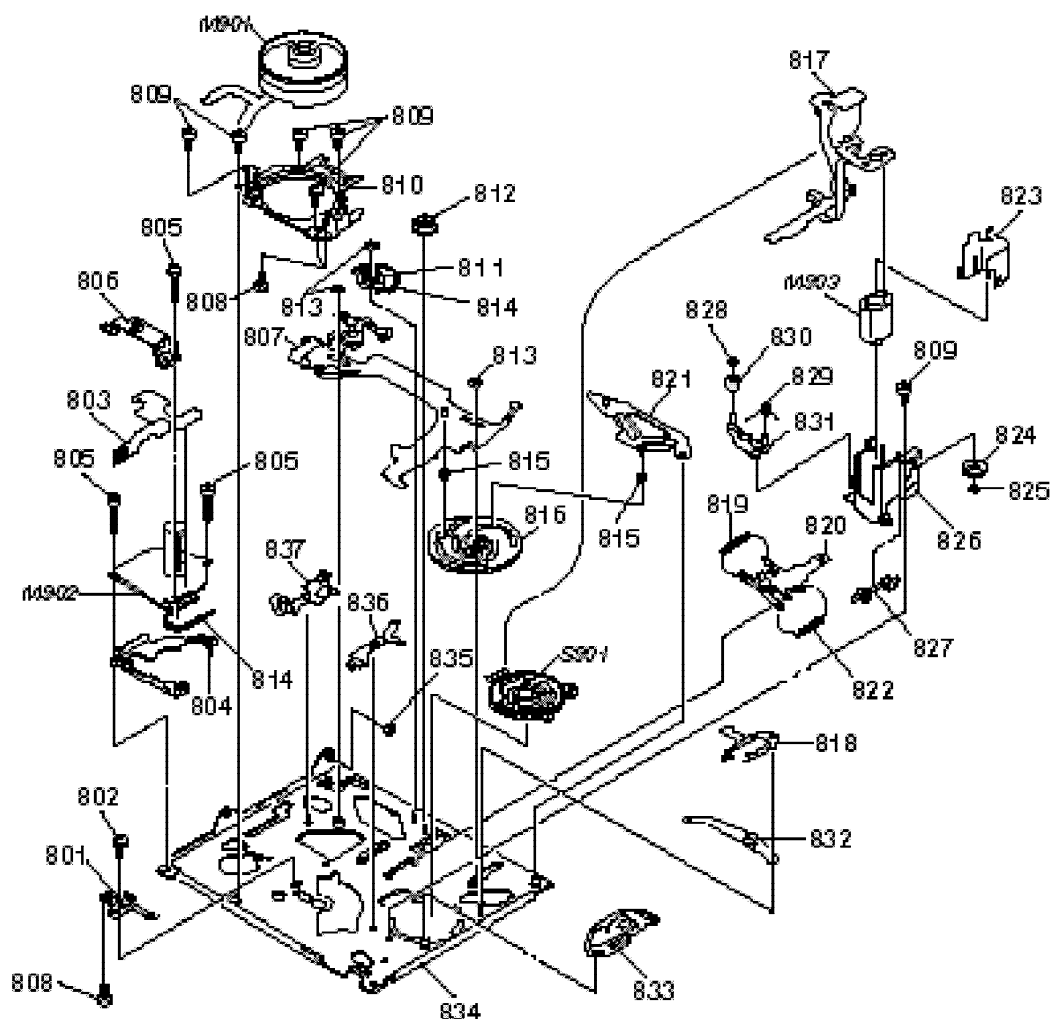

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
801	X-3947-343-1	GROUND (IM) ASSY, SHAFT		822	3-965-535-01	SPRING, TENSION	
802	3-965-550-02	SCREW (M1.7X1.6)		823	3-965-542-01	SHIELD, MOTOR	
803	1-657-785-11	FP-248 FLEXIBLE BOARD		824	3-965-539-01	GEAR (A)	
804	3-965-545-01	SPACER, CAPSTAN		825	3-965-538-01	SLEEVE, MOTOR HOLDER	
805	3-965-549-01	SCREW (M1.4 X 6.5)		826	3-965-540-01	HOLDER, MOTOR	
806	3-966-349-01	HOLDER, FLEXIBLE		827	3-965-541-01	SHAFT, WORM	
807	3-971-644-01	SLIDER (2), M		828	3-321-393-01	WASHER, STOPPER	
808	3-965-588-11	SCREW (M1.4)		829	3-965-724-01	SPRING, TORSION	
809	3-947-503-01	SCREW (M1.4X2.5)		830	A-7040-423-A	ROLLER BLOCK ASSY, HC	
810	A-7040-416-A	BASE BLOCK ASSY, DRUM		831	X-3945-407-1	ARM ASSY, HC ROLLER	
811	3-965-527-01	GEAR, CHANGE		832	3-965-531-01	ARM, GL	
812	3-965-544-01	GEAR, RELAY		833	3-965-530-01	PLATE (2), REGULATOR, TENSION	
813	3-331-007-21	WASHER		834	X-3946-548-2	CHASSIS ASSY, MECHANICAL	
814	3-965-546-01	BELT, TIMING		835	3-965-526-02	ROLLER, LS GUIDE	
815	3-965-533-01	ROLLER, LS		836	3-965-547-01	ARM, HC DRIVING	
816	3-965-528-01	GEAR, CAM		837	3-965-534-01	PLATE, PRESS, PINCH	
817	1-657-784-11	FP-220 FLEXIBLE BOARD		M901	A-7048-851-A	DRUM BLOCK ASSY (DGH-0D5A-R)(PAL)	
818	3-965-529-01	PLATE, REGULATOR, TENSION		M901	A-7048-849-A	DRUM BLOCK ASSY (DGH-0D4A-R)(NTSC)	
819	3-965-536-01	SPRING, TENSION		M902	8-835-531-01	MOTOR, DC SCE-0601A (CAPSTAN)	
820	X-3945-388-1	SLIDER ASSY, GL		M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
821	3-965-532-01	ARM, LS		S901	1-762-436-15	SWITCH, ROTARY (ENCODER)	

5-2. ELECTRICAL PARTS LIST

NOTE:

When indicating parts by reference number, please include the board name.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS:
uF: μ F
- RESISTORS
All resistors are in ohms.
METAL: metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- COILS
uH: μ H
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA..., μ PA...,
uPB..., μ PB..., uPC..., μ PC...,
uPD..., μ PD...

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
	A-7073-072-A	CD-163 BOARD, COMPLETE ***** (Ref.No.2,000 Series)			A-7093-254-A	CF-44 BOARD,COMPLETE(TR501E) *****	
		< CAPACITOR >			A-7093-255-A	CF-44 BOARD,COMPLETE(TR502E) *****	
C401	1-164-156-11	CERAMIC CHIP 0.1uF	25V		A-7093-256-A	CF-44 BOARD,COMPLETE(TR503E) *****	
C405	1-126-603-11	ELECT CHIP 4.7uF	20% 35V		A-7093-258-A	CF-44 BOARD,COMPLETE (TR506/TR507/TR506E) *****	
C406	1-126-603-11	ELECT CHIP 4.7uF	20% 35V				
		< CONNECTOR >			A-7093-259-A	CF-44 BOARD,COMPLETE(TR620E) *****	
CN401	1-691-380-21	CONNECTOR, FFC/FPC 16P			A-7093-261-A	CF-44 BOARD,COMPLETE(TR720E/TR740E) *****	
		< IC >			A-7093-257-A	CF-44 BOARD,COMPLETE(TR86) *****	
IC790	A-7030-638-A	CCD BLOCK ASSY(MN37240FP) (TR96/TR916)			A-7093-260-A	CF-44 BOARD,COMPLETE(TR96/TR916) ***** (Ref.No.2,000 Series)	
IC790	A-7030-779-A	CCD BLOCK ASSY(ICX207AK-13) (TR501E/TR503E)					
IC790	A-7030-782-A	CCD BLOCK ASSY(ICX211AK-43) (TR620E/TR720E/TR740E)			3-831-441-XX	CUSHION (5)	
IC790	A-7030-785-A	CCD BLOCK ASSY(ICX206AK-43) (TR506/TR507)				< BATTERY >	
IC790	A-7030-788-A	CCD BLOCK ASSY(ICX207AK-43) (TR502E/TR506E)			BH401	1-550-104-11	HOLDER, BATTERY
IC790	A-7030-794-A	CCD BLOCK ASSY(MN37113FP) (TR86)				< BUZZER >	
		< COIL >			BZ401	1-529-104-11	BUZZER, PIEZOELECTRIC
L401	1-414-757-11	INDUCTOR 100uH				< CAPACITOR >	
		< TRANSISTOR >			C403	1-164-346-11	CERAMIC CHIP 1uF 16V (TR96/TR916)
Q401	8-729-232-86	TRANSISTOR 2SK1875-(TE85L)			C404	1-164-346-11	CERAMIC CHIP 1uF 16V (TR96/TR916)
Q402	8-729-117-73	TRANSISTOR 2SC4178-F13F14-T1					
		< RESISTOR >			C406	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V
R403	1-216-833-11	METAL CHIP 10K 5% 1/16W			C407	1-164-156-11	CERAMIC CHIP 0.1uF 25V
R404	1-216-829-11	METAL CHIP 4.7K 5% 1/16W			C408	1-107-682-11	CERAMIC CHIP 1uF 10% 16V
R407	1-216-295-91	CONDUCTOR, CHIP (2012)					
					C409	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V
					C411	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V
					C412	1-164-156-11	CERAMIC CHIP 0.1uF 25V
					C413	1-164-156-11	CERAMIC CHIP 0.1uF 25V
					C414	1-126-607-11	ELECT CHIP 47uF 20% 4V
					C415	1-162-919-11	CERAMIC CHIP 22PF 5% 50V
					C416	1-162-919-11	CERAMIC CHIP 22PF 5% 50V
					C417	1-128-003-11	ELECT CHIP 22uF 20% 4V
					C418	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V
					C419	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V
					C421	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V
					C422	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V
					C423	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V
					C424	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V
					C425	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V

Ref. No.	Part No.	Description	Remarks
C426	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C427	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C428	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C429	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C430	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C431	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C432	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C433	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
C434	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C435	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C437	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C464	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	(EXCEPT TR502E)
< CONNECTOR >			
CN401	1-766-866-21	CONNECTOR, FFC/FPC 6P	
CN402	1-774-054-21	CONNECTOR, FFC/FPC (ZIF) 45P	
CN403	1-779-353-21	CONNECTOR, FFC/FPC 5P	(TR501E/TR502E/TR620E)
CN404	1-750-630-11	CONNECTOR, FFC/FPC (ZIF) 16P	(TR86/TR96/TR506/TR507/TR916/TR503E/TR506E/TR720E/TR740E)
CN408	1-573-929-11	CONNECTOR, FFC/FPC (ZIF) 20P	
< DIODE >			
D401	8-719-404-49	DIODE MA111-TX (EXCEPT TR96/TR916)	
D402	8-719-059-51	DIODE MA3J142E0LSO	
D405	8-719-059-57	DIODE MAZJ082DFLSO	
D406	8-719-420-14	DIODE MA8082-TX	
D407	8-719-420-14	DIODE MA8082-TX	
D410	8-719-404-49	DIODE MA111-TX	
D411	8-719-420-14	DIODE MA8082-M (TR620E/TR720E/TR740E)	
D414	8-719-421-27	DIODE MA728-TX	
D415	8-719-404-49	DIODE MA111-TX	
D418	8-719-059-57	DIODE MAZJ082DFLSO	(EXCEPT TR96/TR916)
D419	8-719-404-49	DIODE MA111-TX	
D420	8-719-059-57	DIODE MAZJ082DFLSO	(EXCEPT TR96/TR916)
D422	8-719-404-49	DIODE MA111-TX	
D425	8-719-420-14	DIODE MA8082-TX	
D426	8-719-420-14	DIODE MA8082-TX	
D430	8-719-404-49	DIODE MA111-TX	
D431	8-719-061-82	DIODE TLSU1002(TPX1,SONY)	
D432	8-719-059-57	DIODE MAZJ082DFLSO	(EXCEPT TR96/TR916)
D437	8-719-059-57	DIODE MAZJ082DFLSO (EXCEPT TR501E)	
D438	8-719-059-57	DIODE MAZJ082DFLSO (EXCEPT TR501E)	
< IC >			
IC401	8-759-298-10	IC S-8423NFS-T2	
IC402	8-759-449-48	IC MB89098RPFV-G-152-BND	
IC403	8-759-059-05	IC TL1596CPW-ELM1000	
< JACK >			
J401	1-565-276-21	JACK, ULTRA SMALL 1P (LANC)	
< COIL >			
L401	1-414-078-11	INDUCTOR 10uH	
L402	1-412-963-11	INDUCTOR 100uH	

Ref. No.	Part No.	Description	Remarks
		< IC LINK >	
△ PS401	1-576-122-21	LINK, IC	
< TRANSISTOR >			
Q401	8-729-015-76	TRANSISTOR UN5211-TX	
Q409	8-729-823-16	TRANSISTOR 2SC4555-5.6.7-TL	
Q410	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	(R86/TR96/TR916)
Q411	8-729-023-89	TRANSISTOR 2SJ305(TE85L)	
Q412	8-729-015-76	TRANSISTOR UN5211-TX	
Q413	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	(R86/TR96/TR916)
< RESISTOR >			
R401	1-216-864-11	METAL CHIP 0 5% 1/16W	
R402	1-216-864-11	METAL CHIP 0 5% 1/16W	
R408	1-216-853-11	METAL CHIP 470K 5% 1/16W	
R409	1-216-811-11	METAL CHIP 150 5% 1/16W	(TR96/TR916/TR501E/TR503E)
R409	1-216-817-11	METAL CHIP 470 5% 1/16W	(TR86/TR506/TR507/TR502E/TR506E/TR620E/TR720E/TR740E)
R410	1-216-805-11	METAL CHIP 47 5% 1/16W	(TR502E)
R410	1-216-809-11	METAL CHIP 100 5% 1/16W	(EXCEPT TR502E)
R411	1-216-864-11	METAL CHIP 0 5% 1/16W	
R414	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R418	1-216-853-11	METAL CHIP 470K 5% 1/16W	
R419	1-216-849-11	METAL CHIP 220K 5% 1/16W	(TR86/TR96/TR916)
R420	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R421	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R422	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R423	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R425	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	(EXCEPT TR501E/TR503E)
R426	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R427	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R428	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R429	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R430	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R431	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R432	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R433	1-216-864-11	METAL CHIP 0 5% 1/16W	
R434	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R437	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R438	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R439	1-216-853-11	METAL CHIP 470K 5% 1/16W	
R440	1-216-864-11	METAL CHIP 0 5% 1/16W	
R441	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R442	1-216-821-11	METAL CHIP 1K 5% 1/16W	(TR96/TR916)
R442	1-216-864-11	METAL CHIP 0 5% 1/16W	(EXCEPT TR96/TR916)
R443	1-216-864-11	METAL CHIP 0 5% 1/16W	
R444	1-216-864-11	METAL CHIP 0 5% 1/16W	
R445	1-216-853-11	METAL CHIP 470K 5% 1/16W	
R446	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R447	1-216-817-11	METAL CHIP 470 5% 1/16W	
R448	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R449	1-216-824-11	METAL CHIP	1.8K 5% 1/16W	R505	1-216-809-11	METAL CHIP	100 5% 1/16W
R450	1-216-823-11	METAL CHIP	1.5K 5% 1/16W	R506	1-216-826-11	METAL CHIP	2.7K 5% 1/16W
R451	1-216-822-11	METAL CHIP	1.2K 5% 1/16W	R507	1-216-817-11	METAL CHIP	470 5% 1/16W
R452	1-216-857-11	METAL CHIP	1M 5% 1/16W				(TR96/TR916)
R453	1-216-833-11	METAL CHIP	10K 5% 1/16W	R507	1-216-864-11	METAL CHIP	0 5% 1/16W
R454	1-216-851-11	METAL CHIP	330K 5% 1/16W				(EXCEPT TR96/TR916)
R455	1-216-821-11	METAL CHIP	1K 5% 1/16W	R508	1-216-817-11	METAL CHIP	470 5% 1/16W
R456	1-218-911-11	METAL GLAZE	470K 0.50% 1/16W				(TR96/TR916)
R457	1-216-821-11	METAL CHIP	1K 5% 1/16W	R508	1-216-864-11	METAL CHIP	0 5% 1/16W
							(EXCEPT TR96/TR916)
R458	1-216-821-11	METAL CHIP	1K 5% 1/16W	R509	1-216-821-11	METAL CHIP	1K 5% 1/16W
R459	1-218-903-11	METAL GLAZE	220K 0.50% 1/16W	R510	1-216-817-11	METAL CHIP	470 5% 1/16W
R460	1-216-864-11	METAL CHIP	0 5% 1/16W				(TR96/TR916)
R461	1-216-864-11	METAL CHIP	0 5% 1/16W	R510	1-216-864-11	METAL CHIP	0 5% 1/16W
R462	1-216-853-11	METAL CHIP	470K 5% 1/16W				(EXCEPT TR96/TR916)
R463	1-216-821-11	METAL CHIP	1K 5% 1/16W	R511	1-216-817-11	METAL CHIP	470 5% 1/16W
R464	1-216-827-11	METAL CHIP	3.3K 5% 1/16W				(TR96/TR916)
R465	1-216-821-11	METAL CHIP	1K 5% 1/16W	R511	1-216-864-11	METAL CHIP	0 5% 1/16W
R467	1-216-821-11	METAL CHIP	1K 5% 1/16W				(EXCEPT TR96/TR916)
R468	1-216-826-11	METAL CHIP	2.7K 5% 1/16W	R514	1-216-833-11	METAL CHIP	10K 5% 1/16W
R469	1-216-853-11	METAL CHIP	470K 5% 1/16W	R526	1-216-864-11	METAL CHIP	0 5% 1/16W
R470	1-216-853-11	METAL CHIP	470K 5% 1/16W	R527	1-216-864-11	METAL CHIP	0 5% 1/16W
R471	1-216-853-11	METAL CHIP	470K 5% 1/16W	R530	1-216-821-11	METAL CHIP	1K 5% 1/16W
R473	1-216-853-11	METAL CHIP	470K 5% 1/16W				(TR86/TR96/TR506/TR507/TR916/TR503E/TR506E/TR720E/TR740E)
R474	1-216-853-11	METAL CHIP	470K 5% 1/16W	R534	1-216-864-11	METAL CHIP	0 5% 1/16W
R475	1-216-833-11	METAL CHIP	10K 5% 1/16W	R535	1-216-838-11	METAL CHIP	27K 5% 1/16W
R476	1-216-833-11	METAL CHIP	10K 5% 1/16W				(TR501E/TR502E/TR620E)
R477	1-216-833-11	METAL CHIP	10K 5% 1/16W	R536	1-216-839-11	METAL CHIP	33K 5% 1/16W
R478	1-216-833-11	METAL CHIP	10K 5% 1/16W				(TR501E/TR502E/TR620E)
R479	1-216-833-11	METAL CHIP	10K 5% 1/16W			< SWITCH >	
R480	1-216-845-11	METAL CHIP	100K 5% 1/16W	S401	1-771-025-21	SWITCH, ROTARY (ENCODER)	
R481	1-216-833-11	METAL CHIP	10K 5% 1/16W				(MENU CONTOROL)
				S403	1-762-650-21	SWITCH, SLIDE (STEADY SHOT)	
R481	1-216-821-11	METAL CHIP	1K 5% 1/16W				(TR96/TR916/TR620E/TR720E/TR740E)
				S404	1-762-982-11	SWITCH, TACTILE (16:9 WIDE) (TR502E)	
R482	1-216-845-11	METAL CHIP	100K 5% 1/16W	S404	1-771-106-11	SWITCH, TACTILE (16:9 WIDE)	
R483	1-216-833-11	METAL CHIP	10K 5% 1/16W				(TR86/TR96/TR506/TR507/TR916/TR506E/TR620E/TR720E/TR740E)
				S405	1-762-982-11	SWITCH, TACTILE (COUNTER RESET) (TR502E)	
R483	1-216-821-11	METAL CHIP	1K 5% 1/16W	S405	1-771-106-11	SWITCH, TACTILE (COUNTER RESET)	
							(EXCEPT TR502E)
R484	1-216-821-11	METAL CHIP	1K 5% 1/16W	S406	1-762-982-11	SWITCH, TACTILE (TIME) (TR502E)	
R486	1-216-821-11	METAL CHIP	1K 5% 1/16W	S406	1-771-106-11	SWITCH, TACTILE (TIME) (EXCEPT TR502E)	
R487	1-216-821-11	METAL CHIP	1K 5% 1/16W	S408	1-762-982-11	SWITCH, TACTILE (DISPLAY)(TR502E)	
R488	1-216-821-11	METAL CHIP	1K 5% 1/16W	S408	1-771-106-11	SWITCH, TACTILE (DISPLAY)(EXCEPT TR502E)	
R489	1-216-821-11	METAL CHIP	1K 5% 1/16W	S409	1-762-982-11	SWITCH, TACTILE (FADER)	
R490	1-216-821-11	METAL CHIP	1K 5% 1/16W	S410	1-762-982-11	SWITCH, TACTILE (BACK LIGHT) (TR502E)	
R491	1-216-821-11	METAL CHIP	1K 5% 1/16W	S410	1-771-106-11	SWITCH, TACTILE (BACK LIGHT)	
							(EXCEPT TR502E)
R492	1-216-841-11	METAL CHIP	47K 5% 1/16W	S411	1-762-982-11	SWITCH, TACTILE (DATE) (TR502E)	
R493	1-216-841-11	METAL CHIP	47K 5% 1/16W	S411	1-771-106-11	SWITCH, TACTILE (DATE) (EXCEPT TR502E)	
R494	1-216-821-11	METAL CHIP	1K 5% 1/16W	S412	1-762-982-11	SWITCH, TACTILE (TITLE) (TR502E)	
R495	1-216-841-11	METAL CHIP	47K 5% 1/16W	S412	1-771-106-11	SWITCH, TACTILE (TITLE) (EXCEPT TR502E)	
R496	1-216-864-11	METAL CHIP	0 5% 1/16W	S413	1-762-982-11	SWITCH, TACTILE (PICTURE EFFECT)(TR502E)	
				S413	1-771-106-11	SWITCH, TACTILE (PICTURE EFFECT)	
R500	1-216-822-11	METAL CHIP	1.2K 5% 1/16W				(EXCEPT TR502E)
R501	1-216-823-11	METAL CHIP	1.5K 5% 1/16W	S414	1-762-982-11	SWITCH, TACTILE (MENU) (TR502E)	
R502	1-216-831-11	METAL CHIP	6.8K 5% 1/16W	S414	1-771-106-11	SWITCH, TACTILE (MENU) (EXCEPT TR502E)	
R503	1-216-845-11	METAL CHIP	100K 5% 1/16W	S415	1-762-648-21	SWITCH, SLIDE (START/STOP MODE)	
R504	1-216-845-11	METAL CHIP	100K 5% 1/16W	S416	1-762-442-21	SWITCH, ROTARY (PROGRAM AE)	

Ref. No.	Part No.	Description	Remarks
< VIBRATOR >			
X401	1-579-463-11	VIBRATOR, CRYSTAL 32kHz	
X402	1-579-369-21	VIBRATOR, 10MHz	
A-7093-251-A DD-94 BOARD, COMPLETE			

(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)			
A-7093-253-A DD-94 BOARD, COMPLETE (TR506/TR507)			

A-7093-252-A DD-94 BOARD, COMPLETE (TR86/TR96/TR916)			

(Ref.No.1,000 Series)			
< BATTERY >			
BH001	1-537-241-11	TERMINAL BOARD (BATTERY)	
< CAPACITOR >			
C001	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C002	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C003	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C004	1-162-957-11	CERAMIC CHIP 220PF 5% 50V	
C005	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C006	1-162-965-11	CERAMIC CHIP 0.0015uF 10% 50V	
C007	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C008	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C009	1-164-677-11	CERAMIC CHIP 0.033uF 10% 16V	
C010	1-128-004-11	ELECT CHIP 10uF 20% 16V	
C011	1-126-395-11	ELECT 22uF 20% 16V	
C013	1-128-065-11	ELECT 68uF 20% 10V	
C014	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C016	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C018	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C019	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C022	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C024	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C025	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C026	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C027	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C028	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C029	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C031	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C032	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C033	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C034	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C035	1-107-682-11	CERAMIC CHIP 1uF 10% 16V	
C036	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C037	1-107-682-11	CERAMIC CHIP 1uF 10% 16V	
C038	1-126-607-11	ELECT CHIP 47uF 20% 4V	
C039	1-164-346-11	CERAMIC CHIP 1uF 16V	
C040	1-164-346-11	CERAMIC CHIP 1uF 16V	
C041	1-164-346-11	CERAMIC CHIP 1uF 16V	
C042	1-124-778-00	ELECT CHIP 22uF 20% 6.3V	
C043	1-107-682-11	CERAMIC CHIP 1uF 10% 16V	
C044	1-164-346-11	CERAMIC CHIP 1uF 16V	
C045	1-126-395-11	ELECT 22uF 20% 16V	
C046	1-128-006-11	ELECT CHIP 4.7uF 20% 25V	
C049	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V	
(TR86/TR96/TR916)			

Ref. No.	Part No.	Description	Remarks
< CONNECTOR >			
* CN003	1-691-935-11	CONNECTOR, BOARD TO BOARD 38P	
CN005	1-770-620-21	PIN, CONNECTOR 3P (TR86/TR96/TR916)	
< DIODE >			
D001	8-719-989-33	DIODE FC806-TL	
D002	8-719-420-14	DIODE MA8082-TX	
< FUSE >			
△F001	1-533-483-11	FUSE (SMD) 1.6A/125V (TR86/TR96/TR916)	
△F003	1-533-284-11	LINK, CHIP IC (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
△F003	1-533-483-11	FUSE (SMD) 1.6A/125V (TR86/TR96/TR506/TR507/TR916)	
△F004	1-533-284-11	LINK, CHIP IC (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
△F004	1-533-483-11	FUSE (SMD) 1.6A/125V (TR86/TR96/TR506/TR507/TR916)	
< IC >			
IC001	8-759-350-29	IC SN104213PM-T6	
< COIL >			
L002	1-416-193-11	COIL, CHOKE 10uH	
L004	1-416-193-11	COIL, CHOKE 10uH	
L005	1-416-194-11	COIL, CHOKE 47uH	
L006	1-416-194-11	COIL, CHOKE 47uH	
L007	1-411-705-11	COIL, CHOKE 22uH	
L008	1-416-194-11	COIL, CHOKE 47uH	
L009	1-411-705-11	COIL, CHOKE 22uH	
L010	1-412-056-11	INDUCTOR CHIP 4.7uH	
L011	1-412-056-11	INDUCTOR CHIP 4.7uH	
L012	1-412-056-11	INDUCTOR CHIP 4.7uH	
L013	1-412-056-11	INDUCTOR CHIP 4.7uH	
L014	1-412-064-11	INDUCTOR CHIP 100uH	
L015	1-412-064-11	INDUCTOR CHIP 100uH	
L016	1-412-056-11	INDUCTOR CHIP 4.7uH	
L017	1-412-056-11	INDUCTOR CHIP 4.7uH	
L018	1-412-056-11	INDUCTOR CHIP 4.7uH	
< TRANSISTOR >			
Q001	8-729-033-14	TRANSISTOR FP107-TL	
Q002	8-729-033-14	TRANSISTOR FP107-TL	
Q003	8-729-804-41	TRANSISTOR 2SB1122-ST-TD	
Q004	8-729-033-14	TRANSISTOR FP107-TL	
Q005	8-729-033-14	TRANSISTOR FP107-TL	
Q006	8-729-033-14	TRANSISTOR FP107-TL	
Q007	8-729-030-75	TRANSISTOR 2SK2316-TD	
Q008	8-729-402-42	TRANSISTOR UN5213-TX	
Q010	8-729-030-75	TRANSISTOR 2SK2316-TD (TR86/TR96/TR916)	
Q012	8-729-030-75	TRANSISTOR 2SK2316-TD (TR86/TR96/TR916)	
Q013	8-729-028-26	TRANSISTOR 2SK1829(TE85L) (TR86/TR96/TR916)	
Q014	8-729-402-42	TRANSISTOR UN5213-TX (TR86/TR96/TR916)	

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
< RESISTOR >						< HOLE ELEMENT >					
R001	1-216-841-11	METAL CHIP	47K	5%	1/16W	H001	8-719-033-37	ELEMENT, HALL HW-105C			
R002	1-216-835-11	METAL CHIP	15K	5%	1/16W	H002	8-719-033-37	ELEMENT, HALL HW-105C			
R003	1-216-837-11	METAL CHIP	22K	5%	1/16W	< TRANSISTOR >					
R004	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	Q001	8-729-907-25	PHOTO TRANSISTOR PT4850F			
R005	1-216-839-11	METAL CHIP	33K	5%	1/16W	Q002	8-729-907-25	PHOTO TRANSISTOR PT4850F			
R006	1-216-837-11	METAL CHIP	22K	5%	1/16W	< SWITCH >					
R007	1-216-821-11	METAL CHIP	1K	5%	1/16W	S001	1-692-614-11	SWITCH, PUSH (3 KEY)(REC PROOF)			
R008	1-216-813-11	METAL CHIP	220	5%	1/16W	S002	1-572-688-11	SWITCH, PUSH (1 KEY)(C.C.LOCK)			
R009	1-216-841-11	METAL CHIP	47K	5%	1/16W						
R010	1-216-845-11	METAL CHIP	100K	5%	1/16W						
R013	1-216-864-11	METAL CHIP	0	5%	1/16W						
R014	1-216-821-11	METAL CHIP	1K	5%	1/16W						
R015	1-216-819-11	METAL CHIP	680	5%	1/16W						
R016	1-216-864-11	METAL CHIP	0	5%	1/16W						
R017	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R018	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R019	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R020	1-216-835-11	METAL CHIP	15K	5%	1/16W						
R021	1-216-839-11	METAL CHIP	33K	5%	1/16W						
R022	1-216-831-11	METAL CHIP	6.8K	5%	1/16W						
R023	1-216-797-11	METAL CHIP	10	5%	1/16W						
R024	1-216-837-11	METAL CHIP	22K	5%	1/16W						
R025	1-216-841-11	METAL CHIP	47K	5%	1/16W						
R027	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R028	1-216-857-11	METAL CHIP	1M	5%	1/16W						
(TR86/TR96/TR916)											
R029	1-216-856-11	METAL CHIP	820K	5%	1/16W						
(TR86/TR96/TR916)											
R031	1-216-848-11	METAL CHIP	180K	5%	1/16W						
(TR86/TR96/TR916)											
R033	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R036	1-216-833-11	METAL CHIP	10K	5%	1/16W						
(TR86/TR96/TR916)											
R037	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R038	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R040	1-216-864-11	METAL CHIP	0	5%	1/16W						
R041	1-216-864-11	METAL CHIP	0	5%	1/16W						
R042	1-216-839-11	METAL CHIP	33K	5%	1/16W						
(TR86/TR96/TR916)											
R045	1-218-915-11	METAL GLAZE	680K	0.50%	1/16W						
R046	1-216-864-11	METAL CHIP	0	5%	1/16W						
< SWITCH >											
S001	1-771-039-11	SWITCH, PUSH (START/STOP)									
S002	1-572-467-21	SWITCH, PUSH (1 KEY) (EJECT)									
S004	1-771-039-11	SWITCH, PUSH (STANDBY)									
< TRANSFORMER >											
△ T001	1-431-246-21	TRANSFORMER, DC/DC CONVERTER									
FP-249 BOARD, COMPLETE											

(Ref.No.5,000 Series)											
1-658-214-11	FP-356 FLEXIBLE PRINT BOARD										
3-965-551-01	HOLDER (S), SENSOR										
3-965-552-01	HOLDER (T), SENSOR										

Note : The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Note : Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.
--	--

Ref. No.	Part No.	Description	Remarks		
C031	1-135-145-11	TANTALUM CHIP	0.47uF	10%	35V
C033	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C036	1-104-852-11	TANTAL. CHIP	22uF	20%	6.3V
C037	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C038	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C039	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
		< CONNECTOR >			
* CN001	1-691-922-11	CONNECTOR, BOARD TO BOARD 14P			
		< IC >			
IC001	8-759-455-09	IC LA9510W-TBM			
		< COIL >			
L002	1-412-948-11	INDUCTOR 5.6uH			
L003	1-414-754-11	INDUCTOR 10uH			
L004	1-412-957-11	INDUCTOR 33uH			
L005	1-412-957-11	INDUCTOR 33uH			
		< TRANSISTOR >			
Q006	8-729-122-63	TRANSISTOR 2SA1226-T1E3E4			
Q007	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX			
		< RESISTOR >			
R002	1-218-879-11	METAL GLAZE	22K	0.50%	1/16W
R004	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R005	1-216-818-11	METAL CHIP	560	5%	1/16W
R006	1-216-817-11	METAL CHIP	470	5%	1/16W
R007	1-216-817-11	METAL CHIP	470	5%	1/16W
R008	1-216-041-00	METAL CHIP	470	5%	1/10W
R009	1-216-864-11	METAL CHIP	0	5%	1/16W
R013	1-216-864-11	METAL CHIP	0	5%	1/16W
R015	1-216-817-11	METAL CHIP	470	5%	1/16W
R016	1-216-821-11	METAL CHIP	1K	5%	1/16W
R017	1-216-815-11	METAL CHIP	330	5%	1/16W
R019	1-216-864-11	METAL CHIP	0	5%	1/16W
R020	1-216-833-11	METAL CHIP	10K	5%	1/16W
R021	1-216-841-11	METAL CHIP	47K	5%	1/16W
R022	1-216-833-11	METAL CHIP	10K	5%	1/16W
R023	1-216-841-11	METAL CHIP	47K	5%	1/16W
R024	1-216-853-11	METAL CHIP	470K	5%	1/16W
R033	1-216-837-11	METAL CHIP	22K	5%	1/16W
R034	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R035	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R036	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R039	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R041	1-216-833-11	METAL CHIP	10K	5%	1/16W
R043	1-216-847-11	METAL CHIP	150K	5%	1/16W
R044	1-216-847-11	METAL CHIP	150K	5%	1/16W
R046	1-216-864-11	METAL CHIP	0	5%	1/16W

Ref. No.	Part No.	Description	Remarks		
	A-7073-076-A	JK-153 BOARD, COMPLETE ***** (TR501E:AEP/TR502E/TR620E)			
	A-7073-071-A	JK-153 BOARD, COMPLETE (TR501E:E/TR503E) *****			
	A-7073-125-A	JK-153 BOARD, COMPLETE ***** (TR506/TR507/TR506E/TR720E/TR740E)			
	A-7073-082-A	JK-153 BOARD, COMPLETE ***** (TR86/TR96/TR916) (Ref.No.2,000 Series)			
		< CAPACITOR >			
C061	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (TR501E:AEP/TR502E/TR620E)
C062	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V (TR501E:AEP/TR502E/TR620E)
C065	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
		< CONNECTOR >			
CN060	1-764-680-21	CONNECTOR, FFC/FPC (ZIF) 8P			
		< DIODE >			
D062	8-719-059-57	DIODE MAZJ082DFLSO (TR506/TR507/TR506E/TR720E/TR740E)			
D063	8-719-059-57	DIODE MAZJ082DFLSO			
D064	8-719-420-14	DIODE MA8082-TX (TR86/TR96/TR916)			
D069	8-719-059-57	DIODE MAZJ082DFLSO			
		< JACK >			
J060	1-537-415-11	TERMINAL BOARD (VIDEO/AUDIO OUT) (TR506/TR507/TR506E/TR720E/TR740E)			
J060	1-537-726-11	TERMINAL BOARD (VIDEO/AUDIO OUT) (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)			
		< COIL >			
L061	1-414-757-11	INDUCTOR 100uH (TR501E:AEP/TR502E/TR620E)			
L061	1-216-295-91	CONDUCTOR, CHIP (2012) (TR86/TR96/TR506/TR507/TR916/TR501E:E/ TR503E/TR506E/TR720E/TR740E)			
L062	1-216-295-91	CONDUCTOR, CHIP (2012) (TR506/TR507/TR506E/TR720E/TR740E)			
		< RESISTOR >			
R060	1-216-822-11	METAL CHIP	1.2K	5%	1/16W (TR86/TR96/TR916)
R061	1-216-864-11	METAL CHIP	0	5%	1/16W
R064	1-414-228-11	INDUCTOR, FERRITE BEAD			
		< SWITCH >			
S060	1-762-648-21	SWITCH, SLIDE (LIGHT)(TR86/TR96/TR916)			

Ref. No.	Part No.	Description	Remarks
A-7073-090-A	LB-49 BOARD, COMPLETE	*****	
		(TR503E/TR506E/TR720E/TR740E)	
A-7073-086-A	LB-49 BOARD, COMPLETE	*****	
		(TR86/TR96/TR506/TR507/TR916)	
		(Ref.No.7,000 Series)	
		< CAPACITOR >	
C801	1-104-917-11	TANTAL. CHIP 15uF 20% 20V	
C802	1-115-566-11	CERAMIC CHIP 4.7uF 10% 10V	
C803	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C804	1-163-020-00	CERAMIC CHIP 0.0082uF 10% 50V	
C805	1-163-020-00	CERAMIC CHIP 0.0082uF 10% 50V	
C806	1-163-020-00	CERAMIC CHIP 0.0082uF 10% 50V	
		< CONNECTOR >	
CN801	1-779-383-11	CONNECTOR, BOARD TO BOARD 10P	
		< DIODE >	
D802	8-719-056-49	DIODE 1SS370(TE85L)	
		< COIL >	
L801	1-412-033-11	INDUCTOR CHIP 220uH	
L802	1-412-029-11	INDUCTOR CHIP 10uH	
		< FLUORECENT INDICATOR >	
△ND801	1-517-325-11	LANP, FLUORESCENT (0.55 INCH)	
		< TRANSISTOR >	
Q801	8-729-024-60	TRANSISTOR MTD6N15T4	
		< RESISTOR >	
R801	1-216-809-11	METAL CHIP 100 5% 1/16W	
R802	1-216-839-11	METAL CHIP 33K 5% 1/16W	
		< TRANSFORMER >	
△T801	1-429-756-21	TRANSFORMER, INVERTER	

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
A-7073-073-A	MA-295 BOARD, COMPLETE	*****	
		(TR501E/TR502E/TR503E/TR620E)	
A-7073-126-A	MA-295 BOARD, COMPLETE	*****	
		(TR506/TR506E/TR720E)	
A-7073-140-A	MA-295 BOARD, COMPLETE	(TR507/TR740E)	

A-7073-079-A	MA-295 BOARD, COMPLETE	(TR86/TR96/TR916)	

		(Ref.No.2,000 Series)	
		< CAPACITOR >	
C953	1-164-172-11	CERAMIC CHIP 0.0056uF 10% 25V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C954	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C955	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C956	1-115-156-11	CERAMIC CHIP 1uF 10V	
		(TR86/TR96/TR507/TR916/TR740E)	
C957	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C958	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C959	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C960	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C961	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C962	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C963	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C964	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C966	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		(TR86/TR96/TR507/TR916/TR740E)	
C969	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C970	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C972	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C973	1-109-982-11	CERAMIC CHIP 1uF 10% 10V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C974	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C975	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C977	1-164-172-11	CERAMIC CHIP 0.0056uF 10% 25V	
		(TR506/TR507/TR506E/TR720E/TR740E)	
C978	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C980	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C982	1-165-128-11	CERAMIC CHIP 0.22uF 16V	
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C983	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C984	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	

Ref. No.	Part No.	Description	Remarks
C985	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C986	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C988	1-164-346-11	CERAMIC CHIP 1uF 16V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C990	1-124-779-00	ELECT CHIP 10uF 20% 16V (TR506/TR507/TR506E/TR720E/TR740E)	
C990	1-126-607-11	ELECT CHIP 47uF 20% 4V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C991	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C993	1-124-779-00	ELECT CHIP 10uF 20% 16V	
C994	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (TR506/TR507/TR506E/TR720E/TR740E)	
C995	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V (TR506/TR507/TR506E/TR720E/TR740E)	
C996	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V (TR506/TR507/TR506E/TR720E/TR740E)	
C997	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (TR506/TR507/TR506E/TR720E/TR740E)	
C998	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V (TR506/TR507/TR506E/TR720E/TR740E)	
C999	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V (TR506/TR507/TR506E/TR720E/TR740E)	
< CONNECTOR >			
CN951	1-764-711-21	CONNECTOR, FFC/FPC (LIF) 12P	
CN952	1-580-055-21	PIN, CONNECTOR 2P (TR506/TR507/TR506E/TR720E/TR740E)	
CN953	1-580-055-21	PIN, CONNECTOR 2P	
< DIODE >			
D952	8-719-059-51	DIODE MA3J142E0LSO	
D955	8-719-061-86	DIODE DCR2810 (TR86/TR96/TR507/TR916/TR740E)	
D956	8-749-060-65	DIODE DCC3810 (TR86/TR96/TR507/TR916/TR740E)	
< FUSE >			
△F951	1-533-844-11	FUSE,MICRO (TR86/TR96/TR507/TR916/TR740E)	
< FERRITE BEAD >			
FB901	1-414-228-11	INDUCTOR, FERRITE BEAD (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
FB902	1-216-864-11	METAL CHIP 0 5% 1/16W (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
< IC >			
IC951	8-759-380-80	IC LA7473V-TLM (TR506/TR507/TR506E/TR720E/TR740E)	
IC952	8-759-339-63	IC NJM2118V-TE2 (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
IC953	8-749-012-17	IC RS-140-T	
< JACK >			
J951	1-691-737-11	JACK, SMALL TYPE (MIC) (TR506/TR507/TR506E/TR720E/TR740E)	
J951	1-568-027-11	JACK, SMALL TYPE (MIC)	

Ref. No.	Part No.	Description	Remarks
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
< TRANSISTOR >			
Q951	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
Q954	8-729-140-75	TRANSISTOR 2SD999-T1-CLCK (TR86/TR96/TR507/TR916/TR740E)	
< RESISTOR >			
R953	1-414-228-11	INDUCTOR, FERRITE BEAD (TR506/TR507/TR506E/TR720E/TR740E)	
R954	1-216-824-11	METAL CHIP 1.8K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R955	1-414-228-11	INDUCTOR, FERRITE BEAD	
R956	1-414-228-11	INDUCTOR, FERRITE BEAD	
R957	1-216-829-11	METAL CHIP 4.7K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R958	1-216-838-11	METAL CHIP 27K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R959	1-216-831-11	METAL CHIP 6.8K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R960	1-216-311-00	METAL CHIP 6.8 5% 1/10W (TR86/TR96/TR507/TR916/TR740E)	
R961	1-216-825-11	METAL CHIP 2.2K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R962	1-216-839-11	METAL CHIP 33K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R963	1-216-831-11	METAL CHIP 6.8K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R964	1-216-831-11	METAL CHIP 6.8K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R965	1-216-839-11	METAL CHIP 33K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R966	1-216-302-00	METAL CHIP 2.7 5% 1/10W (TR86/TR96/TR507/TR916/TR740E)	
R967	1-216-831-11	METAL CHIP 6.8K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R968	1-216-829-11	METAL CHIP 4.7K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R969	1-216-838-11	METAL CHIP 27K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R970	1-216-825-11	METAL CHIP 2.2K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R973	1-216-823-11	METAL CHIP 1.5K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R975	1-216-831-11	METAL CHIP 6.8K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R976	1-216-831-11	METAL CHIP 6.8K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R978	1-216-823-11	METAL CHIP 1.5K 5% 1/16W (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
R979	1-216-818-11	METAL CHIP 560 5% 1/16W (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
R980	1-216-830-11	METAL CHIP 5.6K 5% 1/16W (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
R981	1-216-838-11	METAL CHIP 27K 5% 1/16W (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
R982	1-216-831-11	METAL CHIP 6.8K 5% 1/16W (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
R983	1-216-838-11	METAL CHIP 27K 5% 1/16W (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
R986	1-216-864-11	METAL CHIP 0 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	
R989	1-216-824-11	METAL CHIP 1.8K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)	

Note :
The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :
Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R990	1-216-829-11	METAL CHIP 4.7K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)				(TR96/TR916/TR620E/TR720E/TR740E)	
R991	1-216-829-11	METAL CHIP 4.7K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)		C666	1-110-501-11	CERAMIC CHIP 0.33uF 10% 16V (TR96/TR916/TR620E/TR720E/TR740E)	
R992	1-216-838-11	METAL CHIP 27K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)		C667	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR96/TR916/TR620E/TR720E/TR740E)	
R993	1-216-838-11	METAL CHIP 27K 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)		C668	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V (TR96/TR916/TR620E/TR720E/TR740E)	
R995	1-216-864-11	METAL CHIP 0 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)				< CONNECTOR >	
R996	1-216-864-11	METAL CHIP 0 5% 1/16W (TR506/TR507/TR506E/TR720E/TR740E)		CN650	1-764-516-21	CONNECTOR, FFC/FPC (ZIF) 6P (TR96/TR916/TR620E/TR720E/TR740E)	
R997	1-216-809-11	METAL CHIP 100 5% 1/16W (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		CN651	1-770-620-21	PIN, CONNECTOR 3P (TR86/TR96/TR916)	
		< SWITCH >				< DIODE >	
S951	1-771-039-11	SWITCH, PUSH (CAMERA)		D650	8-719-404-49	DIODE MA111-TX (TR86/TR96/TR916)	
S952	1-771-039-11	SWITCH, PUSH (PLAYER)		D651	8-719-420-14	DIODE MA8082-TX (TR86/TR96/TR916)	
				D652	8-719-420-14	DIODE MA8082-TX (TR86/TR96/TR916)	
						< IC >	
A-7073-145-A	SE-60 BOARD, COMPLETE ***** (TR620E/TR720E/TR740E)			IC650	8-759-080-34	IC TA75W01FU-TE12R (TR96/TR916/TR620E/TR720E/TR740E)	
A-7073-129-A	SE-60 BOARD, COMPLETE (TR86) *****			IC651	8-759-388-62	IC NJU7062M(TE2) (TR96/TR916/TR620E/TR720E/TR740E)	
A-7073-087-A	SE-60 BOARD, COMPLETE (TR96/TR916) ***** (Ref.No.5,000 Series)			IC652	8-759-391-88	IC MC14066BDTR2 (TR96/TR916/TR620E/TR720E/TR740E)	
						< COIL >	
3-974-199-01	TERMINAL, VIDEO (LIGHT)(TR86/TR96/TR916)			L601	1-414-754-11	INDUCTOR 10uH (TR96/TR916/TR620E/TR720E/TR740E)	
		< CAPACITOR >				< TRANSISTOR >	
C650	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V (TR96/TR916/TR620E/TR720E/TR740E)				< RESISTOR >	
C651	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V (TR96/TR916/TR620E/TR720E/TR740E)		Q650	8-729-402-42	TRANSISTOR UN5213-TX (TR96/TR916/TR620E/TR720E/TR740E)	
C652	1-104-908-11	TANTAL. CHIP 47uF 20% 4V (TR96/TR916/TR620E/TR720E/TR740E)				< RESISTOR >	
C653	1-104-908-11	TANTAL. CHIP 47uF 20% 4V (TR96/TR916/TR620E/TR720E/TR740E)		R650	1-216-837-11	METAL CHIP 22K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C654	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V (TR96/TR916/TR620E/TR720E/TR740E)		R651	1-216-837-11	METAL CHIP 22K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C655	1-164-156-11	CERAMIC CHIP 0.1uF 25V (TR96/TR916/TR620E/TR720E/TR740E)		R652	1-216-837-11	METAL CHIP 22K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C656	1-164-299-11	CERAMIC CHIP 0.22uF 10% 25V (TR96/TR916/TR620E/TR720E/TR740E)		R653	1-216-837-11	METAL CHIP 22K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C657	1-164-299-11	CERAMIC CHIP 0.22uF 10% 25V (TR96/TR916/TR620E/TR720E/TR740E)		R654	1-216-837-11	METAL CHIP 22K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C658	1-164-245-11	CERAMIC CHIP 0.015uF 10% 25V (TR96/TR916/TR620E/TR720E/TR740E)		R655	1-216-837-11	METAL CHIP 22K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C659	1-164-245-11	CERAMIC CHIP 0.015uF 10% 25V (TR96/TR916/TR620E/TR720E/TR740E)		R656	1-216-803-11	METAL CHIP 33 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C660	1-128-257-21	ELECT CHIP 33uF 20% 10V (TR96/TR916/TR620E/TR720E/TR740E)		R658	1-216-833-11	METAL CHIP 10K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C661	1-128-257-21	ELECT CHIP 33uF 20% 10V (TR96/TR916/TR620E/TR720E/TR740E)		R659	1-216-833-11	METAL CHIP 10K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C663	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (TR96/TR916/TR620E/TR720E/TR740E)		R660	1-218-911-11	METAL GLAZE 470K 0.50% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C664	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (TR96/TR916/TR620E/TR720E/TR740E)		R661	1-218-911-11	METAL GLAZE 470K 0.50% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C665	1-110-501-11	CERAMIC CHIP 0.33uF 10% 16V		R664	1-216-833-11	METAL CHIP 10K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
				R665	1-216-857-11	METAL CHIP 1M 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
				R666	1-216-857-11	METAL CHIP 1M 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	

Ref. No.	Part No.	Description	Remarks
R667	1-216-833-11	METAL CHIP 10K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R668	1-216-835-11	METAL CHIP 15K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R669	1-216-835-11	METAL CHIP 15K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R670	1-216-845-11	METAL CHIP 100K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
< SENSOR >			
SE650	1-810-725-81	SENSOR, ANGULAR VELOCITY (TR96/TR916/TR620E/TR720E/TR740E)	
SE651	1-810-725-71	SENSOR, ANGULAR VELOCITY (TR96/TR916/TR620E/TR720E/TR740E)	
A-7093-241-A VC-188 BOARD, COMPLETE (TR501E/TR503E) *****			
A-7093-242-A VC-188 BOARD, COMPLETE (TR502E) *****			
A-7093-244-A VC-188 BOARD, COMPLETE (TR506) *****			
A-7093-245-A VC-188 BOARD, COMPLETE (TR506E) *****			
A-7093-246-A VC-188 BOARD, COMPLETE (TR507) *****			
A-7093-247-A VC-188 BOARD, COMPLETE (TR620E) *****			
A-7093-290-A VC-188 BOARD, COMPLETE (TR720E) *****			
A-7093-250-A VC-188 BOARD, COMPLETE (TR740E) *****			
A-7093-243-A VC-188 BOARD, COMPLETE (TR86) *****			
A-7093-249-A VC-188 BOARD, COMPLETE (TR96/TR916) *****			
(Ref.No.1,000 Series)			
< CAPACITOR >			
C101	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V (TR86/TR96/TR506/TR507/TR916)	
C102	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V (TR86/TR96/TR506/TR507/TR916)	
C103	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C104	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C105	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR86/TR96/TR506/TR507/TR916)	
C106	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR86/TR96/TR506/TR507/TR916)	
C107	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C108	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C109	1-110-569-11	TANTAL. CHIP 47uF 20% 6.3V	
C110	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C111	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
C112	1-162-926-11	CERAMIC CHIP 82PF 5% 50V	
C113	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
C114	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C115	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR86/TR96/TR506/TR507/TR916)	
C116	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR86/TR96/TR506/TR507/TR916)	
C117	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C118	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C119	1-164-156-11	CERAMIC CHIP 0.1uF 25V	

Ref. No.	Part No.	Description	Remarks
C120	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C121	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C122	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C123	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C124	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C125	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR86/TR96/TR506/TR507/TR916)	
C126	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR86/TR96/TR506/TR507/TR916)	
C127	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C128	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C129	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR86/TR96/TR506/TR507/TR916)	
C130	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C131	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C132	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C133	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C134	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C136	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C138	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C139	1-162-961-11	CERAMIC CHIP 330PF 10% 50V	
C140	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C141	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C142	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C143	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C144	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C145	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C146	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C147	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C148	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C149	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C150	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C151	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C152	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C155	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C156	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C157	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C158	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C159	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C160	1-162-958-11	CERAMIC CHIP 270PF 5% 50V	
C161	1-162-922-11	CERAMIC CHIP 39PF 5% 50V	
C162	1-162-912-11	CERAMIC CHIP 7PF 0.5PF 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E) (TR86/TR96/TR506/TR507/TR916)	
C164	1-162-918-11	CERAMIC CHIP 18PF 5% 50V	
C165	1-162-958-11	CERAMIC CHIP 270PF 5% 50V	
C166	1-162-918-11	CERAMIC CHIP 18PF 5% 50V	
C167	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V	
C168	1-162-926-11	CERAMIC CHIP 82PF 5% 50V (TR506/TR507/TR506E/TR720E/TR740E)	
C168	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C169	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	
C170	1-162-958-11	CERAMIC CHIP 270PF 5% 50V	
C171	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C172	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C173	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C174	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C176	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V	C244	1-164-315-11	CERAMIC CHIP 470PF 5% 50V (TR86/TR96/TR506/TR507/TR916)	
C177	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C245	1-162-912-11	CERAMIC CHIP 7PF 0.5PF 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C178	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C245	1-162-917-11	CERAMIC CHIP 15PF 5% 50V (TR86/TR96/TR506/TR507/TR916)	
C179	1-164-237-11	CERAMIC CHIP 16PF 5%	50V	C246	1-135-073-00	TANTALUM CHIP 0.33uF 10%	35V
C180	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V	C247	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C181	1-162-921-11	CERAMIC CHIP 33PF 5%	50V	C248	1-162-923-11	CERAMIC CHIP 47PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C182	1-109-982-11	CERAMIC CHIP 1uF 10%	10V	C249	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C202	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	C254	1-164-237-11	CERAMIC CHIP 16PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C203	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	C254	1-162-975-11	CERAMIC CHIP 24PF 5% 50V (TR86/TR96/TR506/TR507/TR916)	
C204	1-164-156-11	CERAMIC CHIP 0.1uF	25V	C256	1-165-112-11	CERAMIC CHIP 0.33uF	16V
C205	1-109-982-11	CERAMIC CHIP 1uF 10%	10V	C257	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C206	1-109-982-11	CERAMIC CHIP 1uF 10%	10V	C259	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (TR86/TR96/TR506/TR507/TR916)	
C207	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C263	1-162-920-11	CERAMIC CHIP 27PF 5% 50V (TR501E/TR502E/TR503E/TR506E)	
C208	1-164-005-11	CERAMIC CHIP 0.47uF	25V	C265	1-162-926-11	CERAMIC CHIP 82PF 5% 50V (TR501E/TR502E/TR503E/TR506E)	
C209	1-109-982-11	CERAMIC CHIP 1uF 10%	10V	C266	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR501E/TR502E/TR503E/TR506E)	
C210	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	C267	1-162-912-11	CERAMIC CHIP 7PF 0.5PF 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C211	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C267	1-162-917-11	CERAMIC CHIP 15PF 5% 50V (TR86/TR96/TR506/TR507/TR916)	
C212	1-164-005-11	CERAMIC CHIP 0.47uF	25V	C268	1-162-912-11	CERAMIC CHIP 7PF 0.5PF 50V	
C213	1-104-852-11	TANTAL. CHIP 22uF 20%	6.3V	C269	1-162-921-11	CERAMIC CHIP 33PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C214	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C270	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V
C215	1-164-005-11	CERAMIC CHIP 0.47uF	25V	C271	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C216	1-126-246-11	ELECT CHIP 220uF 20%	4V	C274	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V (TR86/TR96/TR507/TR916/TR740E)	
C217	1-135-149-21	TANTALUM CHIP 2.2uF 20%	10V	C275	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C218	1-162-927-11	CERAMIC CHIP 100PF 5%	50V	C276	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C219	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	C277	1-107-682-11	CERAMIC CHIP 1uF 10%	16V
C220	1-162-912-11	CERAMIC CHIP 7PF 0.5PF	50V	C278	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C221	1-164-156-11	CERAMIC CHIP 0.1uF 25V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C279	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C223	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C280	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C224	1-164-005-11	CERAMIC CHIP 0.47uF 25V		C302	1-107-682-11	CERAMIC CHIP 1uF 10%	16V
C225	1-162-928-11	CERAMIC CHIP 120PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C303	1-115-156-11	CERAMIC CHIP 1uF	10V
C225	1-164-218-11	CERAMIC CHIP 180PF 0.25PF 50V (TR86/TR96/TR506/TR507/TR916)		C304	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C226	1-162-957-11	CERAMIC CHIP 220PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C305	1-107-682-11	CERAMIC CHIP 1uF 10%	16V
C227	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	C307	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C228	1-165-176-11	CERAMIC CHIP 0.047uF 10% 16V (TR620E/TR720E/TR740E)		C309	1-135-091-00	TANTALUM CHIP 1uF 20%	16V
C229	1-162-959-11	CERAMIC CHIP 330PF 5% 50V		C400	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C230	1-164-392-11	CERAMIC CHIP 390PF 5% 50V		C401	1-162-913-11	CERAMIC CHIP 8PF 0.5PF	50V
C231	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	C402	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C232	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C403	1-162-912-11	CERAMIC CHIP 7PF 0.5PF	50V
C233	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V	C404	1-107-682-11	CERAMIC CHIP 1uF 10%	16V
C234	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V	C405	1-162-907-11	CERAMIC CHIP 2PF 0.25PF	50V
C235	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V	C406	1-115-156-11	CERAMIC CHIP 1uF	10V
C236	1-135-091-00	TANTALUM CHIP 1uF 20%	16V	C407	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
C237	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C408	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
C237	1-162-957-11	CERAMIC CHIP 220PF 5% 50V (TR86/TR96/TR506/TR507/TR916)		C409	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)
C238	1-104-912-11	TANTAL. CHIP 3.3uF 20% 6.3V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C410	1-164-217-11	CERAMIC CHIP 150PF 5%	50V
C238	1-135-149-21	TANTALUM CHIP 2.2uF 20% 10V (TR86/TR96/TR506/TR507/TR916)		C411	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C240	1-109-982-11	CERAMIC CHIP 1uF 10%	10V	C412	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C242	1-104-752-11	TANTAL. CHIP 33uF 20%	6.3V	C413	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)
C243	1-162-916-11	CERAMIC CHIP 12PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)					
C243	1-162-925-11	CERAMIC CHIP 68PF 5% 50V (TR86/TR96/TR506/TR507/TR916)					
C244	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)				

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C414	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V	C513	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V
C415	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V			(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C416	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C514	1-162-925-11	CERAMIC CHIP 68PF 5%	50V
C417	1-162-957-11	CERAMIC CHIP 220PF 5%	50V	C515	1-162-960-11	CERAMIC CHIP 220PF 10%	50V
C418	1-162-957-11	CERAMIC CHIP 220PF 5%	50V			(TR501E/TR502E/TR503E/TR620E)	
C419	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C515	1-162-957-11	CERAMIC CHIP 220PF 5%	50V
C420	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			(TR86/TR96/TR916)	
C421	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C516	1-135-149-21	TANTALUM CHIP 2.2uF 20%	10V
C423	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V			(TR506/TR507/TR506E/TR720E/TR740E)	
C424	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V	C517	1-107-823-11	CERAMIC CHIP 0.47uF 10%	16V
C425	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V			(TR506/TR507/TR506E/TR720E/TR740E)	
C426	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V	C518	1-135-149-21	TANTALUM CHIP 2.2uF 20%	10V
C427	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V			(TR506/TR507/TR506E/TR720E/TR740E)	
C428	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V	C520	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C429	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C522	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C430	1-164-156-11	CERAMIC CHIP 0.1uF 25V				(TR506/TR507/TR506E/TR720E/TR740E)	
C431	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V	C522	1-162-963-11	CERAMIC CHIP 680PF 10%	50V
C432	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V			(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C433	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V	C523	1-124-778-00	ELECT CHIP 22uF 20%	6.3V
C434	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C529	1-104-847-11	TANTAL. CHIP 22uF 20%	4V
C435	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V	C530	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V
C436	1-164-156-11	CERAMIC CHIP 0.1uF 25V				(TR506/TR507/TR506E/TR720E/TR740E)	
C437	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C531	1-104-908-11	TANTAL. CHIP 47uF 20%	4V
C438	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C532	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C439	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C533	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C441	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C534	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C442	1-165-112-11	CERAMIC CHIP 0.33uF 16V				(TR506/TR507/TR506E/TR720E/TR740E)	
C443	1-162-957-11	CERAMIC CHIP 220PF 5%	50V	C534	1-164-182-11	CERAMIC CHIP 0.0033uF 10%	50V
C444	1-164-156-11	CERAMIC CHIP 0.1uF 25V				(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C445	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C535	1-104-752-11	TANTAL. CHIP 33uF 20%	6.3V
C446	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			(TR506/TR507/TR506E/TR720E/TR740E)	
C447	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C535	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V
C448	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V			(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C449	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V	C537	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V
C450	1-107-682-11	CERAMIC CHIP 1uF 10%	16V	C539	1-104-847-11	TANTAL. CHIP 22uF 20%	4V
C451	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V			(TR506/TR507/TR506E/TR720E/TR740E)	
C452	1-165-176-11	CERAMIC CHIP 0.047uF 10%	16V	C541	1-135-149-21	TANTALUM CHIP 2.2uF 20%	10V
C453	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V			(TR506/TR507/TR506E/TR720E/TR740E)	
C456	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V	C541	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V
C458	1-164-004-11	CERAMIC CHIP 0.1uF 10%	25V			(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C459	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C542	1-107-823-11	CERAMIC CHIP 0.47uF 10%	16V
C502	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			(TR506/TR507/TR506E/TR720E/TR740E)	
C504	1-163-009-11	CERAMIC CHIP 0.001uF 10%	50V	C543	1-104-908-11	TANTAL. CHIP 47uF 20%	4V
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)				(TR506/TR507/TR506E/TR720E/TR740E)	
C505	1-104-908-11	TANTAL. CHIP 47uF 20%	4V	C543	1-135-155-21	TANTALUM CHIP 4.7uF 10%	16V
C506	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V			(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
		(TR506/TR507/TR506E/TR740E)		C544	1-115-467-11	CERAMIC CHIP 0.22uF 10%	10V
C507	1-107-823-11	CERAMIC CHIP 0.47uF 10%	16V			(TR506/TR507/TR506E/TR720E/TR740E)	
C508	1-135-149-21	TANTALUM CHIP 2.2uF 20%	10V	C546	1-126-205-11	ELECT CHIP 47uF 20%	6.3V
		(TR506/TR507/TR506E/TR720E/TR740E)		C548	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C509	1-104-847-11	TANTAL. CHIP 22uF 20%	4V			(TR506/TR507/TR506E/TR720E/TR740E)	
		(TR506/TR507/TR506E/TR720E/TR740E)		C548	1-107-685-11	TANTAL. CHIP 15uF 20%	6.3V
C509	1-135-145-11	TANTALUM CHIP 0.47uF 10%	35V			(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		C550	1-135-149-21	TANTALUM CHIP 2.2uF 20%	10V
C510	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V			(TR506/TR507/TR506E/TR720E/TR740E)	
C511	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V	C550	1-104-847-11	TANTAL. CHIP 22uF 20%	4V
		(TR506/TR507/TR506E/TR740E)				(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
C512	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V	C551	1-216-841-11	METAL CHIP 47K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)				(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
				C553	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
						(TR506/TR507/TR506E/TR720E/TR740E)	
				C554	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
						(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
				C555	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V
						(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
				C556	1-135-149-21	TANTALUM CHIP 2.2uF 20%	10V
						(TR506/TR507/TR506E/TR720E/TR740E)	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C556	1-135-181-21	TANTALUM CHIP 4.7uF 20% 6.3V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		C727	1-135-091-00	TANTALUM CHIP 1uF 20% 16V	
C557	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR506/TR507/TR506E/TR720E/TR740E)		C728	1-135-091-00	TANTALUM CHIP 1uF 20% 16V	
C557	1-115-467-11	CERAMIC CHIP 0.22uF 10% 10V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		C729	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V	
C558	1-107-823-11	CERAMIC CHIP 0.47uF 10% 16V (TR506/TR507/TR506E/TR720E/TR740E)		C732	1-164-004-11	CERAMIC CHIP 0.1uF 10% 25V	
C558	1-109-982-11	CERAMIC CHIP 1uF 10% 10V (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		C734	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C561	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V		C735	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C563	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V (TR506/TR507/TR506E/TR720E/TR740E)		C736	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C571	1-107-682-11	CERAMIC CHIP 1uF 10% 16V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C739	1-162-921-11	CERAMIC CHIP 33PF 5% 50V (TR620E/TR720E/TR740E)	
C572	1-164-392-11	CERAMIC CHIP 390PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C739	1-162-919-11	CERAMIC CHIP 22PF 5% 50V (TR501E/TR502E/TR503E/TR506E)	
C573	1-135-091-00	TANTALUM CHIP 1uF 20% 16V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C740	1-164-315-11	CERAMIC CHIP 470PF 2% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C574	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C741	1-107-688-11	TANTAL. CHIP 1.5uF 20% 10V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C575	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C742	1-164-156-11	CERAMIC CHIP 0.1uF 25V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
C576	1-162-957-11	CERAMIC CHIP 220PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C745	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C577	1-162-957-11	CERAMIC CHIP 220PF 5% 50V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C746	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C578	1-107-682-11	CERAMIC CHIP 1uF 10% 16V (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		C748	1-164-156-11	CERAMIC CHIP 0.1uF 25V (TR86/TR506/TR507/TR502E/TR506E)	
C602	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		C750	1-115-156-11	CERAMIC CHIP 1uF 10V	
C603	1-164-677-11	CERAMIC CHIP 0.033uF 10% 16V		C751	1-164-346-11	CERAMIC CHIP 1uF 16V	
C604	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V		C752	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
C605	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C753	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
C606	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C754	1-162-912-11	CERAMIC CHIP 7PF 0.5PF 50V	
C607	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C755	1-164-346-11	CERAMIC CHIP 1uF 16V	
C608	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V		C757	1-135-181-21	TANTALUM CHIP 4.7uF 20% 6.3V	
C609	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C758	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C610	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C759	1-115-156-11	CERAMIC CHIP 1uF 10V	
C611	1-135-181-21	TANTALUM CHIP 4.7uF 20% 6.3V		C764	1-162-927-11	CERAMIC CHIP 100PF 5% 50V (TR86/TR96/TR506/TR507/TR916)	
C612	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C765	1-162-918-11	CERAMIC CHIP 18PF 5% 50V (TR86/TR96/TR506/TR507/TR916)	
C613	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C770	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (EXCEPT TR502E)	
C614	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C771	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (EXCEPT TR502E)	
C615	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V		C772	1-135-181-21	TANTALUM CHIP 4.7uF 20% 6.3V	
C616	1-115-156-11	CERAMIC CHIP 1uF 10V		C773	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C618	1-162-974-11	CERAMIC CHIP 0.01uF 50V		C774	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C619	1-104-752-11	TANTAL. CHIP 33uF 20% 6.3V		C775	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C620	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		C776	1-216-818-11	METAL CHIP 560 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C621	1-135-149-21	TANTALUM CHIP 2.2uF 20% 10V		C776	1-164-156-11	CERAMIC CHIP 0.1uF 25V (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
C701	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		C777	1-216-818-11	METAL CHIP 560 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
C704	1-115-156-11	CERAMIC CHIP 1uF 10V		C777	1-164-156-11	CERAMIC CHIP 0.1uF 25V (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
C705	1-164-232-11	CERAMIC CHIP 0.01uF 50V		C778	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (EXCEPT TR502E)	
C706	1-135-214-21	TANTAL. CHIP 4.7uF 20% 20V		C779	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V (EXCEPT TR502E)	
C712	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V		C780	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (EXCEPT TR502E)	
C714	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V		C781	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (TR96/TR916/TR720E)	
C715	1-164-156-11	CERAMIC CHIP 0.1uF 25V		C781	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V (TR86/TR506/TR507/TR502E/TR506E/TR620E/TR740E)	
C717	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V					
C718	1-162-913-11	CERAMIC CHIP 8PF 0.5PF 50V					
C719	1-164-489-11	CERAMIC CHIP 0.22uF 10% 16V					
C722	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V					
C725	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V					
C726	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V					

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
C782	1-164-156-11	CERAMIC CHIP 0.1uF	25V	IC206	8-759-295-66	IC BA7653AF-E2	
		< CONNECTOR >		IC302	8-759-290-12	IC M62370GP-650D	
CN101	1-766-346-21	CONNECTOR, FFC/FPC 16P		IC303	8-759-449-47	IC uPD6466GS-610-GLG-E2	
CN102	1-766-869-21	CONNECTOR, FFC/FPC 9P		IC304	8-759-391-88	IC MC14066BDTR2	
CN301	1-774-054-21	CONNECTOR, FFC/FPC (ZIF) 45P		IC400	8-752-880-05	IC CXP87460-011R	
* CN302	1-691-931-11	CONNECTOR, BOARD TO BOARD 38P		IC401	8-759-445-93	IC AK6440AM-E2	
CN303	1-766-644-21	CONNECTOR, FFC/FPC 8P		IC402	8-759-356-30	IC XR1083ACQ-E2	
CN304	1-573-522-21	CONNECTOR, BOARD TO BOARD 14P (TR86/TR96/TR507/TR916/TR740E)		IC403	8-759-327-67	IC LB1950V-TLM	
CN400	1-774-635-21	CONNECTOR, FFC/FPC 10P		IC404	8-759-327-61	IC LB8112V-TLM	
CN401	1-766-342-21	CONNECTOR, FFC/FPC 12P		IC405	8-759-234-20	IC TC7S08F(TE85R) (TR506/TR507/TR506E/TR720E/TR740E)	
CN402	1-774-639-21	CONNECTOR, FFC/FPC 15P		IC501	8-759-368-08	IC AN2980FH-EB (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
CN403	1-766-644-21	CONNECTOR, FFC/FPC 8P		IC570	8-759-334-09	IC CXA2003N-T4 (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
CN501	1-750-076-21	CONNECTOR, FFC/FPC 12P		IC601	8-759-337-40	IC NJM2904V(TE2)	
CN601	1-764-530-21	CONNECTOR, FFC/FPC (ZIF) 23P		IC602	8-759-444-87	IC NJM324V(TE2)	
CN701	1-750-630-11	CONNECTOR, FFC/FPC (ZIF) 16P		IC603	8-759-365-18	IC uPD16833G3-E2 (TR506/TR507/TR501E/TR502E/TR503E/TR506E/TR620E/TR740E)	
CN702	1-766-336-21	CONNECTOR, FFC/FPC 6P (TR96/TR916/TR620E/TR720E/TR740E)		IC603	8-759-351-46	IC MPC17A34RVMEL (TR86/TR96/TR916/TR720E)	
		< DIODE >		IC604	8-759-371-59	IC CF45853APW-E10	
D101	8-719-404-49	DIODE MA111-TX		IC702	8-752-384-74	IC CXD2486R-T4	
D102	8-719-820-41	DIODE 1SS302-TE85L		IC703	8-752-078-86	IC CXA2056Q-T4	
D103	8-719-059-51	DIODE MA3J142E0LSO		IC704	8-759-459-28	IC ADS932Y/T2	
D201	8-719-059-51	DIODE MA3J142E0LSO		IC705	8-752-374-02	IC CXD2418R-T4	
D202	8-719-404-49	DIODE MA111-TX (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		IC706	8-759-440-38	IC CXD8562AR-TEB (TR96/TR916/TR620E/TR720E/TR740E)	
D203	8-719-404-49	DIODE MA111-TX		IC706	8-752-379-66	IC CXD2180AR-T6 (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
D204	8-719-059-51	DIODE MA3J142E0LSO		IC707	8-759-446-62	IC HG51D267FGTL (EXCEPT TR502E)	
D301	8-719-061-81	DIODE TLYU1002(TPX1,SONY)		IC709	8-759-198-34	IC TA75S558F(TE85R) (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
D302	8-719-061-81	DIODE TLYU1002(TPX1,SONY)				< COIL >	
D303	8-719-061-81	DIODE TLYU1002(TPX1,SONY)		L101	1-412-066-21	INDUCTOR CHIP 220uH	
D304	8-719-061-81	DIODE TLYU1002(TPX1,SONY)		L102	1-412-185-11	INDUCTOR 12uH	
D305	8-719-061-81	DIODE TLYU1002(TPX1,SONY)		L103	1-412-066-21	INDUCTOR CHIP 220uH	
D306	8-719-061-82	DIODE TLSU1002(TPX1,SONY) (TR86/TR96/TR507/TR916/TR740E)		L104	1-414-754-11	INDUCTOR 10uH	
D307	8-719-404-49	DIODE MA111-TX		L105	1-412-950-11	INDUCTOR 8.2uH	
D705	8-719-002-81	DIODE 1T363-01-T8A (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		L106	1-412-957-11	INDUCTOR 33uH	
D706	8-713-102-28	DIODE 1T379-04-T8A		L107	1-410-658-31	INDUCTOR CHIP 220uH	
		< FERRITE BEAD >		L108	1-412-280-31	INDUCTOR 330uH	
FB301	1-414-385-11	INDUCTOR, FERRITE BEAD		L109	1-412-282-41	INDUCTOR 470uH	
FB601	1-414-228-11	INDUCTOR, FERRITE BEAD		L110	1-410-655-31	INDUCTOR CHIP 120uH	
FB701	1-500-284-21	INDUCTOR, FERRITE BEAD		L111	1-412-355-41	INDUCTOR 180uH	
FB702	1-414-228-11	INDUCTOR, FERRITE BEAD (TR96/TR916)		L112	1-412-355-41	INDUCTOR 180uH	
FB703	1-414-228-11	INDUCTOR, FERRITE BEAD		L113	1-412-957-11	INDUCTOR 33uH	
FB704	1-500-284-21	INDUCTOR, FERRITE BEAD		L114	1-414-373-31	INDUCTOR CHIP 10uH	
FB705	1-414-228-11	INDUCTOR, FERRITE BEAD		L115	1-414-754-11	INDUCTOR 10uH	
FB706	1-414-228-11	INDUCTOR, FERRITE BEAD		L202	1-414-757-11	INDUCTOR 100uH	
FB707	1-414-228-11	INDUCTOR, FERRITE BEAD		L203	1-412-962-11	INDUCTOR 82uH	
FB708	1-414-228-11	INDUCTOR, FERRITE BEAD		L205	1-412-955-11	INDUCTOR 22uH (TR86/TR96/TR506/TR507/TR916)	
		< IC >		L207	1-412-962-11	INDUCTOR 82uH	
IC101	8-752-071-15	IC CXA1702AR-T6		L210	1-412-951-11	INDUCTOR 10uH	
IC201	8-752-075-45	IC CXA2051R-T6					
IC202	8-759-035-90	IC TC7S02F(TE85R)					
IC205	8-759-295-66	IC BA7653AF-E2					

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
		(TR501E/TR502E/TR503E/TR506E)		Q208	8-729-402-42	TRANSISTOR UN5213-TX	
L211	1-414-754-11	INDUCTOR 10uH		Q211	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX (TR86/TR96/TR506/TR507/TR916)	
L212	1-414-755-11	INDUCTOR 22uH		Q213	8-729-402-42	TRANSISTOR UN5213-TX	
L213	1-414-196-41	INDUCTOR 47uH (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		Q214	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	
L213	1-414-170-41	INDUCTOR 100uH (TR86/TR96/TR506/TR507/TR916)		Q215	8-729-013-15	TRANSISTOR 2SC4909-TL	
L214	1-414-753-91	INDUCTOR 4.7uH		Q216	8-729-420-20	TRANSISTOR XN4312-TW (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
L215	1-412-962-11	INDUCTOR 82uH					
L216	1-414-170-41	INDUCTOR 100uH (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		Q217	8-729-420-12	TRANSISTOR XN4213-TW	
L301	1-414-754-11	INDUCTOR 10uH		Q218	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	
L303	1-414-754-11	INDUCTOR 10uH		Q219	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
L304	1-414-754-11	INDUCTOR 10uH		Q221	8-729-402-42	TRANSISTOR UN5213-TX	
L305	1-411-165-21	COIL, OSC		Q222	8-729-402-42	TRANSISTOR UN5213-TX	
L400	1-414-754-11	INDUCTOR 10uH		Q223	8-729-230-63	TRANSISTOR 2SC4116-YG (TR501E/TR502E/TR503E/TR506E)	
L401	1-412-951-11	INDUCTOR 10uH		Q224	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX (TR501E/TR502E/TR503E/TR506E)	
L402	1-216-295-91	CONDUCTOR, CHIP (2012)		Q226	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
L570	1-414-754-11	INDUCTOR 10uH (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		Q227	8-729-013-15	TRANSISTOR 2SC4909-TL	
L601	1-414-398-11	INDUCTOR 10uH		Q228	8-729-403-35	TRANSISTOR UN5113-TX	
L602	1-414-754-11	INDUCTOR 10uH		Q229	8-729-402-42	TRANSISTOR UN5213-TX	
L706	1-414-754-11	INDUCTOR 10uH		Q230	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX (TR86/TR96/TR507/TR916/TR740E)	
L715	1-414-754-11	INDUCTOR 10uH		Q231	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	
L717	1-414-754-11	INDUCTOR 10uH		Q232	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
L751	1-414-754-11	INDUCTOR 10uH		Q301	8-729-807-86	TRANSISTOR 2SB1295-UL5/6-TB	
L752	1-412-959-11	INDUCTOR 47uH (TR86/TR96/TR506/TR507/TR916)		Q302	8-729-402-42	TRANSISTOR UN5213-TX	
L753	1-412-959-11	INDUCTOR 47uH (TR86/TR96/TR506/TR507/TR916)		Q303	8-729-402-42	TRANSISTOR UN5213-TX (TR86/TR96/TR507/TR916/TR740E)	
L754	1-414-754-11	INDUCTOR 10uH (EXCEPT TR502E)		Q304	8-729-101-07	TRANSISTOR 2SB798-T1-DLTK	
< TRANSISTOR >				Q305	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
Q101	8-729-824-02	TRANSISTOR 2SA1838-TL		Q400	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
Q102	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX		Q401	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
Q103	8-729-823-86	TRANSISTOR 2SA1745-TL (TR86/TR96/TR506/TR507/TR916)		Q501	8-729-420-53	TRANSISTOR UN5115-(TX)	
Q104	8-729-823-86	TRANSISTOR 2SA1745-TL		Q506	8-729-421-26	TRANSISTOR UN5216QRS-TX (TR506/TR507/TR506E/TR720E/TR740E)	
Q105	8-729-823-86	TRANSISTOR 2SA1745-TL		Q507	8-729-421-26	TRANSISTOR UN5216QRS-TX	
Q106	8-729-823-86	TRANSISTOR 2SA1745-TL (TR86/TR96/TR506/TR507/TR916)		Q570	8-729-402-42	TRANSISTOR UN5213-TX (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
Q107	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX		Q601	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
Q108	8-729-402-42	TRANSISTOR UN5213-TX (TR86/TR96/TR506/TR507/TR916)		Q602	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX	
Q109	8-729-402-42	TRANSISTOR UN5213-TX (TR86/TR96/TR506/TR507/TR916)		Q603	8-729-013-31	TRANSISTOR 2SA1588-OY-TE85L	
Q110	8-729-402-42	TRANSISTOR UN5213-TX		Q703	8-729-402-42	TRANSISTOR UN5213-TX	
Q111	8-729-402-42	TRANSISTOR UN5213-TX		Q704	8-729-403-35	TRANSISTOR UN5113-TX	
Q112	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX		Q705	8-729-403-35	TRANSISTOR UN5113-TX	
Q113	8-729-402-42	TRANSISTOR UN5213-TX (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		Q706	8-729-402-42	TRANSISTOR UN5213-TX	
Q114	8-729-402-42	TRANSISTOR UN5213-TX		Q750	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	
Q115	8-729-402-42	TRANSISTOR UN5213-TX		Q752	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX	
Q116	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX		Q753	8-729-013-15	TRANSISTOR 2SC4909-TL (TR86/TR96/TR506/TR507/TR916)	
Q117	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX		Q754	8-729-013-15	TRANSISTOR 2SC4909-TL (TR86/TR96/TR506/TR507/TR916)	
Q118	8-729-012-50	TRANSISTOR 2SC4400-3/4/5-TL		< RESISTOR >			
Q119	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX		R061	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
Q121	8-729-015-74	TRANSISTOR UN5111-TX		R062	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
Q122	8-729-117-73	TRANSISTOR 2SC4178-F13F14-T1		R063	1-216-821-11	METAL CHIP 1K 5% 1/16W	
Q123	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX		R064	1-216-837-11	METAL CHIP 22K 5% 1/16W	
Q202	8-729-230-63	TRANSISTOR 2SD1819A-QRS-TX					
Q206	8-729-420-24	TRANSISTOR 2SB1218A-QRS-TX					

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R065	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	R160	1-216-818-11	METAL CHIP	560	5%	1/16W
R101	1-216-803-11	METAL CHIP	33	5%	1/16W	R163	1-216-813-11	METAL CHIP	220	5%	1/16W
R102	1-216-818-11	METAL CHIP	560	5%	1/16W	R164	1-216-818-11	METAL CHIP	560	5%	1/16W
R103	1-216-814-11	METAL CHIP	270	5%	1/16W	R165	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R104	1-216-813-11	METAL CHIP	220	5%	1/16W	R167	1-216-818-11	METAL CHIP	560	5%	1/16W
R105	1-216-837-11	METAL CHIP	22K	5%	1/16W	R168	1-216-818-11	METAL CHIP	560	5%	1/16W
R106	1-216-828-11	METAL CHIP	3.9K	5%	1/16W (TR86/TR96/TR506/TR507/TR916)	R169	1-216-816-11	METAL CHIP	390	5%	1/16W
R107	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	R170	1-216-821-11	METAL CHIP	1K	5%	1/16W
R108	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	R171	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R109	1-216-839-11	METAL CHIP	33K	5%	1/16W	R172	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R110	1-216-828-11	METAL CHIP	3.9K	5%	1/16W (TR86/TR96/TR506/TR507/TR916)	R174	1-216-864-11	METAL CHIP	0	5%	1/16W
R111	1-216-837-11	METAL CHIP	22K	5%	1/16W	R175	1-216-834-11	METAL CHIP	12K	5%	1/16W
R112	1-216-837-11	METAL CHIP	22K	5%	1/16W	R176	1-216-833-11	METAL CHIP	10K	5%	1/16W
R113	1-216-829-11	METAL CHIP	4.7K	5%	1/16W (TR86/TR96/TR506/TR507/TR916)	R177	1-216-817-11	METAL CHIP	470	5%	1/16W
R114	1-216-829-11	METAL CHIP	4.7K	5%	1/16W (TR86/TR96/TR506/TR507/TR916)	R178	1-216-807-11	METAL CHIP	68	5%	1/16W
R115	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R179	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R116	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R180	1-216-817-11	METAL CHIP	470	5%	1/16W
R117	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	R181	1-216-819-11	METAL CHIP	680	5%	1/16W
R118	1-216-838-11	METAL CHIP	27K	5%	1/16W	R182	1-216-821-11	METAL CHIP	1K	5%	1/16W
R119	1-216-818-11	METAL CHIP	560	5%	1/16W	R183	1-216-836-11	METAL CHIP	18K	5%	1/16W
R120	1-216-818-11	METAL CHIP	560	5%	1/16W	R184	1-216-836-11	METAL CHIP	18K	5%	1/16W
R121	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	R185	1-216-821-11	METAL CHIP	1K	5%	1/16W
R122	1-216-838-11	METAL CHIP	27K	5%	1/16W	R186	1-216-804-11	METAL CHIP	39	5%	1/16W (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)
R123	1-216-818-11	METAL CHIP	560	5%	1/16W	R186	1-216-803-11	METAL CHIP	33	5%	1/16W (TR86/TR96/TR506/TR507/TR916)
R124	1-216-818-11	METAL CHIP	560	5%	1/16W	R187	1-216-824-11	METAL CHIP	1.8K	5%	1/16W (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)
R125	1-216-833-11	METAL CHIP	10K	5%	1/16W	R187	1-216-823-11	METAL CHIP	1.5K	5%	1/16W (TR86/TR96/TR506/TR507/TR916)
R129	1-216-864-11	METAL CHIP	0	5%	1/16W	R189	1-216-864-11	METAL CHIP	0	5%	1/16W (TR86/TR96/TR506/TR507/TR916)
R132	1-216-797-11	METAL CHIP	10	5%	1/16W	R190	1-216-864-11	METAL CHIP	0	5%	1/16W
R133	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R191	1-216-833-11	METAL CHIP	10K	5%	1/16W
R134	1-218-875-11	METAL GLAZE	15K	0.50%	1/16W	R192	1-216-833-11	METAL CHIP	10K	5%	1/16W
R135	1-216-821-11	METAL CHIP	1K	5%	1/16W (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	R193	1-216-864-11	METAL CHIP	0	5%	1/16W
R136	1-216-836-11	METAL CHIP	18K	5%	1/16W	R201	1-216-833-11	METAL CHIP	10K	5%	1/16W
R137	1-216-833-11	METAL CHIP	10K	5%	1/16W	R202	1-216-864-11	METAL CHIP	0	5%	1/16W (TR96/TR916/TR620E/TR720E/TR740E)
R138	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R202	1-216-836-11	METAL CHIP	18K	5%	1/16W (TR501E/TR502E/TR503E/TR506E)
R139	1-216-864-11	METAL CHIP	0	5%	1/16W (TR86/TR96/TR506/TR507/TR916)	R202	1-216-828-11	METAL CHIP	3.9K	5%	1/16W (TR86/TR506/TR507)
R140	1-216-833-11	METAL CHIP	10K	5%	1/16W	R203	1-216-832-11	METAL CHIP	8.2K	5%	1/16W (TR501E/TR502E/TR503E/TR506E)
R141	1-216-832-11	METAL CHIP	8.2K	5%	1/16W (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	R203	1-216-830-11	METAL CHIP	5.6K	5%	1/16W (TR86/TR506/TR507)
R142	1-216-836-11	METAL CHIP	18K	5%	1/16W	R204	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R145	1-216-847-11	METAL CHIP	150K	5%	1/16W	R205	1-216-841-11	METAL CHIP	47K	5%	1/16W (TR86/TR96/TR507/TR916/TR740E)
R146	1-216-852-11	METAL CHIP	390K	5%	1/16W	R206	1-216-815-11	METAL CHIP	330	5%	1/16W (TR86/TR96/TR506/TR507/TR916)
R147	1-216-853-11	METAL CHIP	470K	5%	1/16W	R207	1-216-841-11	METAL CHIP	47K	5%	1/16W (TR86/TR96/TR507/TR916/TR740E)
R150	1-216-864-11	METAL CHIP	0	5%	1/16W	R208	1-216-825-11	METAL CHIP	2.2K	5%	1/16W (TR86/TR96/TR507/TR916/TR740E)
R152	1-216-833-11	METAL CHIP	10K	5%	1/16W	R210	1-216-864-11	METAL CHIP	0	5%	1/16W (TR86/TR96/TR506/TR507/TR916/TR501E/TR502E/TR503E/TR506E)
R153	1-216-839-11	METAL CHIP	33K	5%	1/16W	R211	1-216-864-11	METAL CHIP	0	5%	1/16W (TR620E/TR720E/TR740E)
R154	1-216-821-11	METAL CHIP	1K	5%	1/16W						
R155	1-216-817-11	METAL CHIP	470	5%	1/16W						
R156	1-216-818-11	METAL CHIP	560	5%	1/16W						
R157	1-216-822-11	METAL CHIP	1.2K	5%	1/16W						
R158	1-216-809-11	METAL CHIP	100	5%	1/16W						
R159	1-216-818-11	METAL CHIP	560	5%	1/16W						

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R212	1-216-841-11	METAL CHIP	47K	5%	1/16W			(TR86/TR96/TR506/TR507/TR916)			
R213	1-216-841-11	METAL CHIP	47K	5%	1/16W	R265	1-216-821-11	METAL CHIP	1K	5%	1/16W
R214	1-216-807-11	METAL CHIP	68	5%	1/16W			(TR501E/TR502E/TR503E/TR506E)			
R215	1-216-821-11	METAL CHIP	1K	5%	1/16W	R266	1-216-864-11	METAL CHIP	0	5%	1/16W
R216	1-216-817-11	METAL CHIP	470	5%	1/16W	R267	1-216-864-11	METAL CHIP	0	5%	1/16W
R218	1-218-879-11	METAL GLAZE	22K	0.50%	1/16W	R268	1-216-818-11	METAL CHIP	560	5%	1/16W
								(TR501E/TR502E/TR503E/TR506E)			
R219	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R270	1-216-818-11	METAL CHIP	560	5%	1/16W
R220	1-216-833-11	METAL CHIP	10K	5%	1/16W			(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)			
R221	1-216-833-11	METAL CHIP	10K	5%	1/16W	R270	1-216-817-11	METAL CHIP	470	5%	1/16W
R222	1-216-818-11	METAL CHIP	560	5%	1/16W			(TR86/TR96/TR506/TR507/TR916)			
R223	1-216-825-11	METAL CHIP	2.2K	5%	1/16W						
R224	1-218-863-11	METAL GLAZE	4.7K	0.50%	1/16W	R271	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R225	1-216-833-11	METAL CHIP	10K	5%	1/16W	R272	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R226	1-216-833-11	METAL CHIP	10K	5%	1/16W			(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)			
		(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)				R274	1-216-864-11	METAL CHIP	0	5%	1/16W
R228	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R276	1-216-864-11	METAL CHIP	0	5%	1/16W
R229	1-218-863-11	METAL GLAZE	4.7K	0.50%	1/16W	R277	1-216-819-11	METAL CHIP	680	5%	1/16W
R230	1-216-821-11	METAL CHIP	1K	5%	1/16W						
		(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)				R279	1-216-821-11	METAL CHIP	1K	5%	1/16W
R231	1-216-825-11	METAL CHIP	2.2K	5%	1/16W			(TR501E/TR502E/TR503E/TR506E)			
R232	1-216-821-11	METAL CHIP	1K	5%	1/16W	R281	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R233	1-218-847-11	METAL GLAZE	1K	0.50%	1/16W	R282	1-216-821-11	METAL CHIP	1K	5%	1/16W
R234	1-218-849-11	METAL GLAZE	1.2K	0.50%	1/16W			(TR620E/TR720E/TR740E)			
R235	1-216-821-11	METAL CHIP	1K	5%	1/16W	R282	1-216-817-11	METAL CHIP	470	5%	1/16W
R236	1-218-878-11	METAL GLAZE	20K	0.50%	1/16W			(TR86/TR96/TR506/TR507/TR916)			
R237	1-218-865-11	METAL GLAZE	5.6K	0.50%	1/16W	R283	1-216-819-11	METAL CHIP	680	5%	1/16W
R239	1-216-864-11	METAL CHIP	0	5%	1/16W			(TR501E/TR502E/TR503E/TR506E)			
R240	1-218-876-11	METAL GLAZE	16K	0.50%	1/16W	R284	1-216-819-11	METAL CHIP	680	5%	1/16W
								(TR501E/TR502E/TR503E/TR506E)			
R241	1-218-839-11	METAL GLAZE	470	0.50%	1/16W	R286	1-216-836-11	METAL CHIP	18K	5%	1/16W
R242	1-218-887-11	METAL GLAZE	47K	0.50%	1/16W			(TR501E/TR502E/TR503E/TR506E)			
R243	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R287	1-216-864-11	METAL CHIP	0	5%	1/16W
R244	1-216-843-11	METAL CHIP	68K	5%	1/16W			(TR501E/TR502E/TR503E/TR506E)			
R245	1-216-864-11	METAL CHIP	0	5%	1/16W	R289	1-216-839-11	METAL CHIP	33K	5%	1/16W
		(TR86/TR96/TR506/TR507/TR916)						(TR501E/TR502E/TR503E/TR506E)			
R246	1-216-864-11	METAL CHIP	0	5%	1/16W	R290	1-216-864-11	METAL CHIP	0	5%	1/16W
R247	1-216-833-11	METAL CHIP	10K	5%	1/16W			(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)			
R248	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	R291	1-216-864-11	METAL CHIP	0	5%	1/16W
R249	1-216-824-11	METAL CHIP	1.8K	5%	1/16W						
		(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)				R292	1-216-857-11	METAL CHIP	1M	5%	1/16W
R249	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R293	1-216-817-11	METAL CHIP	470	5%	1/16W
		(TR86/TR96/TR506/TR507/TR916)				R294	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R250	1-216-818-11	METAL CHIP	560	5%	1/16W	R295	1-216-852-11	METAL CHIP	390K	5%	1/16W
						R296	1-216-849-11	METAL CHIP	220K	5%	1/16W
R252	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R254	1-216-841-11	METAL CHIP	47K	5%	1/16W	R297	1-216-842-11	METAL CHIP	56K	5%	1/16W
R255	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R298	1-216-833-11	METAL CHIP	10K	5%	1/16W
R256	1-216-833-11	METAL CHIP	10K	5%	1/16W	R299	1-218-272-11	METAL GLAZE	5.1K	5%	1/16W
R257	1-216-821-11	METAL CHIP	1K	5%	1/16W	R302	1-216-864-11	METAL CHIP	0	5%	1/16W
						R303	1-216-833-11	METAL CHIP	10K	5%	1/16W
R259	1-216-833-11	METAL CHIP	10K	5%	1/16W						
R260	1-216-817-11	METAL CHIP	470	5%	1/16W	R304	1-216-841-11	METAL CHIP	47K	5%	1/16W
R261	1-216-841-11	METAL CHIP	47K	5%	1/16W	R305	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
		(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)				R306	1-216-853-11	METAL CHIP	470K	5%	1/16W
R262	1-216-837-11	METAL CHIP	22K	5%	1/16W	R307	1-216-841-11	METAL CHIP	47K	5%	1/16W
		(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)				R308	1-216-853-11	METAL CHIP	470K	5%	1/16W
R263	1-216-829-11	METAL CHIP	4.7K	5%	1/16W						
						R309	1-216-853-11	METAL CHIP	470K	5%	1/16W
						R310	1-216-841-11	METAL CHIP	47K	5%	1/16W
						R311	1-216-817-11	METAL CHIP	470	5%	1/16W
						R312	1-208-762-11	METAL GLAZE	150	0.50%	1/10W
						R313	1-208-750-11	METAL GLAZE	47	0.50%	1/10W
						R314	1-216-805-11	METAL CHIP	47	5%	1/16W
						R315	1-216-853-11	METAL CHIP	470K	5%	1/16W
						R316	1-216-853-11	METAL CHIP	470K	5%	1/16W
						R317	1-216-864-11	METAL CHIP	0	5%	1/16W
											(TR740E)

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
R319	1-216-827-11	METAL CHIP	3.3K	5%	1/16W				(TR86/TR96/TR916)		
R320	1-216-811-11	METAL CHIP	150	5%	1/16W	R424	1-216-843-11	METAL CHIP	68K	5%	1/16W
			(TR86/TR96/TR507/TR916/TR740E)						(TR740E)		
R321	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	R424	1-216-841-11	METAL CHIP	47K	5%	1/16W
R322	1-216-823-11	METAL CHIP	1.5K	5%	1/16W				(TR502E/TR720E)		
R323	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	R424	1-216-837-11	METAL CHIP	22K	5%	1/16W
R324	1-216-831-11	METAL CHIP	6.8K	5%	1/16W				(TR501E/TR503E/TR620E)		
						R424	1-216-845-11	METAL CHIP	100K	5%	1/16W
									(TR86/TR506/TR506E)		
R325	1-216-837-11	METAL CHIP	22K	5%	1/16W	R425	1-216-833-11	METAL CHIP	10K	5%	1/16W
R326	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	R426	1-216-833-11	METAL CHIP	10K	5%	1/16W
R328	1-216-853-11	METAL CHIP	470K	5%	1/16W	R427	1-216-849-11	METAL CHIP	220K	5%	1/16W
R329	1-216-853-11	METAL CHIP	470K	5%	1/16W	R428	1-216-841-11	METAL CHIP	47K	5%	1/16W
R330	1-216-864-11	METAL CHIP	0	5%	1/16W						
						R429	1-216-800-11	METAL GLAZE	18	5%	1/16W
R331	1-216-821-11	METAL CHIP	1K	5%	1/16W	R430	1-216-821-11	METAL CHIP	1K	5%	1/16W
R332	1-216-821-11	METAL CHIP	1K	5%	1/16W	R431	1-216-845-11	METAL CHIP	100K	5%	1/16W
R333	1-216-821-11	METAL CHIP	1K	5%	1/16W	R434	1-216-835-11	METAL CHIP	15K	5%	1/16W
R334	1-216-821-11	METAL CHIP	1K	5%	1/16W	R436	1-216-845-11	METAL CHIP	100K	5%	1/16W
R335	1-216-821-11	METAL CHIP	1K	5%	1/16W						
						R437	1-216-841-11	METAL CHIP	47K	5%	1/16W
R336	1-216-821-11	METAL CHIP	1K	5%	1/16W	R438	1-216-845-11	METAL CHIP	100K	5%	1/16W
R337	1-216-839-11	METAL CHIP	33K	5%	1/16W	R439	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R339	1-216-841-11	METAL CHIP	47K	5%	1/16W	R440	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R340	1-216-138-00	METAL CHIP	3.3	5%	1/8W	R441	1-216-839-11	METAL CHIP	33K	5%	1/16W
R341	1-216-830-11	METAL CHIP	5.6K	5%	1/16W						
						R442	1-216-845-11	METAL CHIP	100K	5%	1/16W
R342	1-216-864-11	METAL CHIP	0	5%	1/16W	R443	1-216-837-11	METAL CHIP	22K	5%	1/16W
R343	1-216-820-11	METAL CHIP	820	5%	1/16W				(TR86/TR96/TR506/TR507/TR916)		
R344	1-216-836-11	METAL CHIP	18K	5%	1/16W	R444	1-216-837-11	METAL CHIP	22K	5%	1/16W
R400	1-216-845-11	METAL CHIP	100K	5%	1/16W	R445	1-216-864-11	METAL CHIP	0	5%	1/16W
R401	1-216-845-11	METAL CHIP	100K	5%	1/16W				(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)		
						R445	1-216-833-11	METAL CHIP	10K	5%	1/16W
R402	1-216-845-11	METAL CHIP	100K	5%	1/16W				(TR86/TR96/TR506/TR507/TR916)		
R403	1-216-845-11	METAL CHIP	100K	5%	1/16W	R446	1-216-836-11	METAL CHIP	18K	5%	1/16W
R404	1-216-845-11	METAL CHIP	100K	5%	1/16W	R447	1-216-833-11	METAL CHIP	10K	5%	1/16W
R405	1-216-845-11	METAL CHIP	100K	5%	1/16W	R448	1-216-833-11	METAL CHIP	10K	5%	1/16W
R406	1-216-833-11	METAL CHIP	10K	5%	1/16W	R449	1-216-833-11	METAL CHIP	10K	5%	1/16W
						R450	1-216-833-11	METAL CHIP	10K	5%	1/16W
R407	1-216-841-11	METAL CHIP	47K	5%	1/16W	R451	1-216-845-11	METAL CHIP	100K	5%	1/16W
R408	1-216-841-11	METAL CHI	47K	5%	1/16W						
					(TR740E)	R452	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R408	1-216-843-11	METAL CHIP	68K	5%	1/16W	R453	1-217-671-11	METAL CHIP	1	5%	1/10W
					(TR502E/TR720E)	R454	1-217-671-11	METAL CHIP	1	5%	1/10W
R408	1-216-845-11	METAL CHIP	100K	5%	1/16W	R455	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
					(TR96/TR916)	R456	1-216-841-11	METAL CHIP	47K	5%	1/16W
R408	1-216-837-11	METAL CHIP	22K	5%	1/16W						
					(TR86/TR96/TR506/TR507/TR916/TR506E)	R458	1-217-671-11	METAL CHIP	1	5%	1/10W
R409	1-216-843-11	METAL CHIP	68K	5%	1/16W	R459	1-217-671-11	METAL CHIP	1	5%	1/10W
					(TR86/TR96/TR916/TR620E/TR720E/TR740E)	R460	1-217-671-11	METAL CHIP	1	5%	1/10W
R410	1-216-841-11	METAL CHIP	47K	5%	1/16W	R461	1-216-845-11	METAL CHIP	100K	5%	1/16W
R411	1-216-864-11	METAL CHIP	0	5%	1/16W	R462	1-216-833-11	METAL CHIP	10K	5%	1/16W
R412	1-216-837-11	METAL CHIP	22K	5%	1/16W	R463	1-216-833-11	METAL CHIP	10K	5%	1/16W
					(TR506/TR507/TR501E/TR502E/TR503E/TR506E)	R464	1-216-833-11	METAL CHIP	10K	5%	1/16W
R412	1-216-841-11	METAL CHIP	47K	5%	1/16W	R465	1-216-808-11	METAL CHIP	82	5%	1/16W
					(TR86/TR96/TR916/TR620E/TR720E/TR740E)	R466	1-216-845-11	METAL CHIP	100K	5%	1/16W
R413	1-216-864-11	METAL CHIP	0	5%	1/16W	R467	1-216-019-00	METAL CHIP	56	5%	1/10W
					(TR86/TR96/TR506/TR507/TR916)						
R414	1-216-864-11	METAL CHIP	0	5%	1/16W	R468	1-216-833-11	METAL CHIP	10K	5%	1/16W
					(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	R469	1-216-833-11	METAL CHIP	10K	5%	1/16W
R417	1-216-821-11	METAL CHIP	1K	5%	1/16W	R471	1-216-821-11	METAL CHIP	1K	5%	1/16W
R418	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	R472	1-216-833-11	METAL CHIP	10K	5%	1/16W
						R473	1-216-833-11	METAL CHIP	10K	5%	1/16W
R419	1-216-845-11	METAL CHIP	100K	5%	1/16W						
R420	1-216-833-11	METAL CHIP	10K	5%	1/16W	R475	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
					(TR86/TR96/TR916)	R478	1-216-821-11	METAL CHIP	1K	5%	1/16W
R421	1-216-821-11	METAL CHIP	1K	5%	1/16W	R479	1-216-817-11	METAL CHIP	470	5%	1/16W
R422	1-216-845-11	METAL CHIP	100K	5%	1/16W	R481	1-216-817-11	METAL CHIP	470	5%	1/16W
R423	1-216-845-11	METAL CHIP	100K	5%	1/16W						

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R484	1-216-821-11	METAL CHIP 1K 5%	1/16W	R556	1-216-853-11	METAL CHIP 470K 5%	1/16W
R485	1-216-821-11	METAL CHIP 1K 5%	1/16W	R562	1-216-864-11	METAL CHIP 0 5%	1/16W
R486	1-216-821-11	METAL CHIP 1K 5%	1/16W	R564	1-216-864-11	METAL CHIP 0 5%	1/16W
R487	1-216-821-11	METAL CHIP 1K 5%	1/16W			(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
R488	1-216-817-11	METAL CHIP 470 5%	1/16W	R570	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
R501	1-216-829-11	METAL CHIP 4.7K 5%	1/16W			(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R501	1-216-853-11	METAL CHIP 470K 5%	1/16W	R571	1-218-871-11	METAL GLAZE 10K 0.50%	1/16W
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)				(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R502	1-216-824-11	METAL CHIP 1.8K 5%	1/16W	R575	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)				(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R503	1-218-897-11	METAL GLAZE 120K 0.50%	1/16W	R581	1-216-833-11	METAL CHIP 10K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)				(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R503	1-216-864-11	METAL CHIP 0 5%	1/16W	R601	1-216-001-00	METAL CHIP 10 5%	1/10W
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		R603	1-216-821-11	METAL CHIP 1K 5%	1/16W
R505	1-216-833-11	METAL CHIP 10K 5%	1/16W	R604	1-216-845-11	METAL CHIP 100K 5%	1/16W
R506	1-218-897-11	METAL GLAZE 120K 0.50%	1/16W	R605	1-216-821-11	METAL CHIP 1K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)		R606	1-216-835-11	METAL CHIP 15K 5%	1/16W
R506	1-218-893-11	METAL GLAZE 82K 0.50%	1/16W	R607	1-216-848-11	METAL CHIP 180K 5%	1/16W
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		R608	1-216-848-11	METAL CHIP 180K 5%	1/16W
R507	1-216-831-11	METAL CHIP 6.8K 5%	1/16W	R609	1-216-848-11	METAL CHIP 180K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)		R610	1-216-830-11	METAL CHIP 5.6K 5%	1/16W
R507	1-216-832-11	METAL CHIP 8.2K 5%	1/16W	R611	1-216-815-11	METAL CHIP 330 5%	1/16W
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		R612	1-216-845-11	METAL CHIP 100K 5%	1/16W
R511	1-218-875-11	METAL GLAZE 15K 0.50%	1/16W	R613	1-216-836-11	METAL CHIP 18K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)		R614	1-216-836-11	METAL CHIP 18K 5%	1/16W
R512	1-216-864-11	METAL CHIP 0 5%	1/16W	R615	1-216-845-11	METAL CHIP 100K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)		R616	1-216-837-11	METAL CHIP 22K 5%	1/16W
R513	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	R618	1-216-837-11	METAL CHIP 22K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)		R619	1-216-835-11	METAL CHIP 15K 5%	1/16W
R514	1-216-833-11	METAL CHIP 10K 5%	1/16W	R620	1-216-823-11	METAL CHIP 1.5K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)		R621	1-216-833-11	METAL CHIP 10K 5%	1/16W
R514	1-216-831-11	METAL CHIP 6.8K 5%	1/16W	R630	1-216-843-11	METAL CHIP 68K 5%	1/16W
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		R631	1-216-843-11	METAL CHIP 68K 5%	1/16W
R515	1-216-813-11	METAL CHIP 220 5%	1/16W	R632	1-216-848-11	METAL CHIP 180K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)		R633	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
R515	1-216-864-11	METAL CHIP 0 5%	1/16W	R701	1-216-809-11	METAL CHIP 100 5%	1/16W
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)				(TR96/TR916/TR620E/TR720E/TR740E)	
R516	1-218-897-11	METAL GLAZE 120K 0.50%	1/16W	R702	1-216-809-11	METAL CHIP 100 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)				(TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
R517	1-216-853-11	METAL CHIP 470K 5%	1/16W	R703	1-216-857-11	METAL CHIP 1M 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)		R704	1-216-845-11	METAL CHIP 100K 5%	1/16W
R517	1-216-845-11	METAL CHIP 100K 5%	1/16W			(TR506/TR507/TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		R704	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
R519	1-216-820-11	METAL CHIP 820 5%	1/16W			(TR86/TR96/TR916)	
R520	1-216-864-11	METAL CHIP 0 5%	1/16W	R708	1-216-821-11	METAL CHIP 1K 5%	1/16W
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)		R709	1-218-847-11	METAL GLAZE 1K 0.50%	1/16W
R522	1-216-817-11	METAL CHIP 470 5%	1/16W	R710	1-218-876-11	METAL GLAZE 16K 0.50%	1/16W
R526	1-216-817-11	METAL CHIP 470 5%	1/16W	R713	1-216-833-11	METAL CHIP 10K 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)				(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R527	1-216-853-11	METAL CHIP 470K 5%	1/16W	R714	1-216-857-11	METAL CHIP 1M 5%	1/16W
		(TR506/TR507/TR506E/TR720E/TR740E)				(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R530	1-216-857-11	METAL CHIP 1M 5%	1/16W	R715	1-216-845-11	METAL CHIP 100K 5%	1/16W
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)				(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R531	1-216-817-11	METAL CHIP 470 5%	1/16W	R717	1-216-829-11	METAL CHIP 4.7K 5%	1/16W
R532	1-216-817-11	METAL CHIP 470 5%	1/16W				
		(TR506/TR507/TR506E/TR720E/TR740E)					
R533	1-216-864-11	METAL CHIP 0 5%	1/16W				
		(TR506/TR507/TR506E/TR720E/TR740E)					
R534	1-216-864-11	METAL CHIP 0 5%	1/16W				
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)					
R537	1-216-829-11	METAL CHIP 4.7K 5%	1/16W				
		(TR506/TR507/TR506E/TR720E/TR740E)					
R537	1-216-864-11	METAL CHIP 0 5%	1/16W				
		(TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)					

Ref. No.	Part No.	Description	Remarks
		(TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R719	1-216-818-11	METAL CHIP 560 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R719	1-216-810-11	METAL CHIP 120 5% 1/16W (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
R721	1-216-827-11	METAL CHIP 3.3K 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R721	1-216-825-11	METAL CHIP 2.2K 5% 1/16W (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
R722	1-216-827-11	METAL CHIP 3.3K 5% 1/16W (TR720E/TR740E)	
R722	1-216-827-11	METAL CHIP 3.3K 5% 1/16W (TR96/TR916/TR503E/TR506E/TR620E/TR720E/TR740E)	
R722	1-216-825-11	METAL CHIP 2.2K 5% 1/16W (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
R724	1-216-818-11	METAL CHIP 560 5% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R724	1-216-810-11	METAL CHIP 120 5% 1/16W (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
R725	1-216-864-11	METAL CHIP 0 5% 1/16W	
R728	1-216-853-11	METAL CHIP 470K 5% 1/16W	
R729	1-216-809-11	METAL CHIP 100 5% 1/16W	
R732	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R733	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R734	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R735	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R743	1-216-864-11	METAL CHIP 0 5% 1/16W (EXCEPT TR96/TR916)	
R744	1-216-864-11	METAL CHIP 0 5% 1/16W	
R751	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R756	1-216-864-11	METAL CHIP 0 5% 1/16W	
R757	1-216-864-11	METAL CHIP 0 5% 1/16W	
R758	1-216-833-11	METAL CHIP 10K 5% 1/16W (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R759	1-216-836-11	METAL CHIP 18K 5% 1/16W (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
R760	1-216-864-11	METAL CHIP 0 5% 1/16W (TR86/TR96/TR506/TR507/TR916)	
R761	1-216-813-11	METAL CHIP 220 5% 1/16W (TR86/TR96/TR506/TR507/TR916)	
R775	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R776	1-216-797-11	METAL CHIP 10 5% 1/16W	
R777	1-216-797-11	METAL CHIP 10 5% 1/16W	
R778	1-218-885-11	METAL GLAZE 39K 0.50% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R779	1-218-885-11	METAL GLAZE 39K 0.50% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R780	1-218-891-11	METAL GLAZE 68K 0.50% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R780	1-216-864-11	METAL CHIP 0 5% 1/16W (TR86/TR506/TR507/TR502E/TR506E)	
R781	1-218-891-11	METAL GLAZE 68K 0.50% 1/16W (TR96/TR916/TR620E/TR720E/TR740E)	
R781	1-216-864-11	METAL CHIP 0 5% 1/16W (TR86/TR506/TR507/TR502E/TR506E)	
R782	1-216-821-11	METAL CHIP 1K 5% 1/16W (EXCEPT TR502E)	
R783	1-216-845-11	METAL CHIP 100K 5% 1/16W (EXCEPT TR502E)	
R784	1-216-821-11	METAL CHIP 1K 5% 1/16W	

Ref. No.	Part No.	Description	Remarks
		(EXCEPT TR502E)	
		< SWITCH >	
S301	1-771-029-21	SWITCH, TACTILE (PAUSE)	
S302	1-771-029-21	SWITCH, TACTILE (STOP)	
S303	1-771-029-21	SWITCH, TACTILE (FF)	
S304	1-771-029-21	SWITCH, TACTILE (PLAY)	
S305	1-771-029-21	SWITCH, TACTILE (REW)	
S306	1-771-029-21	SWITCH, TACTILE (EDITSERCH +)	
S307	1-771-029-21	SWITCH, TACTILE (EDITSERCH -)	
S308	1-771-029-21	SWITCH, TACTILE (LASER LINK) (TR86/TR96/TR507/TR916/TR740E)	
		< VIBRATOR >	
X400	1-767-031-21	VIBRATOR, CRYSTAL 11.718MHz (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
X400	1-767-030-21	VIBRATOR, CRYSTAL 11.895MHz (TR86/TR96/TR506/TR507/TR916)	
X701	1-760-321-11	VIBRATOR, CRYSTAL 28.375MHz (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
X701	1-760-320-11	VIBRATOR, CRYSTAL 28.636MHz (TR86/TR96/TR506/TR507/TR916)	
X702	1-579-613-11	VIBRATOR, CRYSTAL 17.734MHz (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
X703	1-579-553-11	VIBRATOR 12MHz (EXCEPT TR502E)	
A-7073-078-A		VF-102 BOARD, COMPLETE ***** (TR501E/TR502E/TR620E) (Ref.No.4,000 Series)	
		< CAPACITOR >	
C902	1-163-038-91	CERAMIC CHIP 0.1uF	25V
C903	1-135-091-00	TANTALUM CHIP 1uF	20% 16V
C904	1-162-965-11	CERAMIC CHIP 0.0015uF	10% 50V
C905	1-104-752-11	TANTAL. CHIP 33uF	20% 6.3V
C906	1-162-638-11	CERAMIC CHIP 1uF	16V
C907	1-104-563-11	FILM CHIP 0.1uF	5% 16V
C908	1-162-920-11	CERAMIC CHIP 27PF	5% 50V
△C910	1-164-756-11	CERAMIC CHIP 0.0033uF	5% 50V
△C911	1-164-713-11	CERAMIC CHIP 0.0056uF	5% 50V
C912	1-107-854-11	TANTAL. CHIP 68uF	20% 6.3V
C914	1-128-007-11	ELECT CHIP 2.2uF	20% 35V
C915	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C916	1-164-611-11	CERAMIC CHIP 0.001uF	10% 500V
C919	1-126-245-11	ELECT 330uF	20% 6.3V
		< CONNECTOR >	
CN901	1-566-537-11	CONNECTOR, FPC (NON ZIF) 5P	
CN902	1-573-290-21	PIN, CONNECTOR (1.5MM) (SMD) 4P	
		< DIODE >	
D901	8-719-951-21	DIODE PR1102W-TR	
D902	8-719-404-49	DIODE MA111	
		< IC >	

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
IC901	8-759-196-14	IC BA7149F-E2					
		< COIL >		A-7073-088-A	VF-109 BOARD, COMPLETE		

L901	1-412-031-11	INDUCTOR CHIP 47uH			(TR503E/TR506E/TR720E/TR740E)		
L902	1-412-957-11	INDUCTOR 33uH		A-7073-084-A	VF-109 BOARD, COMPLETE		
L903	1-411-697-11	COIL, FERRITE (HLC)			*****		
L904	1-414-757-11	INDUCTOR 100uH			(TR86/TR96/TR506/TR507/TR916)		
		< TRANSISTOR >			(Ref.No.7,000 Series)		
Q902	8-729-106-68	TRANSISTOR 2SD1615A-GP			< CAPACITOR >		
Q903	8-729-216-31	TRANSISTOR 2SA1163-G		C851	1-162-974-11	CERAMIC CHIP 0.01uF	50V
Q904	8-729-230-63	TRANSISTOR 2SC4116-YG		C852	1-162-974-11	CERAMIC CHIP 0.01uF	50V
		< RESISTOR >		C853	1-104-916-11	TANTAL. CHIP 6.8uF	20% 20V
R901	1-216-817-11	METAL CHIP 470 5%	1/16W	C854	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V
R902	1-216-817-11	METAL CHIP 470 5%	1/16W	C855	1-162-974-11	CERAMIC CHIP 0.01uF	50V
R903	1-216-057-00	METAL CHIP 2.2K 5%	1/10W	C856	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
R906	1-216-813-11	METAL CHIP 220 5%	1/16W	C857	1-164-676-11	CERAMIC CHIP 2200PF	5% 16V
R907	1-216-845-11	METAL CHIP 100K 5%	1/16W	C858	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
R908	1-216-852-11	METAL CHIP 390K 5%	1/16W	C859	1-164-227-11	CERAMIC CHIP 0.022uF	10% 25V
R909	1-216-833-11	METAL CHIP 10K 5%	1/16W	C860	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
R910	1-216-835-11	METAL CHIP 15K 5%	1/16W	C865	1-164-217-11	CERAMIC CHIP 150PF	5% 50V
R912	1-216-857-11	METAL CHIP 1M 5%	1/16W	C867	1-107-682-11	CERAMIC CHIP 1uF	10% 16V
R916	1-218-881-11	METAL GLAZE 27K 0.50%	1/16W	C868	1-165-128-11	CERAMIC CHIP 0.22uF	16V
R917	1-218-893-11	METAL GLAZE 82K 0.50%	1/16W	C870	1-162-974-11	CERAMIC CHIP 0.01uF	50V
R918	1-216-829-11	METAL CHIP 4.7K 5%	1/16W	C871	1-107-826-11	CERAMIC CHIP 0.1uF	10% 16V
R919	1-216-839-11	METAL CHIP 33K 5%	1/16W		< CONNECTOR >		
R920	1-216-837-11	METAL CHIP 22K 5%	1/16W	CN851	1-573-350-11	CONNECTOR, FFC/FPC 10P	
R921	1-216-795-11	METAL GLAZE 6.8 5%	1/16W	* CN852	1-573-984-11	CONNECTOR, BOARD TO BOARD 10P	
R922	1-216-847-11	METAL CHIP 150K 5%	1/16W		< DIODE >		
R923	1-216-857-11	METAL CHIP 1M 5%	1/16W	D852	8-719-043-70	DIODE MA6S121-(TX)	
R924	1-216-862-11	METAL GLAZE 2.7M 5%	1/16W	D853	8-719-404-49	DIODE MA111-TX	
R925	1-216-862-11	METAL GLAZE 2.7M 5%	1/16W		< IC >		
R926	1-216-821-11	METAL CHIP 1K 5%	1/16W	IC851	8-759-097-75	IC MB3789PFV-G-BND-ER	
R927	1-216-821-11	METAL CHIP 1K 5%	1/16W	IC852	8-759-510-71	IC BA10358F-E2	
R928	1-216-827-11	METAL CHIP 3.3K 5%	1/16W		< COIL >		
R929	1-216-818-11	METAL CHIP 560 5%	1/16W	L853	1-412-033-11	INDUCTOR CHIP 220uH	
R930	1-216-791-11	METAL CHIP 3.3 5%	1/16W		< TRANSISTOR >		
R931	1-217-671-11	METAL CHIP 1 5%	1/10W	Q853	8-729-028-81	TRANSISTOR DTA123JUA-T106	
R932	1-216-829-11	METAL CHIP 4.7K 5%	1/16W		< RESISTOR >		
		< VARIABLE RESISTOR >		R852	1-216-841-11	METAL CHIP 47K	5% 1/16W
RV904	1-238-862-11	RES, ADJ, CERMET 1M		R853	1-218-899-11	METAL GLAZE 150K	0.50% 1/16W
RV905	1-238-852-11	RES, ADJ, CERMET 470		R854	1-218-903-11	METAL GLAZE 220K	0.50% 1/16W
		< TRANSFORMER >		R855	1-216-834-11	METAL CHIP 12K	5% 1/16W
△ T901	1-453-124-11	TRANSFORMER ASSY, FLYBACK		R856	1-218-899-11	METAL GLAZE 150K	0.50% 1/16W
		< FLAT CABLE >		R857	1-218-905-11	METAL GLAZE 270K	0.50% 1/16W
W901	1-540-019-21	SOCKET ASSY, CRT		R858	1-216-834-11	METAL CHIP 12K	5% 1/16W
				R859	1-218-901-11	METAL GLAZE 180K	0.50% 1/16W
				R860	1-218-887-11	METAL GLAZE 47K	0.50% 1/16W

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks		
R861	1-216-843-11	METAL CHIP	68K	5%	1/16W
R862	1-216-838-11	METAL CHIP	27K	5%	1/16W
R863	1-216-847-11	METAL CHIP	150K	5%	1/16W
R864	1-216-841-11	METAL CHIP	47K	5%	1/16W
R865	1-216-839-11	METAL CHIP	33K	5%	1/16W
R866	1-216-846-11	METAL CHIP	120K	5%	1/16W
R867	1-216-845-11	METAL CHIP	100K	5%	1/16W
R868	1-216-841-11	METAL CHIP	47K	5%	1/16W
R869	1-216-843-11	METAL CHIP	68K	5%	1/16W
R870	1-216-842-11	METAL CHIP	56K	5%	1/16W
R871	1-216-850-11	METAL CHIP	270K	5%	1/16W
R872	1-216-833-11	METAL CHIP	10K	5%	1/16W
R873	1-216-851-11	METAL CHIP	330K	5%	1/16W
R874	1-216-847-11	METAL CHIP	150K	5%	1/16W
R875	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R879	1-216-837-11	METAL CHIP	22K	5%	1/16W
R881	1-216-853-11	METAL CHIP	470K	5%	1/16W
R891	1-216-296-91	CONDUCTOR, CHIP (3216)			

A-7073-089-A VF-110 BOARD, COMPLETE

(TR503E/TR506E/TR720E/TR740E)

A-7073-085-A VF-110 BOARD, COMPLETE

(TR86/TR96/TR506/TR507/TR916)

(Ref.No.7,000 Series)

< CAPACITOR >

C701	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C702	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C703	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C704	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C705	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C706	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C707	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
					(TR503E/TR506E/TR720E/TR740E)
C708	1-107-682-11	CERAMIC CHIP	1uF	10%	16V
C709	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C710	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C711	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C712	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C713	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C714	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C715	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C716	1-162-974-11	CERAMIC CHIP	0.01uF		50V
					(TR503E/TR506E/TR720E/TR740E)
C717	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C718	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C719	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C720	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
					(TR503E/TR506E/TR720E/TR740E)
C721	1-162-926-11	CERAMIC CHIP	82PF	5%	50V
					(TR503E/TR506E/TR720E/TR740E)
C722	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
					(TR503E/TR506E/TR720E/TR740E)
C723	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C724	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V

C725	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C726	1-164-156-11	CERAMIC CHIP	0.1uF		25V
					(TR503E/TR506E/TR720E/TR740E)
C729	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
					(TR86/TR96/TR506/TR507/TR916)
C729	1-104-912-11	TANTAL. CHIP	3.3uF	20%	16V
					(TR503E/TR506E/TR720E/TR740E)
C728	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C730	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
					(TR86/TR96/TR506/TR507/TR916)
C730	1-104-912-11	TANTAL. CHIP	3.3uF	20%	16V
					(TR503E/TR506E/TR720E/TR740E)
C731	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
					(TR86/TR96/TR506/TR507/TR916)
C731	1-104-912-11	TANTAL. CHIP	3.3uF	20%	16V
					(TR503E/TR506E/TR720E/TR740E)
C732	1-115-156-11	CERAMIC CHIP	1uF		10V
C733	1-165-320-11	CERAMIC CHIP	0.47uF	10%	16V
C734	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C735	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C736	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V
C737	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C738	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C739	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C740	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C741	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C742	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C744	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C745	1-164-357-11	CERAMIC CHIP	1000PF	5%	50V
C746	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C747	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C748	1-164-346-11	CERAMIC CHIP	1uF		16V
C749	1-115-156-11	CERAMIC CHIP	1uF		10V
C750	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C751	1-107-688-11	TANTAL. CHIP	1.5uF	20%	20V
C752	1-162-974-11	CERAMIC CHIP	0.01uF		50V
					< CONNECTOR >
CN701	1-766-346-21	CONNECTOR, FFC/FPC 16P			
* CN702	1-573-984-11	CONNECTOR, BOARD TO BOARD 10P			
CN703	1-573-925-11	CONNECTOR, FFC/FPC (ZIF) 16P			
					< DIODE >
D701	8-719-951-21	DIODE PR1102W-TR			
D702	8-719-404-49	DIODE MA111-TX			
D703	8-713-102-80	DIODE 1T369-01-T8A			
					(TR503E/TR506E/TR720E/TR740E)
D704	8-713-102-80	DIODE 1T369-01-T8A			
					< IC >
IC701	8-752-067-59	IC CXA1785R-T4			
IC702	8-759-251-40	IC MB88E346PFV-G-BND-ER			
IC703	8-759-075-66	IC TA75S01F(TE85R)			
IC704	8-752-377-97	IC CXD2411AR-T4			
					< COIL >
L701	1-412-951-11	INDUCTOR 10uH			
L702	1-412-962-11	INDUCTOR 82uH			
					(TR86/TR96/TR506/TR507/TR916)
L702	1-412-960-21	INDUCTOR 56uH			
					(TR503E/TR506E/TR720E/TR740E)
L703	1-412-956-21	INDUCTOR 27uH			
					(TR503E/TR506E/TR720E/TR740E)
L704	1-412-959-11	INDUCTOR 47uH			

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
L707	1-412-949-21	INDUCTOR 6.8uH		R749	1-216-833-11	METAL CHIP 10K 5%	1/16W
		< TRANSISTOR >		R750	1-216-841-11	METAL CHIP 47K 5%	1/16W
Q702	8-729-230-63	TRANSISTOR 2SC4116-YG (TR503E/TR506E/TR720E/TR740E)		R753	1-216-839-11	METAL CHIP 33K 5%	1/16W
Q703	8-729-427-74	TRANSISTOR XP4601-TXE		R754	1-216-839-11	METAL CHIP 33K 5%	1/16W
		< RESISTOR >		R755	1-216-839-11	METAL CHIP 33K 5%	1/16W
R701	1-216-819-11	METAL CHIP 680 5%	1/16W	R756	1-216-833-11	METAL CHIP 10K 5%	1/16W
R703	1-218-877-11	METAL GLAZE 18K 0.50%	1/16W	R757	1-216-839-11	METAL CHIP 33K 5%	1/16W
R704	1-216-857-11	METAL CHIP 1M 5%	1/16W	R761	1-216-821-11	METAL CHIP 1K 5%	1/16W
R705	1-216-842-11	METAL CHIP 56K 5%	1/16W	R762	1-216-838-11	METAL CHIP 27K 5%	1/16W
R707	1-216-841-11	METAL CHIP 47K 5%	1/16W	R763	1-216-842-11	METAL CHIP 56K 5%	1/16W
				R767	1-216-864-11	METAL CHIP 0 5%	1/16W (TR503E/TR506E/TR720E/TR740E)
R708	1-216-833-11	METAL CHIP 10K 5%	1/16W	R768	1-218-875-11	METAL GLAZE 15K 0.50%	1/16W
R709	1-220-397-11	METAL GLAZE 4.7M 5%	1/16W (TR503E/TR506E/TR720E/TR740E)	R769	1-218-905-11	METAL GLAZE 270K 0.50%	1/16W
R710	1-216-821-11	METAL CHIP 1K 5%	1/16W	R770	1-216-849-11	METAL CHIP 220K 5%	1/16W
R711	1-216-814-11	METAL CHIP 270 5%	1/16W	R771	1-216-837-11	METAL CHIP 22K 5%	1/16W
R712	1-216-821-11	METAL CHIP 1K 5%	1/16W			< VIBRATOR >	
				X701	1-579-466-11	VIBRATOR, CRYSTAL 3.58MHz (TR86/TR96/TR506/TR507/TR916)	
R716	1-216-832-11	METAL CHIP 8.2K 5%	1/16W	X701	1-579-661-21	OSCILLATOR, CRYSTAL 4.43MHz (TR503E/TR506E/TR720E/TR740E)	
R717	1-216-844-11	METAL CHIP 82K 5%	1/16W				
R718	1-216-845-11	METAL CHIP 100K 5%	1/16W				
R719	1-216-850-11	METAL CHIP 270K 5%	1/16W				
R720	1-216-831-11	METAL CHIP 6.8K 5%	1/16W (TR503E/TR506E/TR720E/TR740E)				
						MISCELLANEOUS	

R721	1-216-833-11	METAL CHIP 10K 5%	1/16W	61	1-542-315-11	MICROPHONE	
R722	1-216-827-11	METAL CHIP 3.3K 5%	1/16W (TR503E/TR506E/TR720E/TR740E)	74	1-517-530-21	LIGHT, VIDEO (TR86/TR96/TR916)	
R723	1-220-397-11	METAL GLAZE 4.7M 5%	1/16W	77	1-782-154-11	CABLE, FLEXIBLE FLAT 12P	
R724	1-216-839-11	METAL CHIP 33K 5%	1/16W	101	1-475-068-11	SWITCH BLOCK, CONTROL(MF-7800)	
R725	1-216-839-11	METAL CHIP 33K 5%	1/16W	103	1-801-697-21	DISPLAY PANEL, LIQUID CRYSTAL	
R726	1-216-864-11	METAL CHIP 0 5%	1/16W	105	1-782-153-11	CABLE, FLEXIBLE FLAT 45P	
R727	1-216-840-11	METAL CHIP 39K 5%	1/16W	156	1-782-155-11	CABLE, FLEXIBLE FLAT 16P	
R728	1-216-839-11	METAL CHIP 33K 5%	1/16W	158	1-665-151-11	FP-550 FLEXIBLE BOARD	
R729	1-216-839-11	METAL CHIP 33K 5%	1/16W	160	1-665-150-11	FP-549 FLEXIBLE BOARD (TR86/TR96/TR916/TR620E/TR720E/TR740E)	
R730	1-216-840-11	METAL CHIP 39K 5%	1/16W	164	1-547-787-41	FILTER BLOCK, OPTICAL (TR96/TR916/TR620E/TR720E/TR740E)	
R731	1-216-849-11	METAL CHIP 220K 5%	1/16W	164	1-547-924-41	FILTER BLOCK, OPTICAL (TR86/TR506/TR507/TR501E/TR502E/TR503E/TR506E)	
R732	1-216-853-11	METAL CHIP 470K 5%	1/16W	208	8-756-016-10	LCX005BK-5	
R734	1-216-825-11	METAL CHIP 2.2K 5%	1/16W (TR86/TR96/TR506/TR507/TR916)	212	1-665-152-11	FP-551 FLEXIBLE BOARD	
R734	1-216-821-11	METAL CHIP 1K 5%	1/16W (TR503E/TR506E/TR720E/TR740E)	258	1-782-156-11	CABLE, FLEXIBLE FLAT 5P	
R735	1-216-839-11	METAL CHIP 33K 5%	1/16W	△ 259	1-452-673-31	CRT ASSY (M01KXX90WB) (TR501E/TR502E/TR620E)	
R736	1-216-839-11	METAL CHIP 33K 5%	1/16W	501	8-848-710-01	LENS, ZOOM (LSV-510A)	
R737	1-216-807-11	METAL CHIP 68 5%	1/16W	502	A-4910-808-A	LSV-510A LENS DEVICE	
R738	1-216-807-11	METAL CHIP 68 5%	1/16W	503	3-713-791-41	SCREW (M1.7X5), TAPPING, P2	
R739	1-216-807-11	METAL CHIP 68 5%	1/16W	504	3-708-302-01	SCREW (BT3 P1.7X4C)	
R740	1-216-833-11	METAL CHIP 10K 5%	1/16W	762	1-657-786-11	FP-221 FLEXIBLE BOARD	
R743	1-216-837-11	METAL CHIP 22K 5%	1/16W (TR503E/TR506E/TR720E/TR740E)	803	1-657-785-11	FP-248 FLEXIBLE BOARD	
				817	1-657-784-11	FP-220 FLEXIBLE BOARD	
R744	1-216-864-11	METAL CHIP 0 5%	1/16W (TR503E/TR506E/TR720E/TR740E)	M901	A-7048-851-A	DRUM BLOCK ASSY (DGH-0D5A-R)(PAL)	
R746	1-216-839-11	METAL CHIP 33K 5%	1/16W	M901	A-7048-849-A	DRUM BLOCK ASSY (DGH-0D4A-R)(NTSC)	
R747	1-216-829-11	METAL CHIP 4.7K 5%	1/16W (TR503E/TR506E/TR720E/TR740E)	M902	8-835-531-01	MOTOR, DC SCE-0601A (CAPSTAN)	
R748	1-216-864-11	METAL CHIP 0 5%	1/16W (TR86/TR96/TR506/TR507/TR916)	M903	X-3945-401-1	MOTOR ASSY, DC (LOADING)	
				M905	1-698-760-01	STEPPING MOTOR (FOCUS)	
				M906	1-698-759-01	STEPPING MOTOR (ZOOM)	

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remarks
S003	1-762-441-21	SWITCH, ROTARY (ZOOM SW)	
S901	1-762-436-15	SWITCH, ROTARY (ENCODER)	

ACCESSORIES & PACKING MATERIALS

△	A-7009-226-A	AC-V16 (US,Canadian)	
△	A-7009-227-B	AC-V16 (E)	
△	A-7009-230-B	AC-V16 (Australian)	
△	A-7009-231-A	AC-V16 (Hong Kong)	
△	A-7009-746-A	AC-V17 (AEP)	
△	A-7009-747-A	AC-V17 (UK)	
	A-7092-608-A	CASE (N) ASSY, BATTERY (TR501E:AEP/TR502E/TR620E)	
	A-7092-697-A	CASE (N) ASSY (2), BATTERY (TR86/TR96)	
	1-473-342-11	REMOTE COMMANDER (RMT-713)	
△	1-569-008-11	ADAPTOR, CONVERSION 2P (TR506/TR507/TR501E:E/TR503E/TR506E/TR720E/TR740E)	
	1-574-039-21	CORD, CONNECTION (AV) 1.5M (TR86/TR96/TR916/TR501E/TR502E/TR503E/TR620E)	
	1-575-334-11	CORD, CONNECTION (AV STEREO) 1.5M (TR506/TR507/TR506E/TR720E/TR740E)	
	1-693-031-11	ADAPTOR, AC (AC-64NC) (TR507)	
	1-693-070-31	ADAPTOR, AC (AC-64NES)(TR740E)	
	1-764-622-11	ADAPTOR, CONVERSION (TR501E:AEP/TR502E/TR620E)	
	1-770-783-11	CONNECTOR, CONVERSION (TR501E:AEP/TR502E/TR620E)	
	3-800-844-11	INSTRUCTION (TR501E/TR502E/TR503E/TR506E/TR620E/TR720E/TR740E)	
	3-859-127-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN) (TR501E:AEP,UK/TR502E:AEP,UK/TR620E)	
	3-859-127-21	MANUAL, INSTRUCTION (GERMAN/ITALIAN) (TR501E:AEP/TR502E:AEP/TR620E:AEP)	
	3-859-127-31	MANUAL, INSTRUCTION (SPANISH/PORTUGUESE) (TR501E:AEP/TR502E:AEP/TR620E:AEP)	
	3-859-127-41	MANUAL, INSTRUCTION (FRENCH/DUTCH) (TR501E:AEP/TR502E:AEP/TR620E:AEP)	
	3-859-127-51	MANUAL, INSTRUCTION (SWEDISH/POLISH) (TR501E:UK/TR502E:UK/TR620E:UK)	
	3-859-131-11	MANUAL, INSTRUCTION (ENGLISH) (TR86/TR96/TR916)	
	3-859-131-21	MANUAL, INSTRUCTION (FRENCH) (TR86:Canadian)	
	3-859-131-31	MANUAL, INSTRUCTION (ENGLISH/SPANISH) (TR506/TR507)	

	3-859-131-41	MANUAL, INSTRUCTION (CHINESE) (TR506/TR507)	
	3-859-173-11	MANUAL, INSTRUCTION (ENGLISH/RUSSIAN) (TR501E:E,Australian,Tourist/TR503E/TR506E/TR720E/TR740E)	
	3-859-173-21	MANUAL, INSTRUCTION (FRENCH/GERMAN) (TR501E:E,Tourist/TR503E:E,HongKong/TR506E/TR720E/TR740E)	
	3-859-173-31	MANUAL, INSTRUCTION (ARABIC/PORUTUGUESE) (TR501E:E/TR503E:E/TR506E/TR720E:E/TR740E)	
	3-859-173-41	MANUAL, INSTRUCTION (CHINESE) (TR501E:E/TR503E:E/TR506E/TR720E:E/TR740E)	
	3-859-173-51	MANUAL, INSTRUCTION (CHINESE) (TR501E:E,Tourist/TR503E:E/TR506E/TR720E:E/TR740E)	
	3-859-838-11	MANUAL(IR),INSTRUCTION (ENGLISH/SPANISH/CHINESE)(TR507)	
	3-859-839-11	MANUAL(IR),INSTRUCTION (ENGLISH/FRENCH/GERMAN/RUSSIAN)(TR740E)	
	3-859-839-21	MANUAL(IR),INSTRUCTION (ARABIC/PORTUGUESE/CHINESE)(TR740E)	
	3-947-969-21	BELT (S), SHOULDER	
*	3-975-401-01	CUSHION (LOWER) (TR86/TR96/TR916/TR506/TR501E/TR502E/ TR503E/TR506E/TR620E/TR720E)	
*	3-975-402-01	CUSHION, ACC (TR86/TR96/TR916/TR506/TR501E/TR502E/ TR503E/TR506E/TR620E/TR720E)	
*	3-975-894-01	INDIVIDUAL CARTON (TR740E)	
*	3-975-894-11	INDIVIDUAL CARTON (TR507)	
*	3-976-008-01	INDIVIDUAL CARTON (TR501E:E,Australian)	
*	3-976-008-11	INDIVIDUAL CARTON (TR501E:AEP,UK)	
*	3-976-008-41	INDIVIDUAL CARTON (TR502E)	
*	3-976-008-61	INDIVIDUAL CARTON (TR620E)	
*	3-976-009-51	INDIVIDUAL CARTON (TR720E)	
*	3-976-010-01	INDIVIDUAL CARTON (TR96/TR916)	
*	3-976-167-01	CUSHION, ACC (TR507/TR740E)	
*	3-976-168-01	CUSHION (F)(TR507/TR740E)	
*	3-976-395-01	INDIVIDUAL CARTON (TR503E/TR506E)	
*	3-976-395-11	INDIVIDUAL CARTON (TR86)	
*	3-976-395-21	INDIVIDUAL CARTON (TR506)	
**	NP-33	BATTERY PACK	
**	IFT-R10	AV CORDLESS IR RECIVER (TR507/TR740E)	

NOTE.

**MARK PARTS IS AVAILABLE AS AN OPTIONAL ACCESSORY.

Note :

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Note :

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.