

CCD-TR618/TR618E/TR718E/TR728E/TR818/TRV49/TRV49E/TRV58/ TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

SECTION 6 REPAIR PARTS LIST

6-1. EXPLODED VIEWS

NOTE:


- XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Abbreviation
- CND : Canadian model
- HK : Hong Kong model
- KR : Korea model
- JE : Tourist model
- AUS : Australian model
- CN : Chinese model
- BR : Brazilian model
- AR : Argentina model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

6-1-1. OVERALL SECTION

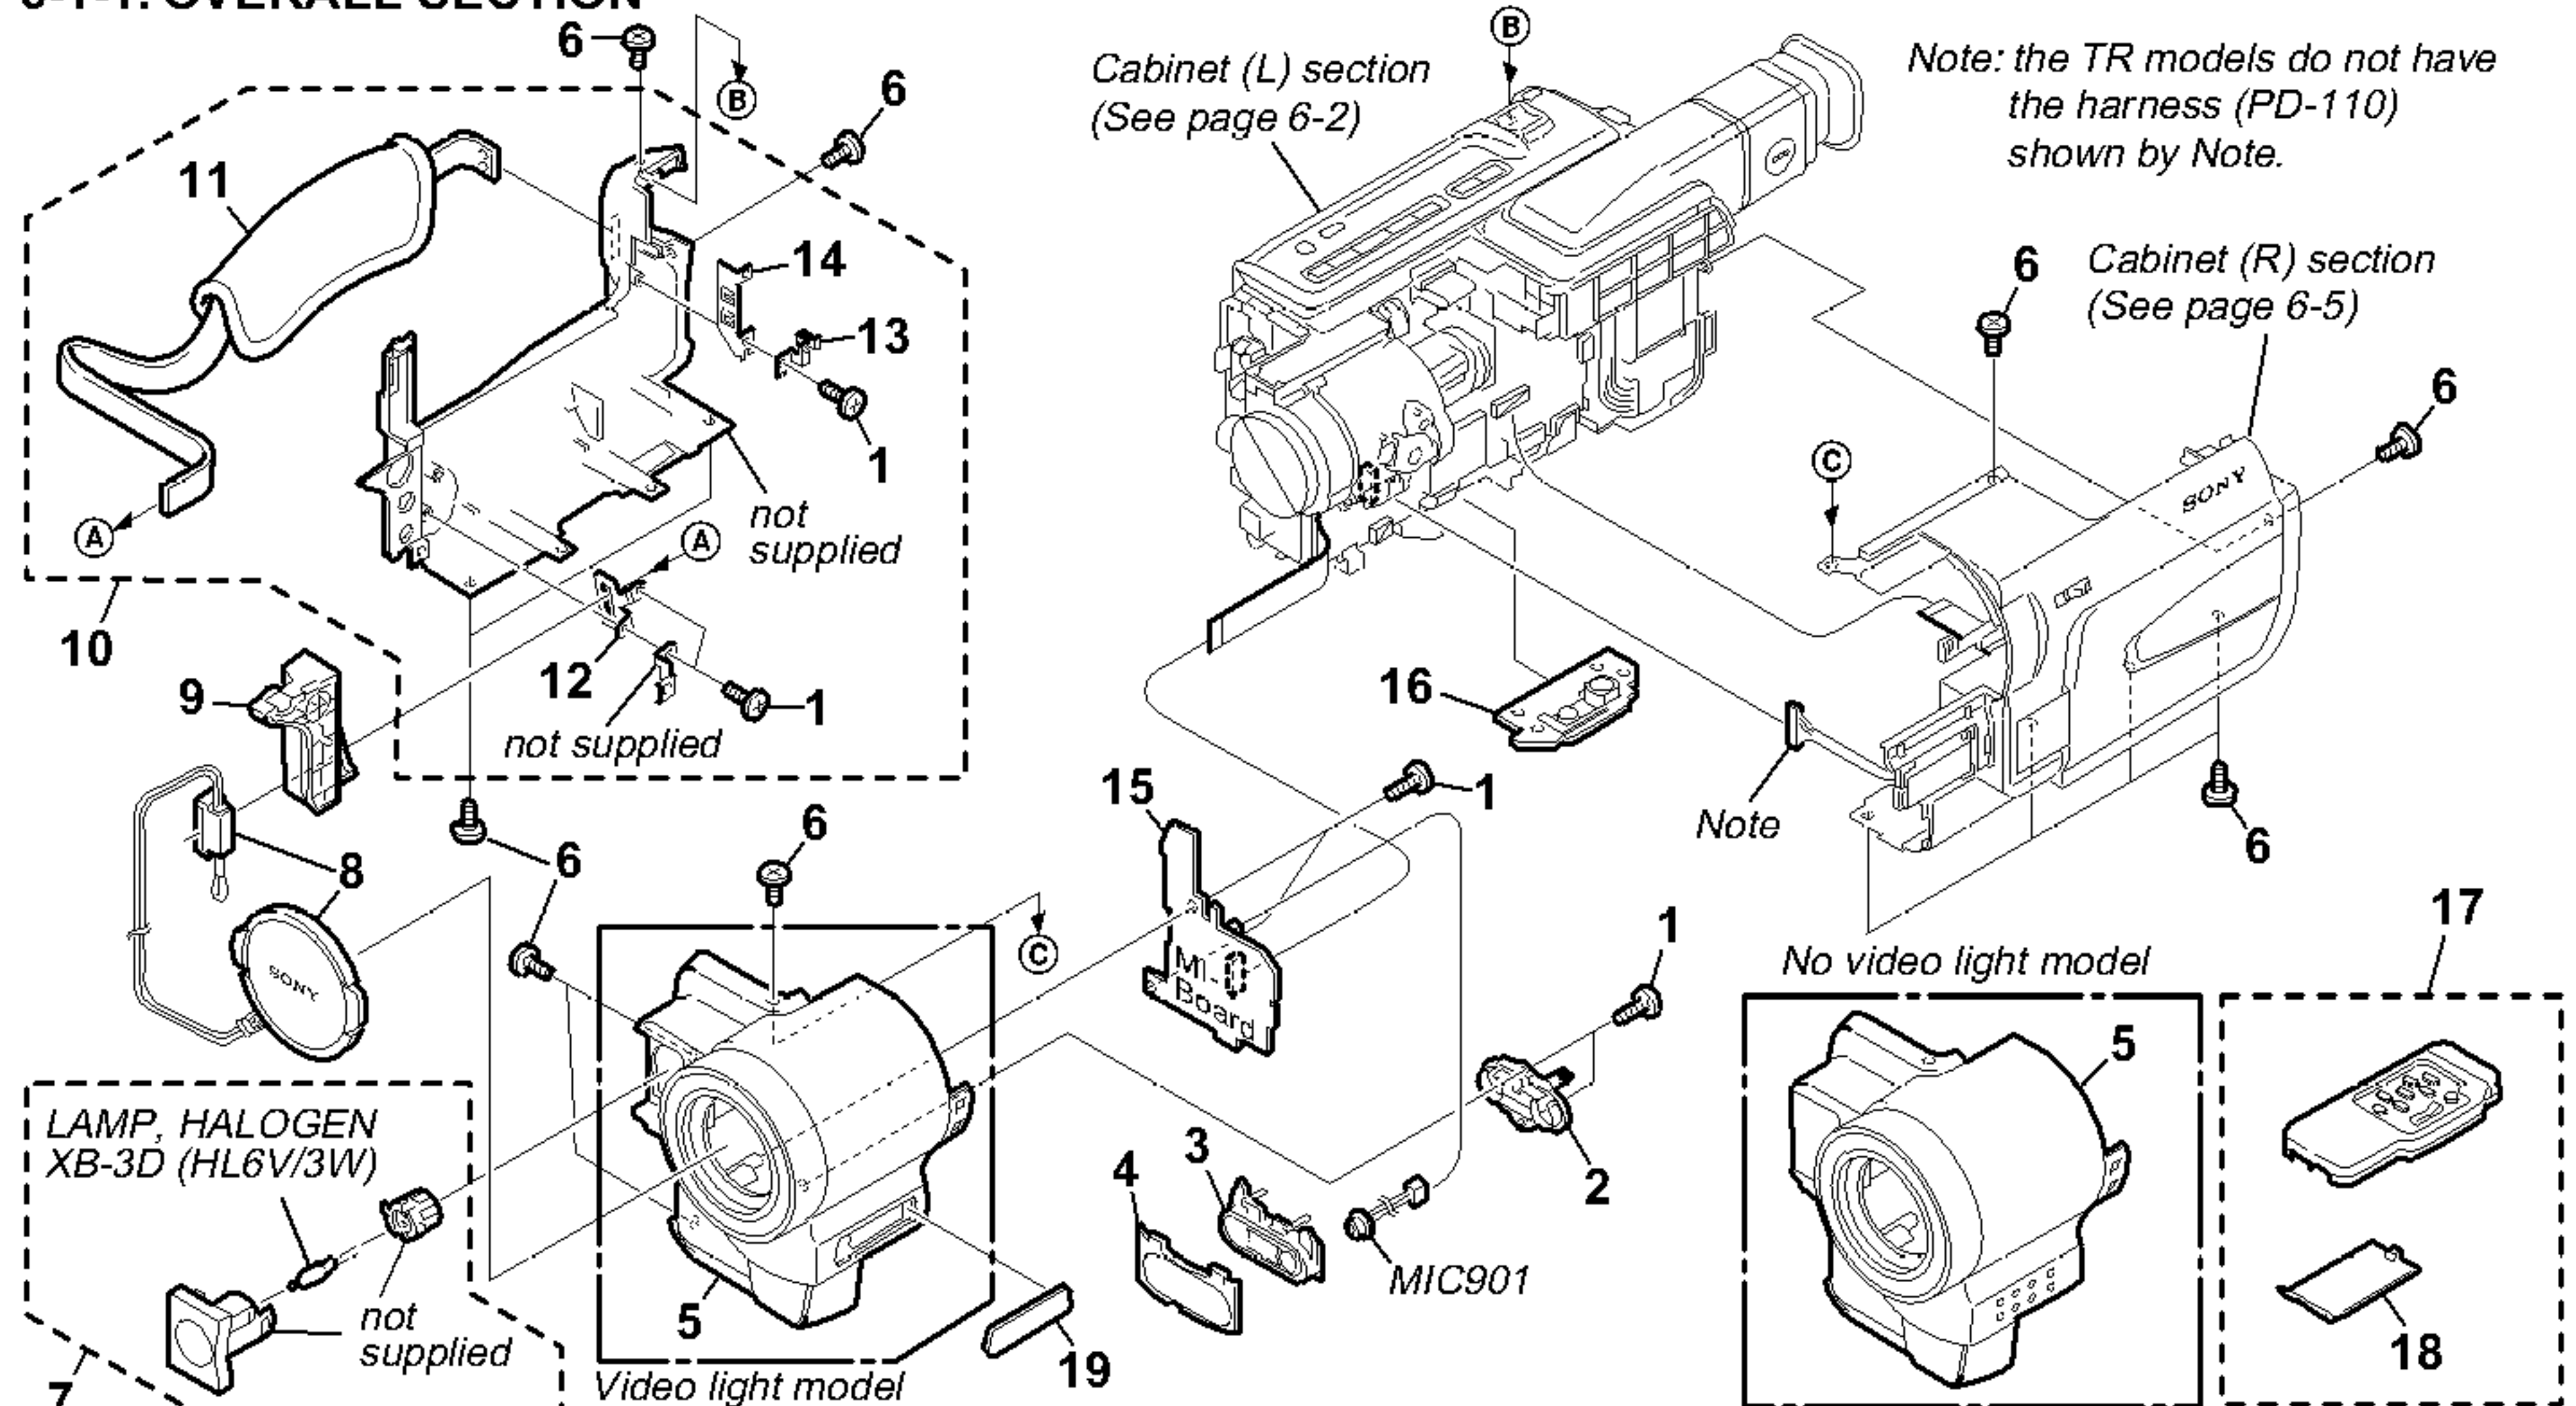

TR model : CCD-TR618/TR618E/TR718E/TR728E/TR818

Video light model : CCD-TR618/TR618E/TR718E/TR728E/

TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E

No video light model : CCD-TR818

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	3-948-339-61	TAPPING		* 12	3-065-455-01	STOPPER (FRONT) (10), BELT	
2	3-065-468-01	RETAINER (REAR), MICROPHONE		* 13	3-065-457-01	PLATE REAR (10), L GROUND	
3	3-065-467-11	RETAINER (FRONT), MICROPHONE		14	3-058-622-01	STOPPER (REAR), BELT	
* 4	3-065-470-01	CUSHION (10), MICROPHONE		15	A-7074-659-A	MI-040 (LO) BOARD, COMPLETE	
5	X-3951-213-1	PANEL(10) ASSY, F (TRV88)				(TR618/TR618E/TR718E)	
5	X-3951-214-1	PANEL(10) ASSY, F (TR728E)		15	A-7074-661-A	MI-040 (MM0) BOARD, COMPLETE (TR818)	
5	X-3951-215-1	PANEL(10) ASSY, F (TR818)		15	A-7074-665-A	MI-041 (MMI) BOARD, COMPLETE (TRV98)	
5	X-3951-216-1	PANEL(10) ASSY, F (TRV98)		15	A-7074-682-A	MI-041 (MM) BOARD, COMPLETE	
5	X-3951-217-1	PANEL(10) ASSY, F (TR618/TR618E)				(TRV78/TRV78E/TRV98E)	
5	X-3951-218-1	PANEL(10) ASSY, F (TRV59E)		15	A-7074-683-A	MI-040 (O) BOARD, COMPLETE (TR728E)	
5	X-3951-219-1	PANEL(10) ASSY, F (TR718E)		15	A-7074-700-A	MI-041 (ML) BOARD, COMPLETE	
5	X-3951-221-1	PANEL(10) ASSY, F (TRV68)				(TRV58/TRV58E)	
5	X-3951-368-1	PANEL(10) ASSY, F (TRV78/TRV78E/TRV98E)		15	A-7074-707-A	MI-041 (MML) BOARD, COMPLETE	
5	X-3951-383-1	PANEL(10) ASSY, F (TRV49/TRV49E)				(TRV68/TRV88)	
5	X-3951-384-1	PANEL(10) ASSY, F (TRV58/TRV58E)		15	A-7074-719-A	MI-041 (M) BOARD, COMPLETE	
						(TRV49/TRV49E/TRV59E)	
6	3-067-347-01	MI SCREW M2 (H)		16	3-987-717-01	SCREW, TRIPOD	
7	1-518-723-21	LIGHT, VIDEO		17	1-467-574-21	REMOTE COMMANDER (RMT-708)	
		(TR618/TR618E/TR718E/TR728E/TRV49/TRV49E/TRV58/TRV58E/				(TR728E/TRV49/TRV49E/TRV59E/TRV78/TRV78E/TRV98/TRV98E)	
		TRV59E/TRV68/TRV78/TRV78E/TRV88/TRV98/TRV98E)		18	3-958-131-01	LID, BATTERY CASE (FOR RMT-708)	
8	X-3949-376-1	CAP(N) ASSY, LENS		19	3-065-464-11	WINDOW (12), LCD	
9	3-065-433-01	COVER(10), JACK				(TRV49/TRV49E/TRV58/TRV58E/TRV59E/TRV68/	
10	X-3951-193-1	CABINET L (10) ASSY				TRV78/TRV78E/TRV88/TRV98/TRV98E)	
11	3-052-815-01	BELT(ES), GRIP		MIC901	1-542-312-11	MICROPHONE	