

## 5. REPAIR PARTS LIST


### DISASSEMBLY

### HARDWARE LIST

#### 5-1. EXPLODED VIEWS

##### 5-1-1. OVERALL SECTION-1

ns: not supplied

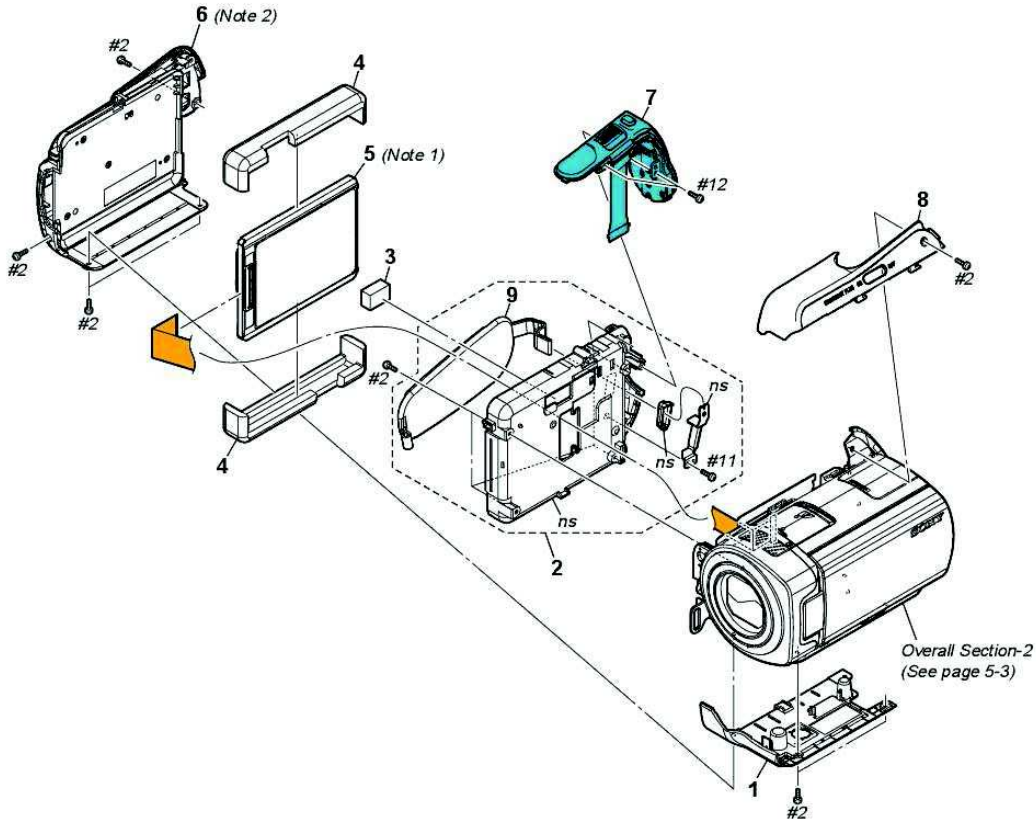

Note 1: 30GB model and 40GB model use the same parts.

Note 1: 30GB/40GB共に同一部品を使用します。

Note 2: When you exchange HDD LID ASSY, be sure to read "1-4. PRECAUTION ON REPLACING THE HDD LID ASSY" on page 1-3.

Note 2: HDDふた組立交換時は1-7ページの“1-4. HDDふた組立交換時の注意”を必ずお読みください。

• Refer to page 5-1 for mark △.

| Ref. No. | Part No.     | Description                                                                        |
|----------|--------------|------------------------------------------------------------------------------------|
| 1        | 3-283-724-01 | CABINET, BOTTOM (SR35E/SR36E/SR45/SR45E/SR46/SR46E)                                |
| 1        | 3-283-724-11 | CABINET, BOTTOM (SR55E/SR65/SR65E/SR75E/SR85/SR85E)                                |
| 2        | X-2187-938-1 | CABINET (L) ASSY                                                                   |
| 3        | 3-289-951-01 | GASKET (HDD)                                                                       |
| 4        | 3-294-308-01 | DAMPER (1), 08STYLE                                                                |
| △ 5      | 1-797-994-21 | HDD (MK6014GAL-60GB) (SR75E/SR85/SR85E)                                            |
| △ 5      | 1-797-998-21 | HDD (MK6014GAL-40GB) (SR35E/SR36E/SR45/SR45E/SR46/SR46E/SR55E/SR65/SR65E) (Note 1) |

| Ref. No. | Part No.     | Description                     |
|----------|--------------|---------------------------------|
| 6        | (Note 2)     | LID ASSY, HDD                   |
| 7        | 1-480-427-11 | SWITCH BLOCK, CONTROL (PS28100) |
| 8        | 3-283-725-01 | CABINET, NS                     |
| 9        | 2-664-928-41 | BELT, GRIP                      |
| #2       | 2-635-562-31 | SCREW (M1.7) (Black)            |
| #11      | 3-078-890-11 | SCREW, TAPPING (Silver)         |
| #12      | 3-080-204-21 | SCREW, TAPPING, P2 (Black)      |


## 5. REPAIR PARTS LIST

### DISASSEMBLY

### HARDWARE LIST

#### 5-1-3. CABINET (R) SECTION

ns: not supplied

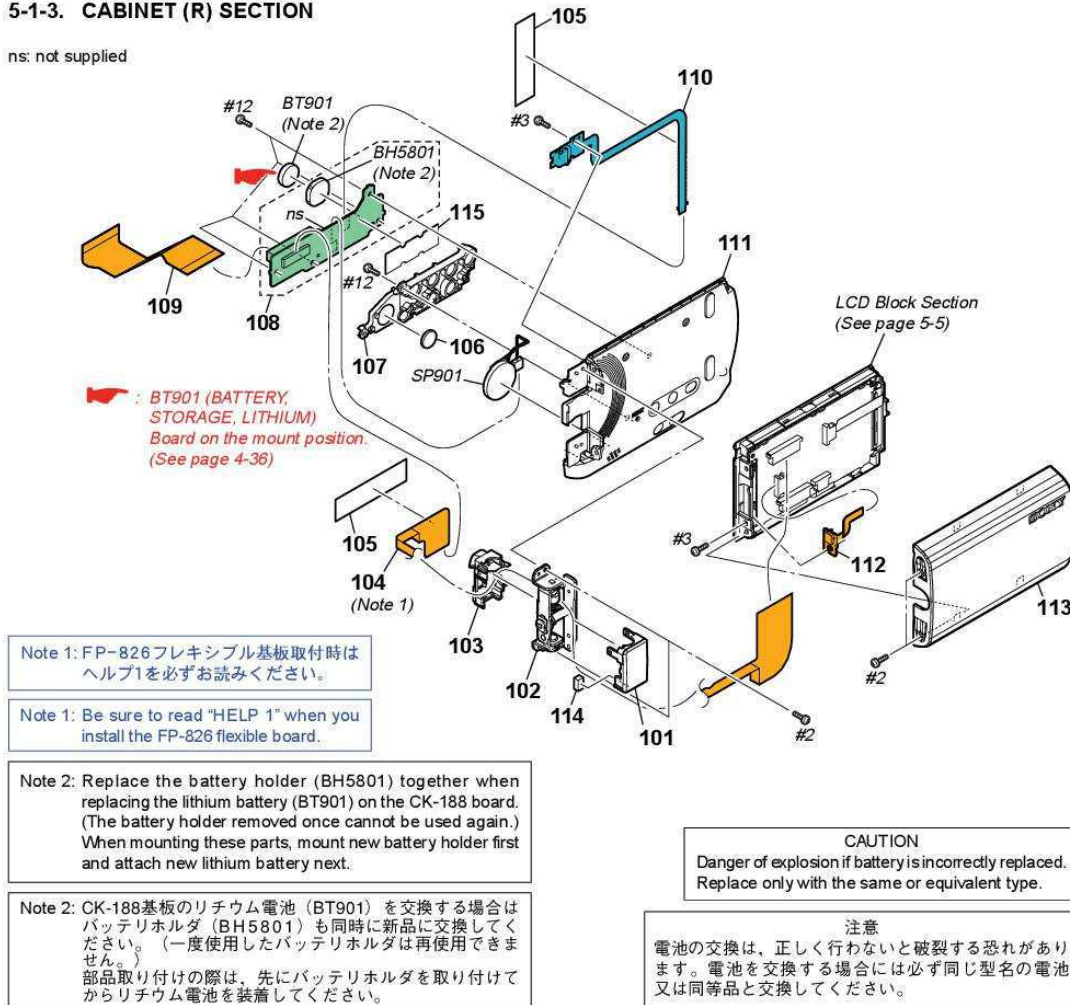

• Refer to page 5-1 for mark △.

| Ref. No. | Part No.     | Description                                  |
|----------|--------------|----------------------------------------------|
| 101      | 3-283-824-01 | COVER (C), HINGE                             |
| 102      | X-2187-937-1 | HINGE ASSY (281M)                            |
| 103      | 3-283-825-01 | COVER (M), HINGE                             |
| 104      | 1-874-923-11 | FP-826 FLEXIBLE BOARD (Note 1)               |
| 105      | 3-080-272-01 | TAPE (A)                                     |
| * 106    | 3-283-835-01 | CUSHION, SP                                  |
| * 107    | 3-283-834-01 | RETAINER, SP                                 |
| 108      | A-1439-175-A | CK-188 BOARD, COMPLETE                       |
| 109      | 1-874-925-11 | FP-828 FLEXIBLE BOARD                        |
| 110      | 1-480-426-11 | SWITCH BLOCK, CONTROL (P028100)              |
| 111      | X-2187-958-1 | CABINET (R) ASSY                             |
| 112      | A-1153-842-A | FP-386 FLEXIBLE BOARD, COMPLETE              |
| 113      | A-1454-408-A | CABINET (C (45)) ASSY (SSGE), P (SR45/SR45E) |
| 113      | A-1486-639-A | CABINET (C (46)) ASSY (SSGE), P (SR46/SR46E) |

| Ref. No. | Part No.     | Description                           |
|----------|--------------|---------------------------------------|
| 113      | A-1498-611-A | CABINET (C (SR-35)), (P) (SR35E)      |
| 113      | A-1498-613-A | CABINET (C (SR-36)), (P) (SR36E)      |
| 113      | X-2187-953-1 | CABINET (C (55)) ASSY, P (SR55E)      |
| 113      | X-2187-954-1 | CABINET (C (65)) ASSY, P (SR65/SR65E) |
| 113      | X-2187-955-1 | CABINET (C (75)) ASSY, P (SR75E)      |
| 113      | X-2187-956-1 | CABINET (C (85)) ASSY, P (SR85/SR85E) |
| * 114    | 3-289-953-01 | GASKET (HINGE)                        |
| * 115    | 3-297-873-01 | SHEET (CK), MUFFLE                    |
| △*BH5801 | 1-756-615-51 | HOLDER, BATTERY (Note 2)              |
| △BT901   | 1-756-134-12 | BATTERY, STORAGE, LITHIUM (Note 2)    |
| SP901    | 1-825-262-82 | LOUD SPEAKER (1.6CM)                  |
| #2       | 2-635-562-31 | SCREW (M1.7) (Black)                  |
| #3       | 2-660-401-01 | SCREW (M1.7), NEW TRU-STAR, P2 (Red)  |
| #12      | 3-080-204-21 | SCREW, TAPPING, P2 (Black)            |


DCR-SR35E/SR36E/SR45/SR45E/SR46/SR46E/SR55E/SR65/SR65E/SR75E/SR85/SR85E\_L2

## 5. REPAIR PARTS LIST

### HARDWARE LIST

#### 5-1-4. LCD BLOCK SECTION

ns: not supplied

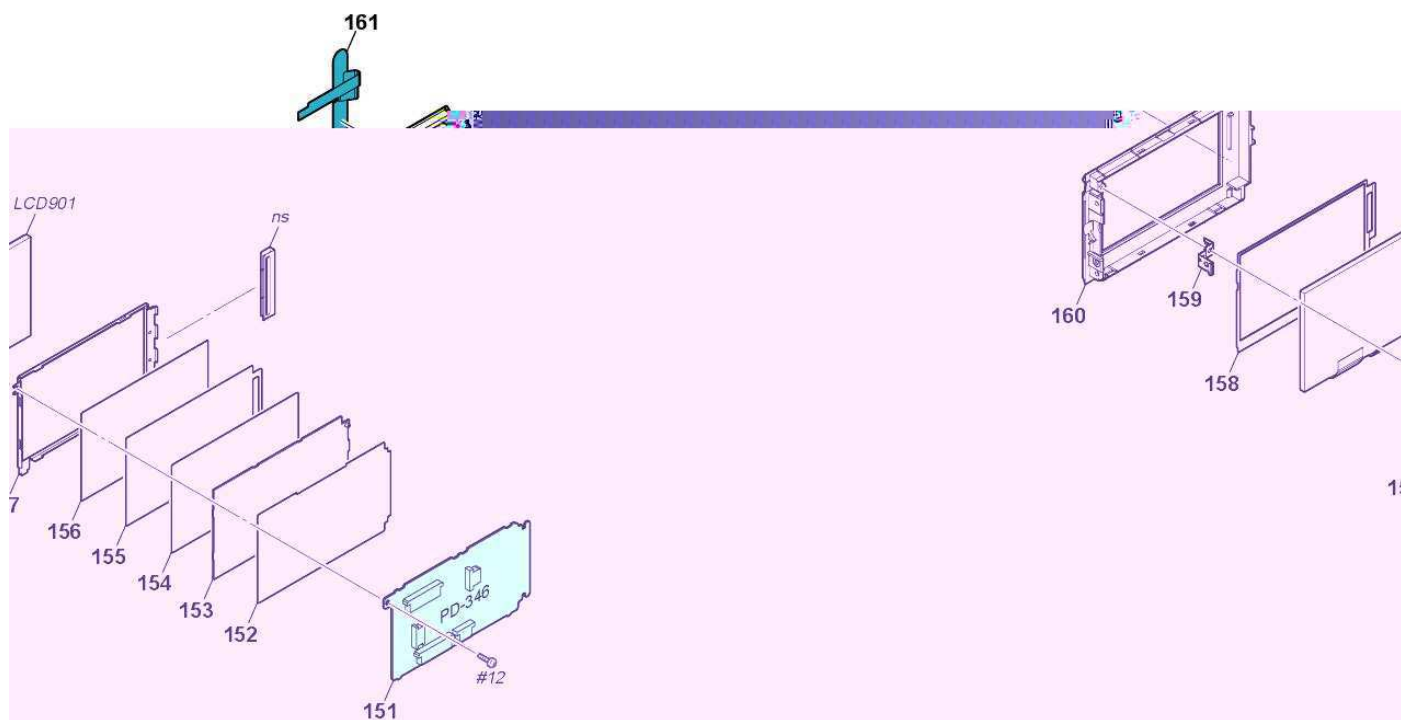

| Ref. No. | Part No.     | Description                     |
|----------|--------------|---------------------------------|
| 158      | 3-283-828-01 | CUSHION (2.7), TP               |
| * 159    | 3-283-827-01 | PLATE, LCD GROUND               |
| 160      | 3-283-826-01 | CABINET (M), P                  |
| 161      | 1-479-926-11 | SWITCH BLOCK, CONTROL (SB22100) |
| LCD901   | A-1363-616-A | TP BLOCK ASSY (27STM08H)        |
| #12      | 3-080-204-21 | SCREW, TAPPING, P2 (Black)      |


| Ref. No. | Part No.     | Description            |
|----------|--------------|------------------------|
| 151      | A-1439-215-A | PD-346 BOARD, COMPLETE |
| 152      | 2-694-515-01 | REFLECTION SHEET (2.7) |
| 153      | 2-666-801-01 | LIGHT GUIDE (2.7)      |
| 154      | 2-694-514-01 | DIFFUSION SHEET (2.7)  |
| 155      | 2-694-513-01 | PRISM SHEET H (2.7)    |
| 156      | 2-694-512-01 | PRISM SHEET V (2.7)    |
| 157      | 2-694-516-01 | FRONT FRAME (2.7)      |

DCR-SR35E/SR36E/SR45/SR45E/SR46/SR46E/  
SR55E/SR55/SR65E/SR75E/SR85/SR85E\_L2

## 5. REPAIR PARTS LIST

### HARDWARE LIST

#### 5-1-5. BT BLOCK SECTION

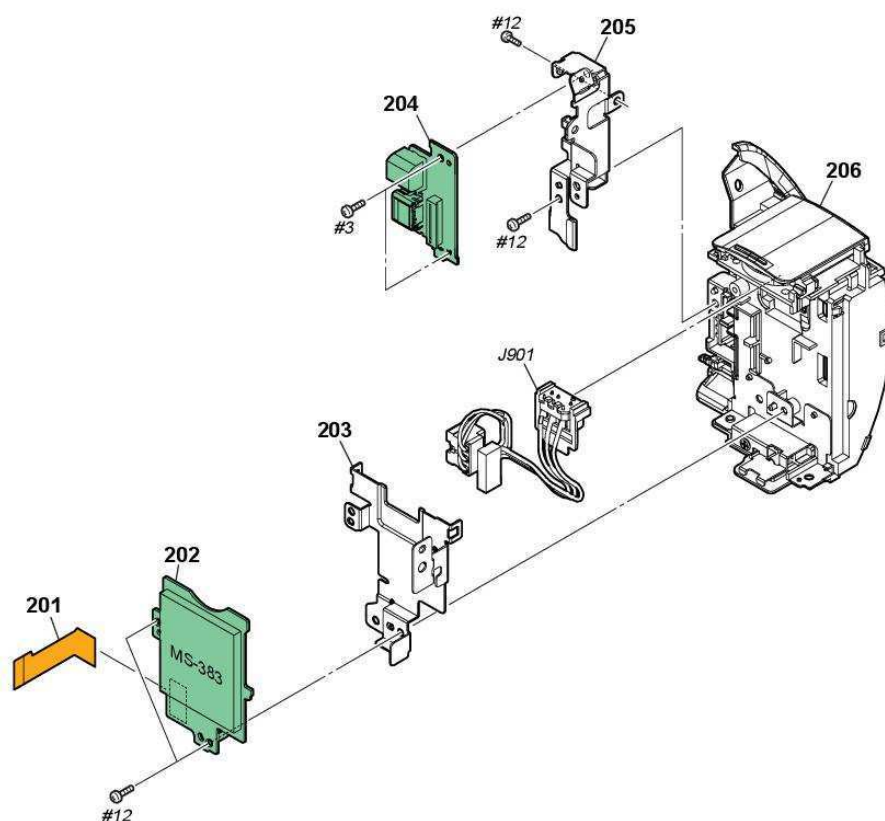

• Refer to page 5-1 for mark ▲.

| Ref. No. | Part No.     | Description                                            | Ref. No. | Part No.     | Description                          |
|----------|--------------|--------------------------------------------------------|----------|--------------|--------------------------------------|
| 201      | 1-874-922-11 | FP-825 FLEXIBLE BOARD                                  | 206      | X-2187-945-1 | PANEL ASSY, BT (SR55E/SR65/SR65E)    |
| 202      | A-1439-140-A | MS-383 BOARD, COMPLETE                                 | 206      | X-2187-946-1 | PANEL ASSY, BT (SR75E/SR85/SR85E)    |
| 203      | 3-283-752-01 | RETAINER, BT TERMINAL                                  | ▲*J901   | 1-821-575-11 | DC JACK (DC IN, BATTERY TERMINAL)    |
| 204      | A-1439-139-A | JK-357 BOARD, COMPLETE                                 | #3       | 2-660-401-01 | SCREW (M1.7), NEW TRU-STAR, P2 (Red) |
| 205      | 3-283-753-01 | BRACKET, JK                                            | #12      | 3-080-204-21 | SCREW, TAPPING, P2 (Black)           |
| 206      | X-2187-944-1 | PANEL ASSY, BT (SR35E/SR36E/SR45/SR45E/<br>SR46/SR46E) |          |              |                                      |


DCR-SR35E/SR36E/SR45/SR45E/SR46/SR46E/  
SR55E/SR65/SR65E/SR75E/SR85/SR85E\_L2

## 5. REPAIR PARTS LIST

### DISASSEMBLY

### HARDWARE LIST

#### 5-1-6. MAIN FRAME SECTION

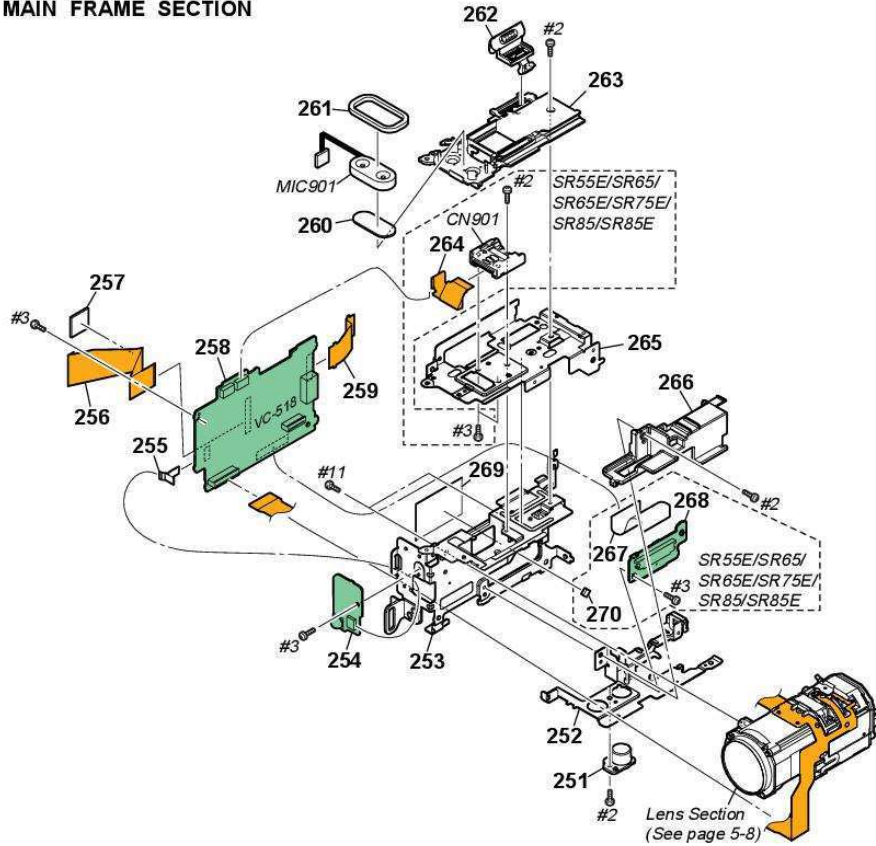

| Ref. No. | Part No.     | Description                                                | Ref. No. | Part No.     | Description                                                        |
|----------|--------------|------------------------------------------------------------|----------|--------------|--------------------------------------------------------------------|
| 251      | 3-283-643-01 | SCREW, TRIPOD                                              | 262      | 3-283-726-01 | KNOB (282), NS (SR55E/SR65/SR65E/SR75E/SR85/SR85E)                 |
| 252      | 3-283-722-01 | FRAME, BOTTOM                                              | 262      | 3-283-727-01 | KNOB (281), NS (SR35E/SR36E/SR45/SR45E/SR46/SR46E)                 |
| 253      | X-2187-943-1 | FRAME ASSY, MAIN                                           | 263      | 3-283-731-01 | HOLDER, MICROPHONE                                                 |
| 254      | A-1439-108-A | IR-066 BOARD, COMPLETE (SR35E/SR36E/SR45/SR45E/SR46/SR46E) | 264      | 1-874-924-11 | FP-827 FLEXIBLE BOARD (SR55E/SR65/SR65E/SR75E/SR85/SR85E)          |
| 254      | A-1439-109-A | IR-066 BOARD, COMPLETE (SR55E/SR65/SR65E/SR75E/SR85/SR85E) | 265      | 3-283-721-01 | FRAME, SHOE                                                        |
| 255      | 1-834-361-11 | CABLE, FLEXIBLE FLAT (FFC-131)                             | * 266    | 3-283-723-01 | DIFENSER, MULTI                                                    |
| 256      | 1-874-927-11 | FP-830 FLEXIBLE BOARD                                      | 267      | 1-834-362-11 | CABLE, FLEXIBLE FLAT (FFC-132) (SR55E/SR65/SR65E/SR75E/SR85/SR85E) |
| 257      | 3-288-685-01 | CUSHION, HDD                                               | 268      | A-1439-166-A | CR-087 BOARD, COMPLETE (SR55E/SR65/SR65E/SR75E/SR85/SR85E)         |
| 258      | A-1443-037-A | VC-518 BOARD, COMPLETE (SERVICE) (SR35E/SR36E)             | 269      | 2-659-500-01 | LABEL, FUSE REPLACEMENT CAUTION                                    |
| 258      | A-1443-038-A | VC-518 BOARD, COMPLETE (SERVICE) (SR45/SR45E/SR46/SR46E)   | * 270    | 3-289-953-01 | GASKET (HINGE) (SR55E/SR65/SR65E/SR75E/SR85/SR85E)                 |
| 258      | A-1443-054-A | VC-518 BOARD, COMPLETE (SERVICE) (SR65/SR85)               | CN901    | 1-818-890-11 | CONNECTOR, EXTERNAL (HOT SHOE) (SR55E/SR65/SR65E/SR75E/SR85/SR85E) |
| 258      | A-1443-061-A | VC-518 BOARD, COMPLETE (SERVICE) (SR65E/SR85E)             | MIC901   | 1-542-712-11 | MICROPHONE UNIT                                                    |
| 258      | A-1443-062-A | VC-518 BOARD, COMPLETE (SERVICE) (SR55E/SR75E)             | #2       | 2-635-562-31 | SCREW (M1.7) (Black)                                               |
| 259      | 1-874-921-11 | FP-824 FLEXIBLE BOARD                                      | #3       | 2-660-401-01 | SCREW (M1.7), NEW TRU-STAR, P2 (Red)                               |
| 260      | 3-288-684-01 | SHEET, MICROPHONE ADHESIVE                                 | #11      | 3-078-890-11 | SCREW, TAPPING (Silver)                                            |
| 261      | 3-283-732-01 | CUSHION, MICROPHONE                                        |          |              |                                                                    |


DCR-SR35E/SR36E/SR45/SR45E/SR46/SR46E/  
SR55E/SR65/SR65E/SR75E/SR85/SR85E\_L2

## 5. REPAIR PARTS LIST

### HARDWARE LIST

#### 5-1-7. LENS SECTION

ns: not supplied

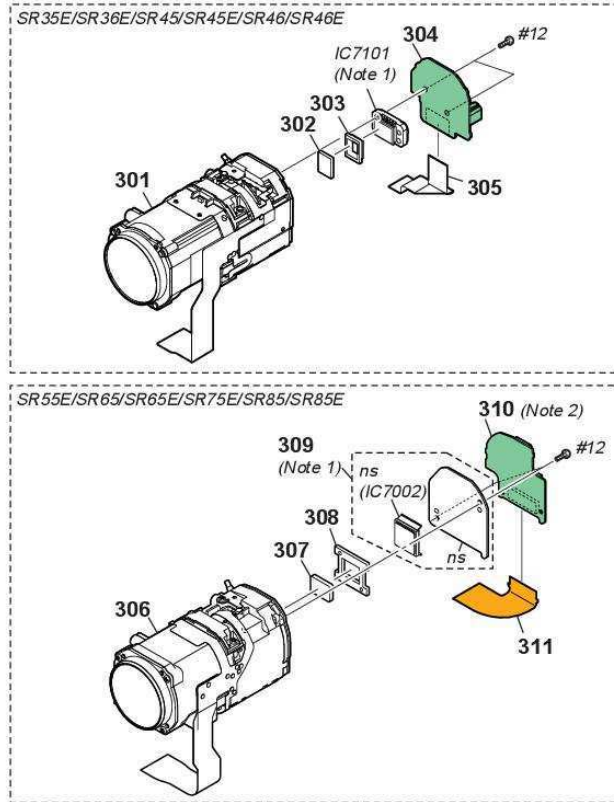

Note 1: Be sure to read "Precautions for Replacement of Imager" on page 4-2 when changing the imager.

Note 1: イメージャの交換時は4-3ページの「イメージャ交換時の注意」を必ずお読みください。

Note 2: CD-672 complete board is supplied instead of CD-687 complete board, because CD-672 complete board and CD-687 complete board are compatible.

Note 2: CD-687基板は供給されません。代わりにCD-672基板が供給されます。


| Ref. No. | Part No.     | Description                                                          | Ref. No. | Part No.     | Description                                                                        |
|----------|--------------|----------------------------------------------------------------------|----------|--------------|------------------------------------------------------------------------------------|
| 301      | 8-848-839-01 | DEVICE, LENS LSV-1171A (SR35E/SR36E/SR45/SR45E/SR46/SR46E)           | 309      | A-1511-867-A | CCD BLOCK ASSY (1M SSGE) (CCD IMAGER) (SR55E/SR65/SR65E/SR75E/SR85/SR85E) (Note 1) |
| 302      | 1-788-706-11 | OPTICAL FILTER BLOCK (OFB-08-02) (SR35E/SR36E/SR45/SR45E/SR46/SR46E) | 310      | A-1244-919-A | CD-672 BOARD, COMPLETE (SR55E/SR65/SR65E/SR75E/SR85/SR85E)                         |
| 303      | 3-271-382-01 | SEAL RUBBER 1171 (SR35E/SR36E/SR45/SR45E/SR46/SR46E)                 | 310      | A-1244-919-A | CD-687 BOARD, COMPLETE (SR65/SR65E/SR85/SR85E) (Note 2)                            |
| 304      | A-1439-164-A | CD-720 BOARD, COMPLETE (SR35E/SR36E/SR45/SR45E/SR46/SR46E)           | 311      | 1-874-926-11 | FP-829 FLEXIBLE BOARD (SR55E/SR65/SR65E/SR75E/SR85/SR85E)                          |
| 305      | 1-834-363-11 | CABLE, FLEXIBLE FLAT (FFC-133) (SR35E/SR36E/SR45/SR45E/SR46/SR46E)   | IC7101   | 8-753-288-68 | ICX650NKF-H (CCD IMAGER) (SR45/SR46) (Note 1)                                      |
| 306      | A-1248-849-A | LENS (BLOCK ASSY 1180 (J1)) (SR55E/SR65/SR65E/SR75E/SR85/SR85E)      | IC7101   | 8-753-289-10 | ICX651NKF-H (CCD IMAGER) (SR35E/SR36E/SR45E/SR46E) (Note 1)                        |
| 307      | 1-788-523-11 | OPTICAL FILTER BLOCK (OFB-06-11) (SR55E/SR65/SR65E/SR75E/SR85/SR85E) | #12      | 3-080-204-21 | SCREW, TAPPING, P2 (Black)                                                         |
| 308      | 3-088-645-01 | RUBBER (Z), SEAL (SR55E/SR65/SR65E/SR75E/SR85/SR85E)                 |          |              |                                                                                    |

## 5. REPAIR PARTS LIST

### DISASSEMBLY

### HARDWARE LIST

#### 5-1-2. OVERALL SECTION-2

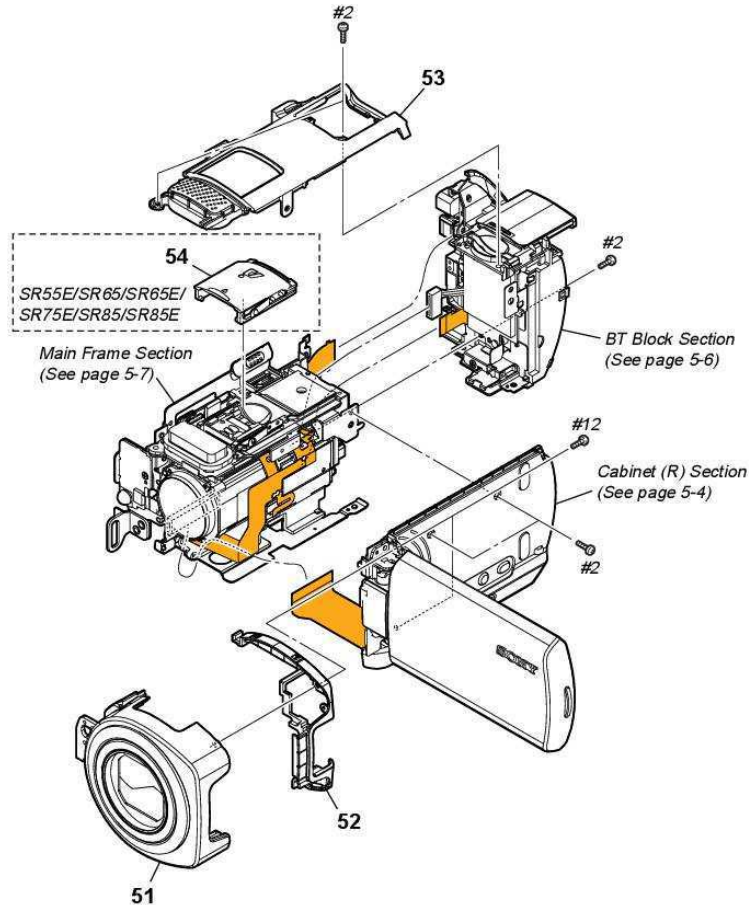

| Ref. No. | Part No.     | Description                                              | Ref. No. | Part No.     | Description                                               |
|----------|--------------|----------------------------------------------------------|----------|--------------|-----------------------------------------------------------|
| 51       | X-2187-949-1 | PANEL ASSY, F (SR75E/SR85/SR85E)                         | 53       | 3-283-730-01 | CABINET (UPPER (281)) (SR35E/SR36E/SR45/SR45E/SR46/SR46E) |
| 51       | X-2189-209-1 | PANEL ASSY (281S), F (SR35E/SR36E/SR45/SR45E/SR46/SR46E) | 54       | X-2187-940-1 | COVER ASSY, SHOE (SR55E/SR65/SR65E)                       |
| 51       | X-2189-210-1 | PANEL ASSY (282S), F (SR55E/SR65/SR65E)                  | 54       | X-2187-959-1 | COVER ASSY, SHOE (SR75E/SR85/SR85E)                       |
| 52       | 3-283-728-01 | BELT, F ORNAMENTAL                                       | #2       | 2-635-562-31 | SCREW (M1.7) (Black)                                      |
| 53       | 3-283-729-01 | CABINET (UPPER (282)) (SR55E/SR65/SR65E)                 | #12      | 3-080-204-21 | SCREW, TAPPING, P2 (Black)                                |
| 53       | 3-283-729-11 | CABINET (UPPER (282)) (SR75E/SR85/SR85E)                 |          |              |                                                           |